




FUFU GAGA DRF-KF250006-01 47.7 in. Rectangular White and Gray MDF Computer Desk Instruction Manual

[Home](#) » [FUFU GAGA](#) » FUFU GAGA DRF-KF250006-01 47.7 in. Rectangular White and Gray MDF Computer Desk Instruction Manual 

Contents

- [1 FUFU GAGA DRF-KF250006-01 47.7 in. Rectangular White and Gray MDF Computer Desk](#)
- [2 Before You Start](#)
- [3 Parts](#)
- [4 What's include](#)
- [5 Hammer isn't inside Accessory Pack](#)
- [6 Installations](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



FUFU GAGA DRF-KF250006-01 47.7 in. Rectangular White and Gray MDF Computer Desk


















PEOPLE NEEDED FOR ASSEMBLY: 1 – 2 ESTIMATED ASSEMBLY TIME: 1 HOUR

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort, and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.







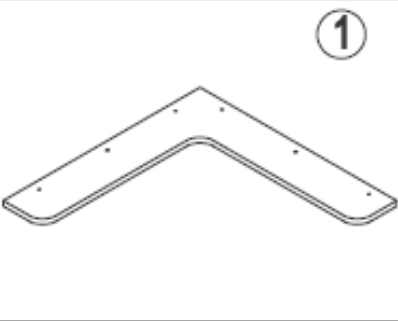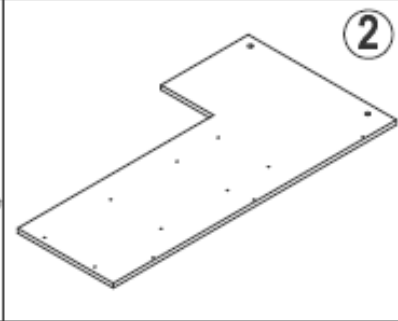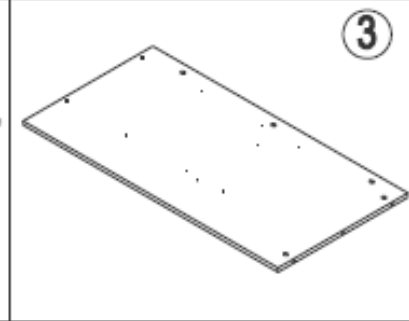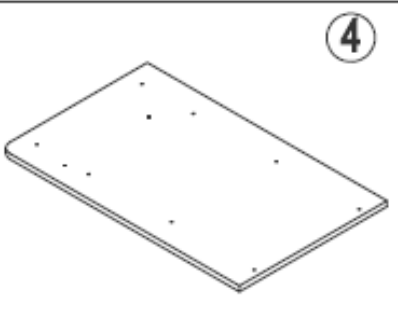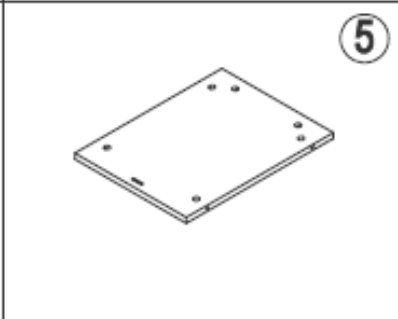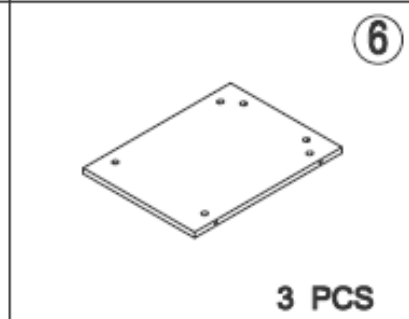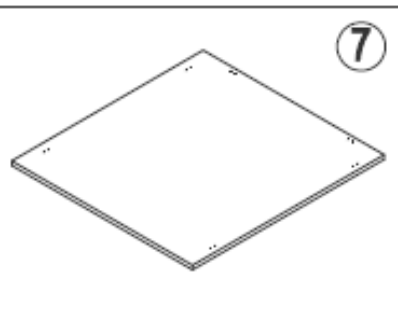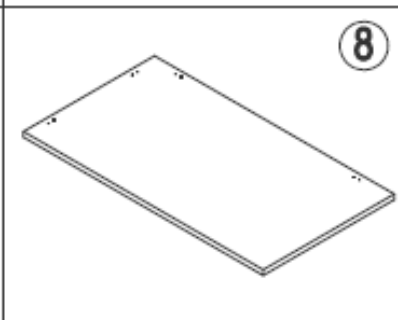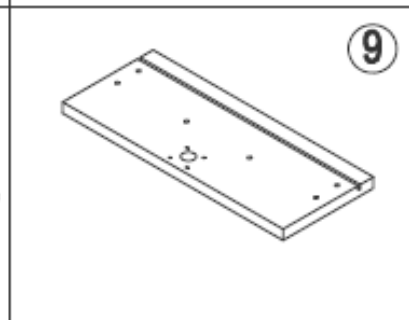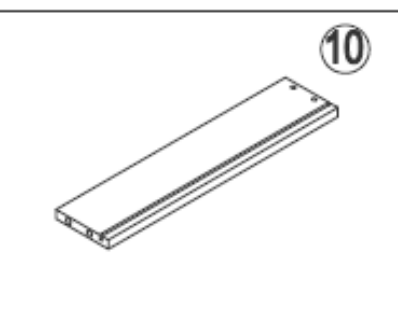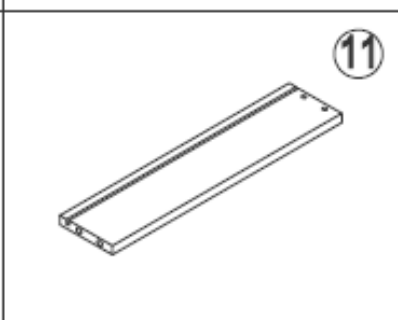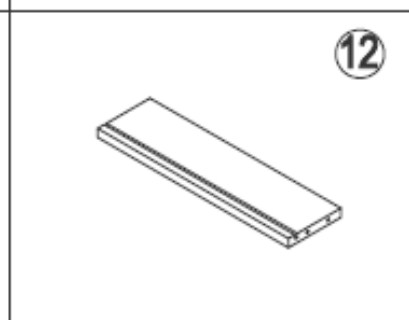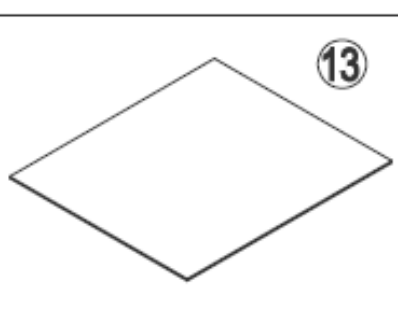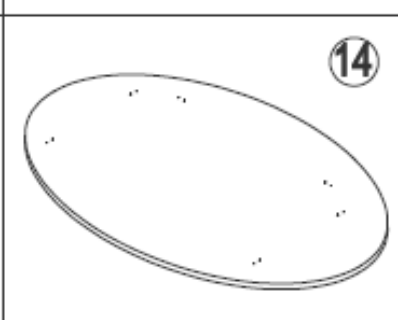





Before You Start


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Hammer
- **Caution:** If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.

Parts

 <p>①</p>	 <p>②</p>	 <p>③</p>
 <p>④</p>	 <p>⑤</p>	 <p>⑥</p>
		3 PCS
 <p>⑦</p>	 <p>⑧</p>	 <p>⑨</p>
 <p>⑩</p>	 <p>⑪</p>	 <p>⑫</p>
 <p>⑬</p>	 <p>⑭</p>	 <p>⑮</p>
		14" 3508W 1 SET







What's include

A M5x42  X 35+1	B Ø15x10  X 35+1	C M3.5x12  X 48+2
D M5x40  X 4	E  X 1	F M3x18  X 4
G Ø8x40  X 2	H M4x18  X 2	I  X 1
J  X 10	K  X 4	 X 1

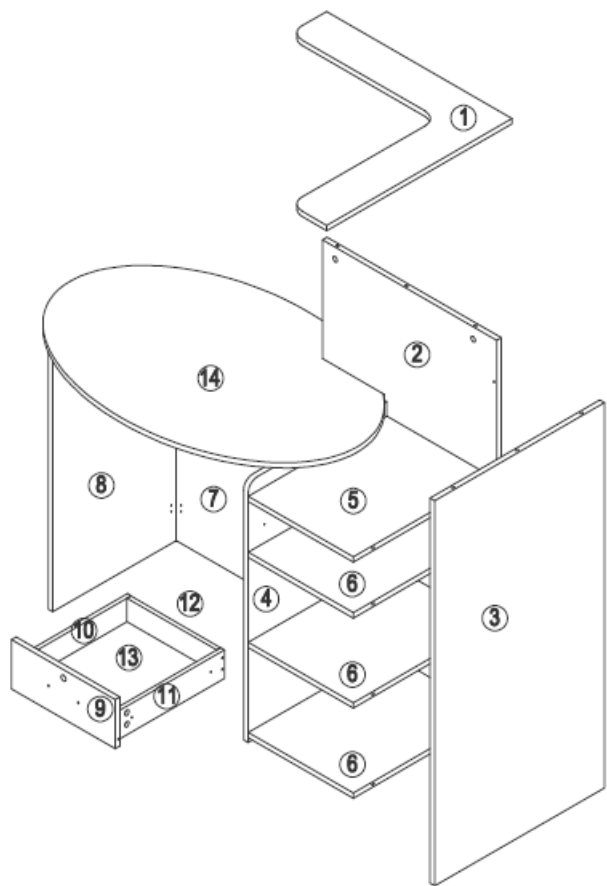


Hammer isn't inside Accessory Pack


M5X42mm

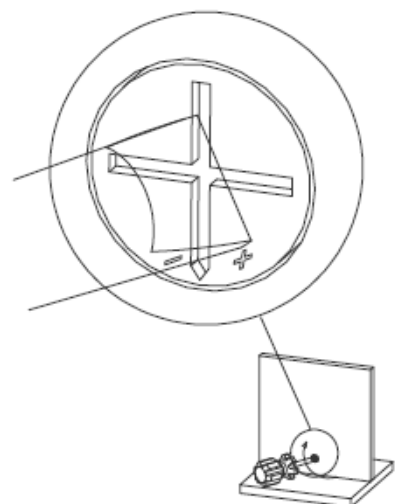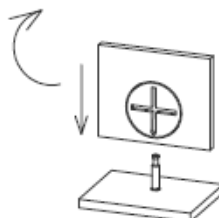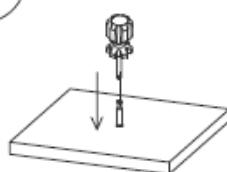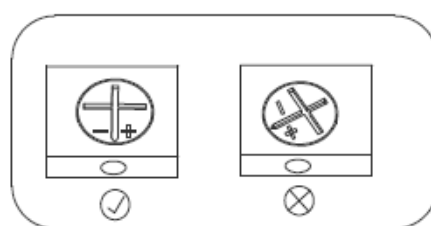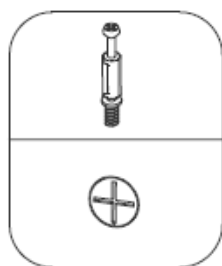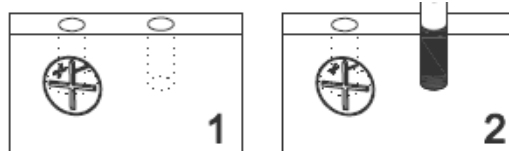

Installations

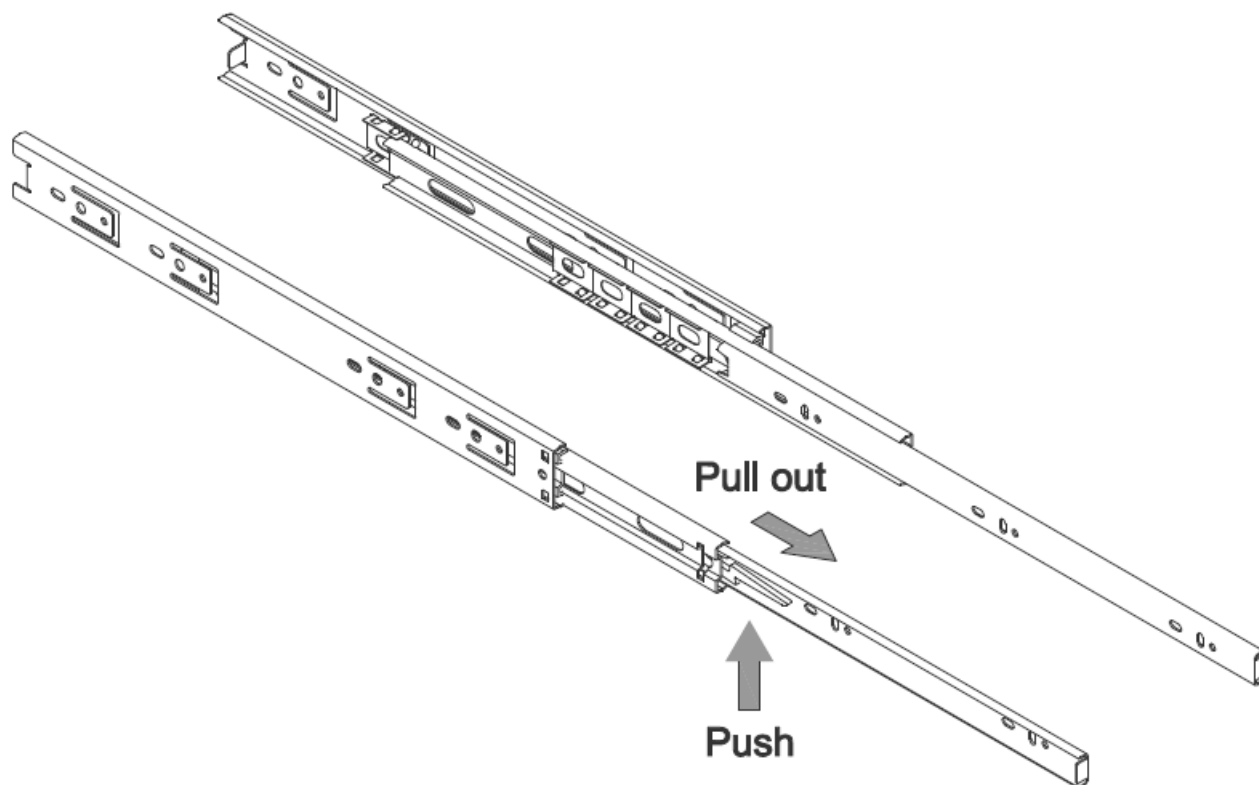

Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.

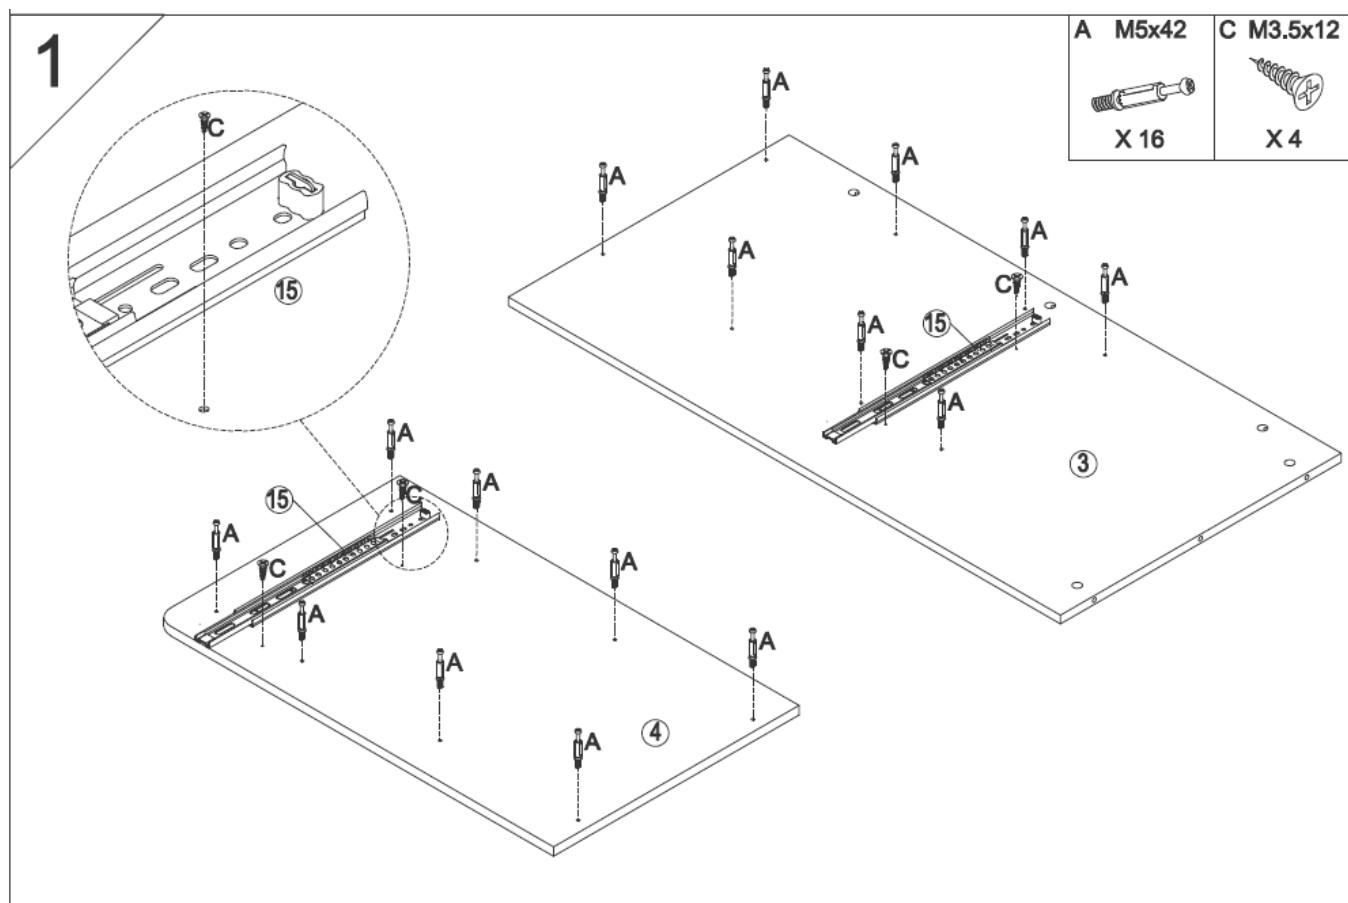


2

A M5x42



X 11

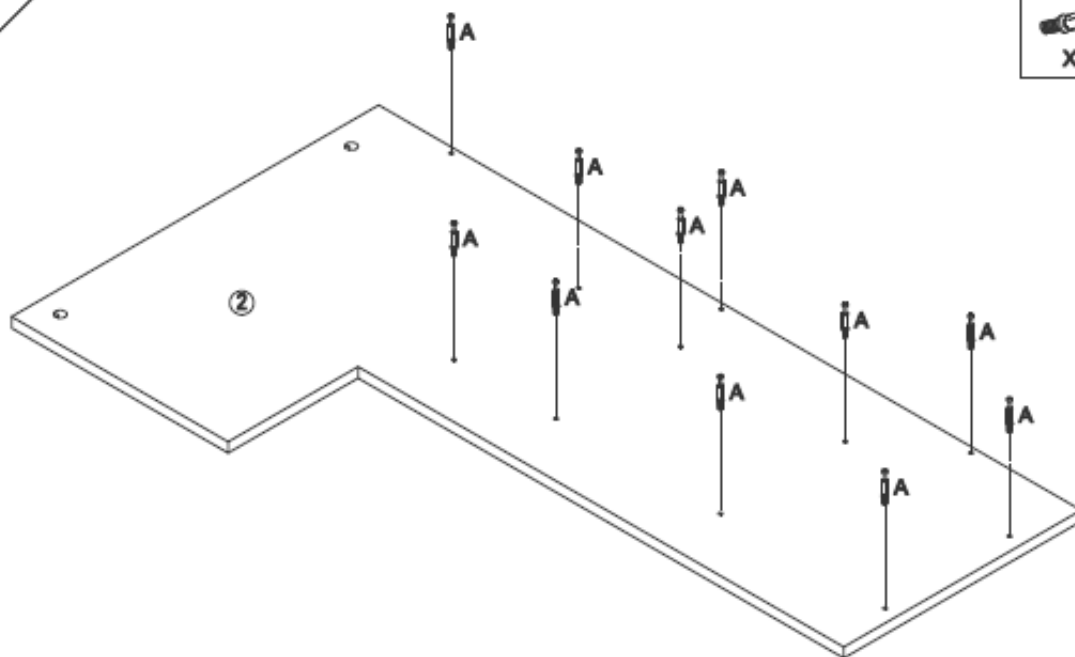


3

B Ø15x10



X 2

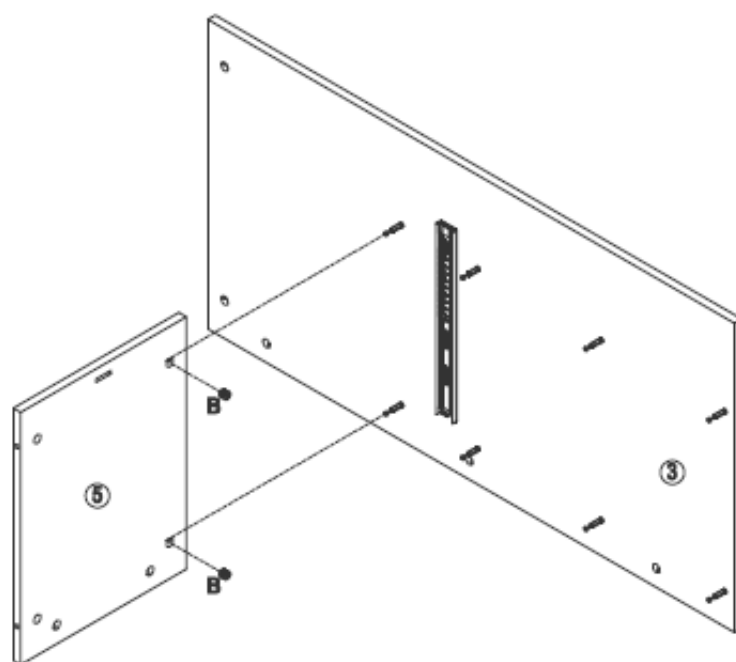


4

B Ø15x10



X 6

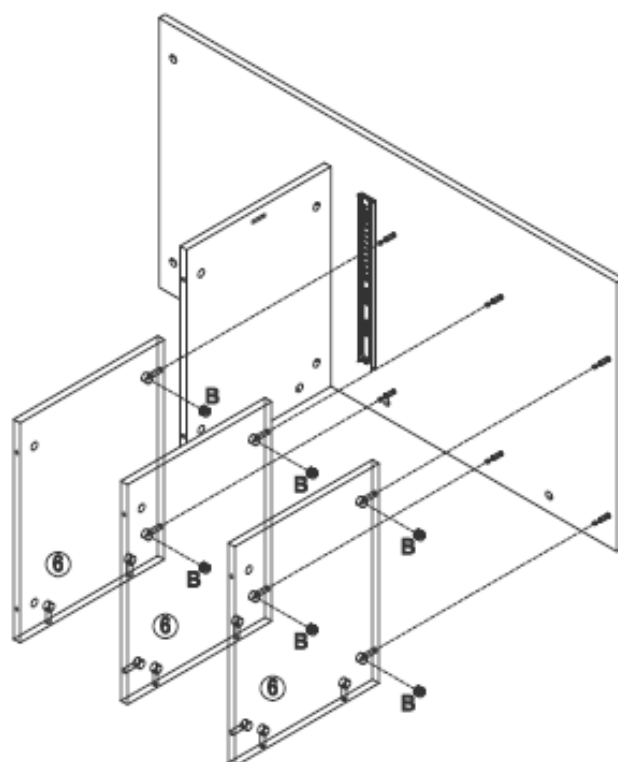


5

B Ø15x10



X 11

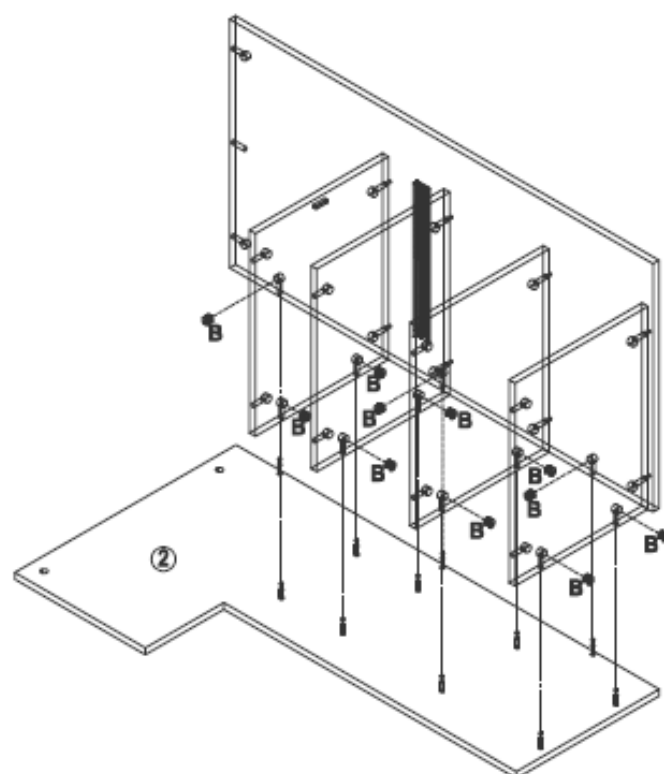


6

B Ø15x10



X 8

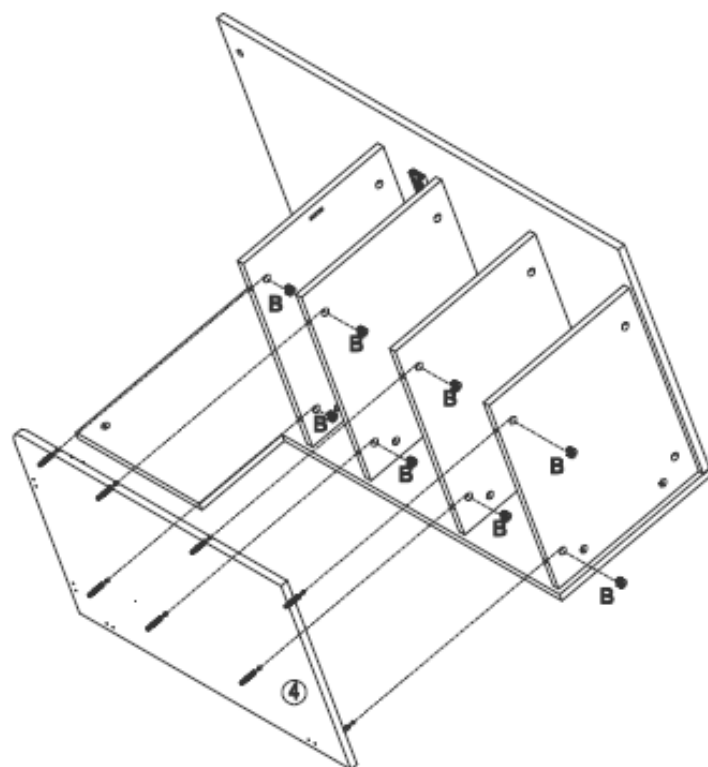


7


A M5x42



X 4

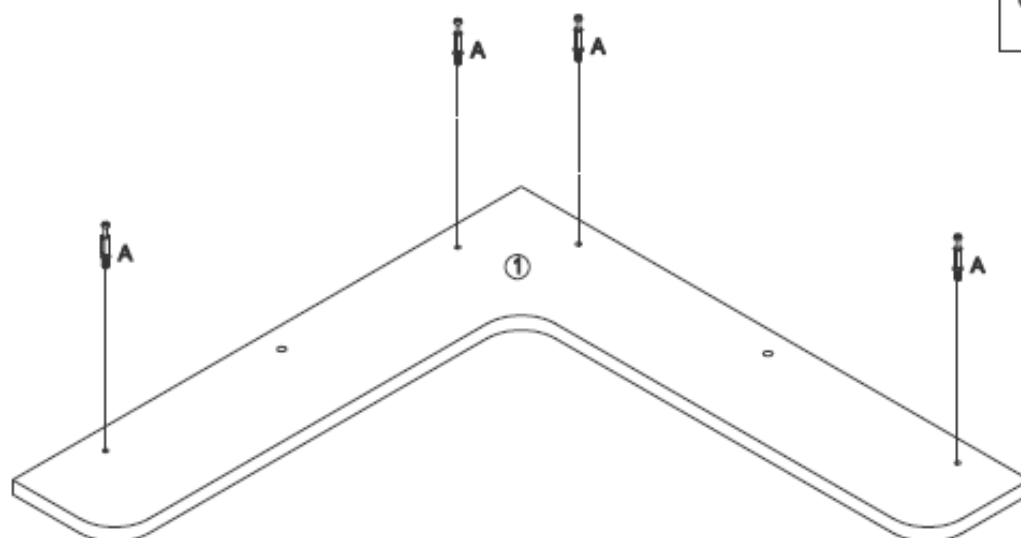


8

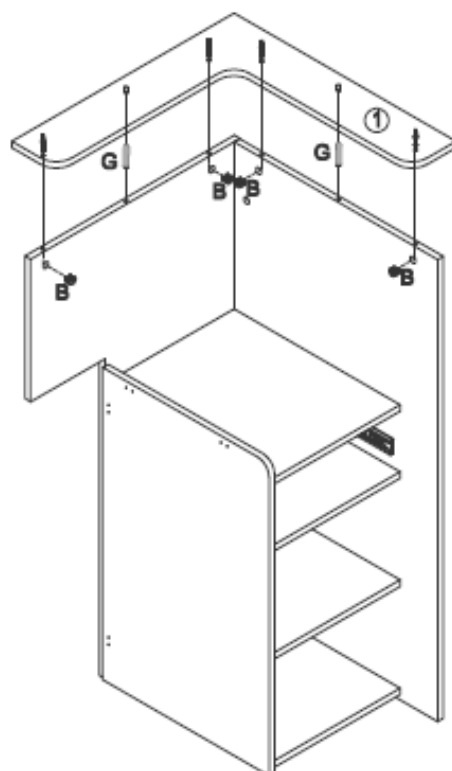

B Ø15x10
X4

G Ø8x40
X2


9

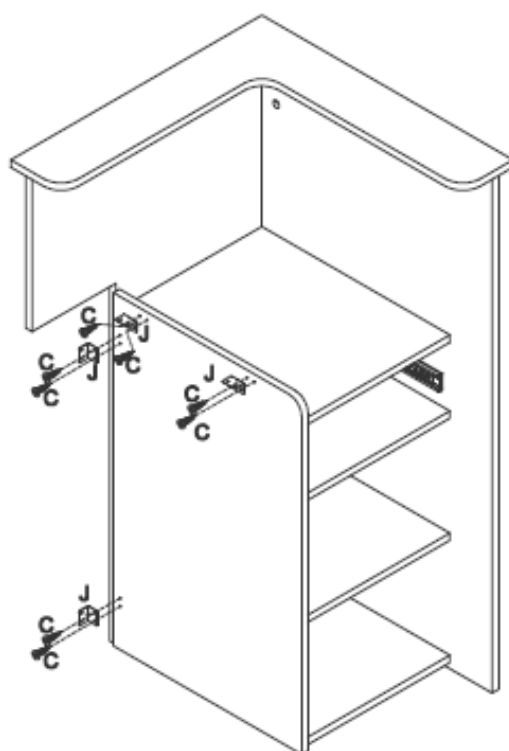

C M3.5x12
X8

J
X4


10

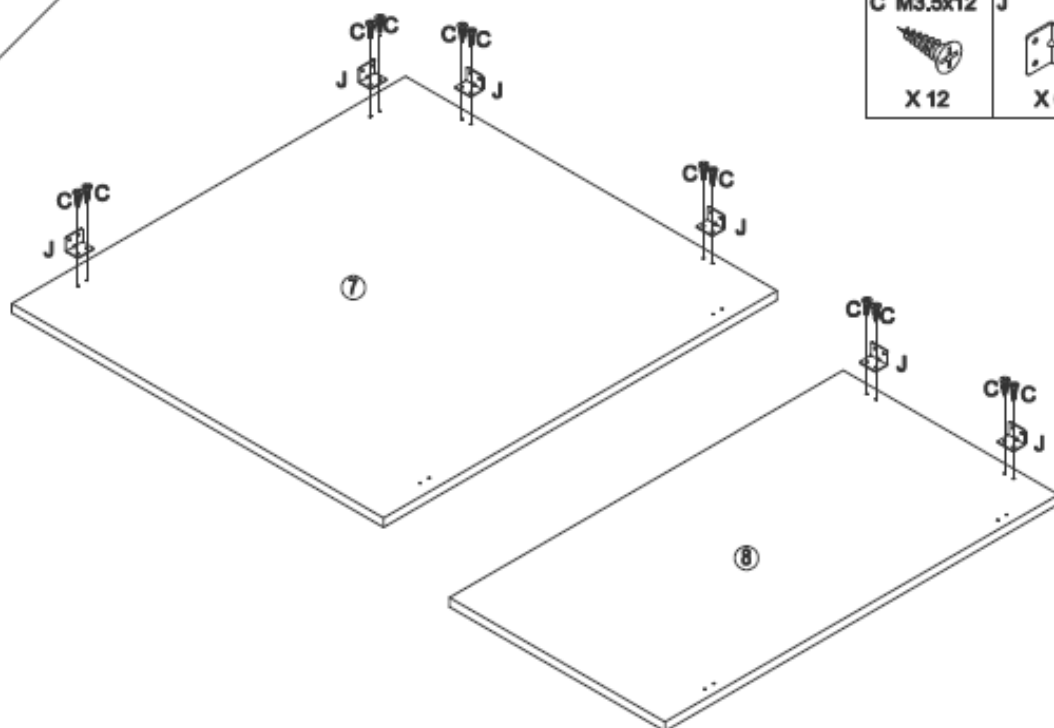



C M3.5x12
X 12

J
X 6

11

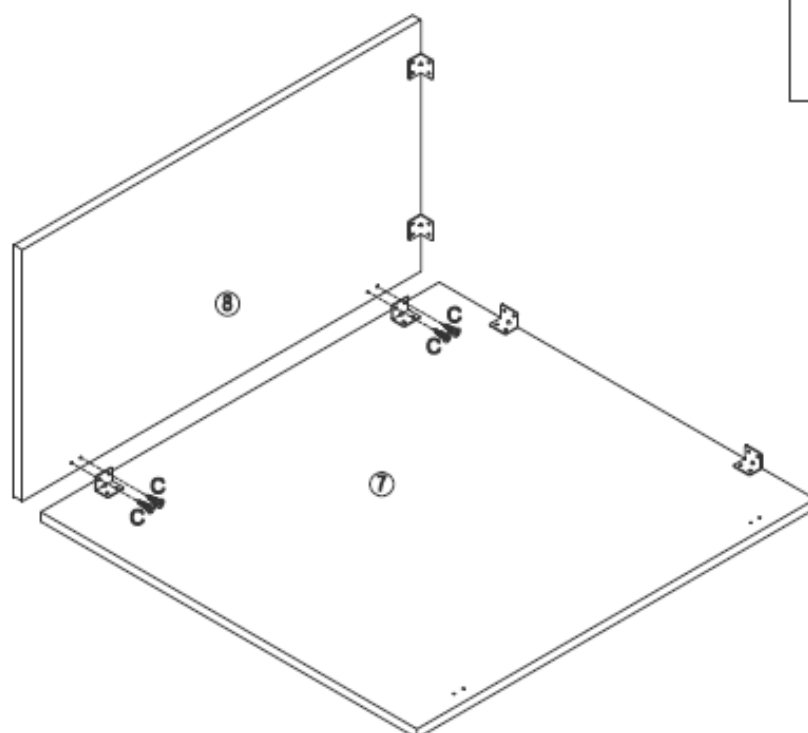

C M3.5x12
X 4

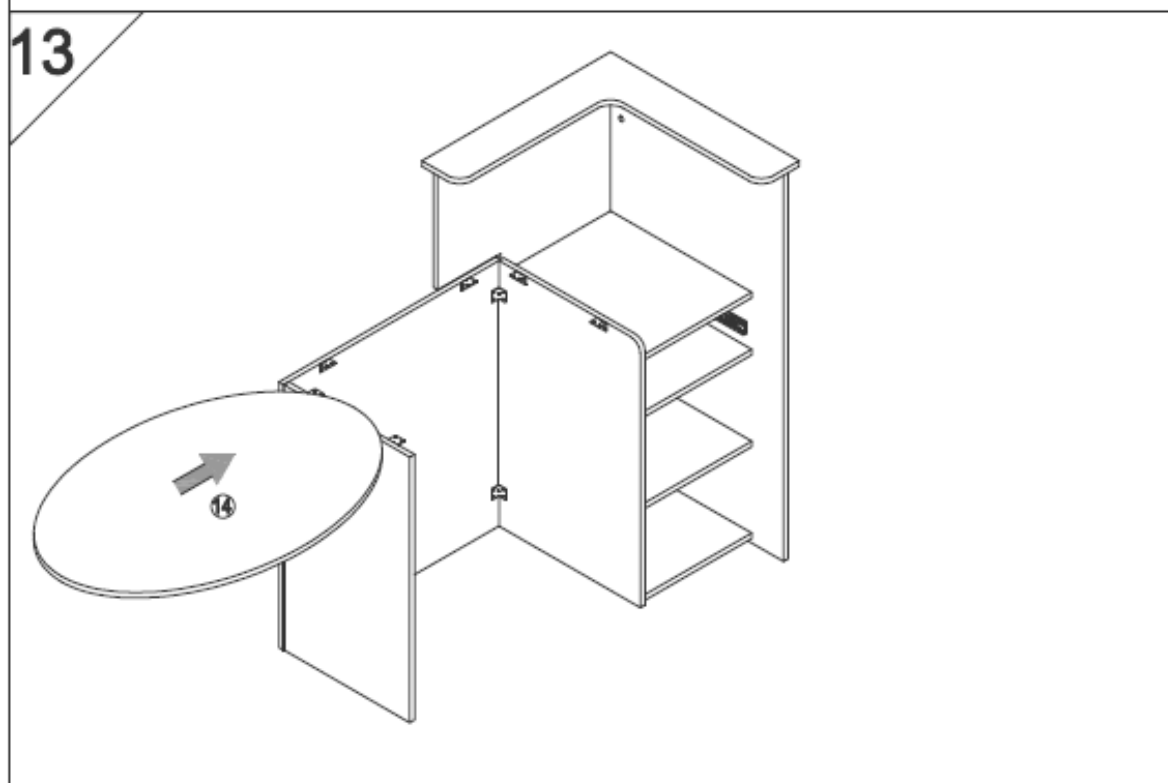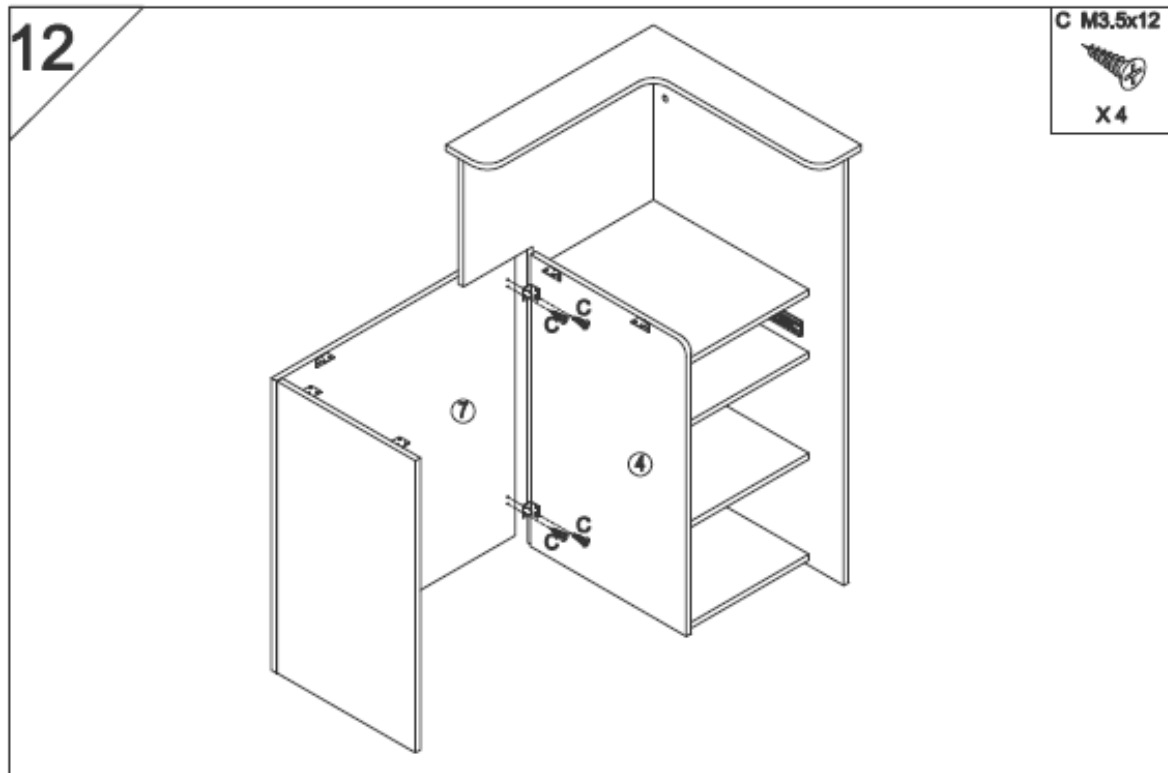

Noted: Please check the hole position one by one before screwing.


14

Noted: Please check the hole position one by one before screwed.



C M3.5x12

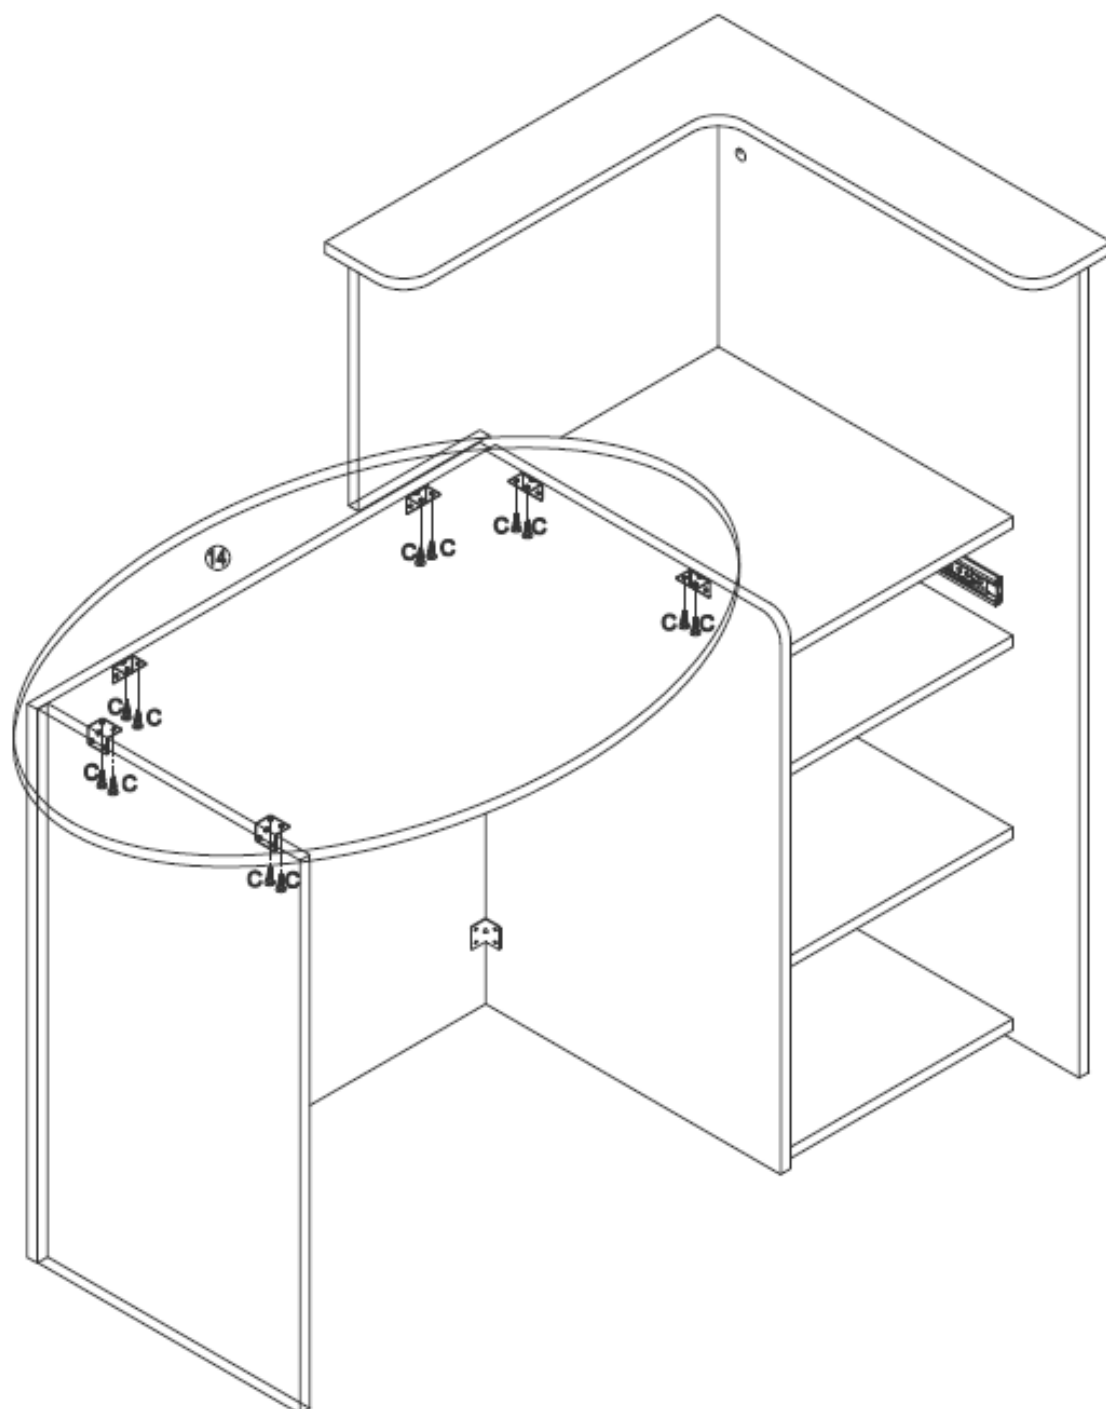


X 12




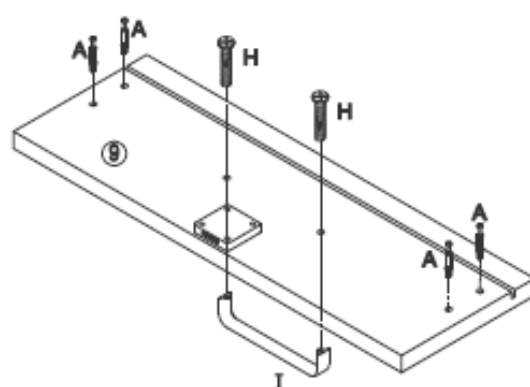
15

E  X1	F M3x18  X4
--	--

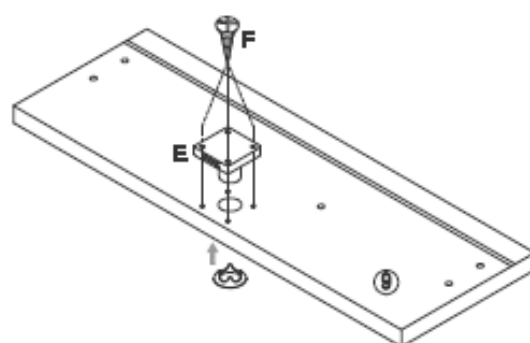

16

A M5x42  X4	H M4x18  X2	I  X1
--	--	--




17


B Ø15x10



X 4

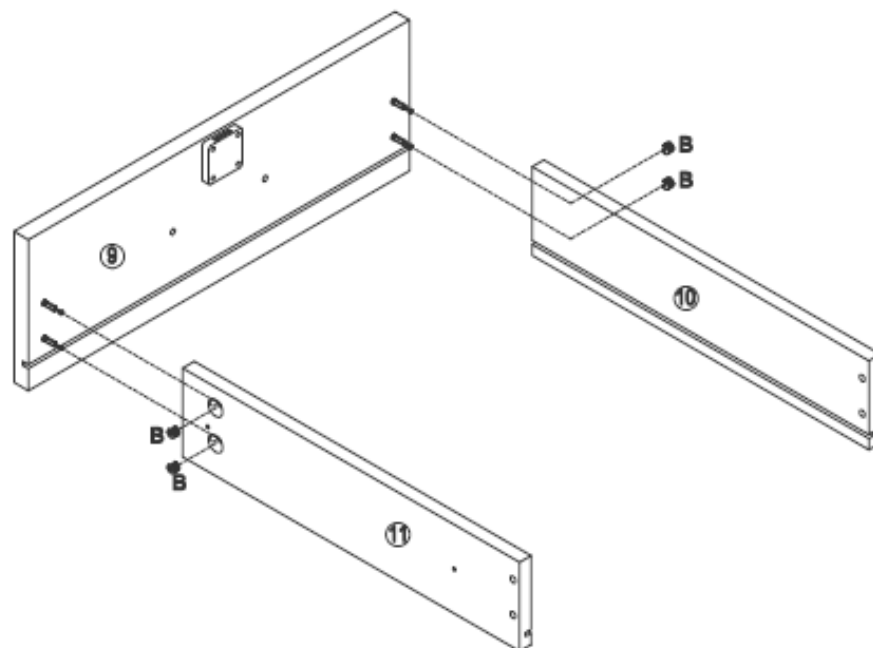


18

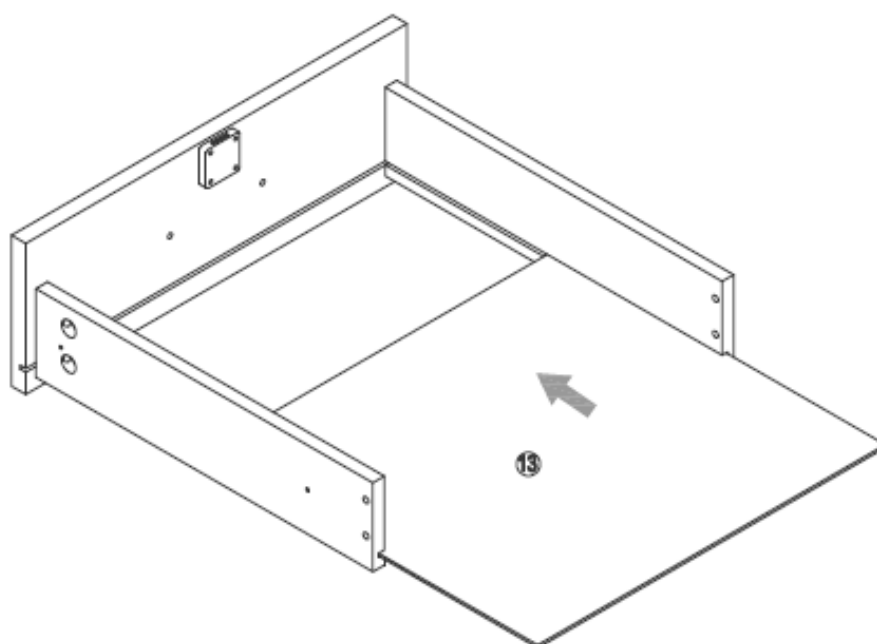


19


D M5x40
X 4

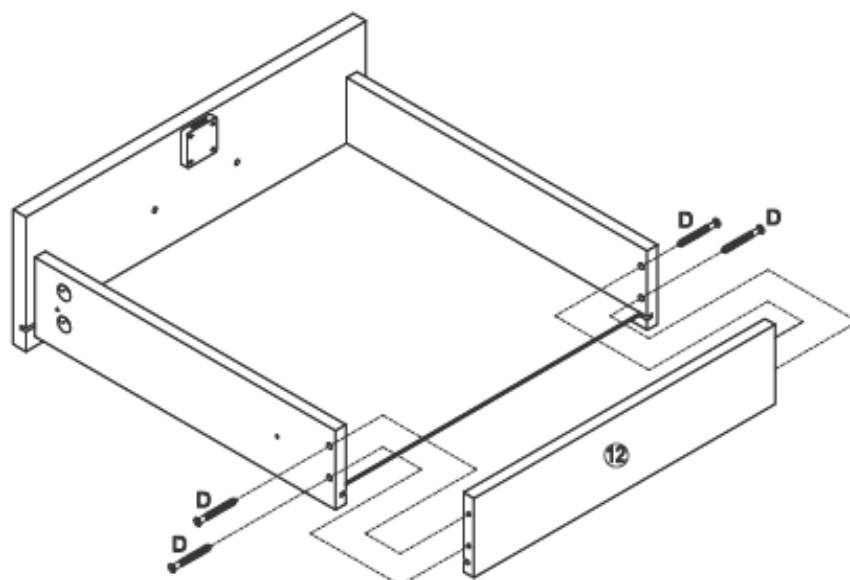


20

C M3.5x12
X 4

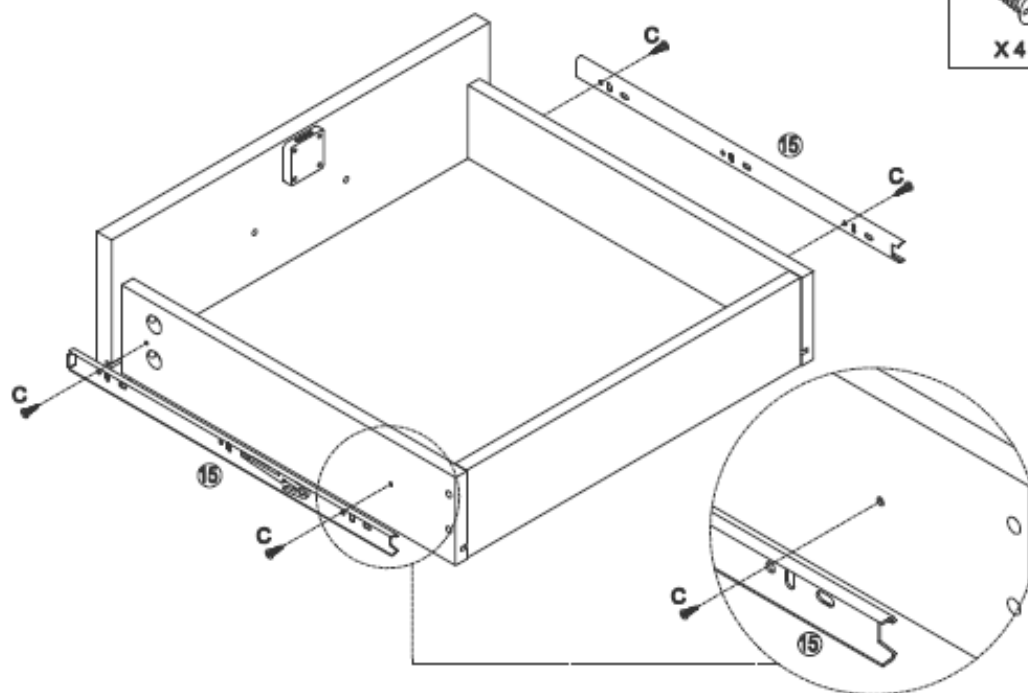

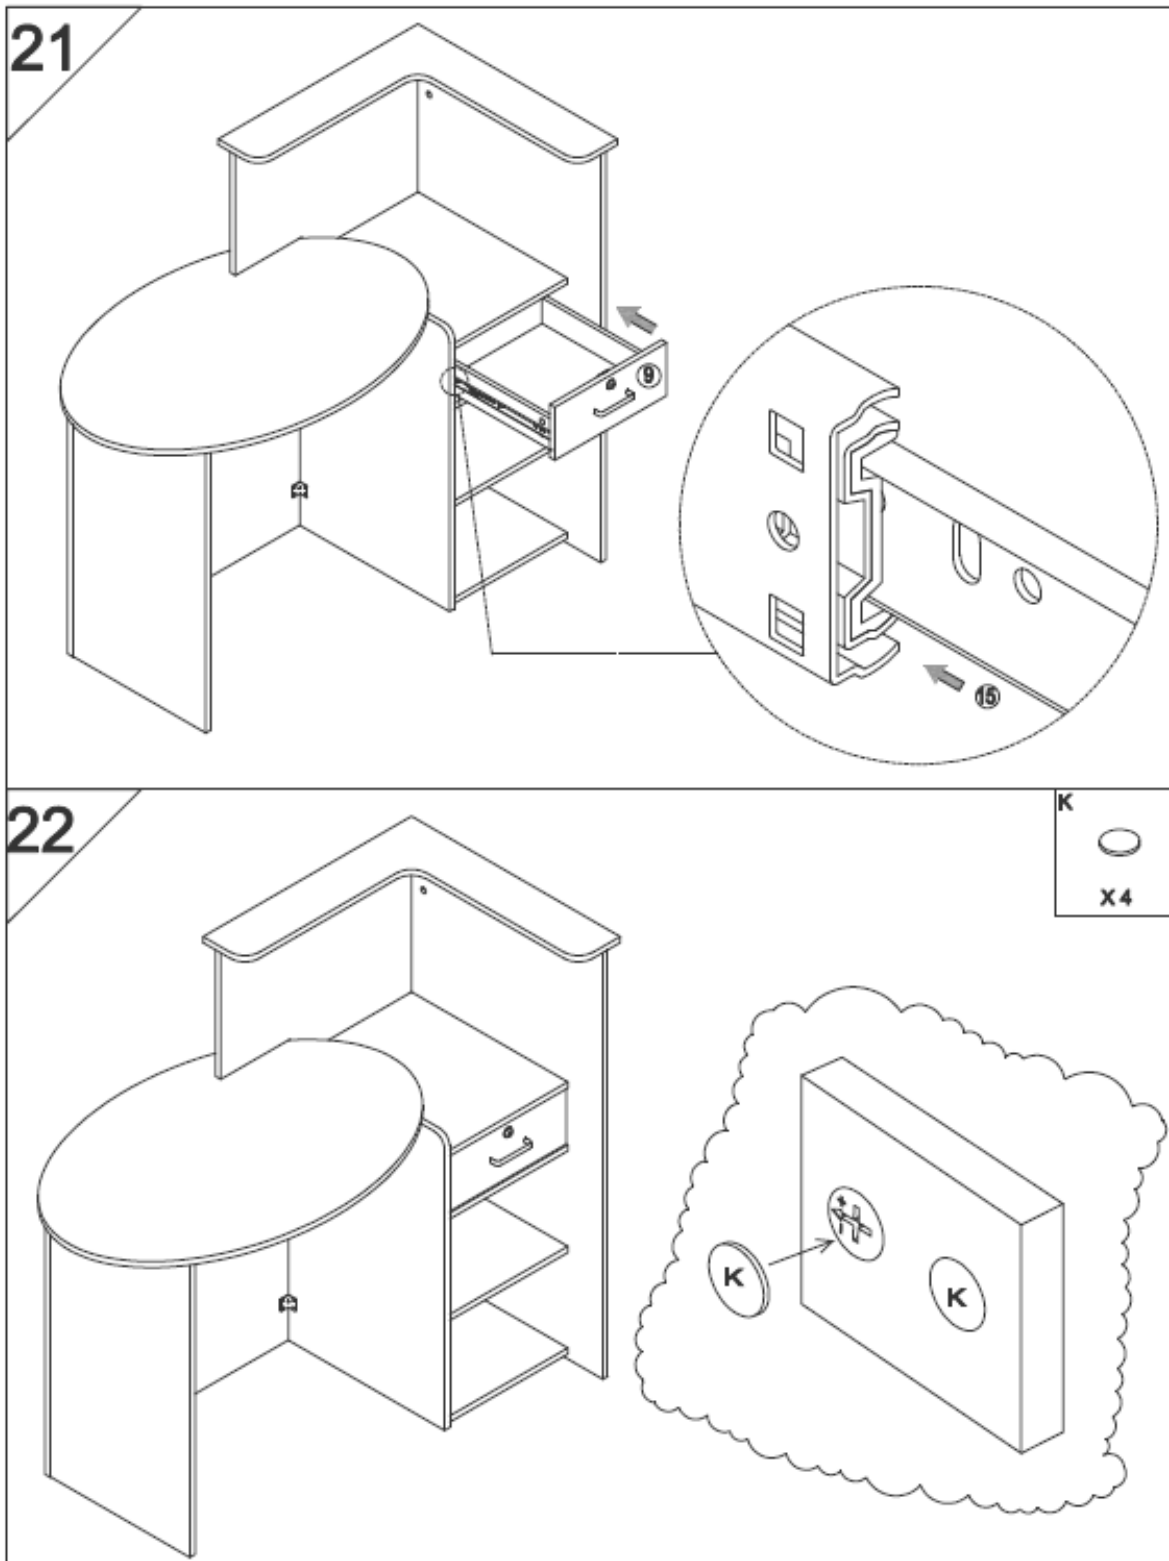

Documents / Resources

	<p>FUFU GAGA DRF-KF250006-01 47.7 in. Rectangular White and Gray MDF Computer Desk [pdf] Instruction Manual DRF-KF250006-01, 47.7 in. Rectangular White and Gray MDF Computer Desk, MDF Computer Desk, Computer Desk, DRF-KF250006-01, Desk</p>
---	---