



## FVC SP1106B-6 Sprinter Nudge Bar Installation Guide

[Home](#) » [FVC](#) » FVC SP1106B-6 Sprinter Nudge Bar Installation Guide 

### Contents

- [1 SP1106B-6 Sprinter Nudge Bar](#)
- [2 PACKAGE CONTENTS](#)
- [3 HARDWARE](#)
- [4 LET'S GET STARTED!](#)
- [5 GET OUT AND EXPLORE!](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



### Installation Guide



**Sprinter Nudge Bar  
SP1106B**

## SP1106B-6 Sprinter Nudge Bar




All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.


### THANK YOU!

ARE YOU EXCITED ABOUT YOUR NEW NUDGE BAR? HERE ARE A FEW THINGS TO DO BEFORE BEGINNING THE INSTALLATION PROCESS

- PLEASE INSPECT THE PRODUCT TO ENSURE THERE WAS NO DAMAGE INCURRED DURING SHIPPING.
- IF THERE IS DAMAGE TO REPORT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AS SOON AS POSSIBLE.
- NEXT, USING THE "PACKAGE CONTENTS" PAGE, CHECK INVENTORY AND FAMILIARIZE YOURSELF WITH THE PARTS AND HARDWARE.
- GATHER ALL TOOLS REQUIRED FOR INSTALL. -13MM BOX WRENCH OR SOCKET -5/32 ALLEN KEY - T45 TORX KEY ESTIMATED INSTALL TIME- 30 MIN BLUE LOCTITE IS RECOMMENDED FOR THIS INSTALLATION.

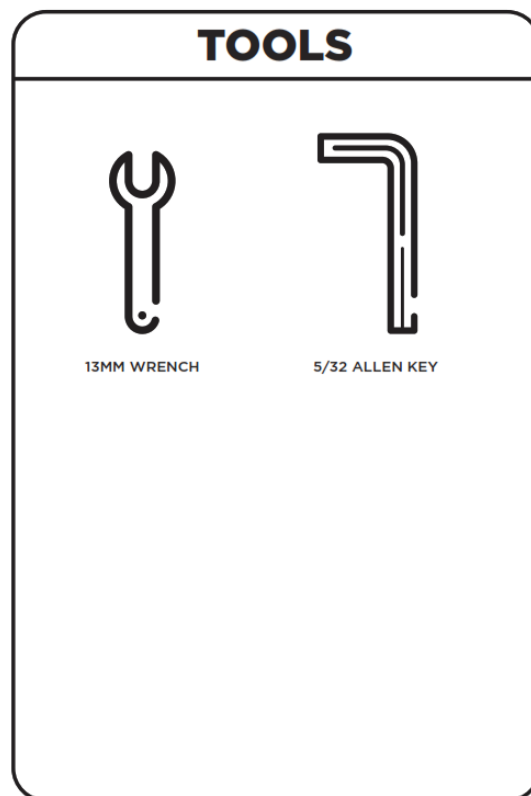

### PACKAGE CONTENTS

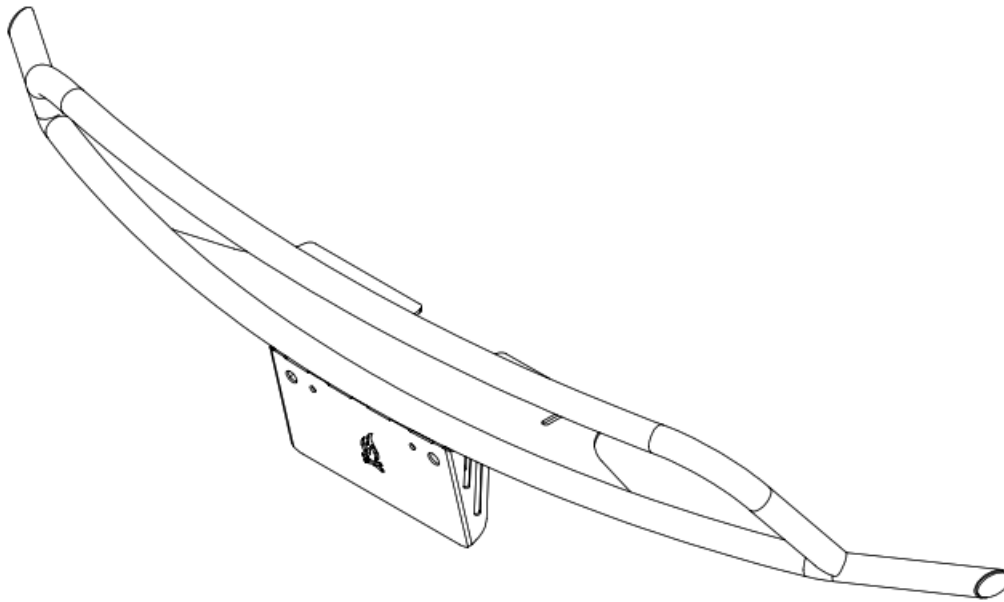

**NUDGE BAR**


**QTY - 1**

## **HARDWARE**



**1/4-20 X 0.75 FLANGED  
BUTTON HEAD HEX DRIVE  
SCREW**

**QTY - 2**

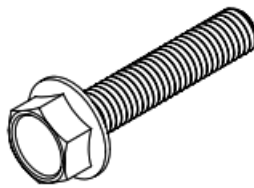

**M8-1.25 X 40 FLANGED HEX  
HEAD SCREW**

**QTY - 2**



**M8 SCREW X 24 O.D.  
OVERSIZED FLAT WASHER**

**QTY - 2**

## **LET'S GET STARTED!**

1. FIRST STEP IS TO REMOVE THE FACTORY BOLTS ON THE STEP PORTION OF YOUR BUMPER. SOMETIMES THERE ARE PLASTIC CAPS INSTALLED, AND THESE ARE EASILY REMOVED WITH A FLATHEAD SCREWDRIVER. THE BOLTS THEMSELVES REQUIRE A T45 BIT TO REMOVE.
2. NEXT, SOME VANS COME EQUIPPED WITH THE EUROPEAN STYLE LICENSE PLATE COVER, IF THIS IS THE CASE FOR YOU, IT WILL NEED TO BE REMOVED.

**NOTE-** WE HAVE SEEN SOME MOUNT THE NUDGE BAR WITHOUT REMOVING THE EURO STYLE PLATE MOUNT, BUT IT CAN INTERFERE WITH PARK SENSORS IF YOUR VEHICLE IS EQUIPPED WITH THEM.



EURO STYLE PLATE MOUNT



US STYLE PLATE MOUNT



3. NOW TAKE THE NUDGE BAR AND REST IT ON THE FRONT STEP AREA. LINE UP THE MOUNTING SLOTS AND THREAD IN THE HARDWARE SHOWN BELOW. THE LARGE WASHER GOES UNDERNEATH THE HEAD OF THE M8 BOLT. THREAD THIS FINGER TIGHT.


**NOTE-** THIS IS A TWO HANDED OPERATION THAT IS NOT TOO TRICKY.

WE FIND IT BEST TO HOLD THE NUDGE BAR DOWN WITH ONE HAND ON THE FRONT TUBE BY THE MOUNTING BRACKET AND USE YOUR OTHER HAND TO THREAD THE BOLTS IN.

WE RECOMMEND APPLYING BLUE LOCTITE TO THE BOLTS BEFORE INSERTING THEM.

4. NEXT, HOLD THE NUDGE BAR TIGHT AGAINST THE BUMPER AND ENSURE IT IS CENTERED, THEN TIGHTEN THE HARDWARE.

**NOTE-** THERE ARE TWO HOLES BEHIND THE LICENSE PLATE BRACKET FOR THE USE OF TWO SELF TAPPING SCREWS (NOT INCLUDED) INTO THE BUMPER PLASTIC IF YOU SEE FIT. THIS WILL KEEP THE BUMPER SNUG TO THE NUDGE BAR FOR AN EVEN STURDIER INSTALLATION.



M8-1.25 X 40 FLANGED HEX  
HEAD SCREW



M8 SCREW X 24 O.D.  
OVERSIZED FLAT WASHER

SET IN PLACE AND THREAD IN HARDWARE



3. IF YOUR VAN IS EQUIPPED WITH THE FRONT VIEW OR 360 CAMERA PACKAGES; BELOW IS AN IMAGE OF WHAT YOUR FRONT VIEW CAMERA WILL SHOW AFTER INSTALLING THE NUDGE BAR.



**GET OUT AND EXPLORE!**

**LEAVE US A REVIEW**

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click

“Leave Review.” Add a short review and upload a few photos to be showcased on the product page.

### SHARE YOUR PHOTOS WITH US

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

### CUSTOMER SUPPORT

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@flatlinevanco



[facebook.com/flatlinevanco](https://facebook.com/flatlinevanco)



[youtube.com/c/flatlinevanco](https://youtube.com/c/flatlinevanco)



[support@flatlinevanco.com](mailto:support@flatlinevanco.com)




thanks.

FLATLINE VAN CO

[SUPPORT@FLATLINEVANCO.COM](mailto:SUPPORT@FLATLINEVANCO.COM)

888-667-5576

## Documents / Resources

 <p>FVC® FLATLINE VAN CO</p> <p>Sprinter Nudge Bar SP1106B-6</p>	<p><a href="#">FVC SP1106B-6 Sprinter Nudge Bar</a> [pdf] Installation Guide SP1106B-6 Sprinter Nudge Bar, SP1106B-6, Sprinter Nudge Bar, Nudge Bar</p>
---	---

[Manuals+](#)