

FVCO®
UN0107B
Universal
Mounting
Posts



FVCO UN0107B Universal Mounting Posts Installation Guide


[Home](#) » [FVCO](#) » FVCO UN0107B Universal Mounting Posts Installation Guide 

Contents

- [1 FVCO UN0107B Universal Mounting Posts](#)
- [2 Product Usage Instructions](#)
- [3 FAQs](#)
- [4 TOOLS REQUIRED](#)
- [5 BEFORE YOU START](#)
- [6 PACKAGE CONTENTS](#)
- [7 HARDWARE](#)
- [8 USING STEP](#)
- [9 CONTACT INFORMATION](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



FVCO UN0107B Universal Mounting Posts

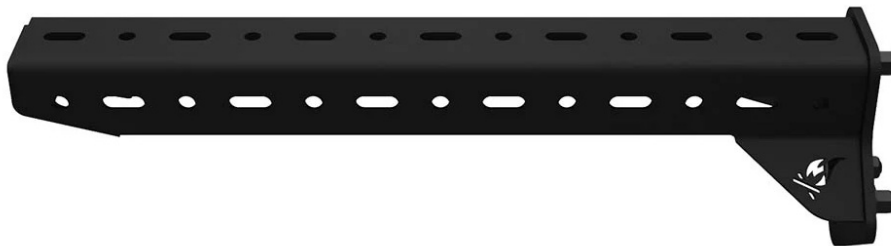

Product Usage Instructions

Before You Start:

Inspect the product and packaging upon delivery. Contact support@flatlinevanco.com if any parts are missing.

Package Contents:

- Universal Mounting Posts – Qty: 2

Hardware:

1. 3/8-16 x 1 Flanged Hex Head Screw – Qty: 8
2. 3/8 Screw Flat Washer – Qty: 8
3. 3/8-16 Nylon Locknut – Qty: 8

• Step 01 – Layout and Install Prep:

- **Attach Mounting Posts to Platform:** Attach Mounting Posts to Rear Door Platform using (3ea) 3/8 Screws, Washers, and Nylon Locknuts. Follow recommended mounting styles for different accessories.

• Step 02A – Sprinter Platforms:

- **Widest Possible Install Width for Posts:** Refer to FIG 2 for dimensions of the largest width between posts for the Driver and Passenger Side Rear Door Platforms.

• Step 02B – Transit Platforms:

- **Widest Possible Install Width for Posts:** Consult FIG 3 for dimensions of the largest width between posts for the Driver and Passenger Side Rear Door Platforms.

• Step 02D – Mounting Posts:

- **Mounting Posts Dimensional Information:** Review FIG 5 for relevant dimensional information regarding the length and width of the Mounting Posts themselves.

FAQs

• How long does it take to install the Universal Mounting Posts?

- The estimated installation time is 30 minutes. Additional help is recommended for some steps.

• What tools are required for installation?

- You will need a measuring tape, a 7/16 wrench or socket, and a 9/16 wrench or socket.

TOOLS REQUIRED

(NOT INCLUDED)

- + MEASURING TAPE
- + 7/16" WRENCH OR SOCKET
- + 9/16" WRENCH OR SOCKET

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 30 MINUTES Additional help is suggested for a few of the install steps.


BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for. Contact us ASAP if anything is missing at: support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.


PACKAGE CONTENTS

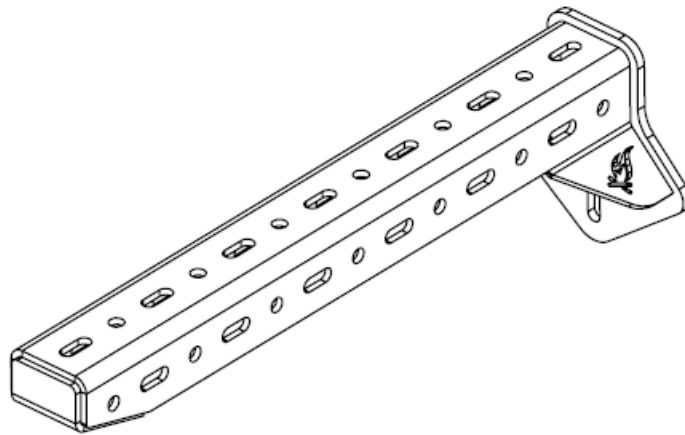

UNIVERSAL MOUNTING POSTS

QTY: 2

HARDWARE

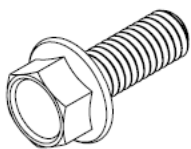


3/8-16 X 1 FLANGED
HEX HEAD SCREW

QTY: 8



3/8 SCREW FLAT
WASHER

QTY: 8

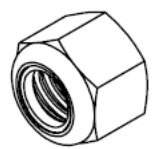

3/8-16 NYLON
LOCKNUT

QTY: 8

TOOLS REQUIRED FOR THIS STEP:

- + MEASURING TAPE

- + 7/16" WRENCH OR SOCKET
- + 9/16" WRENCH OR SOCKET

USING STEP

STEP | 01 LAYOUT AND INSTALL PREP

Choosing Mounting Location: The mounting location


will depend on the accessories used with your rear platform mounting posts and the layout you choose. This guide provides useful dimensional information and recommends installation orientations based on different use cases. FIG 1 shows examples of both the upright and horizontal mounting styles, with the posts positioned at their widest possible locations. Note that the upright and horizontal configurations allow have different available slots for mounting hardware.

Attach Mounting Posts to Platform: Attach Mounting Posts to Rear Door Platform using (3ea) 3/8" Screws, Washers and Nylon Locknuts.

NOTE – We recommend using the horizontal mounting style when mounting up bike trays (like 1up) for maximum stability. The mounting posts can also be arranged on the same vertical plane to be used for snowboard/ski racks. This can provide storage for a lot of boards/skis!


JUMP TO DIMENSIONAL INFORMATION BY PRODUCT

- Sprinter Driver/Passenger Rear Door Platforms
- Transit Driver/Passenger Rear Door Platforms
- Promaster Driver/Passenger Rear Door Platforms
- Universal Mounting Posts

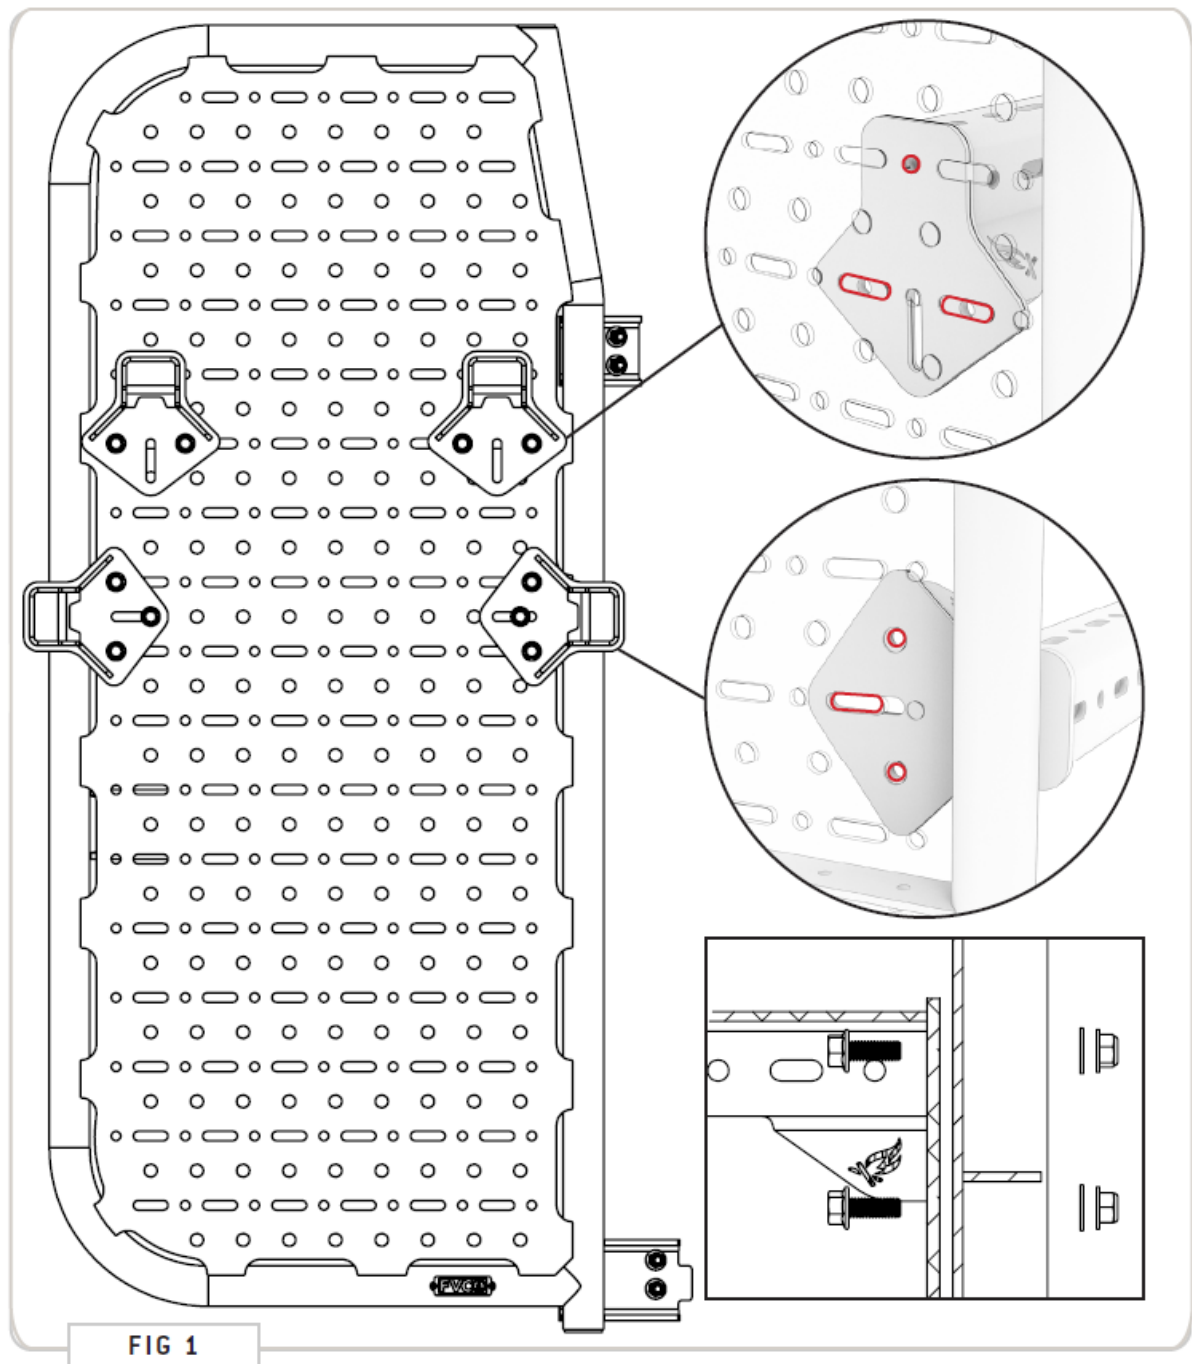

STEP | 02A SPRINTER PLATFORMS

- **Widest Possible Install Width for Posts in the Horizontal**
 - **Position:** See FIG 2 for largest width between posts for the Driver and Passenger Side Rear Door Platforms.
- **Widest Possible Install Width for Posts in the Vertical**
 - **Position:** See FIG 2 for largest width between posts for the Driver and Passenger Side Rear Door Platforms.

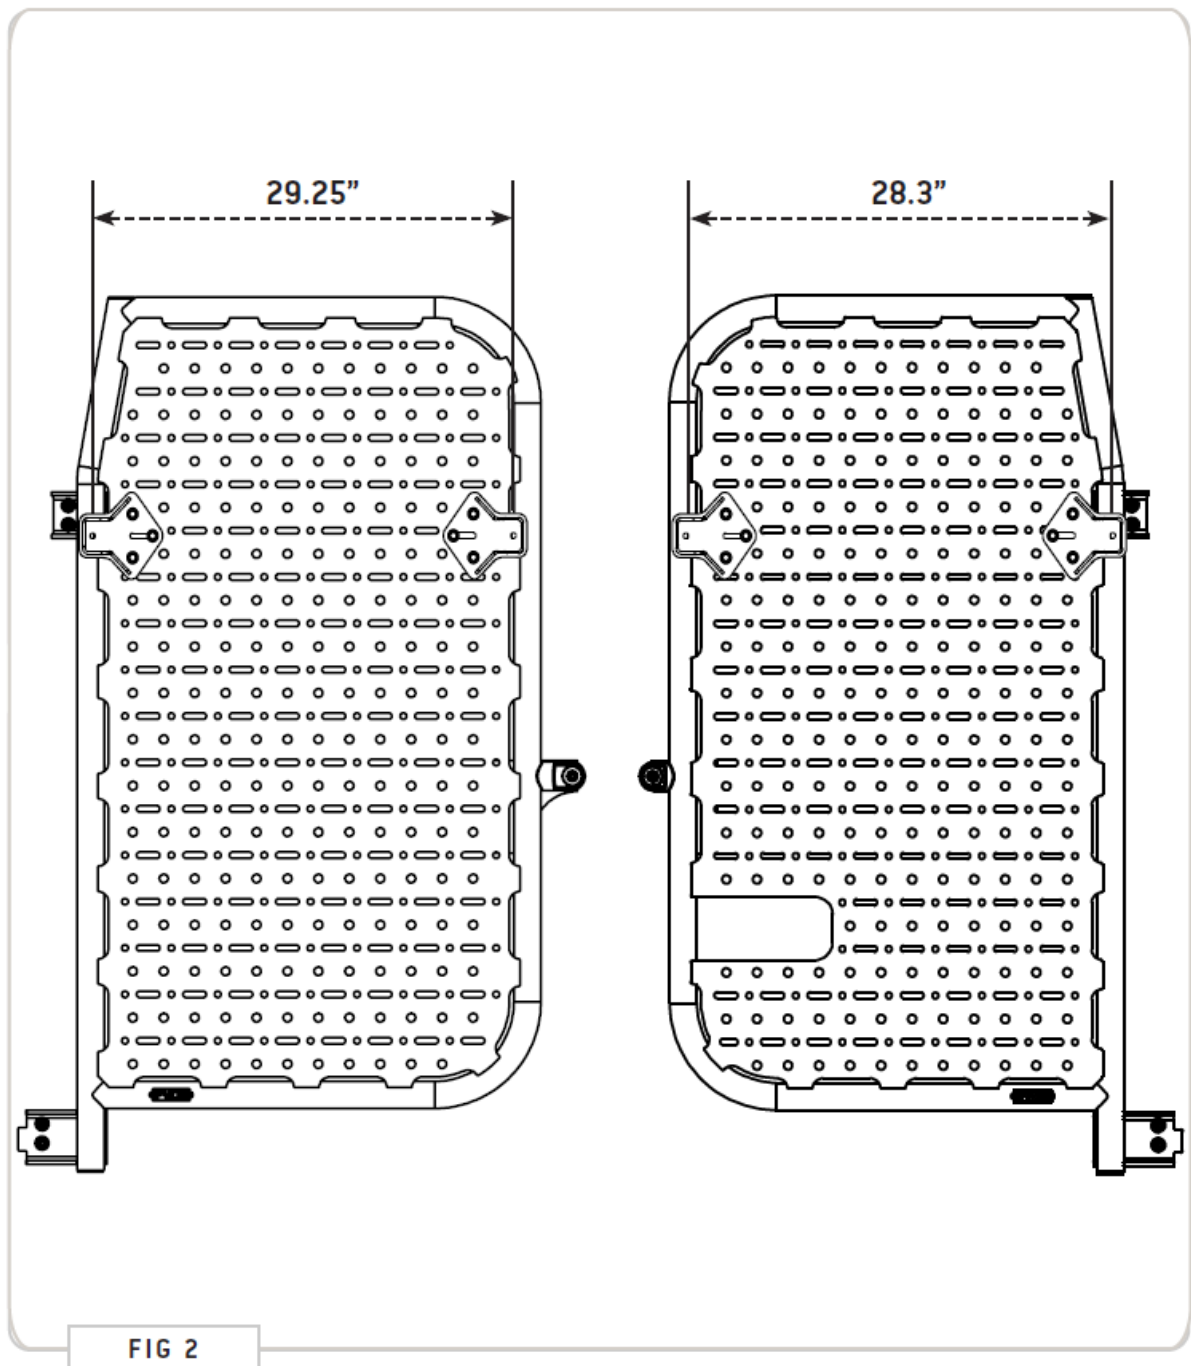

STEP | 02B TRANSIT PLATFORMS

- **Widest Possible Install Width for Posts in the Horizontal**

- **Position:** See FIG 3 for largest width between posts for the Driver and Passenger Side Rear Door Platforms.

- **Widest Possible Install Width for Posts in the Vertical**

- **Position:** See FIG 3 for largest width between posts for the Driver and Passenger Side Rear Door Platforms.

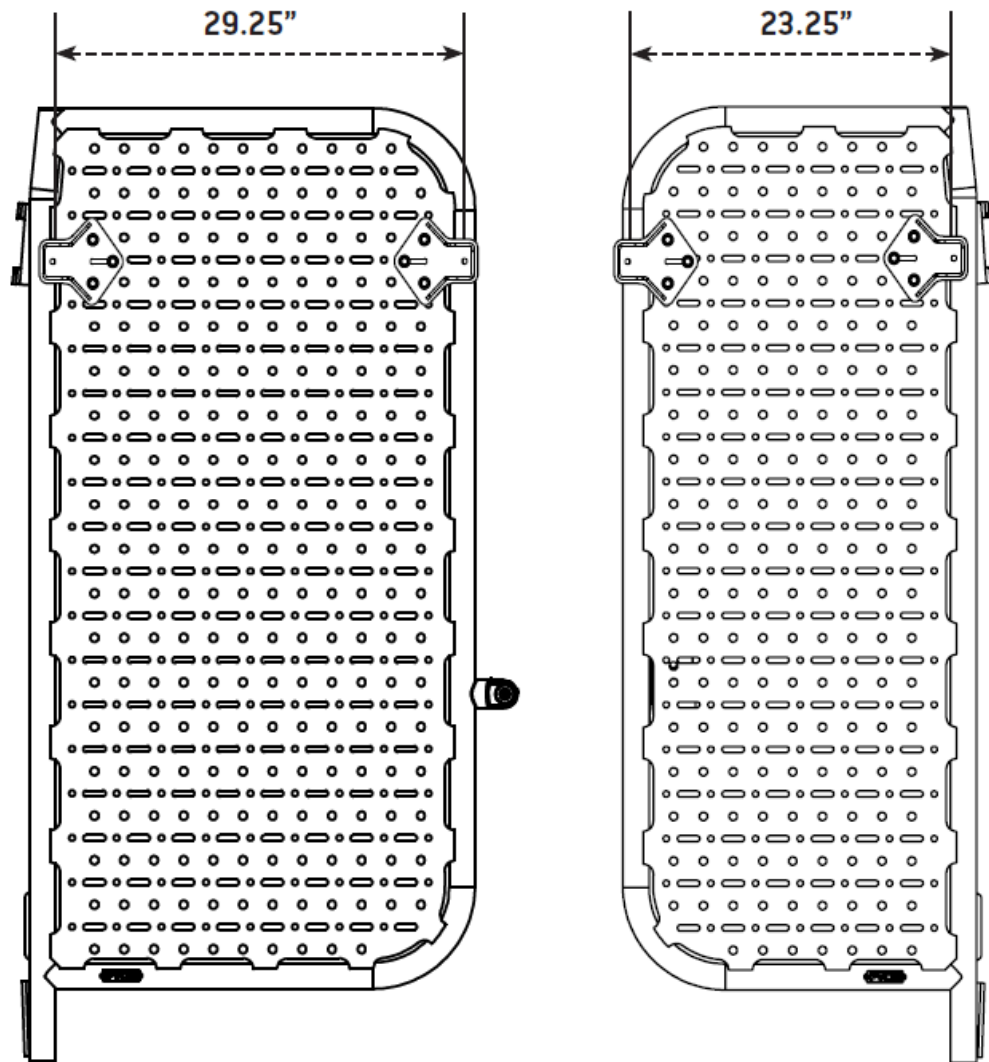


FIG 3

STEP | 02D MOUNTING POSTS

- **Mounting Posts Dimensional Information:** See FIG 5 for relevant dimensional information pertaining to the length and width of the Mounting Posts themselves.

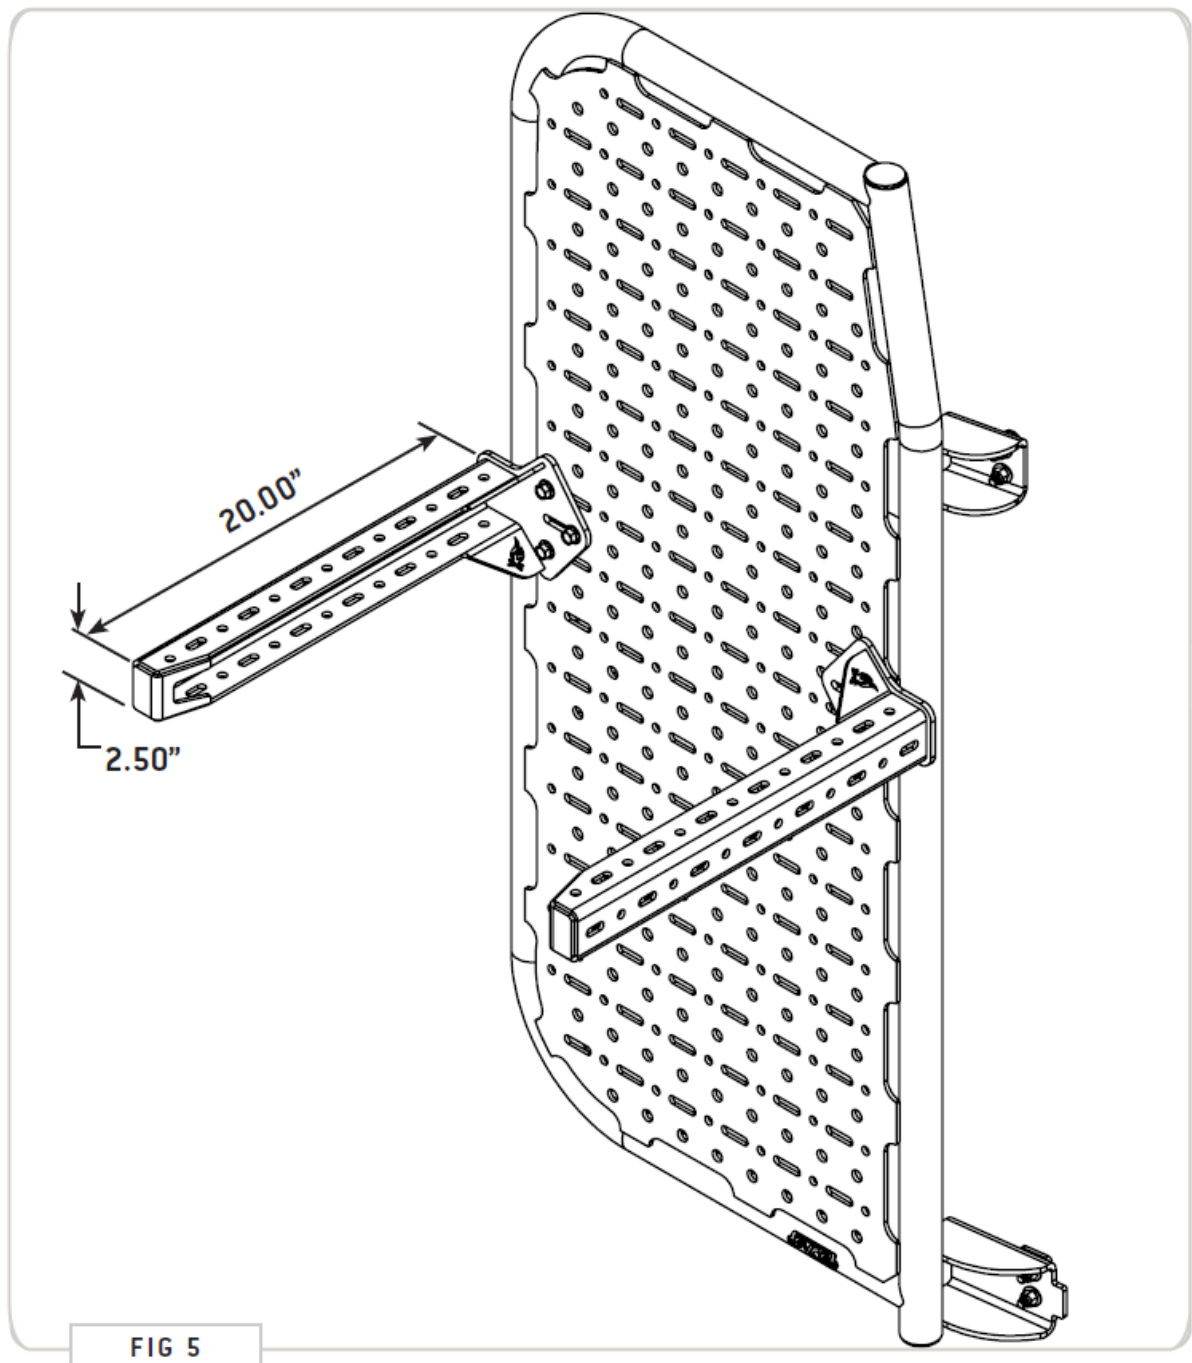


FIG 5

GET OUT AND EXPLORE

• LEAVE US A REVIEW

- Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

• + SHARE YOUR PICS

- We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!


• + NEED ANY HELP?

- If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!

CONTACT INFORMATION

- FL ATLINE VAN CO
- SUPPORT@FLATLINEVANCO.COM
- [888-667-5576](tel:888-667-5576)

Documents / Resources

	FVCO UN0107B Universal Mounting Posts [pdf] Installation Guide UN0107B Universal Mounting Posts, UN0107B, Universal Mounting Posts, Mounting Posts, Posts
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.