Get Packed Packmate R-Wrapper Mobile Pallet Wrapping Trolley User Guide

Home » Get Packed » Get Packed Packmate R-Wrapper Mobile Pallet Wrapping Trolley User Guide

Get Packed Packmate R-Wrapper Mobile Pallet Wrapping Trolley

Contents

ASSEMBLY INSTRUCTIONS

Step 1 During assembly, leave within open cardboard carton to avoid scratches. R-Wrapper frame must lay down as in the way it is carried with single 'carriage tube' UP as illustrated.

Step 2 Remove smaller cardboard wrap from Carriage and slide carriage right, towards pulley-end of frame.
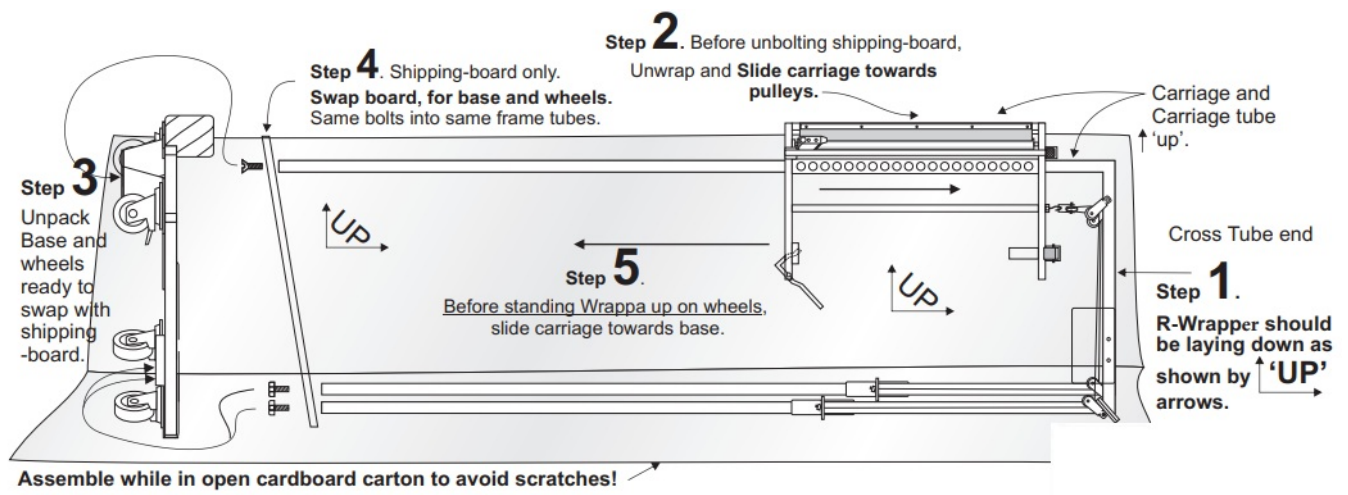
Step 3 Remove and unwrap base and wheels from carton and keep nearby the 'wooden shipping-board' end.

Step 4 To remove the shipping board and while supporting the carriage tube weight: Undo two 13mm bolts with a spanner and the 6mm socket head bolt with an allen-key. Swap board with base and wheels and fasten bolts through base into frame tube ends. **Tighten** 6mm 'Allen-key' with spanner or tube for leverage. **Check frame tubes are parallel** before tightening 13mm bolts firmly when R-Wrapper is upright.

Step 5 Slide Carriage toward base before standing R-Wrapper up on wheels to avoid carriage dropping down to the base
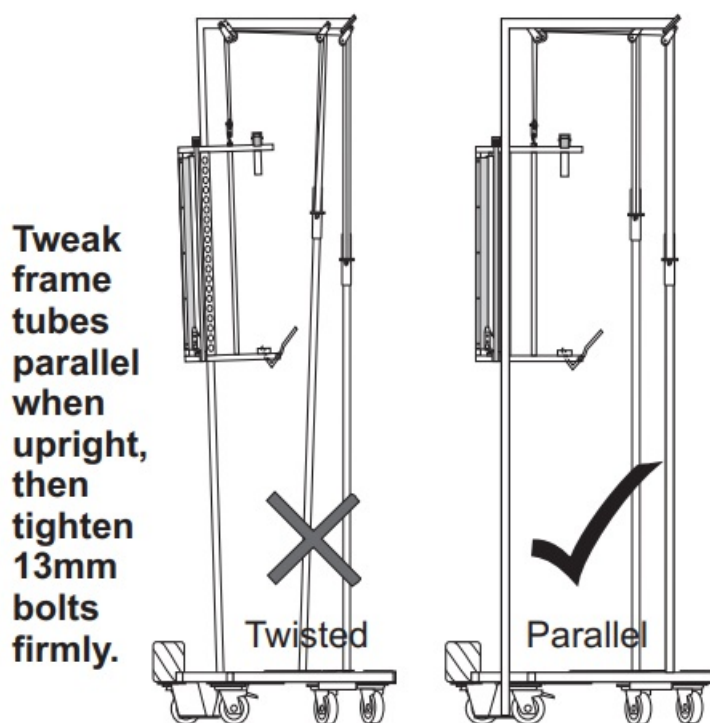
Step 6 Ensure lift rope is sitting in pulleys and not snagged around pulleys, carriage or any control handles then check operation.

See INSTRUCTIONS FOR USE sheet for correct operation

Step 2. Before unbolting shipping-board, Unwrap and **Slide carriage towards pulleys.**

Step 4. Shipping-board only. **Swap board, for base and wheels.** Same bolts into same frame tubes.

Carriage and Carriage tube ↑ 'up'.

Step 3 Unpack Base and wheels ready to swap with shipping -board.

↑UP→

Step 5. Before standing Wrappa up on wheels, slide carriage towards base.

↑UP→

Cross Tube end

Step 1. R-Wrapper should be laying down as shown by ↑'UP' arrows.

Assemble while in open cardboard carton to avoid scratches!

STEP 1: Wheel the r-Wrapper to the pallet TO do the job!
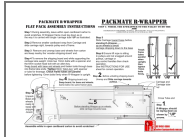PACKMATE R-WRAPPER, MOBILE, ERGONOMIC PALLET WRAPPING. DESIGNED & MADE IN AUSTRALIA. SEE.

Tweak frame tubes parallel when upright, then tighten 13mm bolts firmly.

Twisted ✗

Parallel ✓

CUSTOMER SERVICES

029452-3566
sales@getpacked.com.au

Documents / Resources

Get Packed Packmate R-Wrapper Mobile Pallet Wrapping Trolley [pdf] User Guide
Packmate R-Wrapper Mobile Pallet Wrapping Trolley, Packmate R-Wrapper, Mobile Pallet Wrapping Trolley, Pallet Wrapping Trolley, Wrapping Trolley, Trolley

References

- **User Manual**