



## gutta 9219119 Rectangular Canopy with Side Panel Instruction Manual

[Home](#) » [gutta](#) » gutta 9219119 Rectangular Canopy with Side Panel Instruction Manual 

### Contents

- 1 [gutta 9219119 Rectangular Canopy with Side Panel](#)
- 2 [Product Information](#)
- 3 [Features](#)
- 4 [Product Usage Instructions](#)
- 5 [Important Recommendations!](#)
- 6 [ACCESORIES](#)
- 7 [TOOLS REQUIRED](#)
- 8 [Mounting dimensions](#)
- 9 [Mounting instructions](#)
- 10 [Mounting dimensions, side panel](#)
- 11 [Overview of product range](#)
- 12 [ABOUT COMPANY](#)
- 13 [Documents / Resources](#)
  - 13.1 [References](#)
- 14 [Related Posts](#)



**gutta 9219119 Rectangular Canopy with Side Panel**



## Product Information

- **Product Name:** Rechteckvordach BS Plus 160/200 mit Seitenteil
- **Product Number:** 9219119
- LED-Lichttechni Energieeffizienz Umweltfreundlich

## Features

- Rectangular canopy with side panel
- LED lighting technology
- Energy efficient
- Environmentally friendly

## Product Usage Instructions

### Mounting Instructions for BS Plus 160 / 200

1. Mounting the wall bracket:
  - Attach the wall bracket to the wall.
  - Use 6 screws for BS 160 and 9 screws for BS 200.
2. Detach the LED panel and pull the power cable through the canopy.
3. Fastening at the top:
  - Attach the joint sealing tape to the angle.
  - Drill holes with a 3.5mm drill bit.
  - Insert screws as shown.
  - Use 8 screws for BS 160 and 12 screws for BS 200.

4. Fastening from below:

- Use 2 screws for BS 160 and 4 screws for BS 200.

5. Power connection for LED panel.

6. Mounting the side panel:

- Place the side panel on the brackets.
- Slide the side panel up to the canopy.

7. Fastening:

- Use 6 screws for BS 160 and 6 screws for BS 200.

8. Apply a silicone joint between the wall and the canopy.

Note: The product also includes Hohlkammerplatten Twinwall sheets, but no specific instructions are provided in the given text-extract.

## **Important Recommendations!**

- Prior to assembly please study the assembly in-structions in detail and check the consignment for possible faulty parts or damage during transpor-tation. No liability will be assumed for damage to products already assembled.
- Please check that type, dimensions and colour are correct before assembly.
- Custom-made products cannot be exchanged.
- The canopy may only be used for the intended purpose, failing which no claims for product liabili-ty can be accepted!
- Clean the canopy every 3 months and only use a re-commended cleaning product (no scrubbing agents or solvents). If necessary, the lacquered parts can also be treated with with car polish.
- The water drains should be cleaned regularly (in order to avoid damage caused by accumulated wa-ter).
- In each case, the canopy fastenings must be sui-table for the construction of the wall in question. Secure attachment must be ensured.
- Accumulated snow and ice should be removed from the canopy.
- Caution – Danger of accident! The canopy is not load bearing; do not climb or place your weight on the canopy.
- Recommendation: Assembly should be carried out by two persons. You must also seal the canopy using standard commercial silicone.
- The electrical installation must be carried out or removed by a qualified electrician.
- No guarantee claims can be accepted for parts subject to wear and tear after the statutory guaran-tee period has expired.
- We can also supply separate accessories for this canopy. Please ask your local dealer for details.
- The design is subject change.


## **ACCESORIES**

Nr.   No. N°   Nr.	Bezeichnung   Designation Désignation   Aanwijzing		Stück   Quantity Pièces   Stuk	
			BS plus 160	BS plus 200
1.	Dübel   Plugs Cheville   Pluggen	Ø 12 mm 	12	15
2.	Unterleg-Scheibe   Washers Rondelle   Sluitring		12	15
3.	Schraube   Screw Vis   Schroef	10 x 80 mm 	12	15
4.	Metallschraube   Metal screw Vis à métal   Metaalschroef	4,8 x 35 mm 	24	30
5.	Wandhalter - Vordach Wall bracket - Canopy Support mural - auvent Muurbeugel - Voordeurluifel	110 x 137 mm 	2	3
6.	Wandhalter-Seitenblende Wall bracket-side panel Support mural - élément latéral Muurbeugel - zijpaneel	110 x 137 mm 	3	3
7.	Alu Winkel   Aluminum uncle Cornière aluminium   Aluminium hoek	 <small>beretta vormmontiert already pre-assembled déjà préassemblée reeds voormonteerd</small>	1	1
8.	Fugendichtband   Joint sealing tape Bande à pour joints Afdichtingstape voor de verbinding		1	1
9.	Senkkopfschraube   Countersunk head cover Couvercle de tête fraisée   Verzonken kop		2	2

## TOOLS REQUIRED



## Mounting dimensions

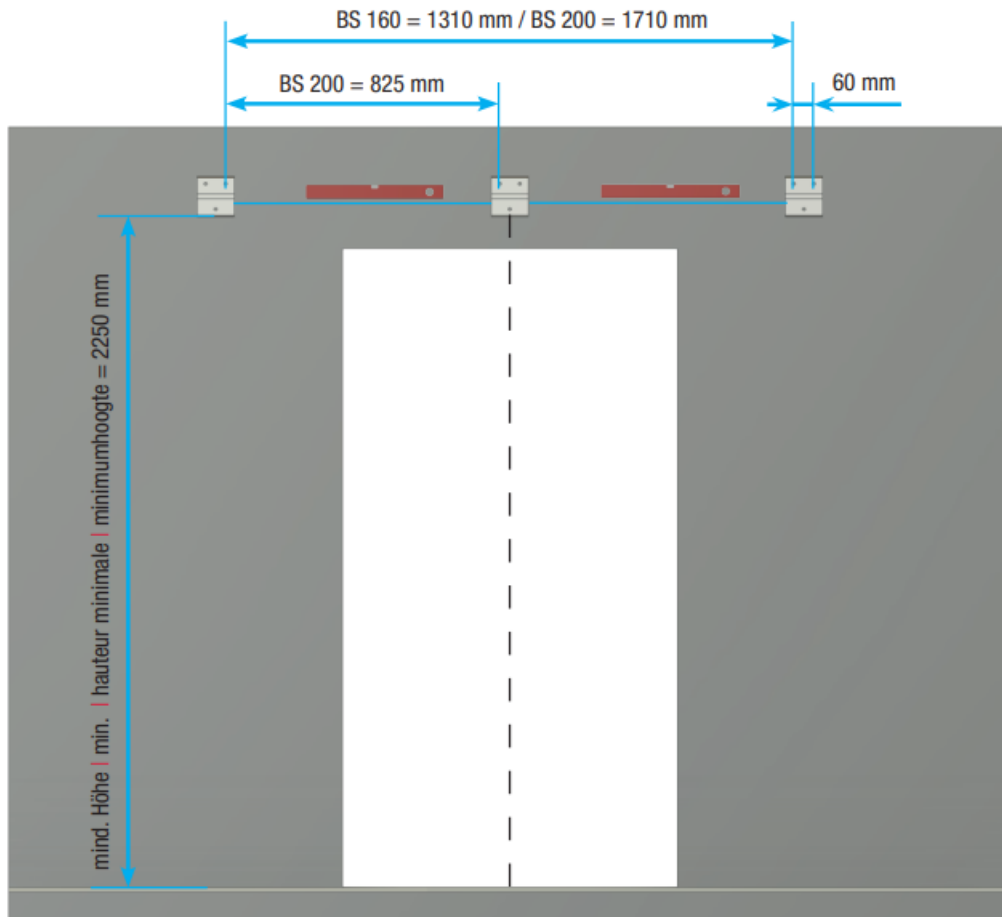

## Mounting instructions

### 1. Mounting the wall bracket

1. Measure distances, align with a water level, mark drill holes (use wall holder as template)
2. Drill the holes with a Ø 12 mm drill bit
3. Insert dowels into the wall and then loosely fit the wall brackets with 3 screws and washers each.
4. Align the wall brackets with a spirit level and then tighten the screws.

### BS 160 BS 200

6x

9x



6x

9x



6x

9x




2x

3x



### 2. Preparing the power connection for the LED panel

Detach the LED panel and pull the power cable through the canopy.

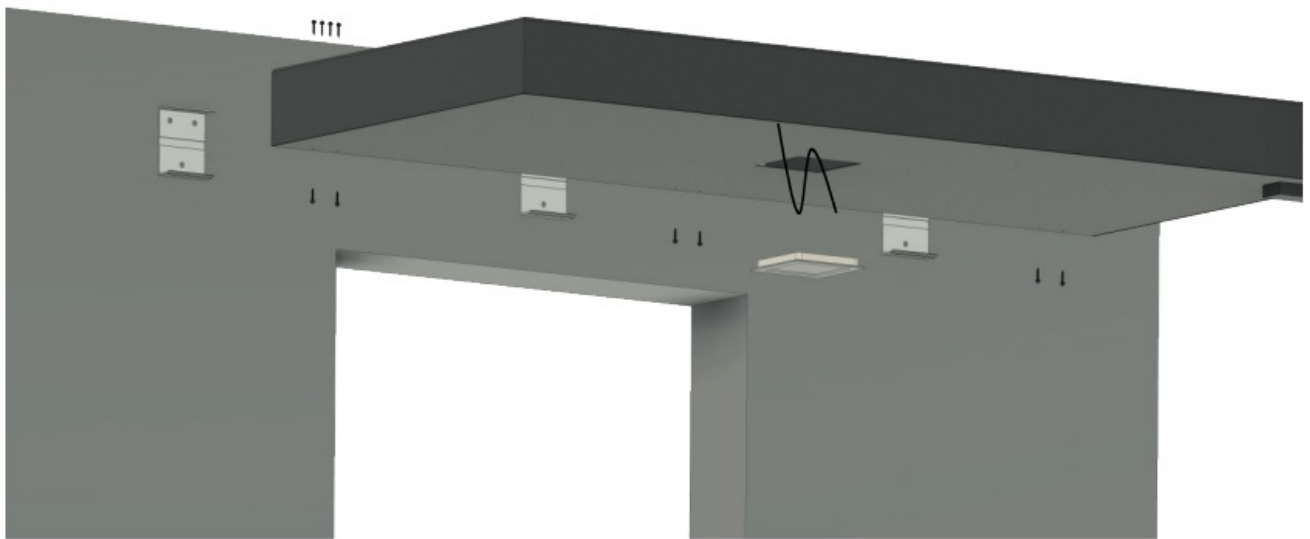

### 3. Fastening at the top


- Attach the joint sealing tape to the angle. Drill the holes with a 3.5mm drill bit.
- Insert the screws as shown.



BS 160 8x  
BS 200 12x




BS 160 | BS 200 1x

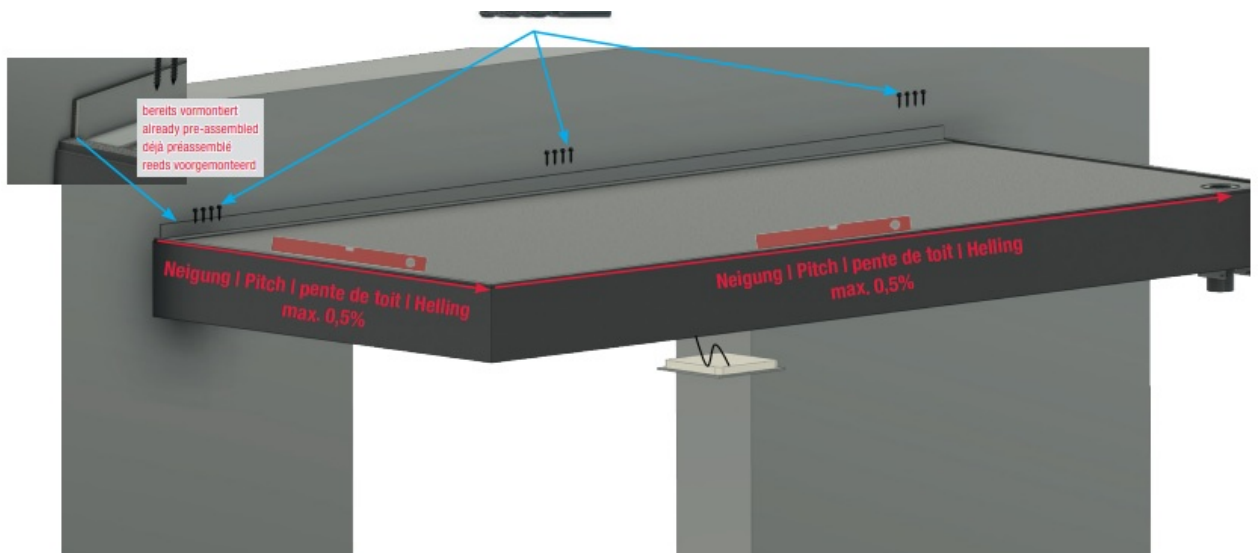

### 4. Fastening from below

1. Pre-drill the holes with a 3.5 mm drill bit.
2. Insert the screws as indicated.


BS 160 - 2 x  
BS 200 - 4 x

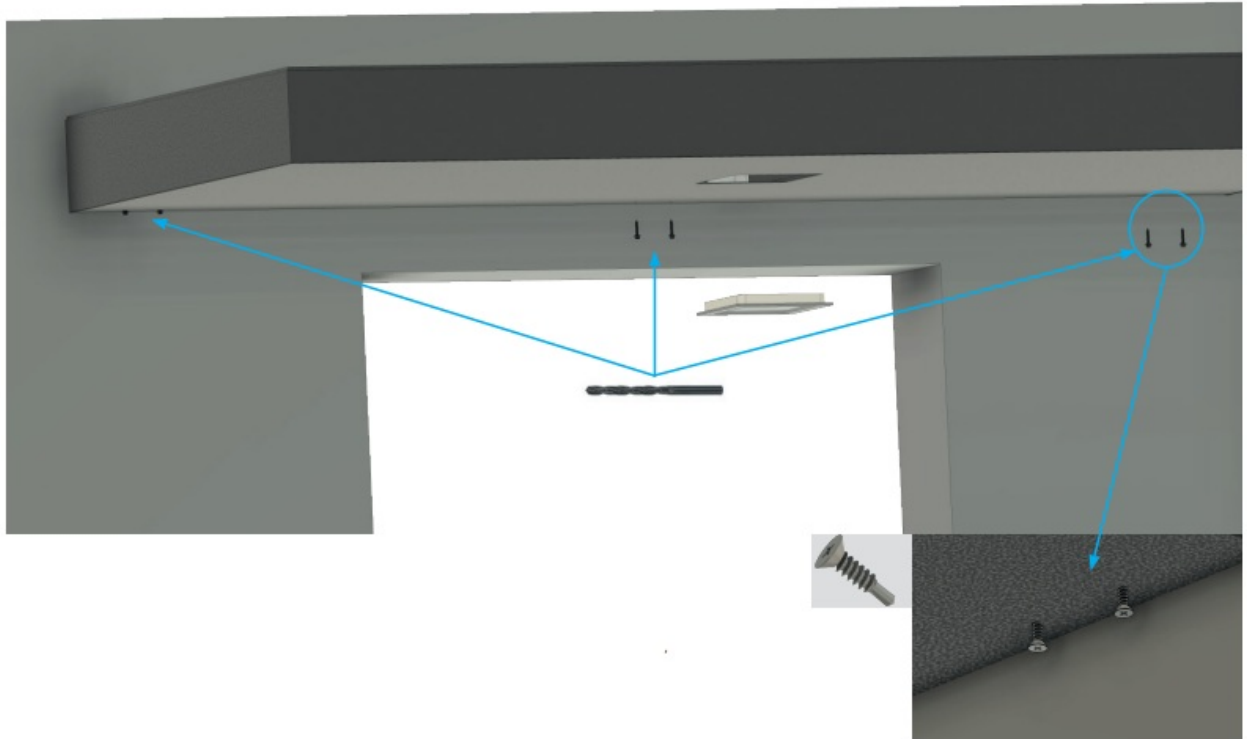


3. On the side where the side panel will be mounted, please use the countersunk screws (2x).

#### 5. Power connection for LED panel

Connect the LED panel to the power cable and reattach it to the canopy.

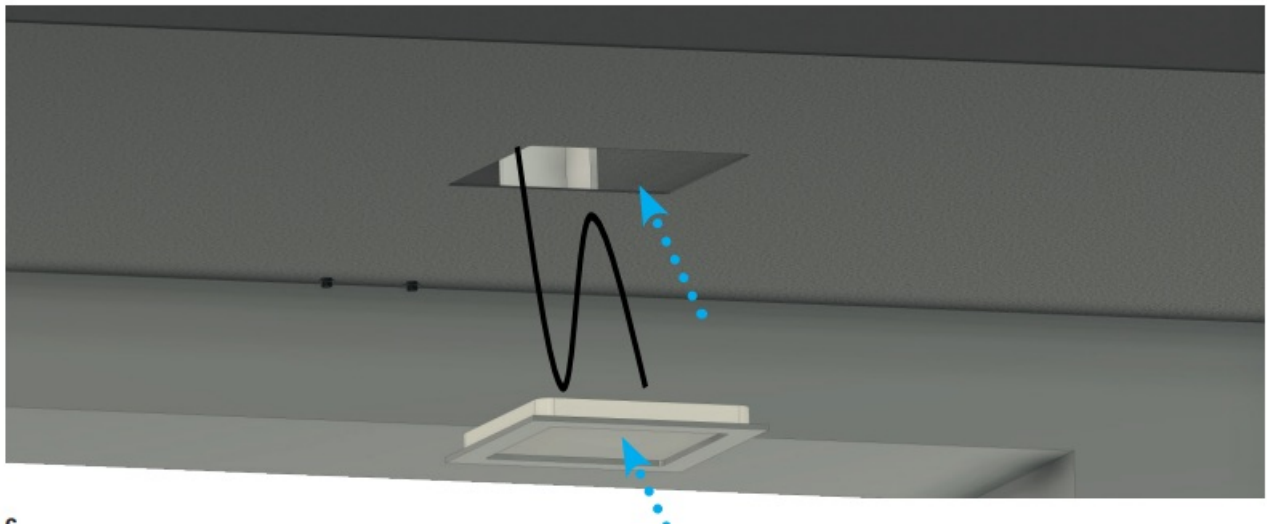

**Mounting dimensions, side panel**

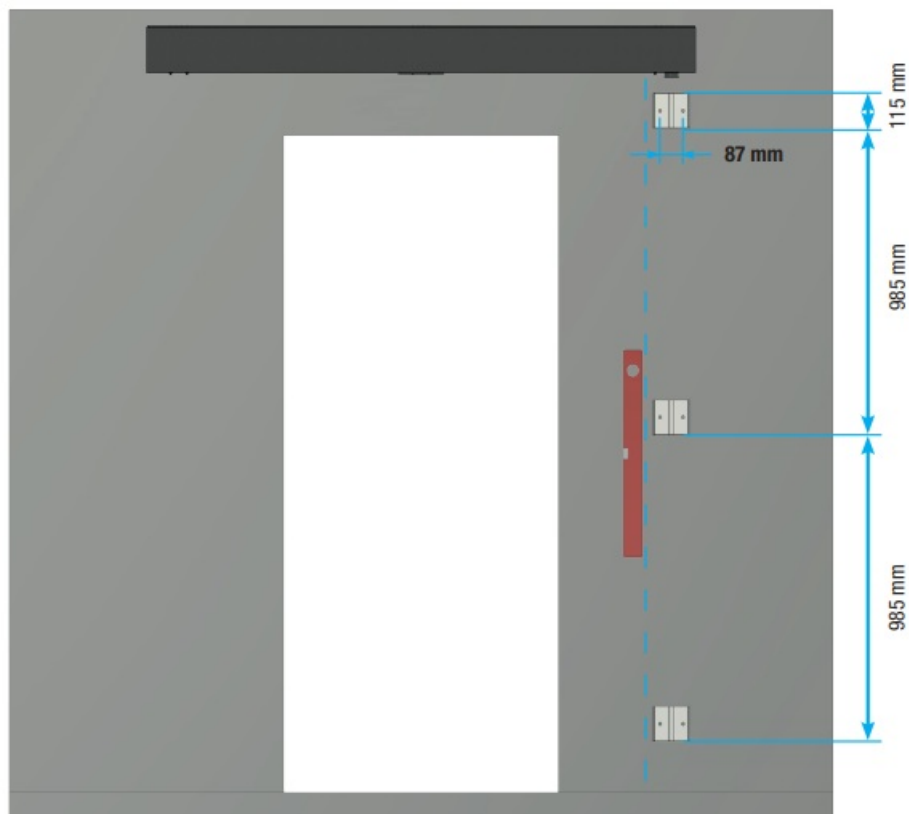

## Mounting instructions

### 1. Mount wall bracket

1. Measure distances, align with a water level, mark drill holes (use wall holder as template)
2. Drill the holes with a Ø 12 mm drill bit
3. Insert dowels into the wall, and then loosely fit the wall brackets with 2 screws and washers each.
4. Align the wall brackets with a spirit level and then tighten the screws.

BS 160 / BS 200

6x

6x


6x

3x

### 2. Assembly


1. Place the side panel on the brackets.
2. Slide the side panel up to the canopy.



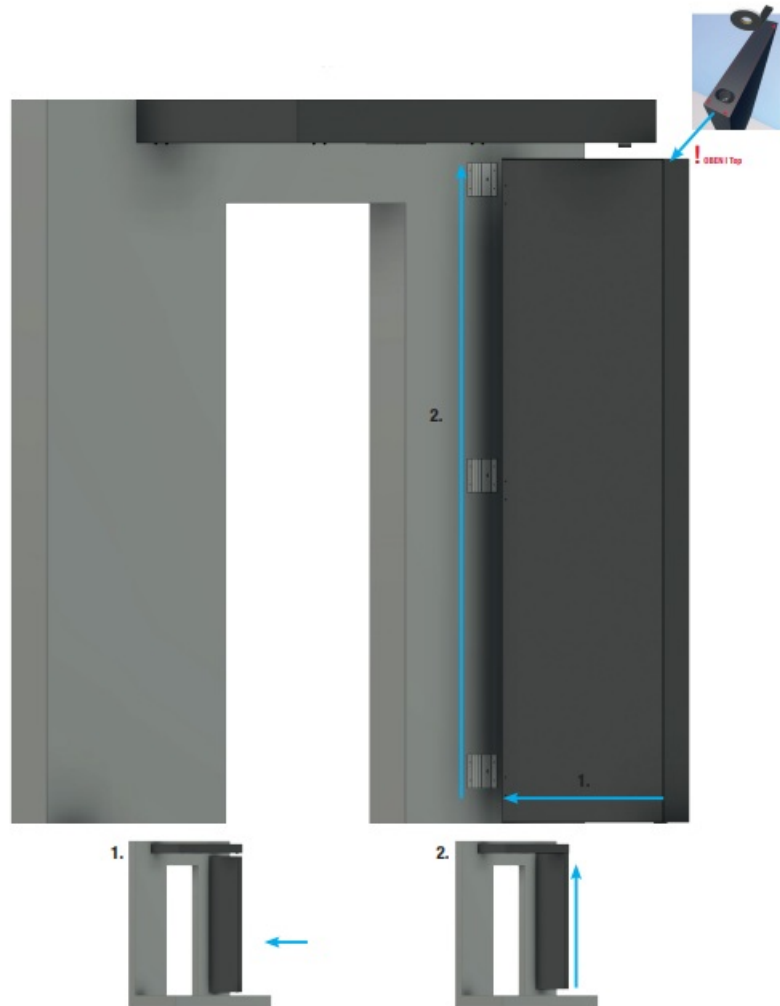

### 3. Fasting


1. Pre-drill the holes with a 3.5 mm drill bit.
2. Insert the screws as indicated.

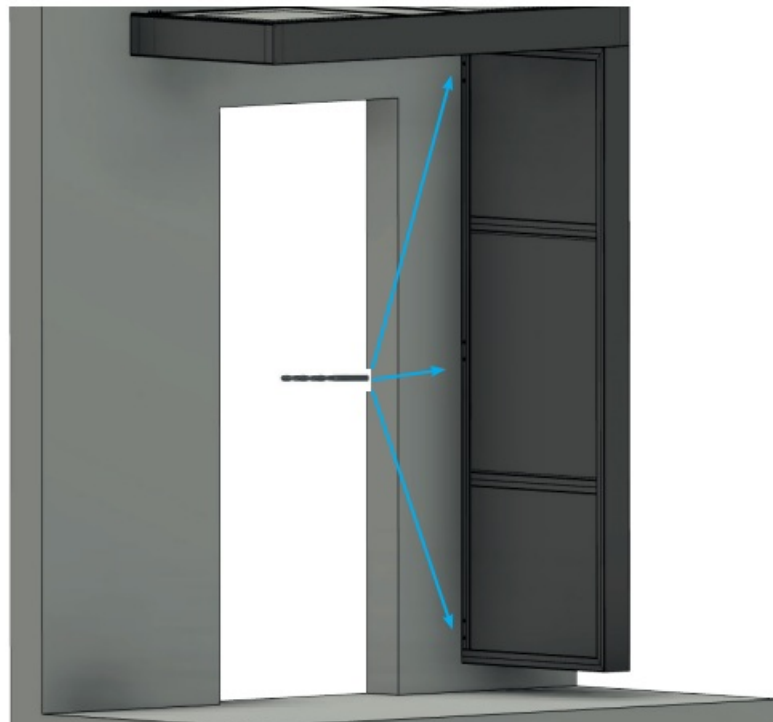

### 4. Fastening


1. Pre-drill the holes with a 3.5 mm drill bit.

2. Insert the screws as indicated.


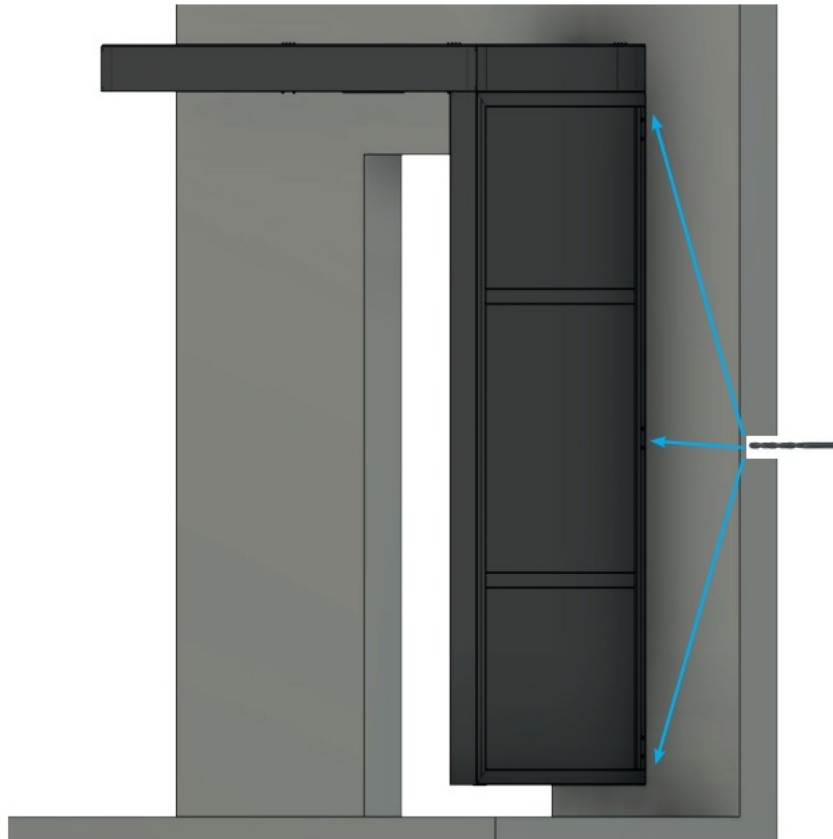


5. **Silicone joint**

Place a silicone joint between wall and canopy.

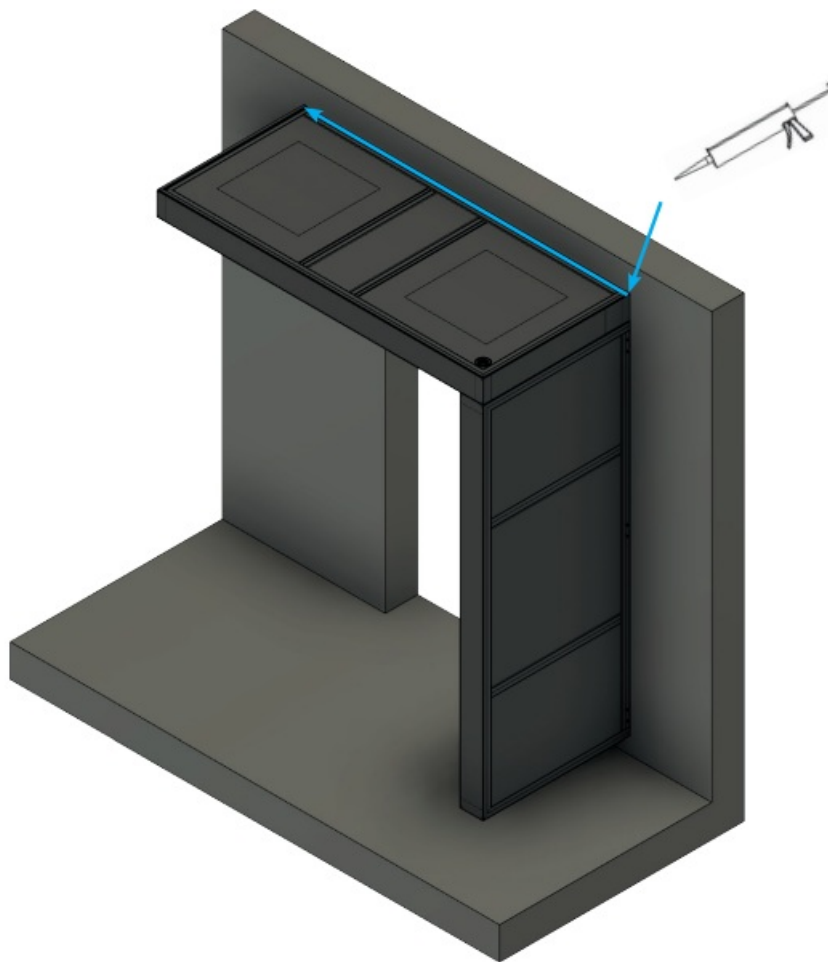

**Overview of product range**

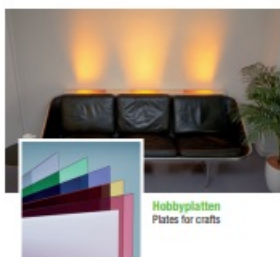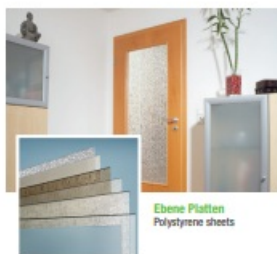

... und vieles mehr !  
... and much more !

## ABOUT COMPANY

### • Gutta Werke GmbH

- Bau- und Heimwerkerprodukte
- Bahnhofstraße 51-57
- D-77746 Schutterwald
- Telefon 0781 6090
- Telefax 0781 6093200
- [info@gutta.com](mailto:info@gutta.com)

### • Scobalitwerk Wagner GmbH

- Zürnkamp 27
- D-21217 Seevetal-Meckelfeld
- **Telefon** 040 2190210
- **Telefax** 040 70011446
- [seevetal@scobalit.de](mailto:seevetal@scobalit.de)


### • Scobalitwerk Wagner GmbH

- Fichtenstraße 18
- D-56584 Anhausen
- **Telefon** 02639 962570
- **Telefax** 02639 962571
- [anhausen@scobalit.de](mailto:anhausen@scobalit.de)

### • Scobalitwerk Wagner GmbH

- Hermann-Ilgen-Straße 7
- D-04808 Wurzen
- **Telefon** 03425 814708
- **Telefax** 03425 814709
- [wurzen@scobalit.de](mailto:wurzen@scobalit.de)
- **Scobalitwerk Wagner GmbH**
  - Industriepark 3
  - D-97273 Kürnach
  - **Telefon** 09367 98440
  - **Telefax** 09367 984429
  - [kuernach@scobalit.de](mailto:kuernach@scobalit.de)
- **Scobalitwerk Wagner GmbH**
  - Bahnhofstraße 51-57
  - D-77746 Schutterwald
  - **Telefon** 0781-9907900
  - **Telefax** 0781-6093207
  - [offenburg@scobalit.de](mailto:offenburg@scobalit.de)

## Documents / Resources

	<p><a href="#">gutta 9219119 Rectangular Canopy with Side Panel</a> [pdf] Instruction Manual 160-200, 9219119, 9219119 Rectangular Canopy with Side Panel, Rectangular Canopy with Side Panel, Canopy with Side Panel, Side Panel</p>
---	---

## References

- [Home | Gutta Werke](#)
- [Der "All in one" Partner für den Baustoffhandel - Scobalit](#)