



GYMAX CB10386DK-6 Workbench for Tool Storage Instructions

[Home](#) » [GYMAX](#) » GYMAX CB10386DK-6 Workbench for Tool Storage Instructions 

Contents

- [1 GYMAX CB10386DK-6 Workbench for Tool Storage](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Parts](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



GYMAX CB10386DK-6 Workbench for Tool Storage



Product Information

Specifications

- **Left Front Leg:** 1 piece, Material: Q235
- **Right Front Leg:** 1 piece, Material: Q235
- **Left Rear Leg:** 1 piece, Material: Q235
- **Right Rear Leg:** 1 piece, Material: Q235
- **Front & Back Panel:** 8 pieces, Material: Q235
- **Left & Right Panel:** 6 pieces, Material: Q235
- **Left Support:** 1 piece, Material: Q235
- **Right Support:** 1 piece, Material: Q235
- **Top Left Panel:** 1 piece, Material: Q235
- **Top Right Panel:** 1 piece, Material: Q235
- **PVC Foot Cover:** 4 pieces, Material: Q235
- **M6X14 Screw:** 66 pieces
- **M6 Nut:** 66 pieces
- **Countertop Shelf Panel:** 1 piece, Material: Q235
- **Top Panel:** 2 pieces, Material: Q235
- **Hanging Panel Wrench:** 1 piece, Material: Q235
- **Hanging Panel Hook:** 2 pieces
- **Screwdriver Hanging Panel:** 1 piece, Material: Q235
- **Drill Hanging Panel:** 1 piece, Material: Q235
- **Hammer Stand:** 3 pieces, Material: Q235

Product Usage Instructions

Step 1: Assemble the Legs

1. Take the Left Front Leg (Q235) and attach it to the corresponding slot on the Front and back Panel (Q235).
2. Repeat the same process for the Right Front Leg (Q235).
3. Attach the Left Rear Leg (Q235) and Right Rear Leg (Q235) to their respective slots on the Front and back Panel (Q235).

Step 2: Attach the Panels

1. Take the Left and right Panel (Q235) and attach them to the corresponding slots on the Front & Back Panel (Q235).
2. Attach the Top Left Panel (Q235) and Top Right Panel (Q235) to their respective slots on the Front and back Panel (Q235).

Step 3: Install the Supports

1. Attach the Left Support (Q235) and Right Support (Q235) to the corresponding slots on the Front and back Panel (Q235).

Step 4: Add the Countertop Shelf

1. Attach the Countertop Shelf Panel (Q235) to the top of the assembled structure.

Step 5: Secure with Screws and Nuts

1. Use the provided M6X14 Screws to secure all the panels and supports together.
2. Use the M6 Nuts to fasten the screws in place.

Step 6: Attach Additional Accessories

1. Attach the PVC Foot Covers (Q235) to the bottom of each leg for stability.
2. Hang tools on the Hanging Panels using the provided hooks and holders.


FAQ

- **Q:** How many legs does the product have?
- **A:** The product has 4 legs in total, with 2 front legs and 2 rear legs.
- **Q:** How many screws and nuts are included?
- **A:** The product includes 66 M6X14 Screws and 66 M6 Nuts.
- **Q:** What is the material used for the panels and supports?
- **A:** The panels and supports are made of Q235 steel.


Parts

EN			
No.	Name	Qty.	Material
1	Left Front Leg	1	
2	Right Front Leg	1	
3	Left Rear Leg	1	
4	Right Rear Leg	1	
5	Front & Back Panel	8	
6	Left & Right Panel	6	
7	Left Support	1	
8	Right Support	1	
9	Top Left Panel	1	
10	Top Right Panel	1	
11	PVC Foot Cover	4	
12	M6X14 Screw	66	
13	M6 Nut	66	
14	Countertop	1	
15	Shelf Panel	2	
16	Top Panel	1	
17	Hanging Panel	2	Q235
18	Wrench Hanging Panel	1	Q235
19	Hook	8	
20	Screwdriver Hanging Panel	1	Q235
21	Drill Hanging Panel	1	Q235
22	Hammer Stand	3	Q235


01

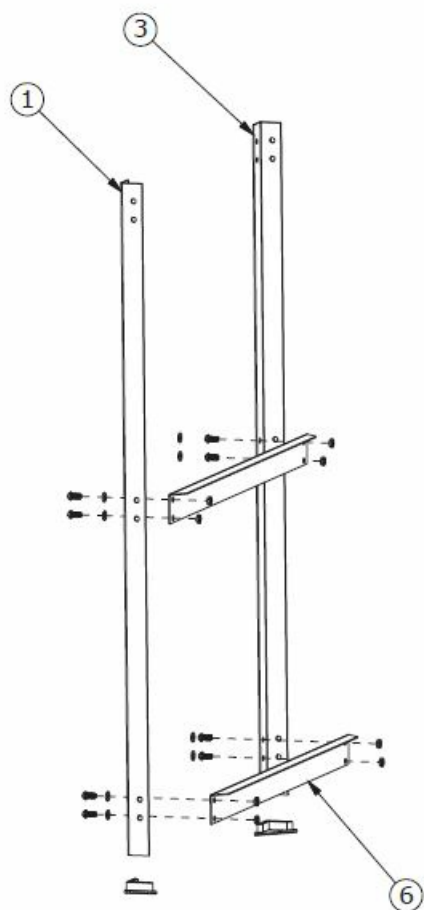


02

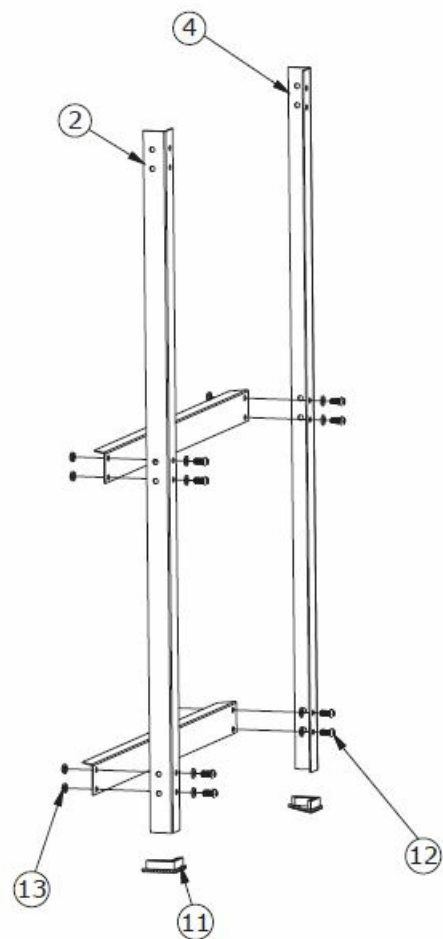


03

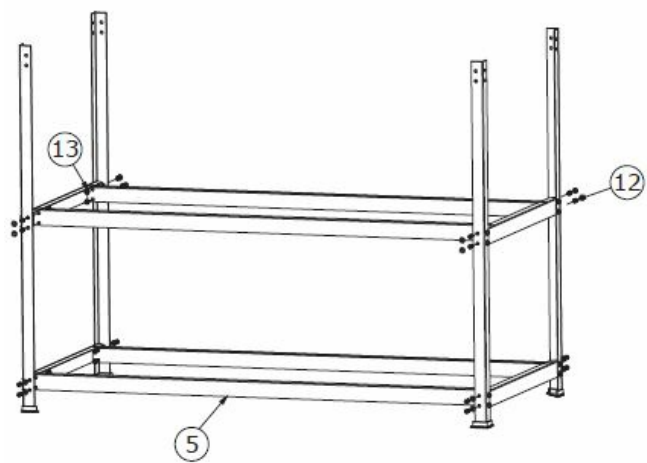


04

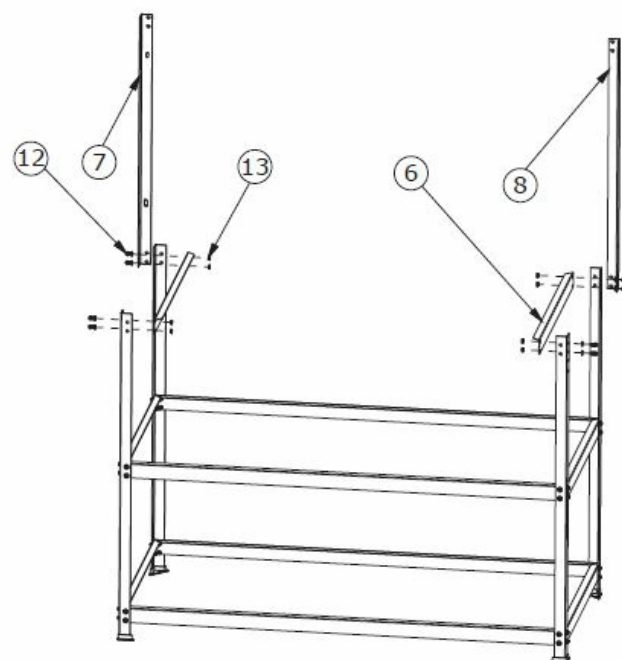


05

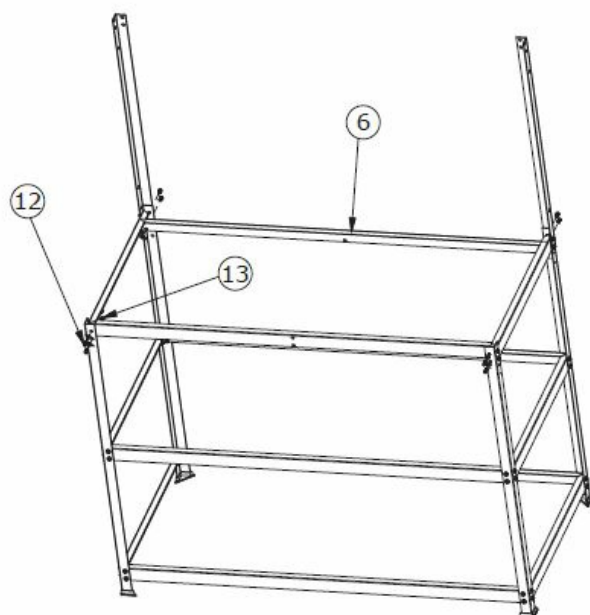


06

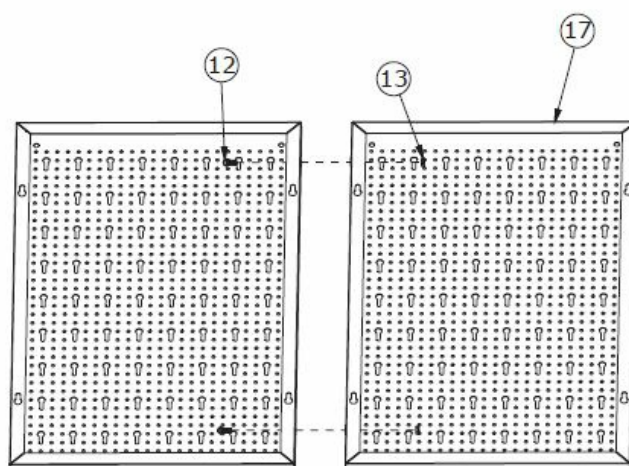


07

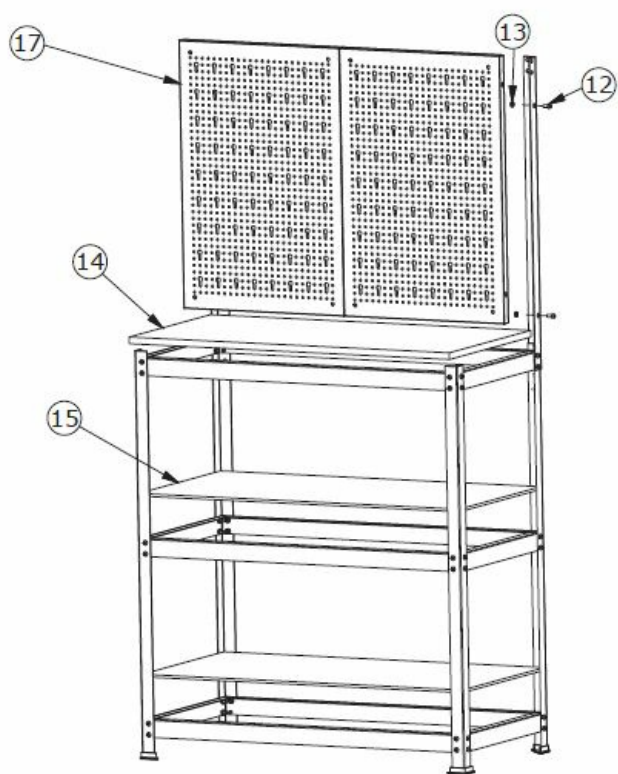

08

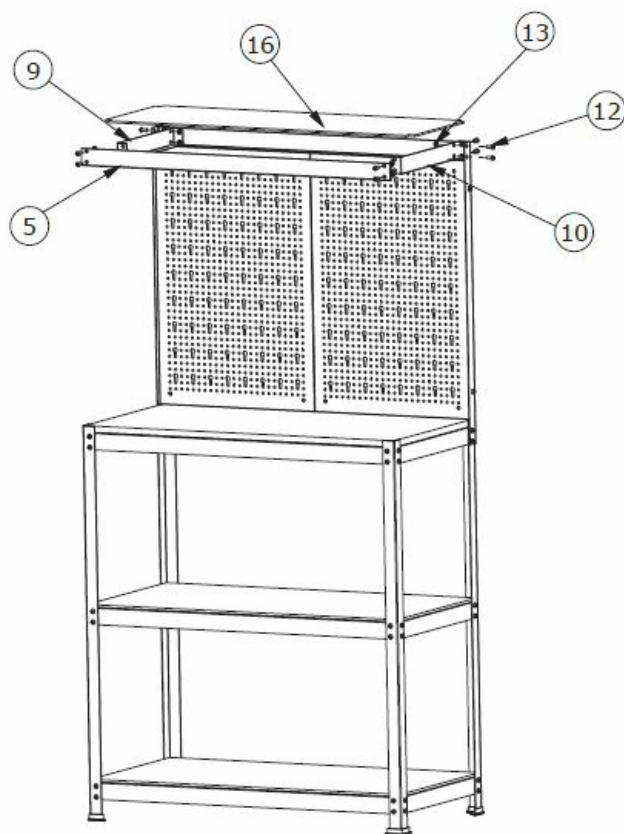

09

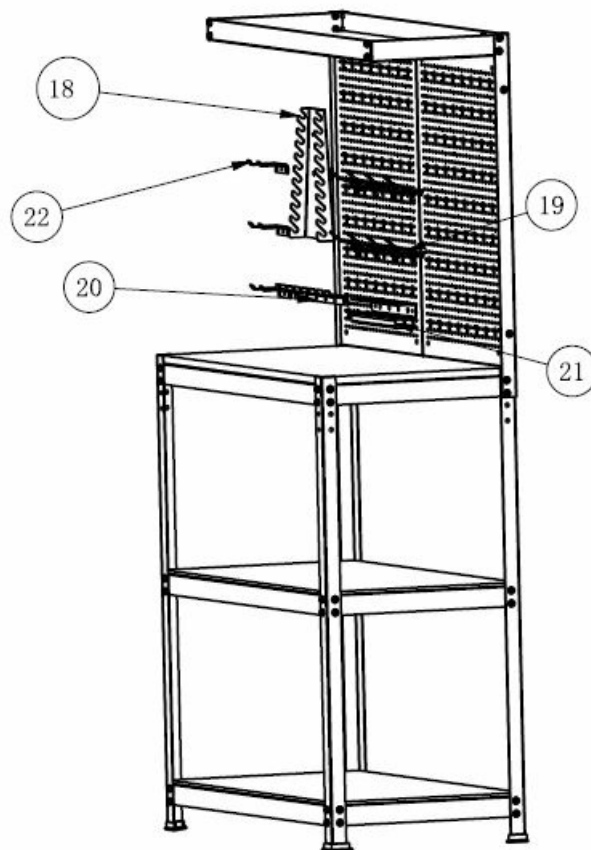

Documents / Resources



[GYMAX CB10386DK-6 Workbench for Tool Storage](#) [pdf] Instructions
CB10386DK-6 Workbench for Tool Storage, CB10386DK-6, Workbench for Tool Storage, Tool S
torage, Storage

References

- [User Manual](#)