


HARFO F02 Deadbolt with Fingerprint and Keypad Instruction Manual

[Home](#) » [HARFO](#) » HARFO F02 Deadbolt with Fingerprint and Keypad Instruction Manual




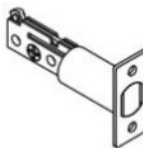
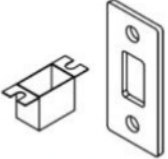


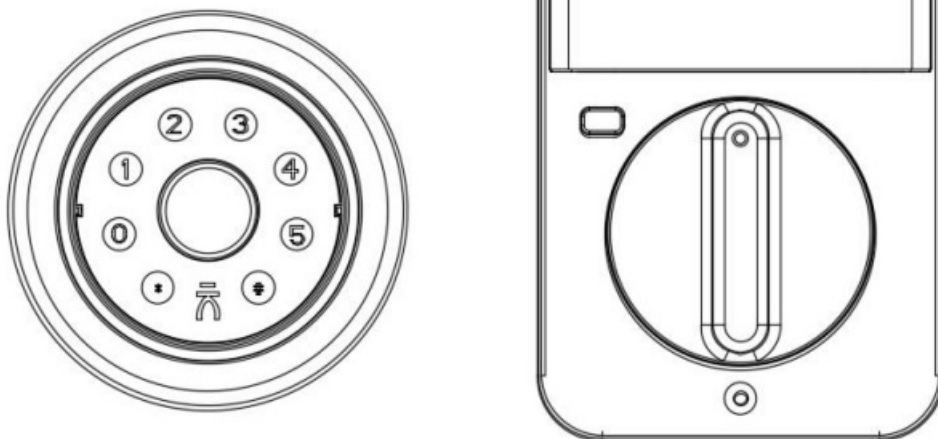

HARFO F02 Deadbolt with Fingerprint and Keypad



Contents [[hide](#)

- [1 Components list](#)
- [2 Tools Required](#)
- [3 Installation Guide](#)
- [4 FCC Statement](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Components list

 Exterior panel 1PC	 Interior panel 1PC	 Interior mounting plate 1PC	 Deadbolt 1PC	 Strike parts 1PC
 Screws A 4PCS	 Screws B 2PCS	 Screws C 3PC	 Keys 2PCS	

Please check the above components carefully to make sure all items have been received. If any items are missing, please contact Customer Service (See page for contact information).


Please read this manual carefully before installing and operating!

Tools Required

1. Phillips screwdriver
2. Tape measure

Installation Guide


Assembly Diagram

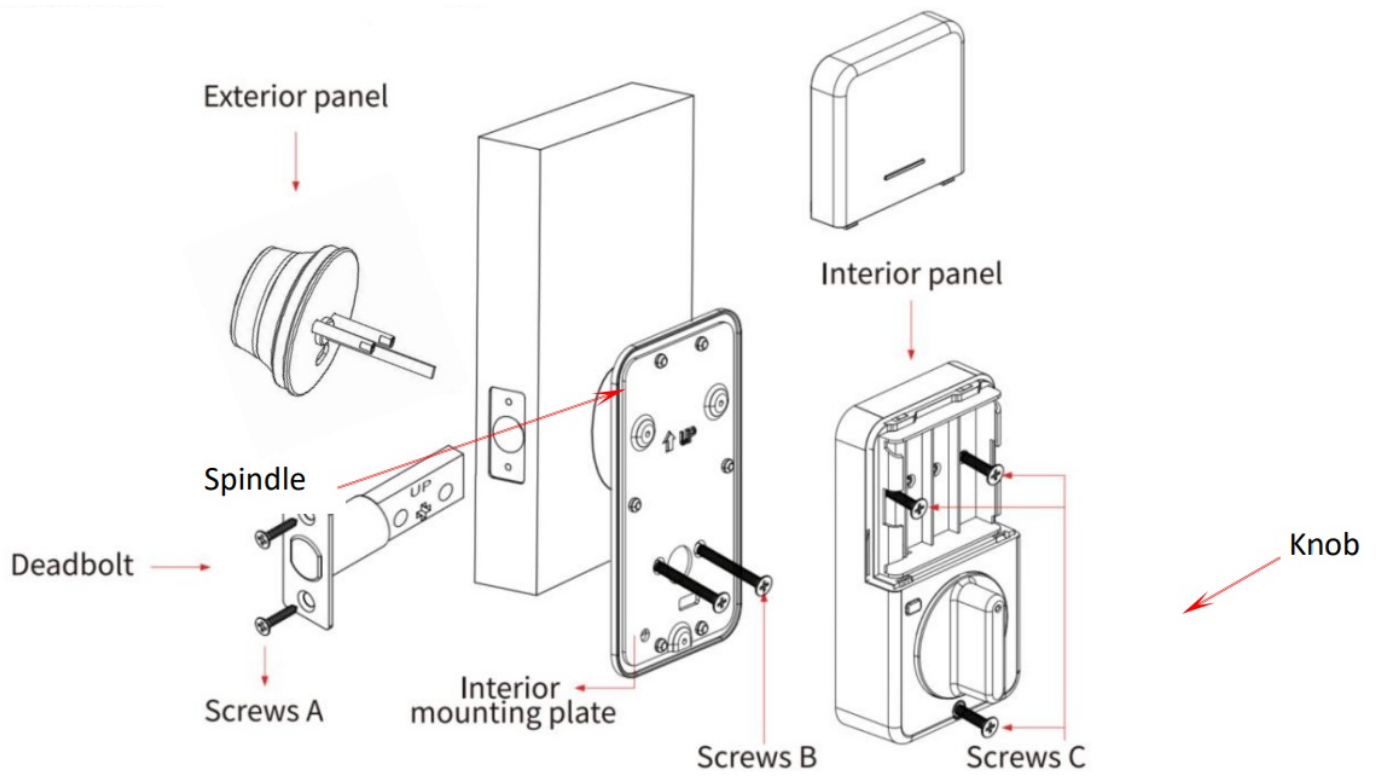

Check The Door's Dimension


1. Measure to confirm the thickness of the door is between 1-3/8" and 2 1/8" (35~54mm).
2. Measure to confirm the diameter of the hole in the door is 2 1/8" (54mm).
3. Measure to confirm the backset (as shown below) is either 2-3/8" (60mm) or 2-3/4" (70mm).
4. Measure to confirm the diameter of the hole in the door edge is 1" (25mm).

$1\frac{3}{8}" \sim 2\frac{1}{8}"$
(35~54mm)

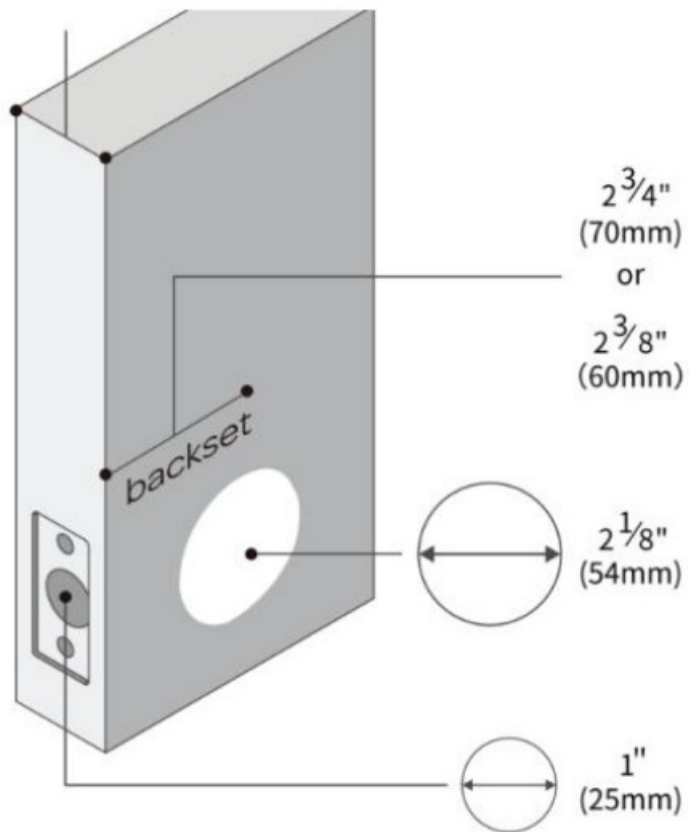


Install Deadbolt and Strike

1. Set the Deadbolt backset to 60mm($2\frac{3}{8}"$) or 70mm($2\frac{3}{4}"$) to fit your door hole.
2. Insert the Deadbolt into the door hole, and tighten Screw A to fix the bolt. Install Striker Box and Striker Plate also with Screw A into the door frame.

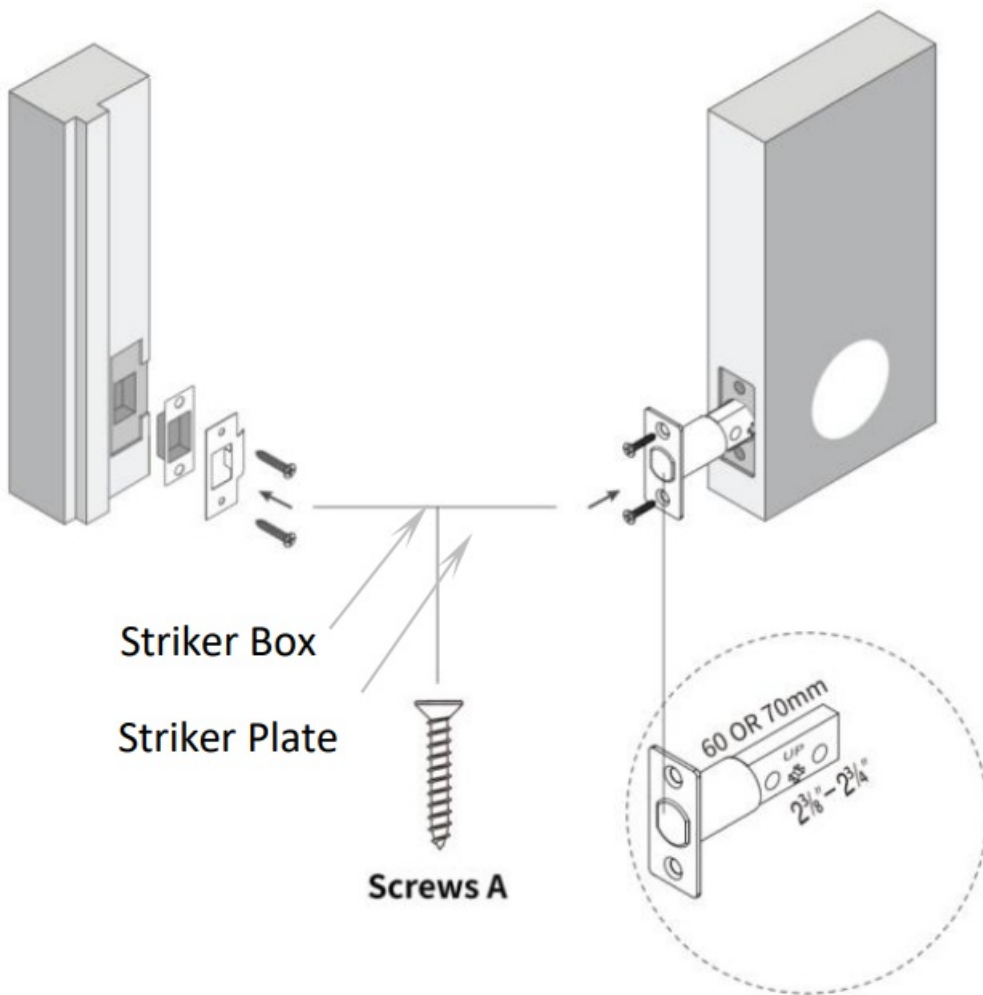

Install Exterior Panel

1. Keep the Deadbolt retracted and the Spindle of the Exterior Panel horizontal, install the Exterior Panel by aligning the Spindle with the hole of the Deadbolt.
2. Make sure the cable go through the hole of the door under the Deadbolt.

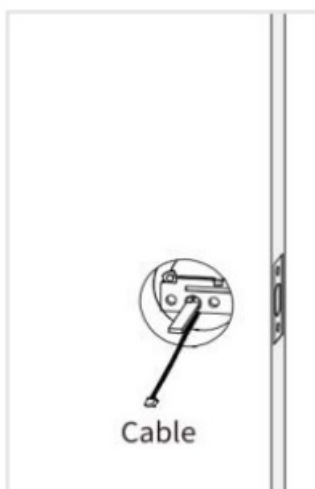


Install Interior Panel

1. Route the cable through the hole on the lower side of the Interior mounting plate.




2. Secure the Interior mounting plate with Screw B.
3. For right-hinged doors, keep the knob in a horizontal position; For left-hinged doors, keep the knob in a vertical position before moving to the next step.

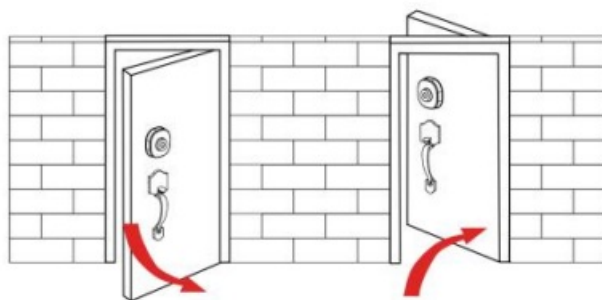

(Right-hinged doors)



(Knob in a horizontal position)


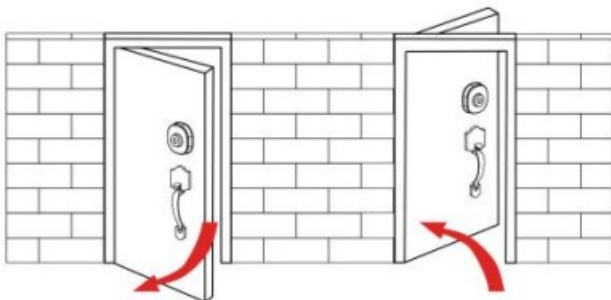


(Left-hinged doors)



(Knob in a vertical position)

4. Insert the connector of the cable into the socket on the Interior panel firmly, put the excess wire into the door, and secure the Interior panel with the Interior mounting plate together with 3 Screw C.

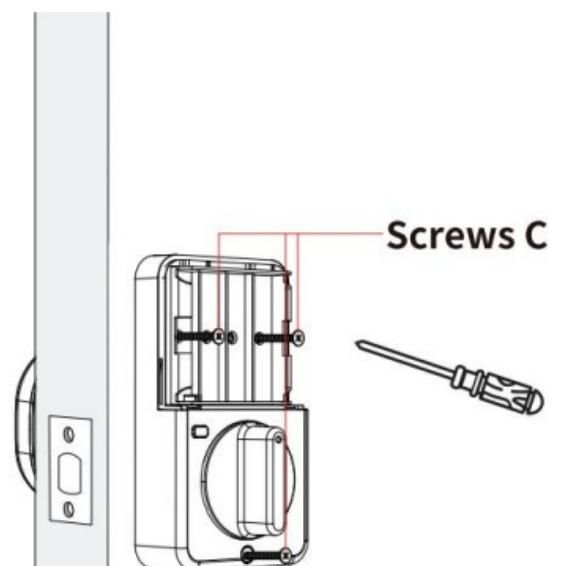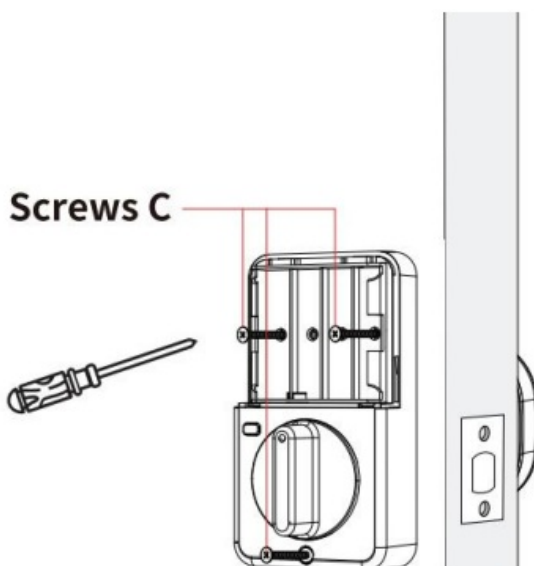

Install Batteries

- 1. Insert 4 AA batteries and install battery cover

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement the device can be used in portable exposure condition without restriction

Documents / Resources

	<p>HARFO F02 Deadbolt with Fingerprint and Keypad [pdf] Instruction Manual F0203040506, 2A97U-F0203040506, 2A97UF0203040506, F02 Deadbolt with Fingerprint and Keypad, F02, Deadbolt with Fingerprint and Keypad</p>
---	--