



HELMOUNTS B09NGQM4Z7 Action Camera Mount Installation Guide

[Home](#) » [HELMOUNTS](#) » HELMOUNTS B09NGQM4Z7 Action Camera Mount Installation Guide 

HELMOUNTS B09NGQM4Z7 Action Camera Mount




Contents

- 1 What's in the Box
- 2 Installation Procedure
- 3 Additional Information
- 4 Customer Support
- 5 Documents / Resources
 - 5.1 References

What's in the Box

Products Included:

- Action Camera Mount

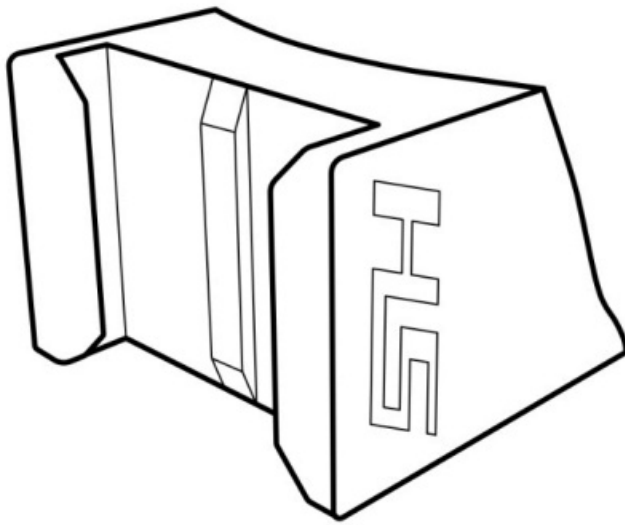


- Isopropyl Alcohol Prep Pads




Optional Equipment for Faster Installation Times:

- Heat Gun (Not Included)

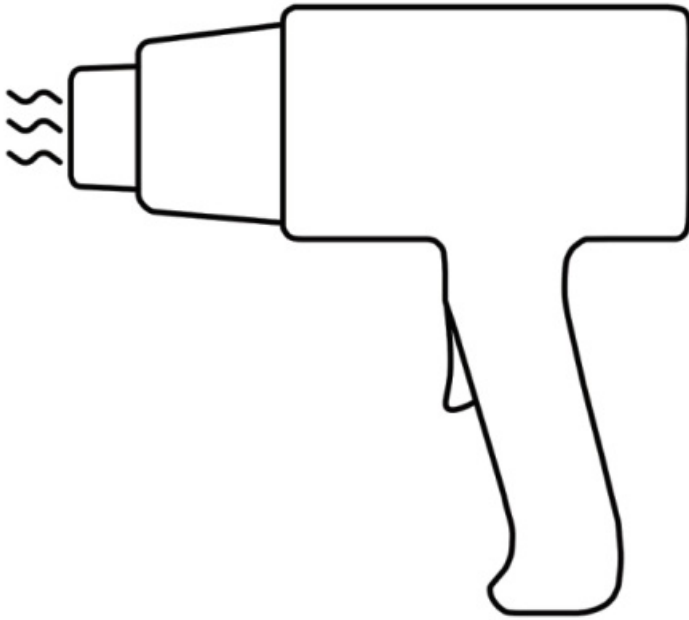

- Tape Primer (Sold Separately)

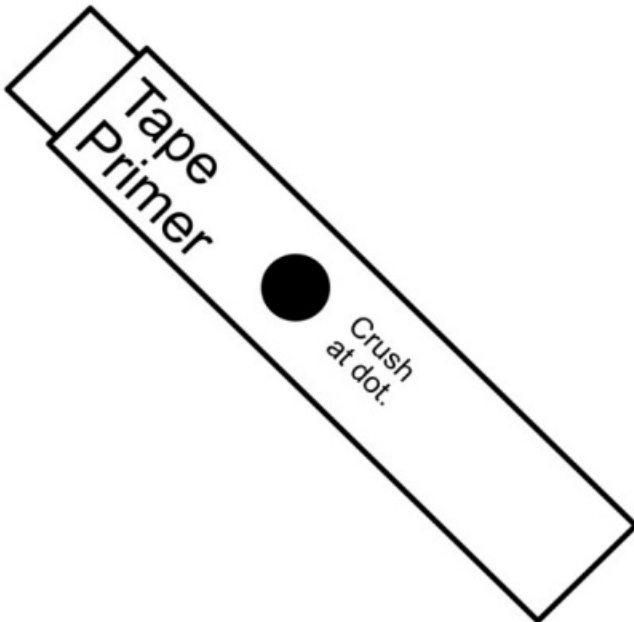

Installation can be done in three separate ways for any mount:


1. Installation without any additional application.
2. Installation with heat gun application (faster adhesion).
3. Installation with tape primer application (Recommended/fastest adhesion).

Note. Only one of the three installations is needed.

Installation Procedure

Step 1. Clean the helmet's surface with the given isopropyl alcohol prep pads and let the surface dry.

- Chin

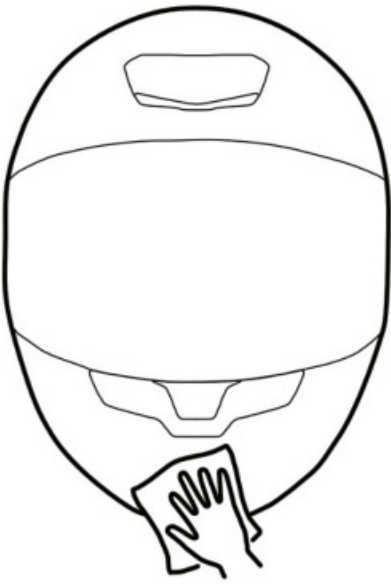


- Right



- Left



- Top

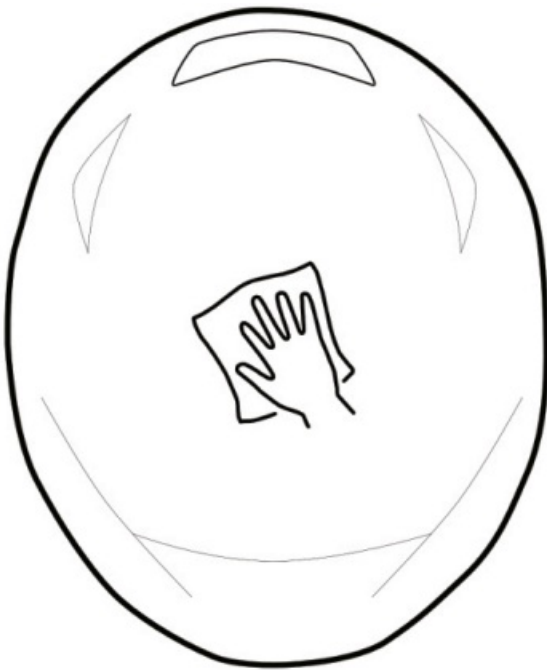


- Rear




Step 2. Follow the appropriate step based on the desired application process as shown below.


Installation without any additional application. Peel off the plastic cover of the tape and place the mount on the helmet's appropriate surface. Continue with **Step 3**.

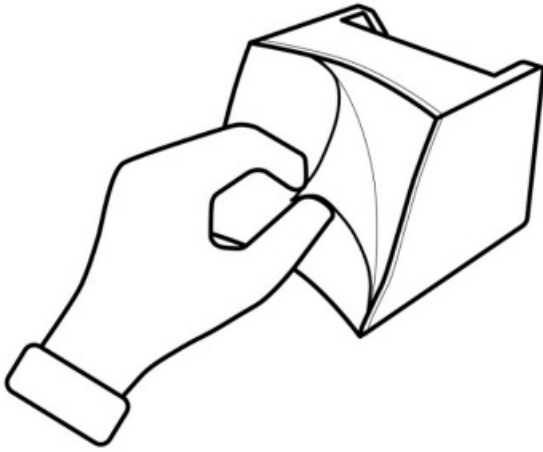

Installation with heat gun application. Peel off the plastic cover of the tape and apply heat with a heat gun (not included). Wait for the tape's surface to heat up. Place the mount on the helmet's appropriate surface. Continue with **Step 3**.

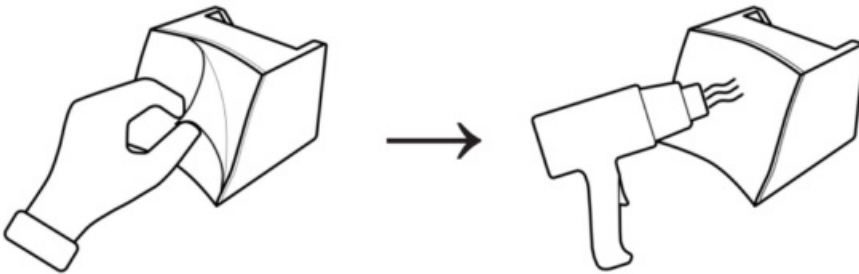


Installation with tape primer application. Peel off the plastic cover of the tape. Grab the tape primer (sold separately) and apply pressure on the dot location indicated as "Crush at dot" on the tape primer until it breaks. Apply a single coat of the primer on the helmet's appropriate surface. At time of application, make sure the room temperature is 60°F – 80°F (15°C – 27°C). Place the mount on the helmet's appropriate surface. Continue with **Step 3**.

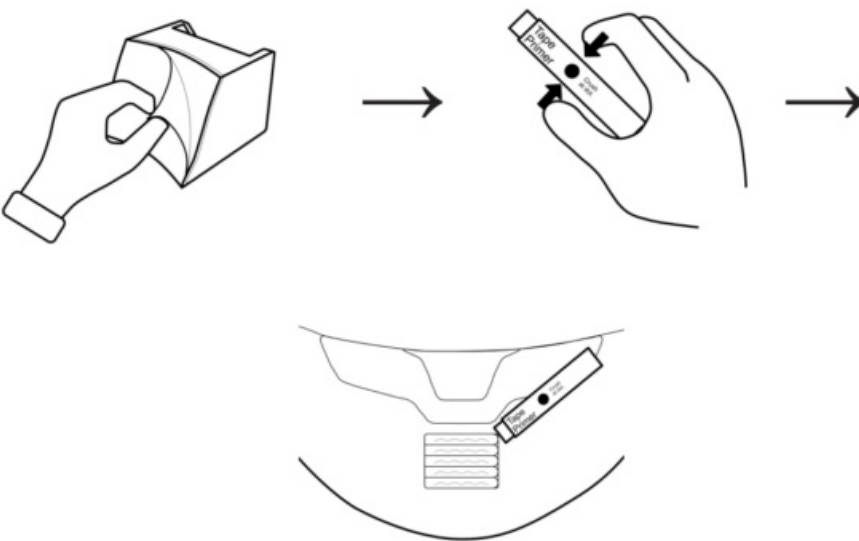


Step 3. Apply pressure for at least 1 minute towards the helmets surface and release. Note, follow Table 1 → Application → None / Heat / Tape Primer (page 6), to know the appropriate times to leave the mount resting in order to ensure proper adhesion between the mount and the helmet.


- Chin

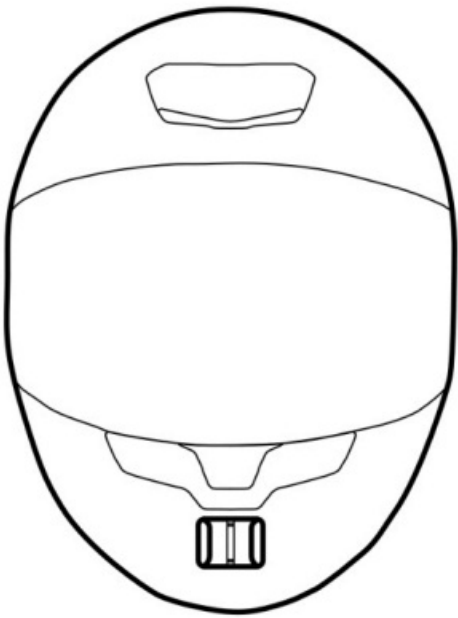


- Right

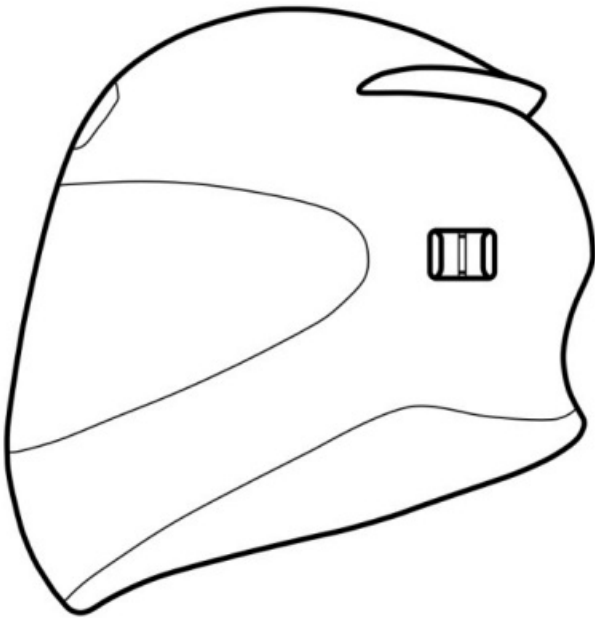


- Left

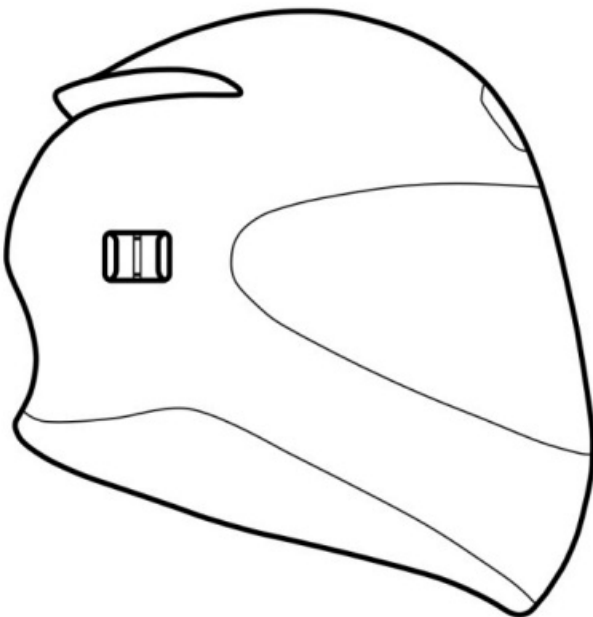

- Top

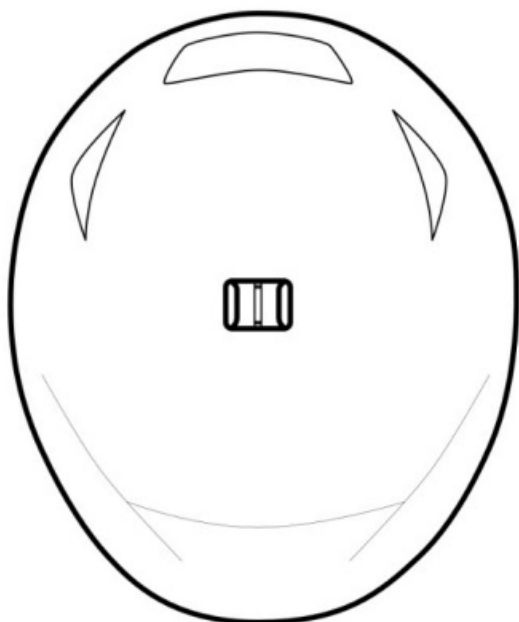

- Rear

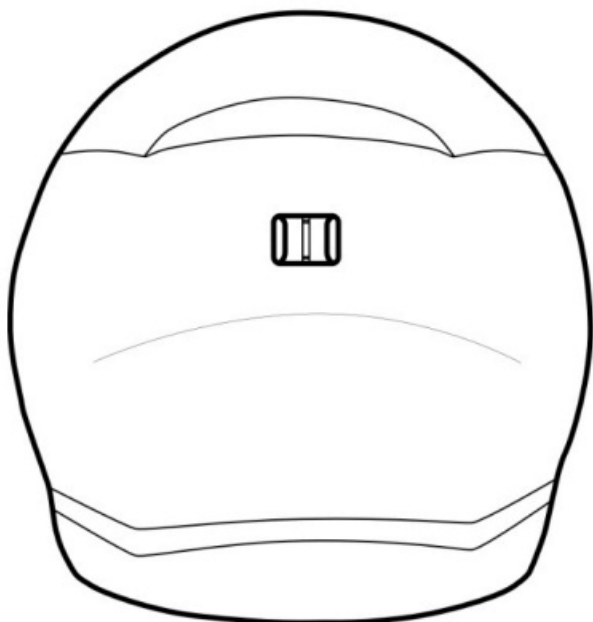

Additional Information

Table 1 – Resting Times for Proper Adhesion

Application	Resting Time	Adhesion %
None	24 hrs	90
Heat	2 hrs	100
Tape Primer	30 min	100

Customer Support



Documents / Resources



[HELMOUNTS B09NGQM4Z7 Action Camera Mount](#) [pdf] Installation Guide
B09NGQM4Z7 Action Camera Mount, B09NGQM4Z7, Action Camera Mount, Camera Mount, Mount

References

-  [Helmounts](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.