

i Board IB-064C Running Board 4 Black



i Board IB-064C Running Board 4 Black Instruction Manual

[Home](#) » [i Board](#) » i Board IB-064C Running Board 4 Black Instruction Manual 

Contents

- 1 i Board IB-064C Running Board 4 Black
- 2 PART LIST
- 3 STEP 1
- 4 STEP 2
- 5 STEP 3
- 6 Documents / Resources
 - 6.1 References



i Board IB-064C Running Board 4 Black




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM THE BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

- BODY FRAME MOUNT
- NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	√
8mm	16-18	√
10mm	31-32	√
12mm	56-58	√
14mm	92-94	X

PART LIST

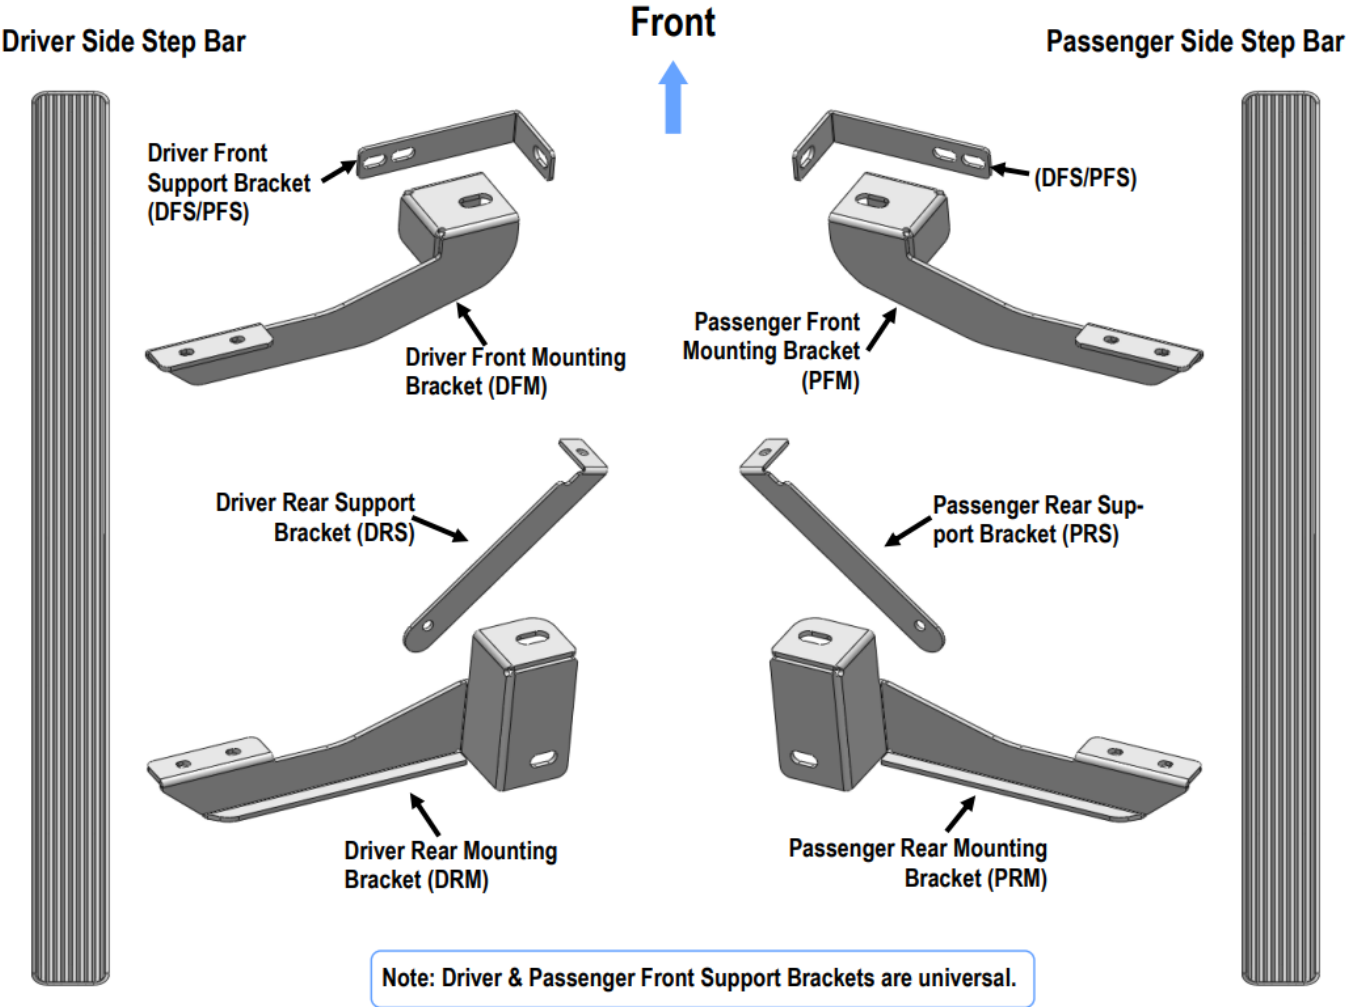

• Hardware Package A (For Bracket Installation)

Item	QTY	Description	Item	QTY	Description
1#	6	M10X1.5-30mm Hex Bolts	8#	2	M8X1.25-25mm Hex Bolts
2#	12	M10 Large Flat Washers	9#	4	M8 Large Flat Washers
3#	6	M10 Lock Washers	10#	2	M8 Nylon Lock Nuts
4#	6	M10 Hex Nuts	11#	2	M6X1-30mm Hex Bolts
5#	2	M12X1.75-100mm Hex Bolts	12#	4	M6 Flat Washers
6#	4	M12 Large Flat Washers	13#	2	M6X1 Nylon Lock Nuts
7#	2	M12 Nylon Lock Nuts			

1#

2#

3#

4#

5#

6#

7#

8#

9#

10#


11#

12#


13#

• Hardware Package B (For Stainless Steel Step Bar Installation)


Item	QTY	Description	Item	QTY	Description
1#	8	M8X1.25-35mm Carriage Bolts	3#	8	M8 Nylon Lock Nuts
2#	8	M8 Large Flat Washers	4#	4	Sliders (Packed with Step Bars)

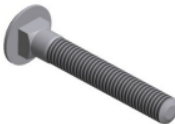


1 #



2 #



3 #




4 #

STEP 1

Start installing from the passenger side front of the vehicle. Remove the passenger front body mount bolt.


STEP 2

Assemble the Passenger Front Mounting Bracket (PFM) and Passenger Front Support Bracket (DFS/PFS) with (2) M10X1.5- 30mm Hex Bolts, (4) M10 Large Flat Washers, (2) M10 Lock Washers and (2) M10 Hex Nuts, (Fig 1). Do not fully tighten the hardware at this time.

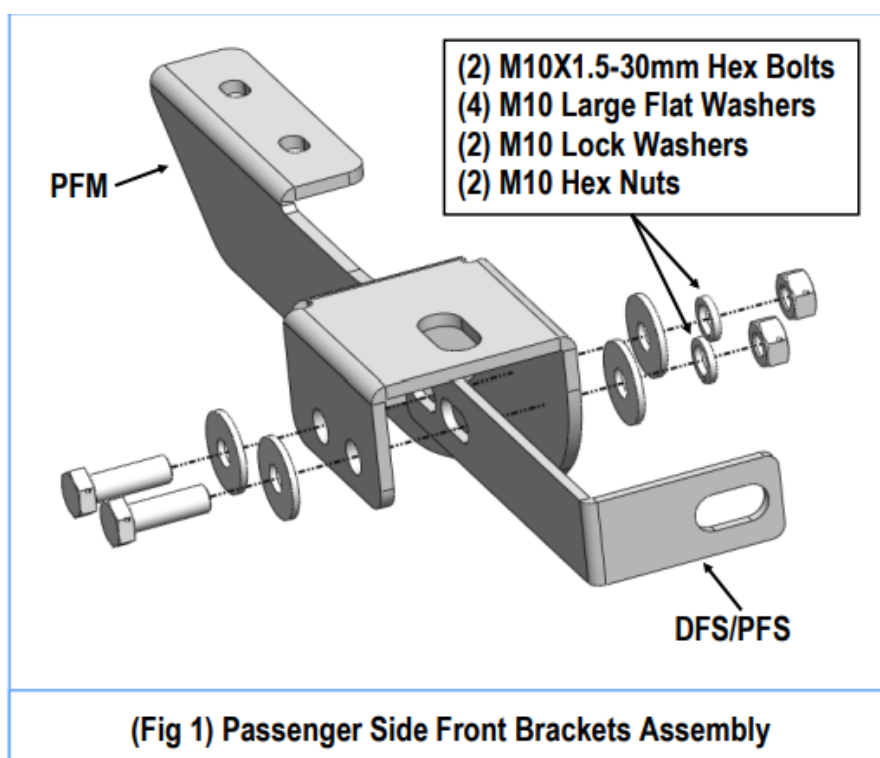

STEP 3

Attach the assembled Passenger Front Mounting Bracket (PFM) to the vehicle with factory bolts, (Fig 2 & 3). Attach the Passenger Front Support Bracket (DFS/PFS) to a smaller factory hole in the frame using (1) M12X1.75-100mm Hex Bolt, (1) M12 Nylon Lock Nut, (2) M12 Large Flat Washers, (Fig 2 & 3). Do not fully tighten the hardware at this time.

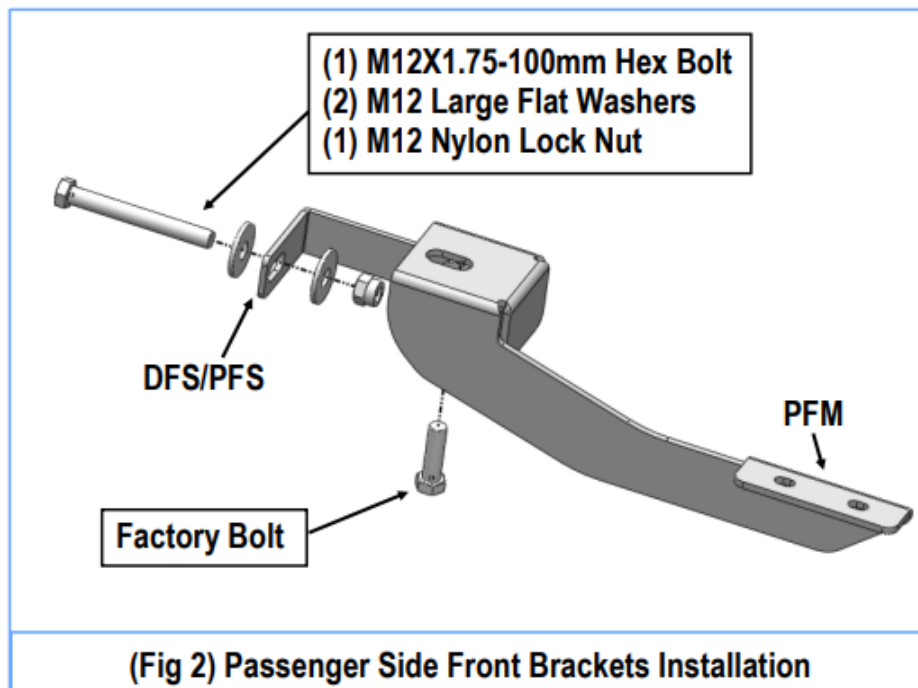


STEP 4

Move to the passenger side rear mounting location. Remove the passenger rear body mount bolt.

STEP 5

Assemble the Passenger Rear Mounting Bracket (PRM) and Passenger Rear Support Bracket (PRS) with (1) M10X1.5-30mm Hex Bolt, (2) M10 Large Flat Washers, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 3). Do not fully tighten the hardware at this time.

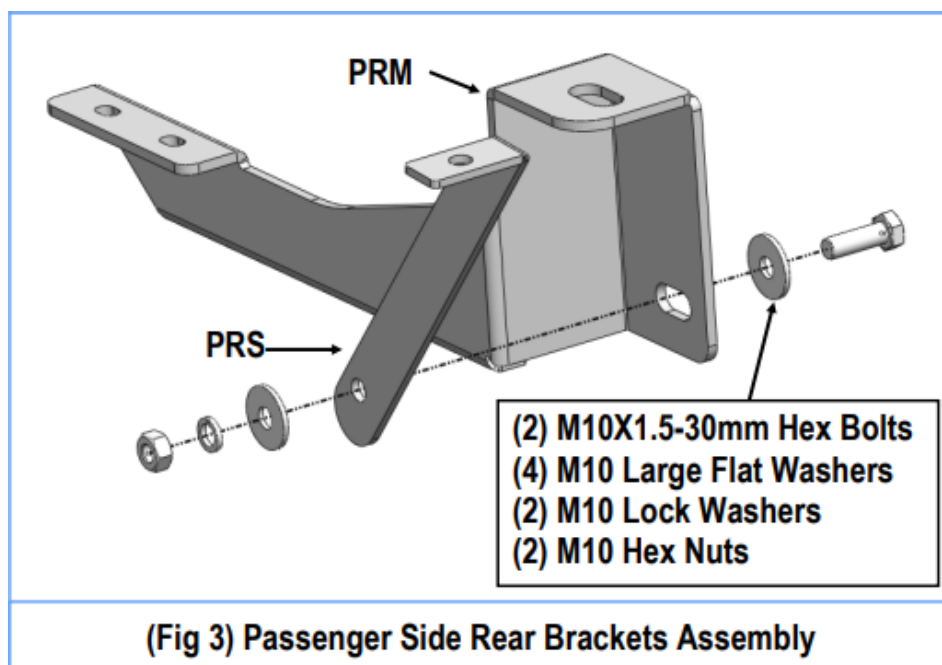


STEP 6


Attach the assembled Passenger Rear Mounting Bracket (PRM) to the vehicle with factory bolts, (Fig 4 & 5). Attach the Passenger Rear Support Bracket (PRS) to the factory hole on the inner side of the body mount cavity and closer to the frame using the:

05-07 Models: (1) M8X1.25-25mm Hex Bolt, (1) M8 Nylon Lock Nut, (2) M8 Large Flat Washers (Fig 4). Do not fully tighten the hardware at this time.

08-On Models: (1) M6X1-30mm Hex Bolt, (1) M6 Nylon Lock Nut, (2) M6 Flat Washers (Fig 5). Do not fully tighten the hardware at this time.

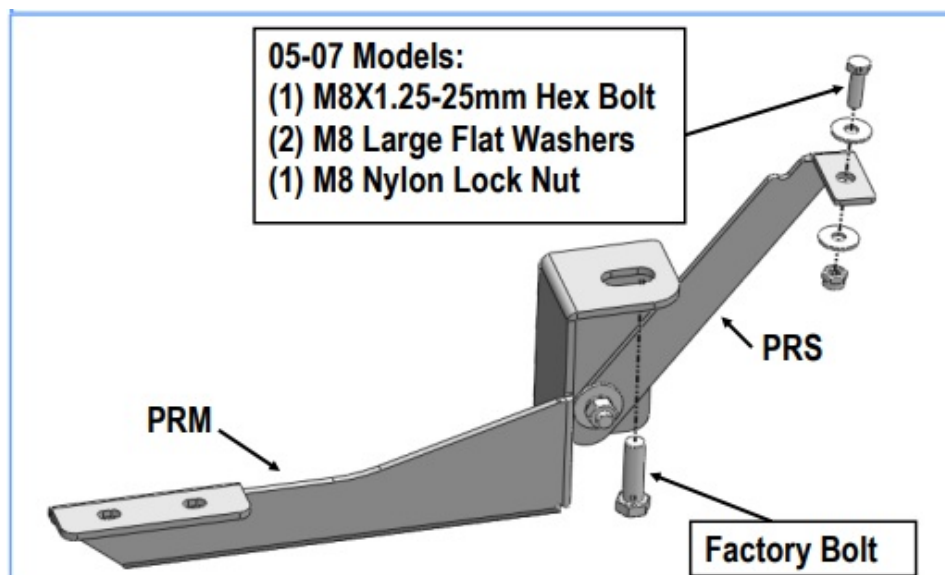


(Fig 4) Passenger Side Rear Brackets Installation (05-07 Models)

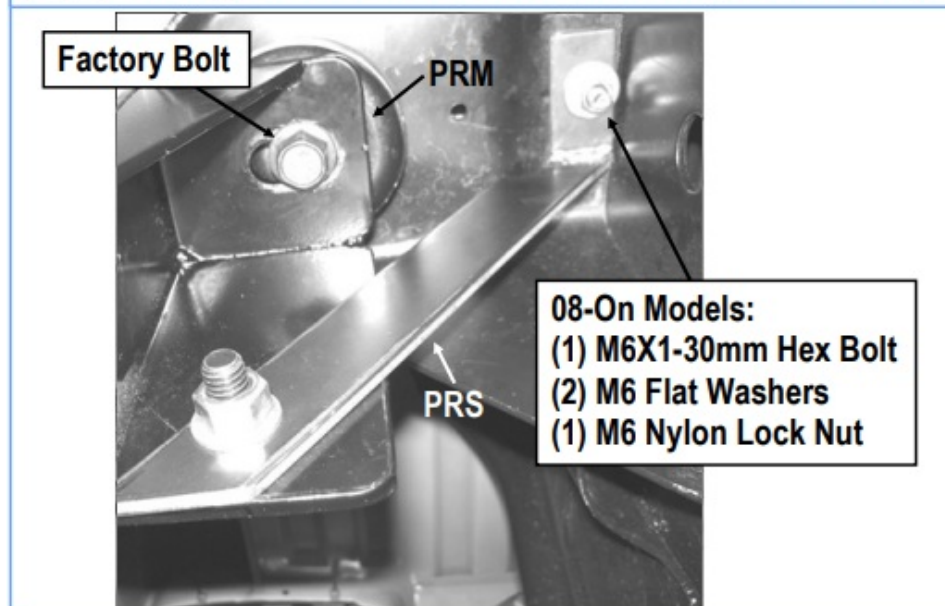


(Fig 5) Passenger Side Rear Brackets Installation (08-On Models)

STEP 7

Once all (2) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 6 & 7)

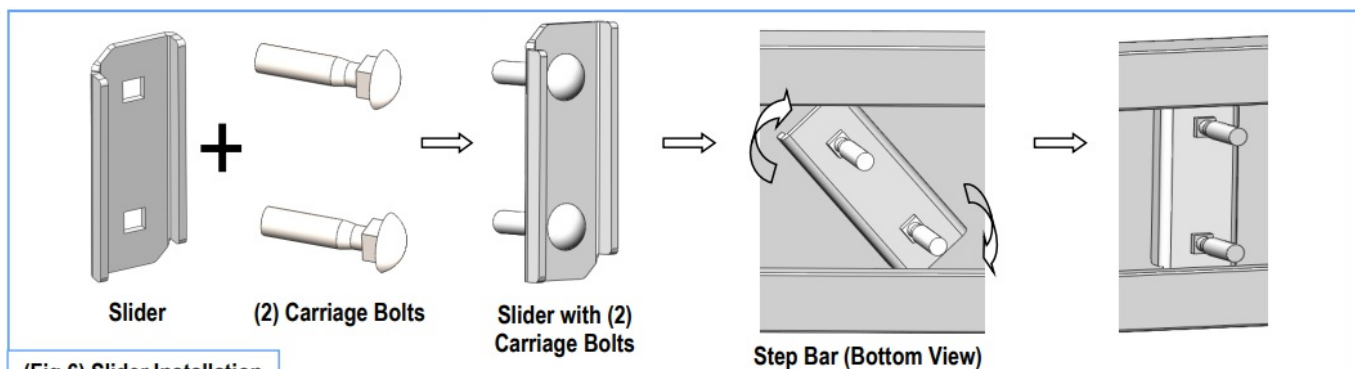

(Fig 6) Slider Installation

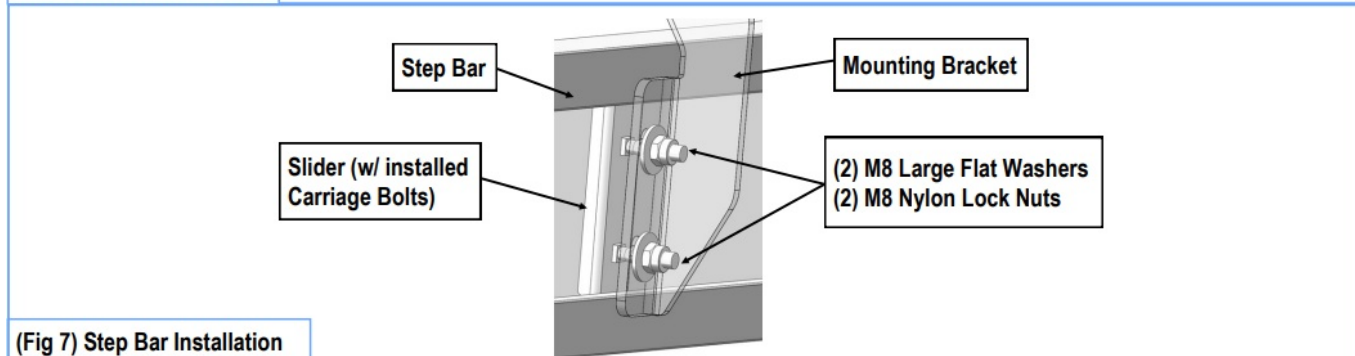

(Fig 7) Step Bar Installation


1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (1) slider to the step bar.
5. Attach the Step Bar (with the Sliders) to the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (4) M8 Large Flat Washers (4) M8 Nylon Lock Nuts and (2) Sliders, (Fig 7). Do not fully tighten the hardware at this time.

Note: The Sliders are packed with the Step Bars. Level and adjust the Step Bar and fully tighten all hardware. Repeat Steps 1-7 for the other side Step Bar installation. The installation is completed!!!

Attention

Do periodic inspections of the installation to make sure that all hardware is secure and tight. To protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

Documents / Resources

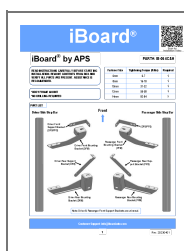

[i Board IB-064C Running Board 4 Black](#) [pdf] Instruction Manual
IB-064C Running Board 4 Black, IB-064C, Running Board 4 Black, Board 4 Black, 4 Black, Black

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.