

i Board IB-P188C Black Running Boards Style



# i Board IB-P188C Black Running Boards Style Installation Guide

[Home](#) » [i Board](#) » i Board IB-P188C Black Running Boards Style Installation Guide 

## Contents

- [1 i Board IB-P188C Black Running Boards Style](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PART LIST](#)
- [6 INSTALLATION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

# iBoard®

i Board IB-P188C Black Running Boards Style



## **Product Information**

### **Specifications:**

- Part Number: IB-P188C&J
- Mounting Type: Rocker Panel Mount
- Installation: No Drilling Required

## **Product Usage Instructions**

### **Step 1: Front Passenger Side Installation**

Start installation from the passenger side front of the vehicle. Locate the front factory running board mounting location along the inner side of the body panel.

### **Step 2: Plastic Washer Installation**

Slide a plastic washer over each factory mounting stud in the body panel to prevent corrosion between the body panel and the steel mounting brackets.

### **Step 3: Mounting Bracket Attachment**

Select a mounting bracket and attach it to the front passenger side mounting location.

### **Step 4: Passenger Side Rear Mounting Location**

Move to the passenger side rear mounting location and repeat Steps 1-3 to install the rear mounting bracket.

### **Step 5: Slider and Step Bar Installation**

Install sliders with carriage bolts as shown in Fig 4. Then, attach the step bar using large flat washers and nylon lock nuts as shown in Fig 5.

**Attention:** Perform periodic inspections to ensure all hardware is secure. Use mild soap or non-abrasive products for cleaning to protect your bars/boards.

## FAQ

**Q: Can these step bars be installed without drilling?**

A: Yes, these step bars are designed for rocker panel mount installation without the need for drilling.

**Q: What torque values should be used for tightening the fasteners?**

A: Refer to the provided chart in the manual for the appropriate tightening torque based on the fastener size.

### iBoard® by APS

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.


\* ROCKER PANEL MOUNT

\* NO DRILLING REQUIRED

**PART#: IB-P188C&J**


Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

## PART LIST

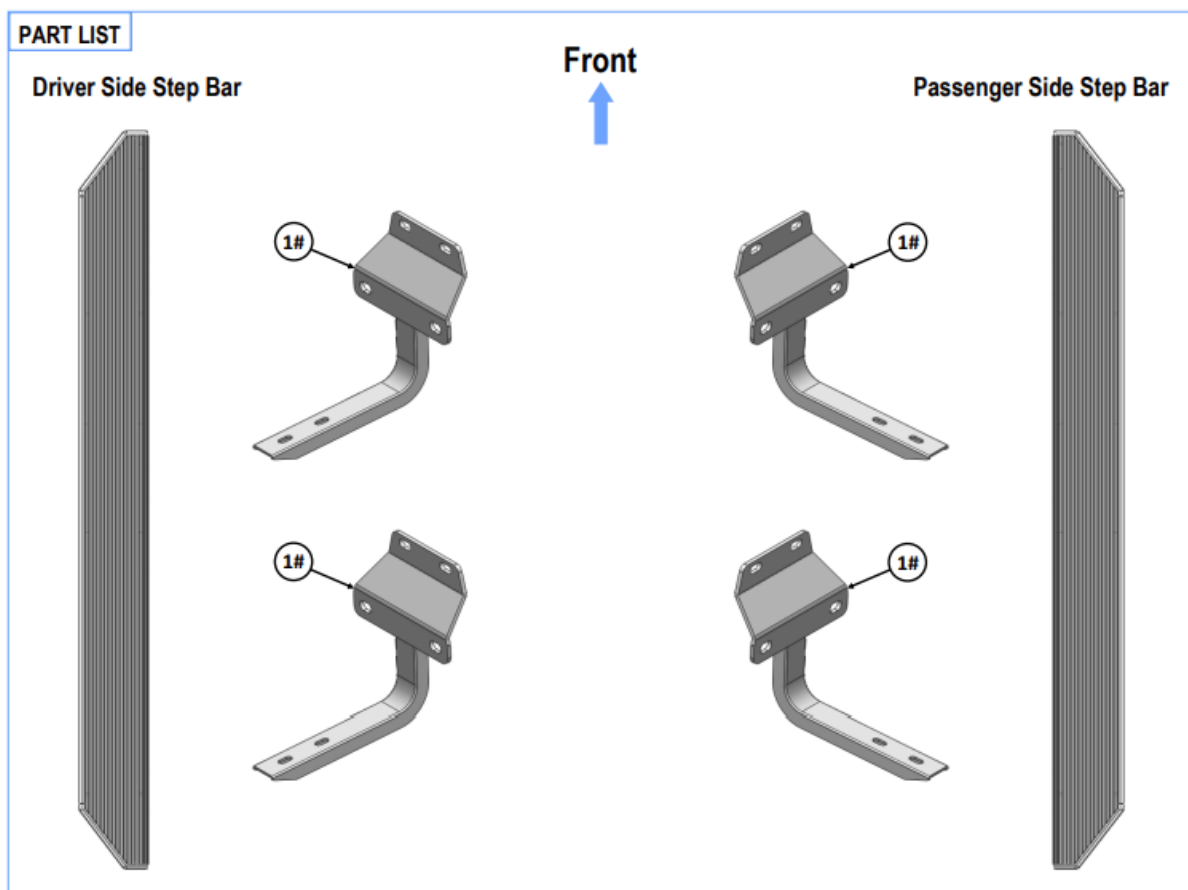


### Hardware Package A (For Bracket Installation)


Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
1#	4	Mounting Brackets	3#	12	M8 Large Flat Washers
2#	12	M8 Plastic Washers	4#	12	M8 Nylon Lock Nuts



2 #




3 #




4 #


Hardware Package B (For Step Bar Installation)					
Item	QTY	Description	Item	QTY	Description
1#	8	M8X1.25-35mm Carriage Bolts	3#	8	M8 Nylon Lock Nuts
2#	8	M8 Large Flat Washers	4#	4	Sliders (Packed with Mounting Brackets)




1 #



2 #



3 #




4 #

## INSTALLATION

### STEP 1


Start installation from the passenger side front of the vehicle. Locate the front factory running board mounting location along the inner side of the body panel, (Fig 1).

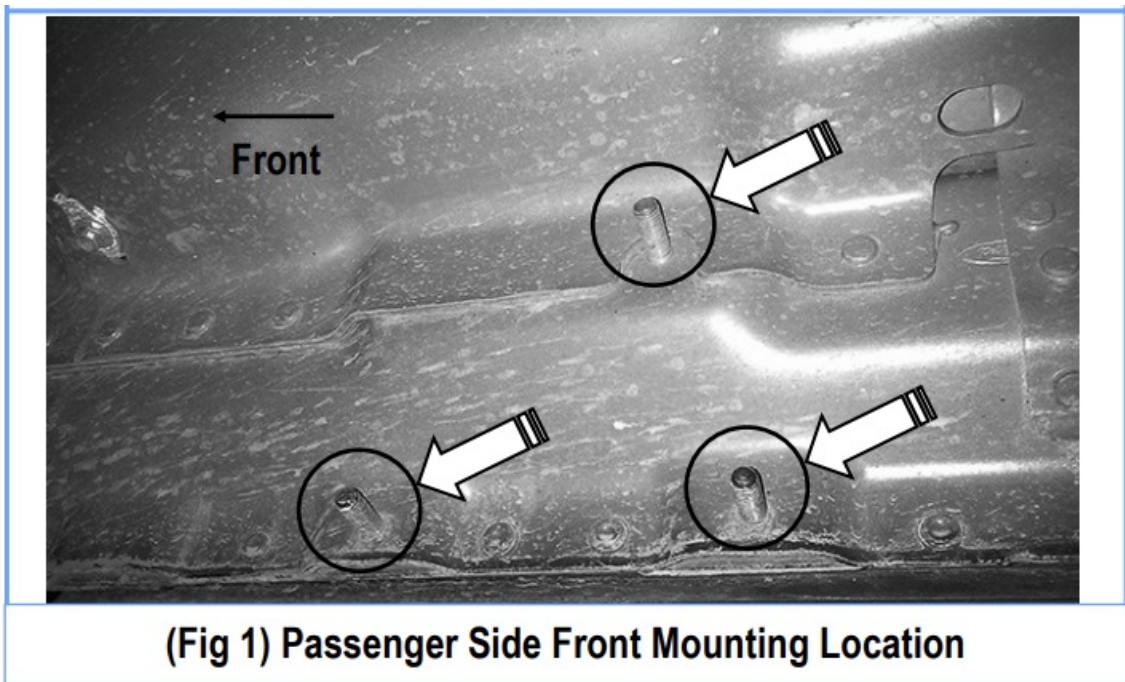

### STEP 2


Slide (1) Plastic Washer over each factory mounting stud in the body panel, (Fig 2).

Note: The Plastic Washers are designed to prevent corrosion between the body panel and the steel mounting brackets.

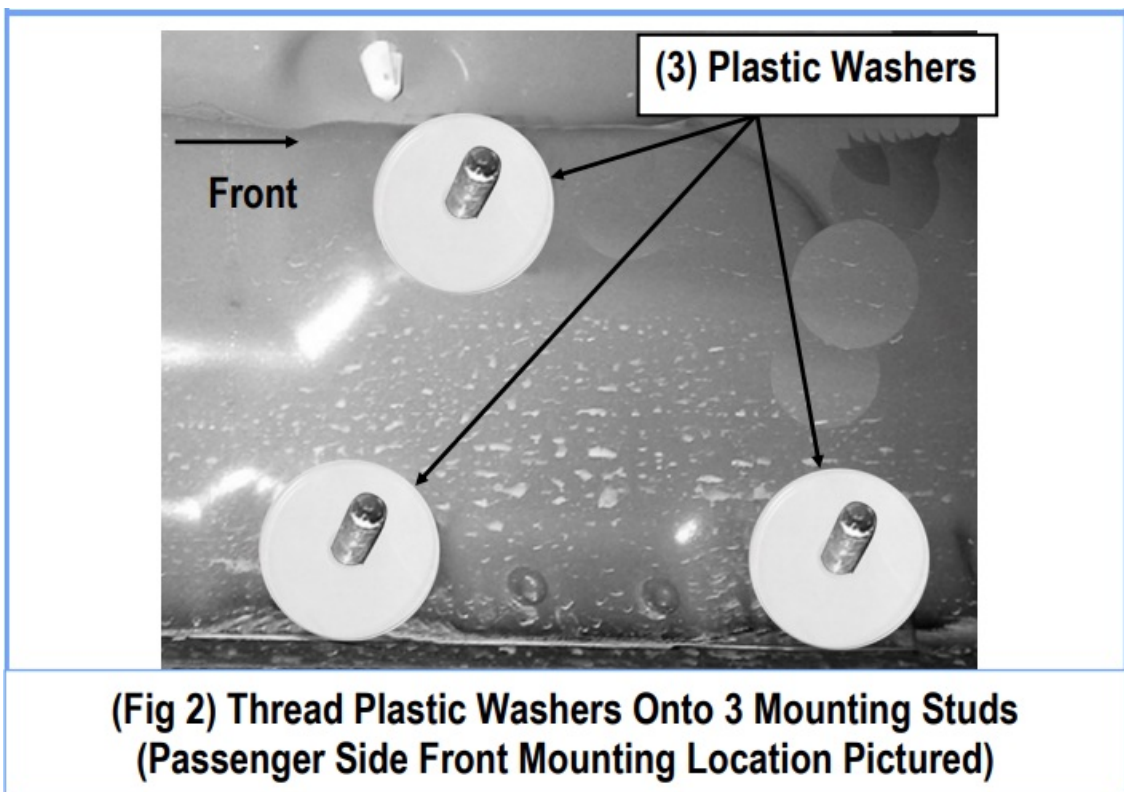

### STEP 3

Select (1) Mounting Bracket. Attach the Mounting Bracket to the (3) factory studs with (3) M8 Large Flat Washers and (3) M8 Nylon Lock Nuts, (Fig 3). Do not fully tighten hardware at this time. Note: All (4) Mounting Brackets are universal.

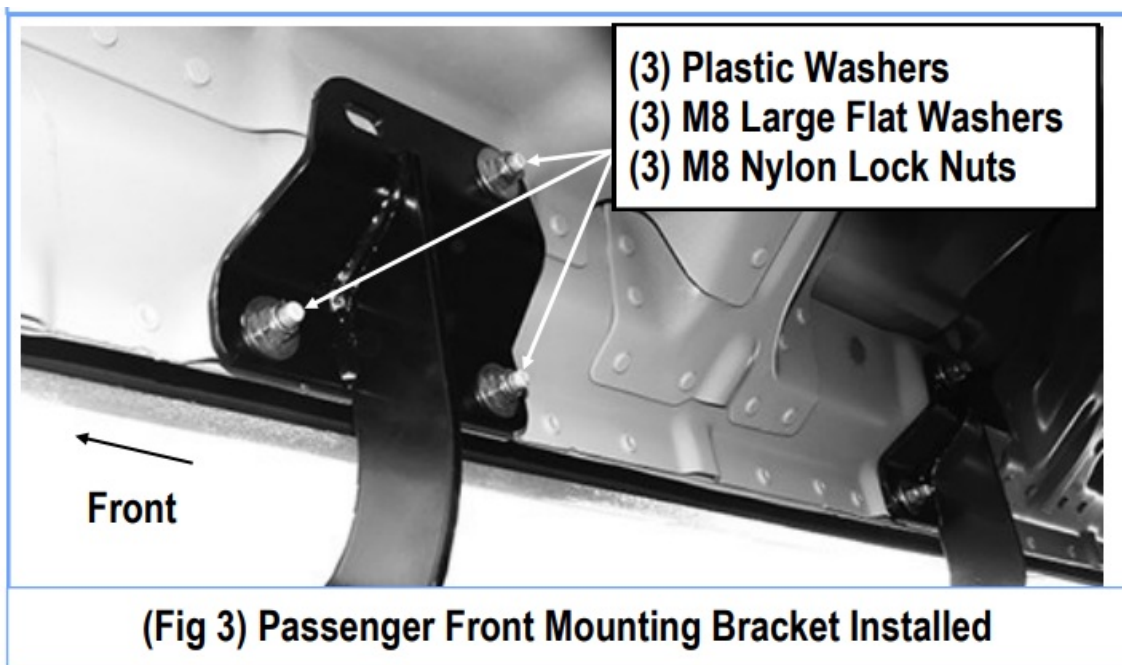

#### **STEP 4**

Move to the Passenger Side Rear Mounting Location. Repeat Steps 1—3 to install the Passenger Side Rear Mounting Bracket. Do not fully tighten at this time.

#### **STEP 5**


Once all (2) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 4 & 5)

1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (1) slider to the step bar.
5. Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (4) M8 Large Flat Washers and (4) M8 Nylon Lock Nuts and (2) Sliders, (Fig 5). Do not fully tighten hardware at this time.

**Note:** The Sliders are packed with the Mounting Brackets.

Level and adjust the Step Bar and fully tighten all hardware.

Repeat Steps 1-5 for the other side Step Bar installation. The installation is completed!!!

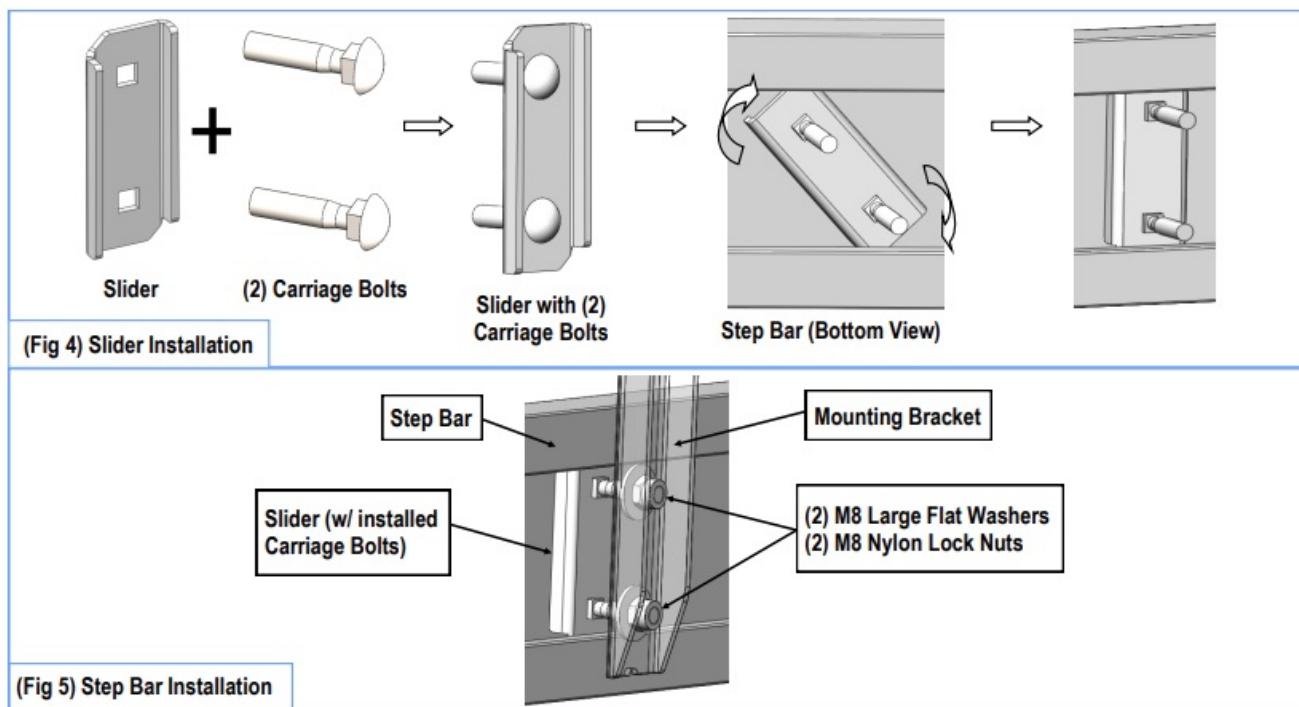

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.  
 In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

**Customer Support:** [info@iboardauto.com](mailto:info@iboardauto.com)

## Documents / Resources

**[i Board IB-P188C Black Running Boards Style](#)** [pdf] Installation Guide  
 IB-P188C Black Running Boards Style, IB-P188C, Black Running Boards Style, Running Board  
 s Style, Boards Style, Style

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.