

iBoard IB-003S Running Boards Nerf Bars Side Steps



iBoard IB-003S Running Boards Nerf Bars Side Steps Instruction Manual

[Home](#) » [iBoard](#) » iBoard IB-003S Running Boards Nerf Bars Side Steps Instruction Manual 

Contents

- 1 iBoard IB-003S Running Boards Nerf Bars Side Steps
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 PART LIST
- 6 Mounting Bracket List
- 7 Hardware Package
- 8 Installation Instructions
- 9 Documents / Resources
 - 9.1 References

iBoard[®]

iBoard IB-003S Running Boards Nerf Bars Side Steps



Product Information

Specifications

- Part Number: IB-003S/011/003C&H
- Mounting Type: Rocker Panel Mount
- No drilling required

Product Usage Instructions

Step 1: Locating Mounting Locations

- Starting on the driver-side front of the vehicle, locate the (3) mounting locations along the rocker panel & pinch weld as described in the manual.

Step 2: Inserting Clip Nuts

- Select (1) M10 Clip Nut and insert it into the rectangular opening.
- Ensure the threaded hole of the Clip Nut aligns with the round hole beside the rectangular opening.

Step 3: Attaching Mounting Brackets

- Partially attach the Driver Front Mounting Bracket to the M10 Clip Nut using the provided hardware.
- Bolt the lower hole on the Mounting Bracket to the hole in the pinch weld.
- Do not fully tighten the hardware at this time.

Step 4: Installing Additional Brackets

- Move along the vehicle to the driver-side centre & rear mounting location and repeat Steps 1-3 to install the

additional brackets.

Step 5: Step Bar Installation

- Once all Driver-side mounting brackets are installed, proceed to Step Bar installation.
- Follow the instructions provided in the manual for attaching the Step Bar to the installed mounting brackets.

FAQ

- **Q:** Is drilling required for installation?
- **A:** No, drilling is not required for this product as it is designed for rocker panel mount installation.
- **Q:** Are the mounting brackets universal?
- **A:** Yes, there are (6) universal mounting brackets included in the package.


READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM THE BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED

PART#: IB-003S/011/003C&H

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	√
12mm	56-58	X
14mm	92-94	X

- ROCKER PANEL MOUNT
- NO DRILLING REQUIRED


PART LIST

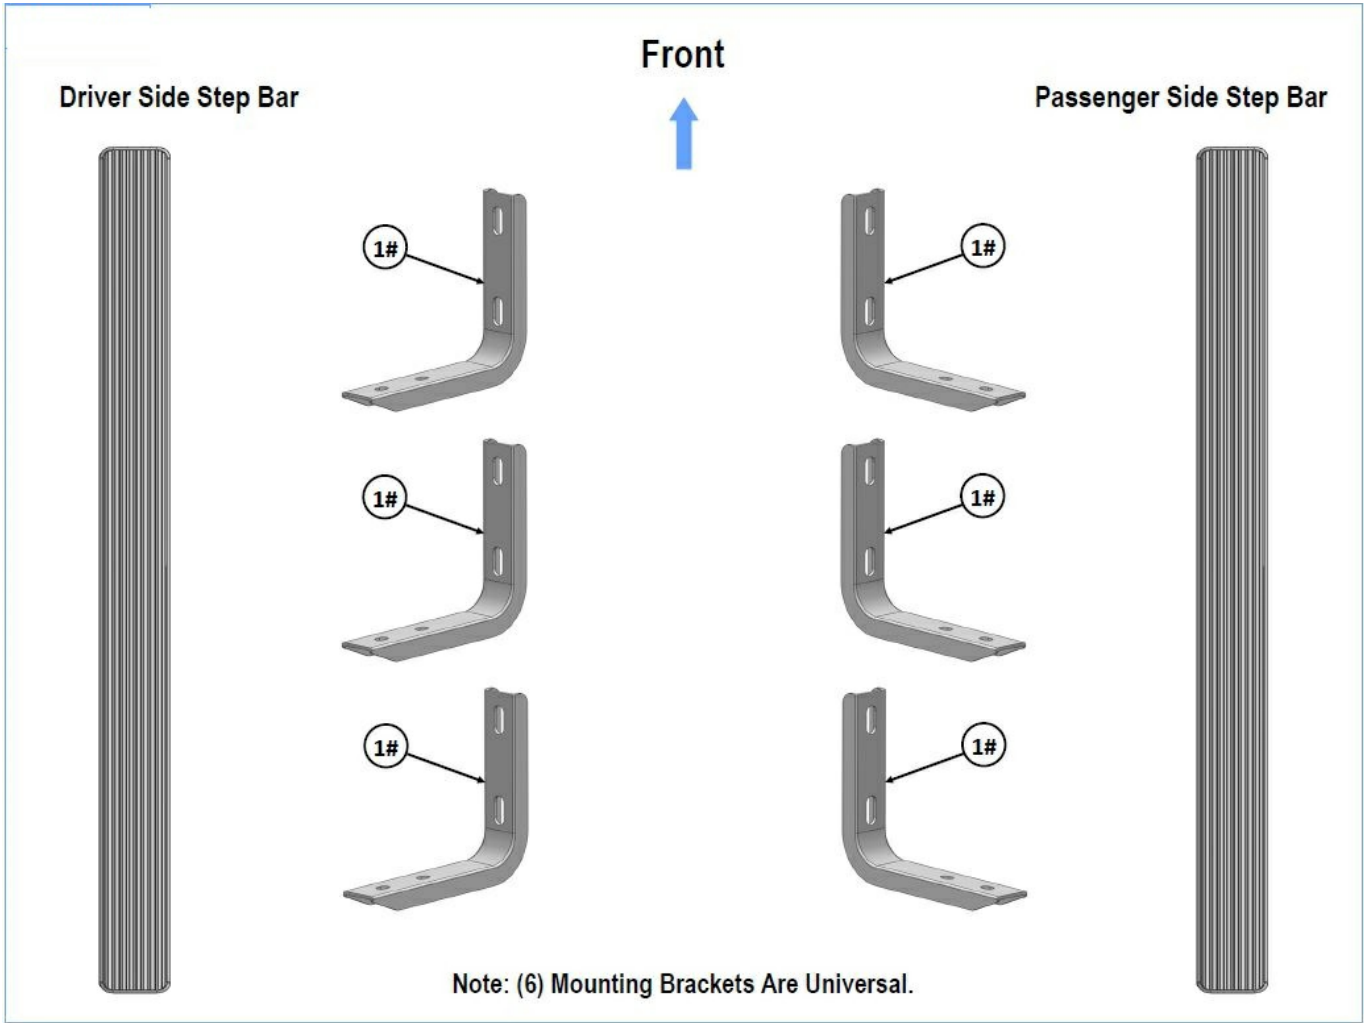

Mounting Bracket List					
Item	Qty	Description	Item	Qty	Description
1#	6	Mounting Brackets			

Hardware Package





Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M10X1.5-30mm Hex Bolts	4#	6	M10X1.5 Hex Nuts
2#	18	M10 Flat Washers	5#	6	M10 Clip Nuts
3#	12	M10 Lock Washers			




1#
2#
3#
4#
5#

Hardware Package B (For Stainless Steel Step Bar Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M8X1.25-35mm Carriage Bolts	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Large Flat Washers	4#	6	Sliders (Packed with Step Bars)


1#
2#
3#
4#

Installation Instructions


STEP 1

- Starting on the driver-side front of the vehicle. Locate the (3) mounting locations along the rocker panel & pinch weld.
- Each mounting location on the rocker panel is comprised of a rectangular hole with a round hole and (1) hole

on pinch weld, (Figs 1-2).

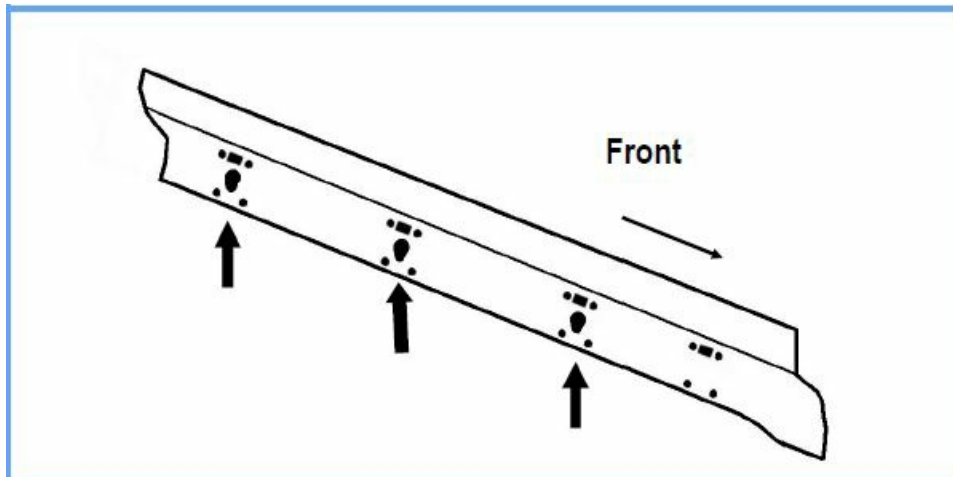


(Fig 1) Driver Side Mounting Locations

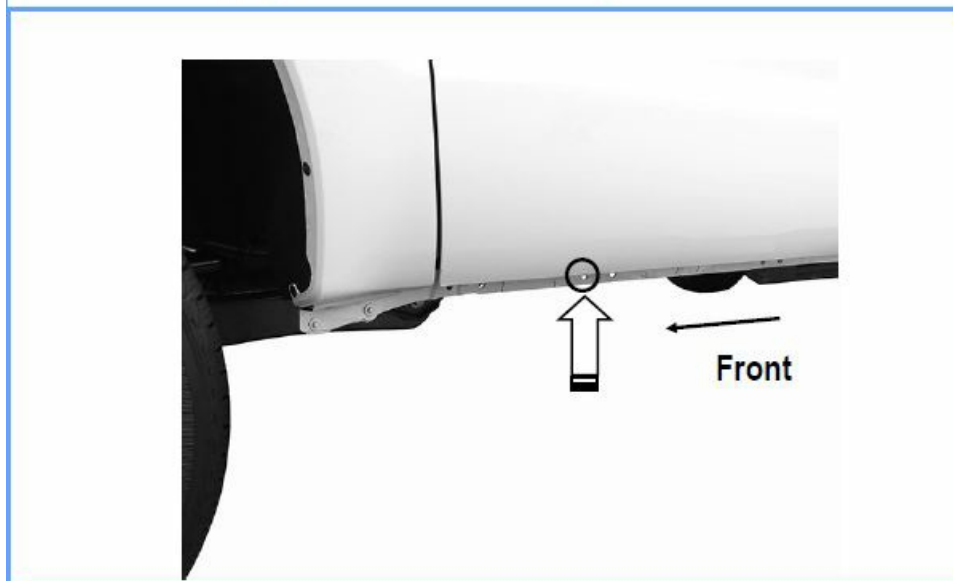

(Fig 2) The Mounting Holes on the Pinch Weld


STEP 2

- Select (1) M10 Clip Nut. Insert the Clip Nut into the rectangular opening. Line up the threaded hole of Clip Nut with the round hole beside the rectangular opening, (Fig 3).
- **NOTE:** Make sure the threaded nut on the Clip Nut is toward the inner side of the rocker panel, (Fig 3).

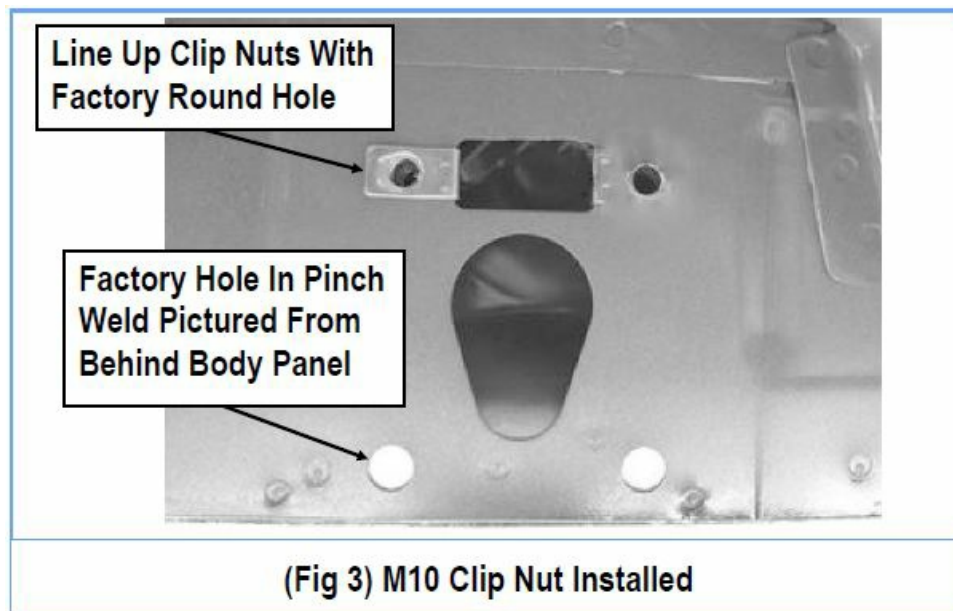

STEP 3

- Partially attach the Driver Front Mounting Bracket to the M10 Clip Nut with the included (1) M10X1.5-30mm Hex Bolt, (1) M10 Lock Washer and (1) M10 Flat Washer, (Fig 4).
- Bolt the (1) lower hole on the Mounting Bracket to the (1) hole in the pinch weld with the included (1) M10X1.5-30mm Hex Bolt, (2) M10 Flat Washers, (1) M10 Lock Washer and (1) M10X1.5 Hex Nut, (Fig 4). Do not fully tighten hardware at this time.

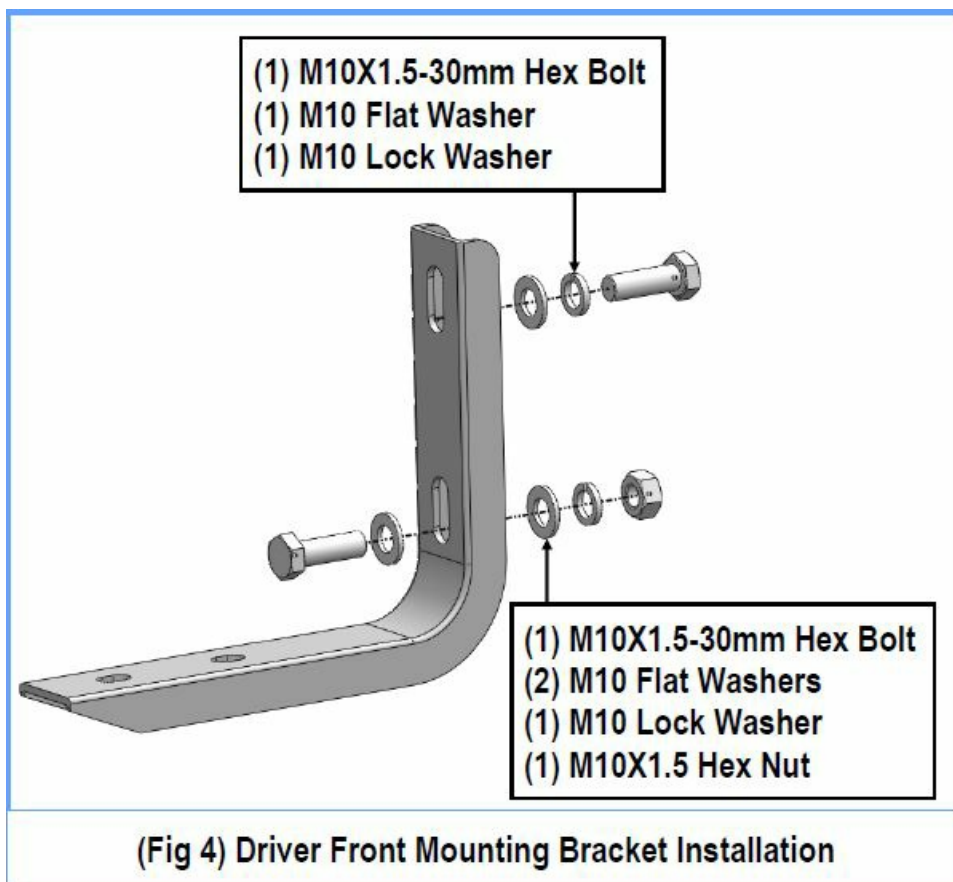

STEP 4

- Move along the vehicle to the driver-side centre & rear mounting location. Repeat Steps 1-3 to install the Driver Center & Rear Mounting Bracket.
- **Note:** (6) Mounting Brackets Are Universal.

STEP 5

Once all (3) Driver side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 5 & 6)

1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (2) sliders to the step bar.
5. Attach the Step Bar (with the Sliders) to the installed mounting brackets. Position the Sliders to the installed bracket-


Note: The Sliders are packed with the Step Bars.

Level and adjust the Step Bar and fully tighten all hardware.

Repeat Steps 1-5 for the other side Step Bar installation. The installation is completed!

Attention


- Do periodic inspections of the installation to make sure that all hardware is secure and tight.
- In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

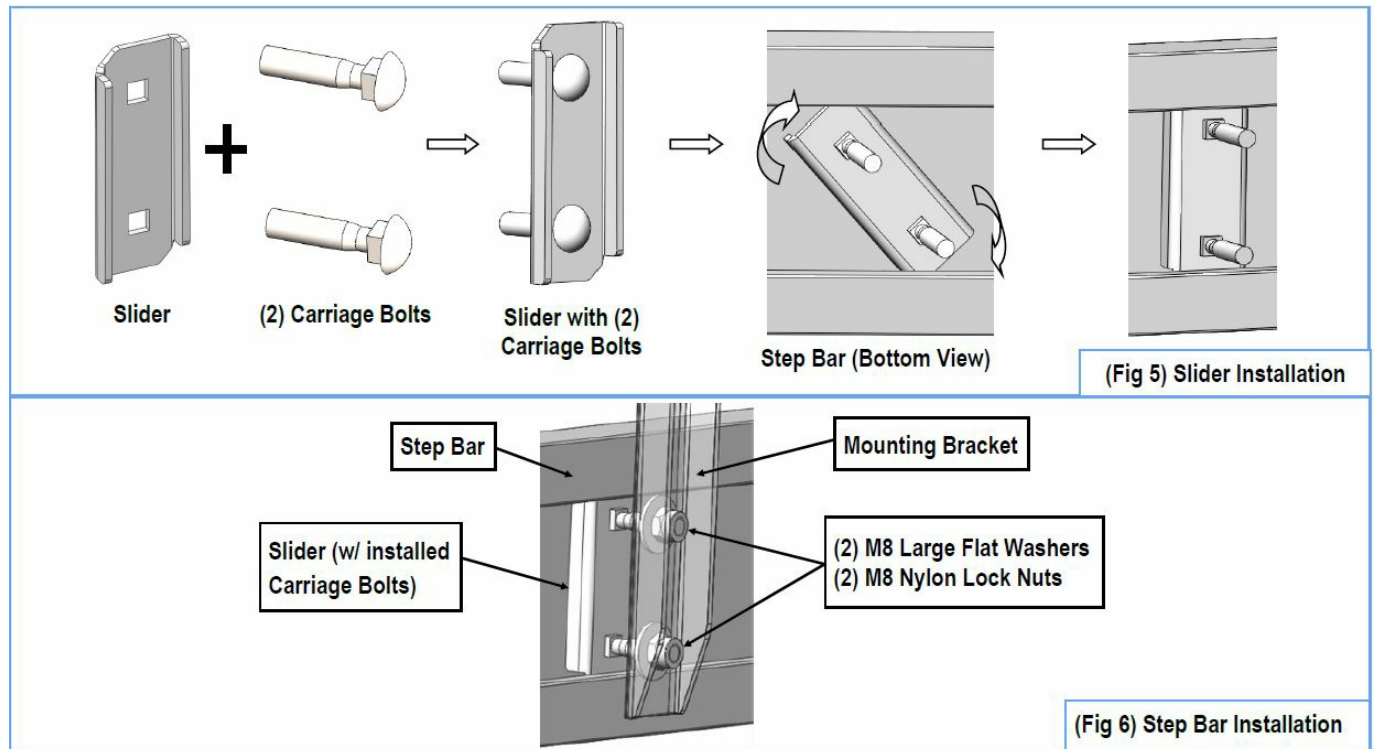

Customer Support: info@iboardauto.com.



Documents / Resources

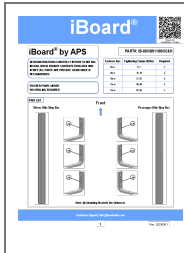

[iBoard IB-003S Running Boards Nerf Bars Side Steps](#) [pdf] Instruction Manual
IB-003S Running Boards Nerf Bars Side Steps, IB-003S, Running Boards Nerf Bars Side Steps,
Boards Nerf Bars Side Steps, Nerf Bars Side Steps, Bars Side Steps, Side Steps, Steps

References

- [User Manual](#)

Manuals, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.