iBoard IB-009C&H Running Boards (Nerf Bars Side Steps Step Bars)



# iBoard IB-009C&H Running Boards (Nerf Bars Side Steps Step **Bars) Instruction Manual**

Home » iBoard » iBoard IB-009C&H Running Boards (Nerf Bars Side Steps Step Bars) Instruction Manual



#### **Contents**

- 1 iBoard IB-009C&H Running Boards (Nerf Bars Side Steps Step
- **2 PART LIST**
- 3 Mounting Bracket List
- **4 STEP 1**
- **5 STEP 2**
- **6 STEP 3**
- **7 STEP 4**
- 8 Documents / Resources
  - 8.1 References



iBoard IB-009C&H Running Boards (Nerf Bars Side Steps Step Bars)




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM THE BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

- ROCKER PANEL MOUNT
- NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required	
6mm	6-7	Χ	
8mm	16-18	√	
10mm	31-32	Χ	
12mm	56-58	Х	
14mm	92-94	Х	

### **PART LIST**

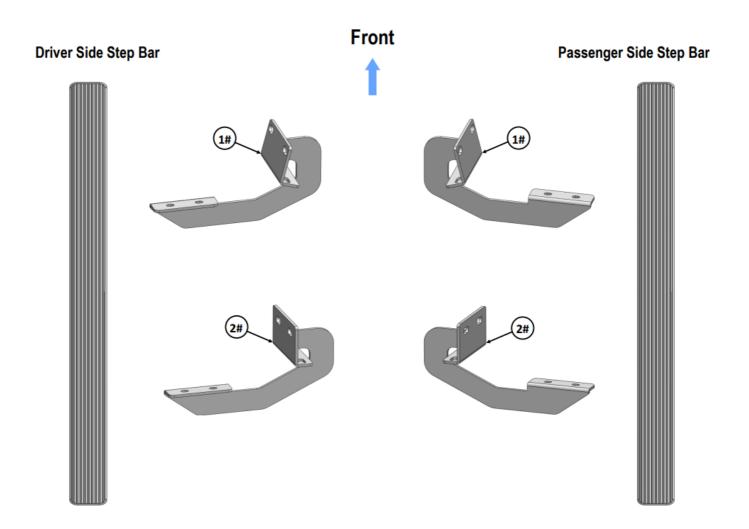

## **Mounting Bracket List**

Item	QTY	Description	Item	QTY	Description
1#	2	Driver / Passenger Front Mounting Brackets	2#	2	Driver / Passenger Rear Mounting Brackets

• Hardware Package A (For Bracket Installation)

Item	QTY	Description		Item	QTY	Description	
1#	16	M8X1.25-30mm Hex Bolts		4#	8	M8X1.25 Hex Nuts	
2#	24	M8 Flat Washers		5#	8	M8 Clip Nuts	
3#	16	M8 Lock Washers					
		1#	2#	3#		4#	5#


• Hardware Package B (For Stainless Steel Step Bar Installation)

Item	QTY	Description		QTY	Description	
1#	8	M8X1.25-35mm Carriage Bolts		8	M8 Nylon Lock Nuts	
2#	8	M8 Large Flat Washers		4	Sliders (Packed with Step Bars)	
1# 2#				3#		

#### STEP 1

Start installation under the Driver Side Front Mounting Location. Remove the large oval rubber cover located on the inner side panel toward the front, (Fig). Insert (2) M8 Clip Nuts into the round holes (Fig 2).


**NOTE:** The threaded nut must go towards the inside of the side panel.

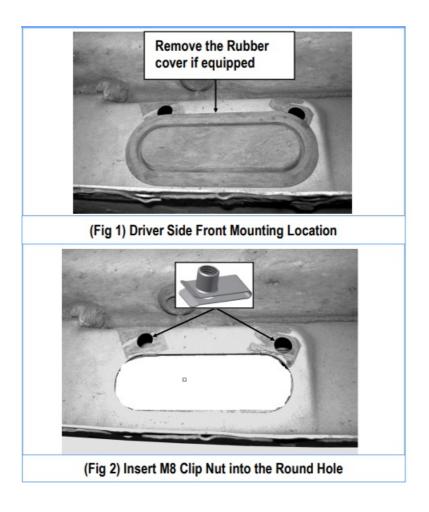

#### STEP 2

Select (1) Driver Front Mounting Bracket. Attach the Bracket to the installed M8 Clip Nuts with (2) M8X1.25-30mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (Fig 3). Align the bottom holes in the front Bracket with (2) holes in the pinch weld. Bolt the Bracket to the pinch weld using (2) M8X1.25-30mm Hex Bolts, (4) M8 Large Flat Washers, (2) M8X1.25 Lock Washers and (2) M8 Hex Nuts, (Fig 3).

NOTE: Insert the bolt up from the bottom of the pinch weld and through the Bracket.

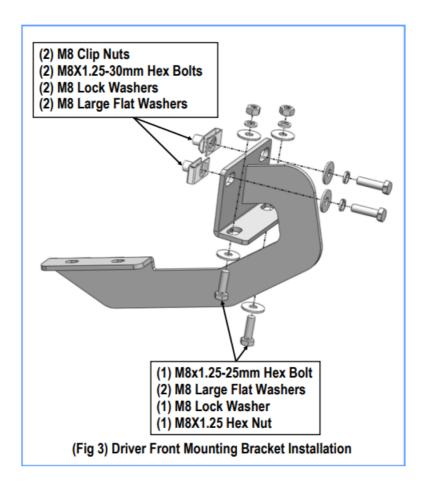


#### STEP 3

Next, move along the vehicle to the Driver Side Rear Mounting Location, select a Driver Rear Mounting Bracket, and repeat Steps 1-2 to install the rear bracket. Do not fully tighten the hardware at this time.

#### STEP 4

Once all (2) driver-side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 4 & 5)

- 1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
- 2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
- 3. Slide the Slider (with carriage bolts) to the Step Bar.
- 4. Repeat to install the other (1) slider to the step bar.
- 5. Attach the Step Bar (with the Sliders) to the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (4)

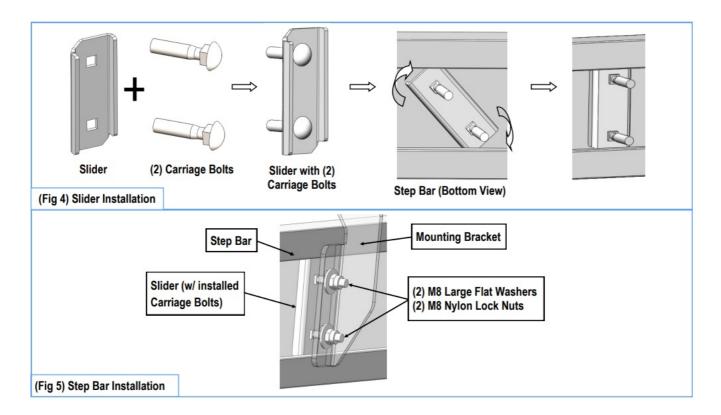

M8 Large Flat Washers (4) M8 Nylon Lock Nuts and (2) Sliders, (Fig 5). Do not fully tighten the hardware at this time

**Note:** The Sliders are packed with the Step Bars. Level and adjust the Step Bar and fully tighten all hardware. Repeat Steps 1-4 for the other side Step Bar installation. The installation is completed!!!

#### **Attention**

Do periodic inspections of the installation to make sure that all hardware is secure and tight. To protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

#### **Documents / Resources**



<u>iBoard IB-009C&H Running Boards (Nerf Bars Side Steps Step Bars)</u> [pdf] Instruction Manu

IB-009C H Running Boards Nerf Bars Side Steps Step Bars, IB-009C H, Running Boards Nerf B ars Side Steps Step Bars, Bars Side Steps Step Bars, Step Bars, Bars

#### References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.