


iBoard IB-049 Running Board Step 6 Silver

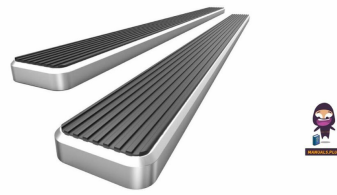

## iBoard IB-049 Running Board Step 6 Silver Installation Guide

[Home](#) » [iBoard](#) » iBoard IB-049 Running Board Step 6 Silver Installation Guide 

### Contents

- [1 iBoard IB-049 Running Board Step 6 Silver](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PART LIST](#)
- [6 Mounting Bracket List](#)
- [7 Hardware Package](#)
- [8 Installation Instructions](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

**iBoard®**

**iBoard IB-049 Running Board Step 6 Silver**



## Product Information

### Specifications

- Part Number: IB-049/050C&H
- Fastener Size Tightening Torque (ft-lbs):
  - 6mm: 6-7
  - 8mm: 16-18
  - 10mm: 31-32
  - 12mm: 56-58
  - 14mm: 92-94

### Product Usage Instructions

#### Step 1: Driver Side Installation

- Start installation at the driver side of the vehicle and locate the factory threaded holes or studs. Remove any plugs or insulation if present. Attach the mounting brackets as instructed.

#### Step 2: Driver Front Mounting Bracket

- Attach the driver front mounting bracket to the designated location using the provided hardware. Follow specific instructions based on the presence of threaded studs.

#### Step 3: Driver Center and Rear Mounting Brackets

- Repeat Step 1 and Step 2 to install the driver centre and rear mounting brackets.

#### Step 4: Other Side Installation

- Repeat the installation steps for the other side step bar. Once completed, the installation process is finished.

**Attention:** Perform periodic inspections to ensure all hardware is secure. Use mild cleaning agents to protect your bars/boards.

#### FAQ

- **Q:** What should I do if I encounter missing parts during installation?
- **A:** Contact customer support at [info@iboardauto.com](mailto:info@iboardauto.com) for assistance regarding missing parts.
- **Q:** Do I need to drill holes for installation?
- **A:** No, drilling is not required for this product as it features a rocker panel mount.


#### PART#: IB-049/050C&H

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM THE BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

- ROCKER PANEL MOUNT
- NO DRILLING REQUIRED

#### PART LIST

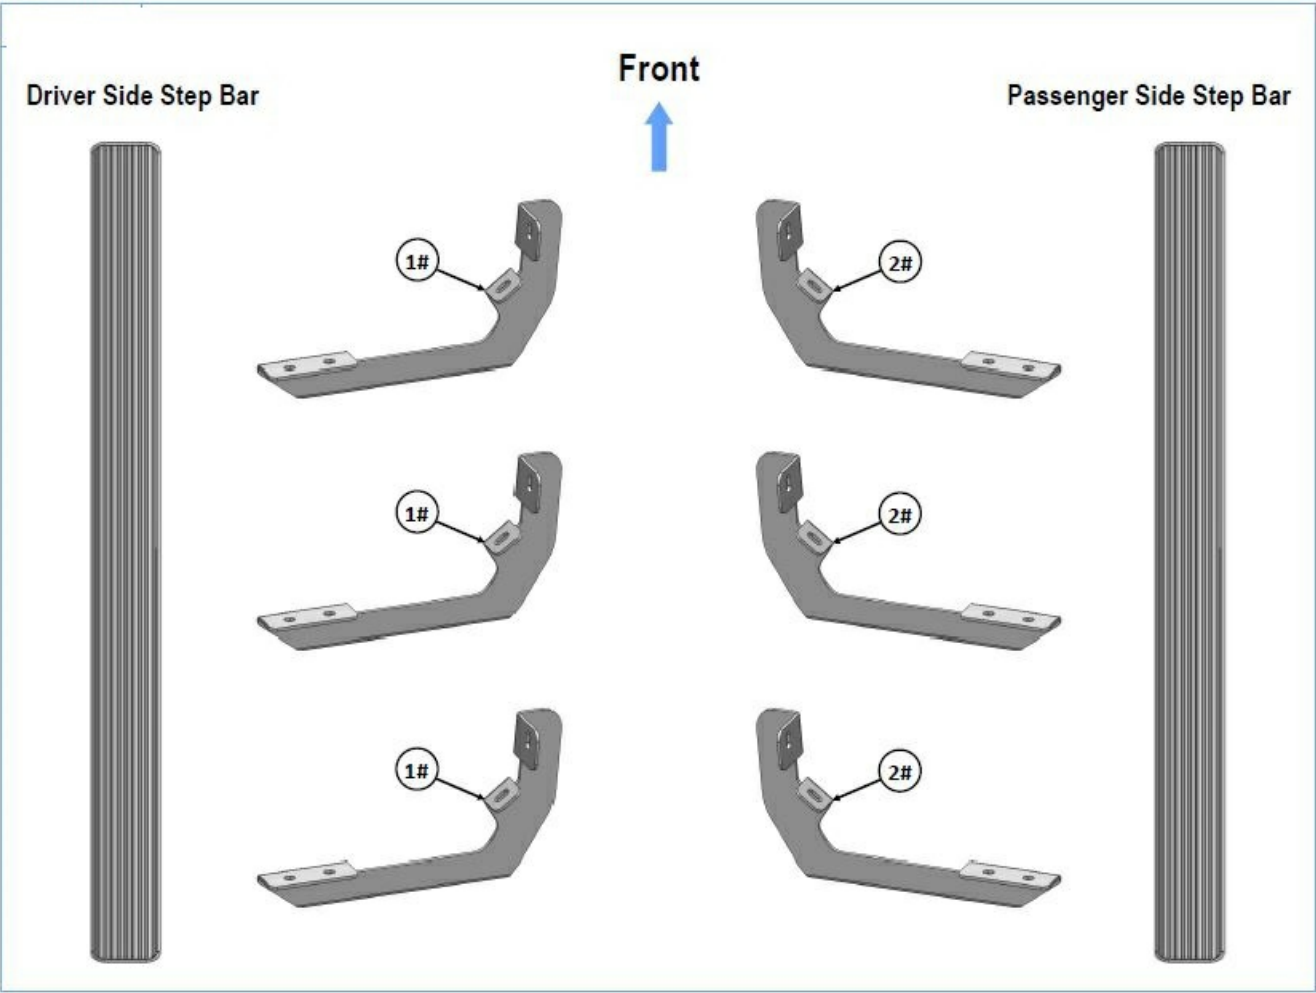





Mounting Bracket List

Mounting Bracket List					
Item	Qty	Description	Item	Qty	Description
1#	3	Driver Front / Center / Rear Mounting Brackets	2#	3	Passenger Front / Center /Rear Mounting Brackets





Hardware Package

Hardware Package A (For Bracket Installation)					
Item	Qty	Description	Item	Qty	Description
1#	12	M8X1.25-30mm Hex Bolts	3#	12	M8 Lock Washers
2#	12	M8 Flat Washers	4#	6	M8X1.25 Nylon Lock Nuts

1 #
2 #
3 #
4 #

Hardware Package B (For Stainless Steel Step Bar Installation)					
Item	Qty	Description	Item	Qty	Description
1#	12	M8X1.25-35mm Carriage Bolts	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Large Flat Washers	4#	6	Sliders (Packed with Step Bars)







1 #
2 #
3 #
4 #

## Installation Instructions

### STEP 1

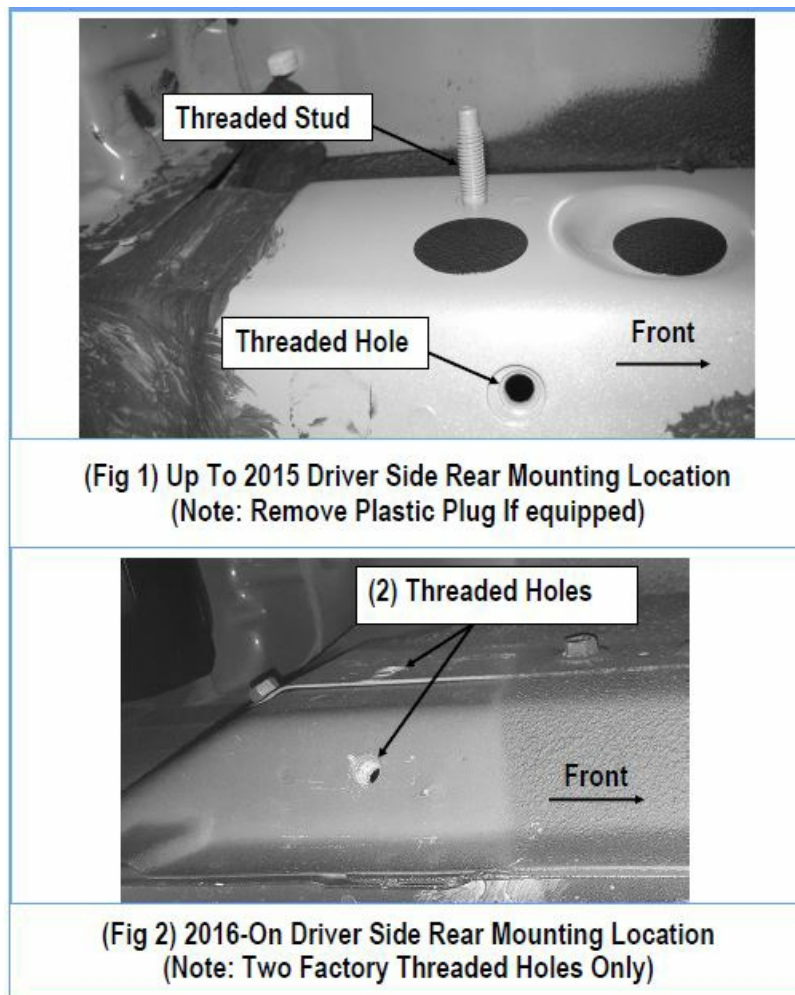
- Start installation at the driver side of the vehicle and locate the factory threaded holes or stud located on the side of the inner body panel, (Fig 1 & 2).
- NOTE:** Remove the plastic plug or any insulation if equipped.




## STEP 2

Attach (1) Driver Front Mounting Bracket onto the Driver Side Front Mounting Location as shown (Fig 3).

- Models with threaded stud: Attach the Mounting Bracket to the stud with (1) M8 Flat Washer, and (1) M8 X1.25 Nylon Lock Nut. Next, secure the bracket to the lower threaded hole with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer and (1) M8 Lock Washer. Do not tighten the hardware at this time.
- Models without threaded stud: Attach the Mounting Bracket to the upper threaded hole with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer and (1) M8 Lock Washer. Next, secure the bracket to the lower threaded hole with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer and (1) M8 Lock Washer, (Fig 4). Do not fully tighten the hardware at this time.

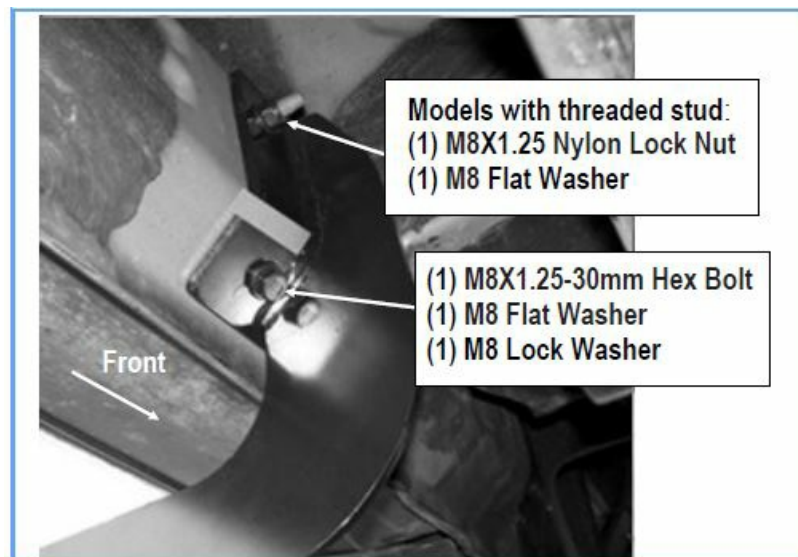

(Fig 3) Models With Threaded Stud Bracket Installed

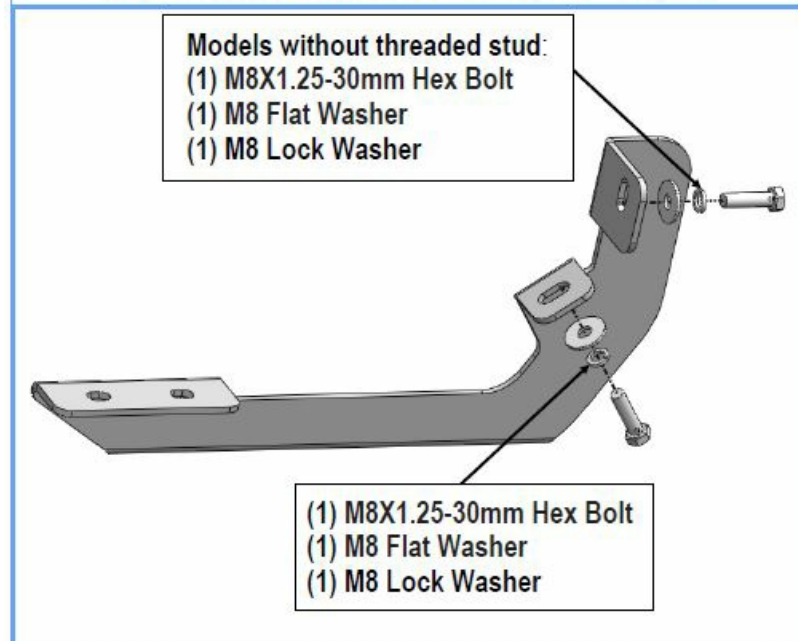

(Fig 4) Models Without Threaded Stud Bracket Installation

### STEP 3

- Repeat Steps 1-2 to Install the Driver Center and Rear mounting brackets.


### STEP 4

Once all (3) Driver side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 5&6)

1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (2) sliders to the step bar.
5. Attach the Step Bar (with the Sliders) to the installed mounting brackets. Position the Sliders to the installed brackets.

Secure the Step Bar to the installed Brackets by using (6) M8 Large Flat Washers (6) M8 Nylon Lock Nuts and (3) Sliders, (Fig 6). Do not fully tighten the hardware at this time.

**Note:** The Sliders are packed with the Step Bars. Level and adjust the Step Bar and fully tighten all hardware.

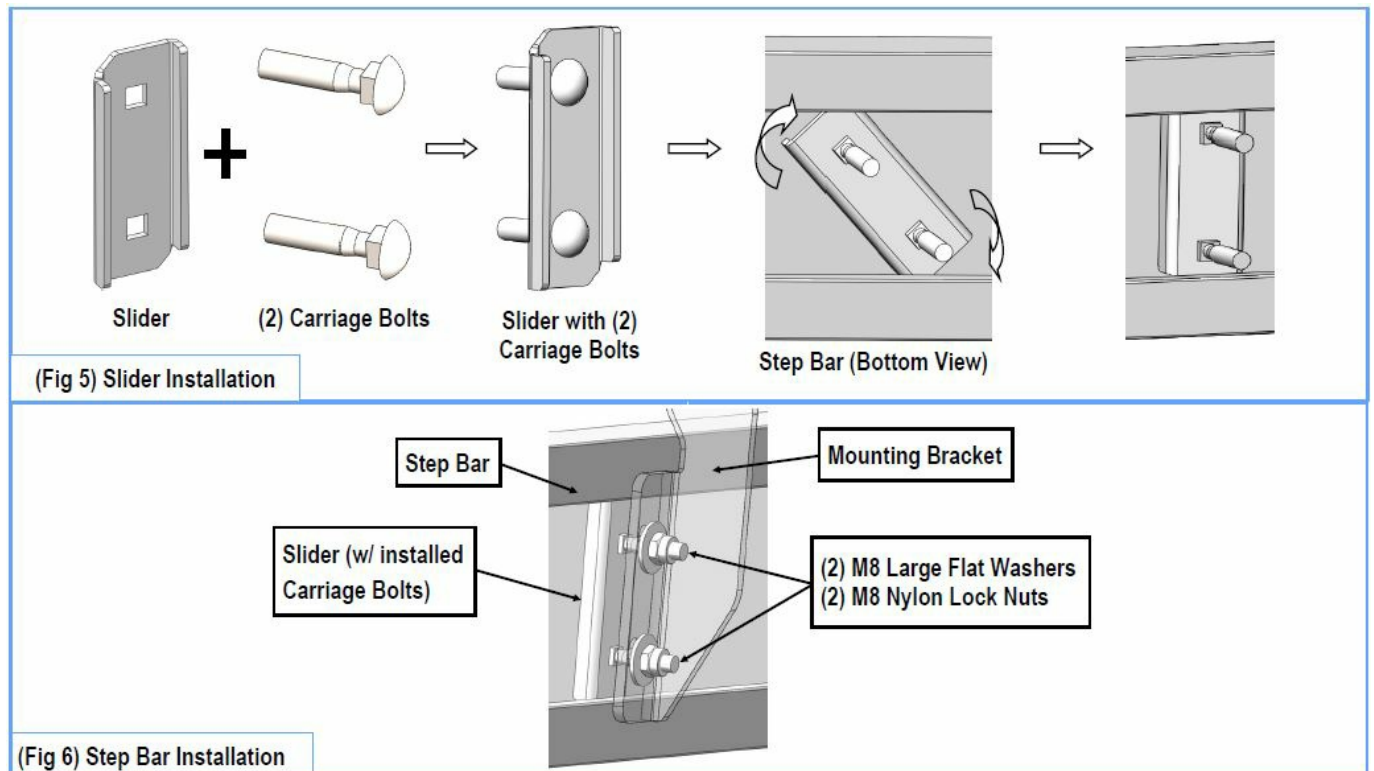

Repeat Steps 1-4 for the other side Step Bar installation. The installation is completed!

#### Attention

Do periodic inspections of the installation to make sure that all hardware is secure and tight.  
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com).



## Documents / Resources

	<p><b><a href="#">iBoard IB-049 Running Board Step 6 Silver</a></b> [pdf] Installation Guide IB-049, IB-050C H, IB-049 Running Board Step 6 Silver, Running Board Step 6 Silver, Board Step 6 Silver, Step 6 Silver</p>
--	---



## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.