

**iBoard®**  
**iBoard IB-065C&H**  
**Running Board Side**  
**Step Bars**



# iBoard IB-065C&H Running Board Side Step Bars Installation Guide

[Home](#) » [iBoard](#) » iBoard IB-065C&H Running Board Side Step Bars Installation Guide 

## Contents

- [1 iBoard IB-065C&H Running Board Side Step Bars](#)
- [2 Product Specifications](#)
- [3 Frequently Asked Questions](#)
- [4 PART LIST](#)
- [5 Hardware Package A For Bracket Installation](#)
- [6 ASSEMBLY INSTALLATION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

# iBoard®

**iBoard IB-065C&H Running Board Side Step Bars**



## Product Specifications

- Product Name: Body Frame Mount
- No Drilling Required
- Part Number: IB-065C&H
- Fastener Sizes: 6mm, 8mm, 10mm, 12mm, 14mm
- Tightening Torque (ft-lbs): 6-7, 16-18, 31-32, 56-58, 92-94

## Frequently Asked Questions

### **Q: Do I need to drill for installation?**

A: No, drilling is not required for this product as it is a body frame mount.

### **Q: How should I clean the bars/boards?**

A: Use mild soap/non-abrasive products for cleaning only to protect your bars/boards.


Contact Customer Support at [info@iboardauto.com](mailto:info@iboardauto.com) for any further assistance.

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

BODY FRAME MOUNT  
NO DRILLING REQUIRED


Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	√
14mm	92-94	X

**PART LIST**

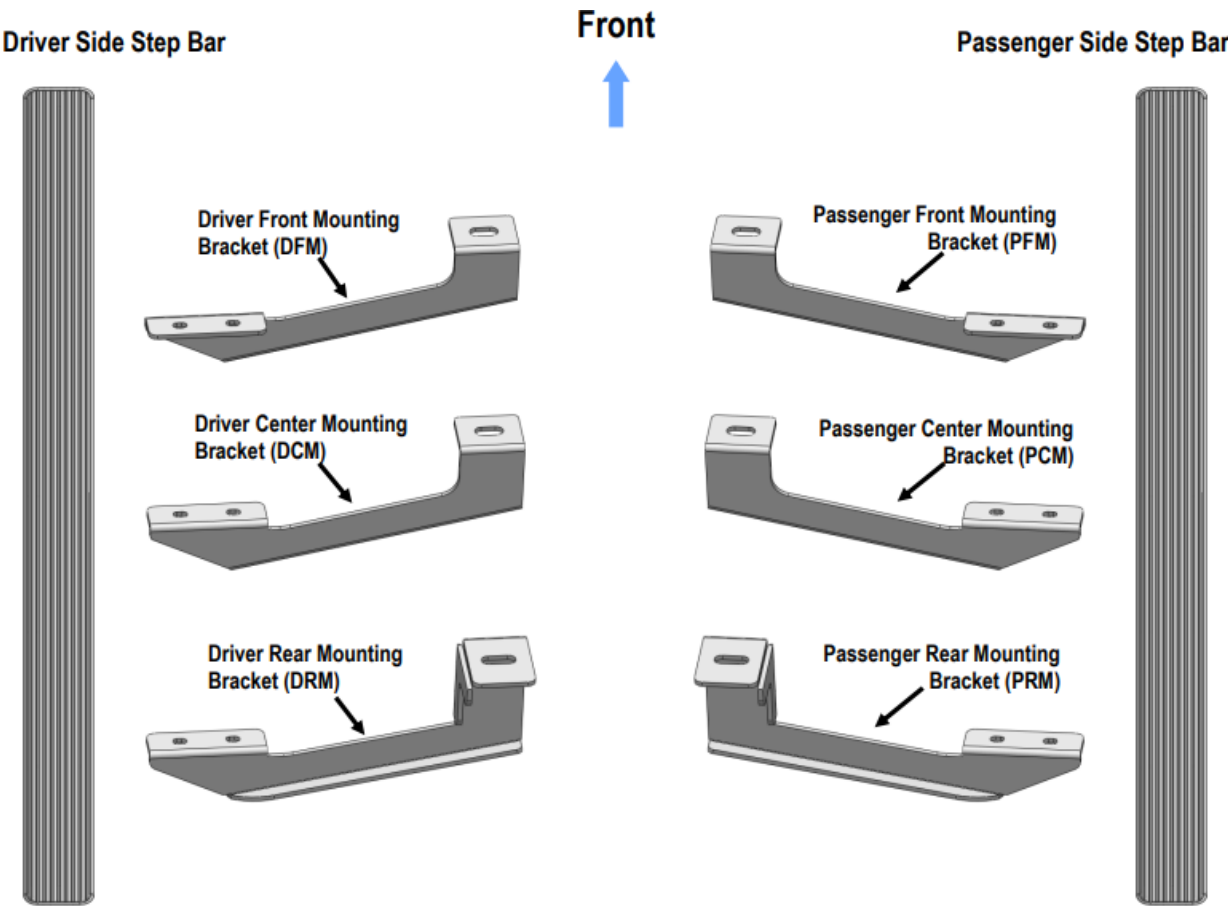


**Hardware Package A For Bracket Installation**


Hardware Package A (For Bracket Installation)					
Item	QTY	Description	Item	QTY	Description
1#	6	M12X1.75-120mm Hex Bolts	3#	6	M12 Lock Washers
2#	6	M12 Flat Washers			



1 #




2 #




3 #


Hardware Package B (For Stainless Steel Step Bar Installation)					
Item	QTY	Description	Item	QTY	Description
1#	12	M8X1.25-35mm Carriage Bolts	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Large Flat Washers	4#	6	Sliders (Packed with Step Bars)

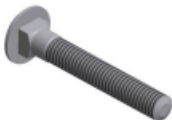


1 #



2 #



3 #



4 #

## ASSEMBLY INSTALLATION

### STEP 1

Start installation from the passenger side of the vehicle. Re-move the body mount bolts from body mounts. Select the Passenger Front Mounting Bracket (PFM), Passenger Center Mounting Bracket (PCM) and Passenger Rear Mounting Bracket (PRM). Bolt the (3) mounting brackets to the vehicle with (3) M12X1.75-120mm Hex Bolts, (3) M12 Lock Washers and (3) M12 Flat Washers (Fig 1). Do not fully tighten hardware at this time.

### STEP 2




Once all (3) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 2 & 3)

1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (2) sliders to the step bar.
5. Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (6) M8 Large Flat Washers and (6) M8 Nylon Lock Nuts and (3) Sliders, (Fig 3). Do not fully tighten hardware at this time.

Note: The Sliders are packed with the Step Bars.

Level and adjust the Step Bar and fully tighten all hardware.

Repeat Steps 1-2 for the other side Step Bar installation. The installation is completed!!!

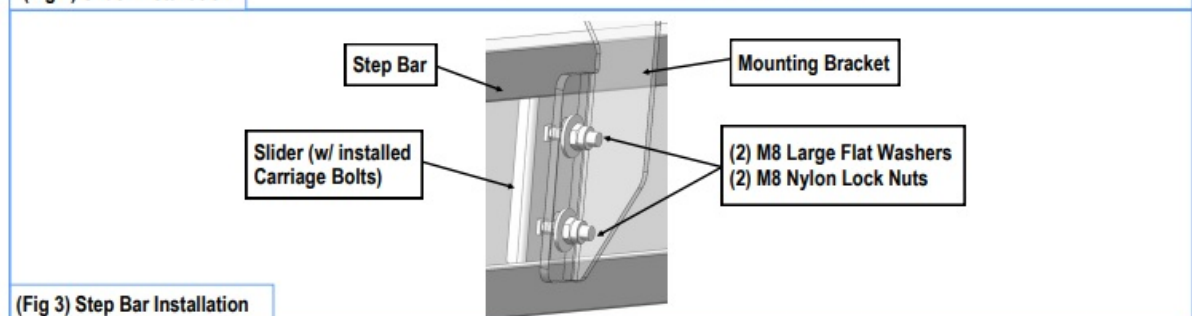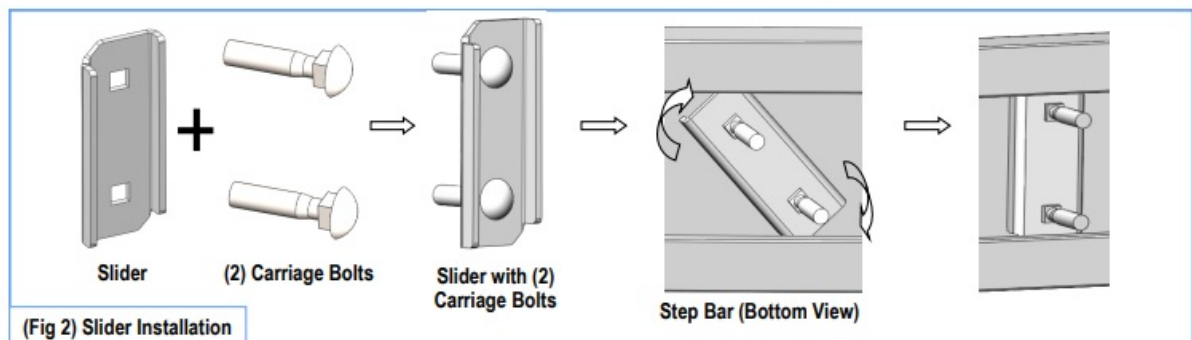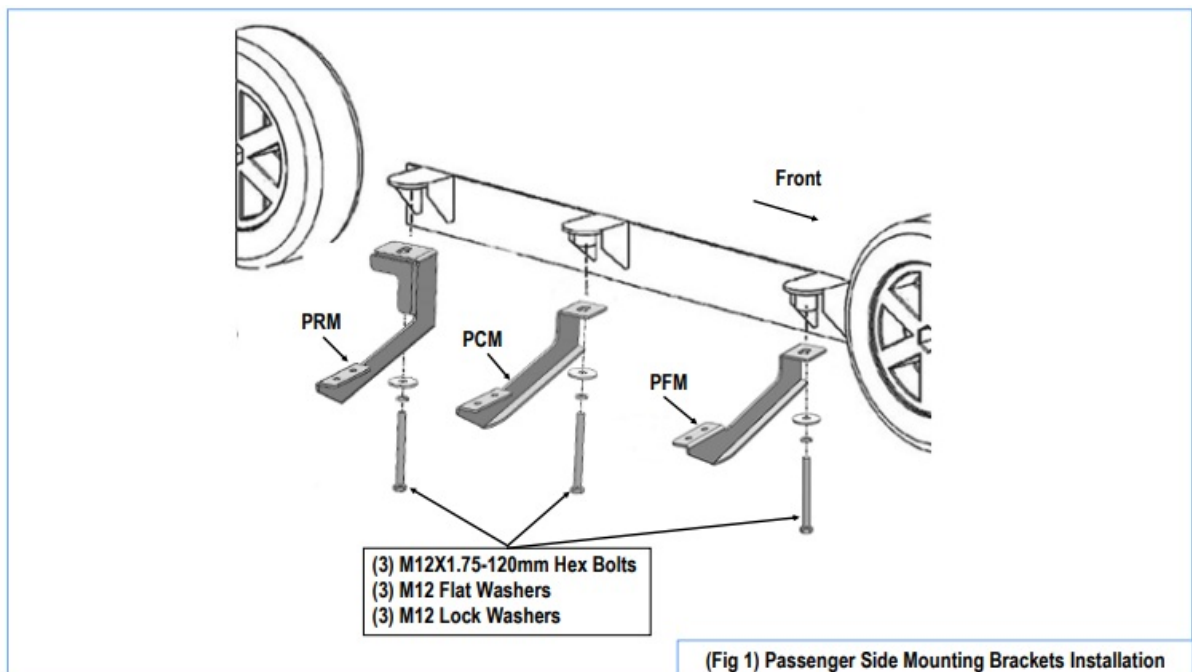

Scan for Installation Video




### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.  
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

Documents / Resources

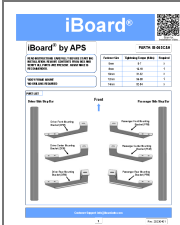

**[iBoard IB-065C&H Running Board Side Step Bars](#)** [pdf] Installation Guide  
IB-065C H Running Board Side Step Bars, IB-065C H, Running Board Side Step Bars, Board Si  
de Step Bars, Side Step Bars, Step Bars

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.