



iBoard IB-071C Running Boards Installation Guide

[Home](#) » [iBoard](#) » iBoard IB-071C Running Boards Installation Guide 

iBoard

iBoard® by APS
PART#: IB-071C&H

Contents

- [1 IB-071C Running Boards](#)
- [2 PART LIST](#)
- [3 Mounting Bracket List](#)
- [4 Hardware Package A \(For Bracket Installation\)](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

IB-071C Running Boards

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT

*NO DRILLING REQUIRED/CUTTING MAYBE REQUIRED


Scan for Installation Video



<https://www.iboardauto.com/iboard-videos/>

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

PART LIST

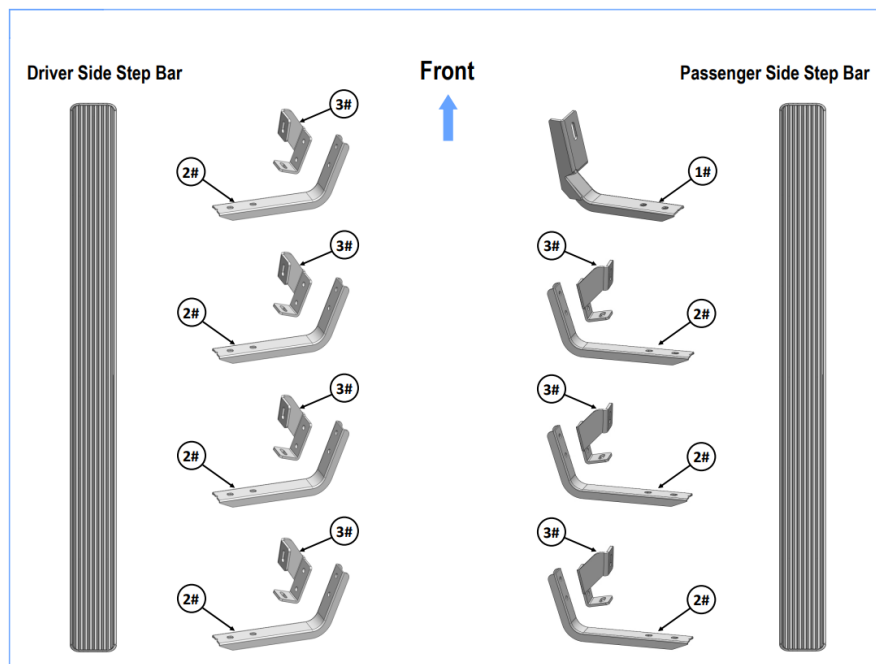

Customer Support: info@iboardauto.com
Rev. 20230201

Mounting Bracket List

Item	QTY	Description
1#	1	Passenger Front Mounting Bracket
2#	7	Mounting Brackets
3#	7	Mounting Plates


Hardware Package A (For Bracket Installation)

Item	QTY	Description
1#	1	SQ Spacer
2#	14	M8X1.25-20mm Inner Hex Bolts
3#	14	M8X1.25 Hex Flange Nuts
4#	1	M8X1.25-35mm Hex Bolt
5#	1	M8X1.25 Nylon Lock Nut
6#	16	M8X1.25-25mm Hex Bolts
7#	17	M8 Large Flat Washers
8#	17	M8 Lock Washers
9#	15	M8 Clip Nuts




Hardware Package B (For Stainless Steel Step Bar Installation)

Item	QTY	Description
1#	16	M8X1.25-35mm Carriage Bolts
2#	16	M8 Large Flat Washers
3#	16	M8 Nylon Lock Nuts
4#	8	Sliders (Packed with Step Bars)

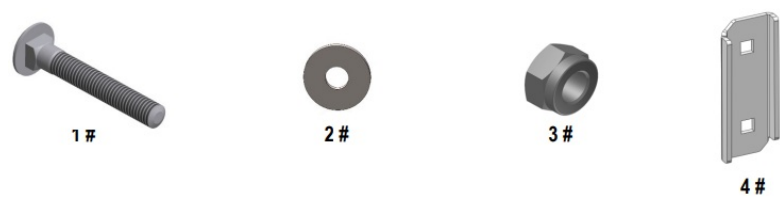

STEP 1

Start the installation under the driver side of the vehicle. Locate the 4 tabs along the bottom edge of the body, (pinch weld). Mounting Brackets will bolt to the 1st, 2nd, 3rd, and 4th mounting tabs, (Fig 1). Directly above each tab is a top mounting location on the side of the body panel. NOTE: It will be helpful for identifying the mounting holes to hold up a mounting bracket in place.

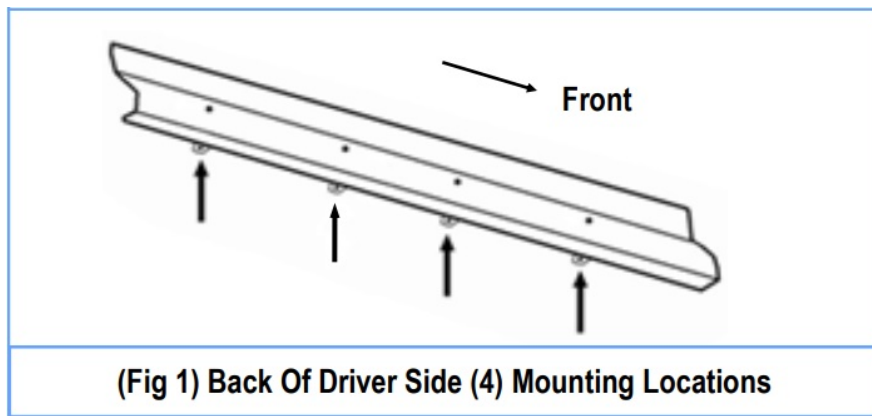

STEP 2

Determine the correct procedure for your model/year and each Bracket location.

Bottom mounting location on the edge of the pinch weld.

*Flat tab on pinch weld with factory installed weld nut:

Thread M8 Hex Bolt into weld nut from the backside-down to clear paint from threads, (Fig 2).

*Flat tab on pinch weld with hole:

Select (1) M8 Clip Nut. Slide the M8 Clip Nut over the tab with the nut facing up behind the tab, (Figs 3—5). Line up threaded nut with hole in tab. Repeat for each mounting location.


Top mounting location on the back side of the body panel.

*Models with factory installed threaded insert in body panel:


Thread M8 Hex Bolt into threaded insert to clear paint as required, (Fig 2 & 3).

*Large and small hole in side of body panel:


Remove the rubber plug from the larger hole, (Fig 4). Select (1) M8 Clip Nut. Slide the M8 Clip Nut into the larger hole. Line up the threaded nut with the smaller hole, (Fig 5).

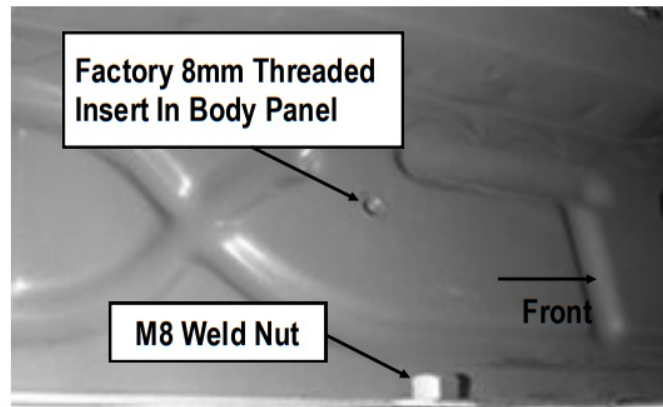


(Fig 2) Driver Front Mounting Bracket Location

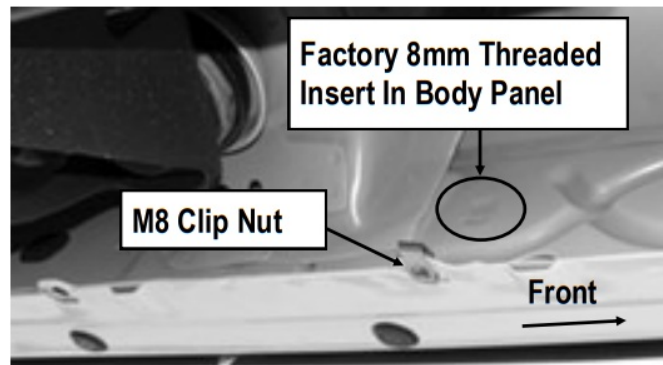

(Fig 3) Driver Center Mounting Bracket Location

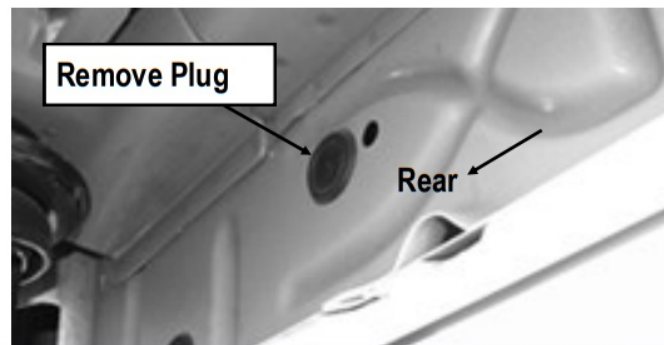

(Fig 4) Driver Rear Center Mounting Bracket Location

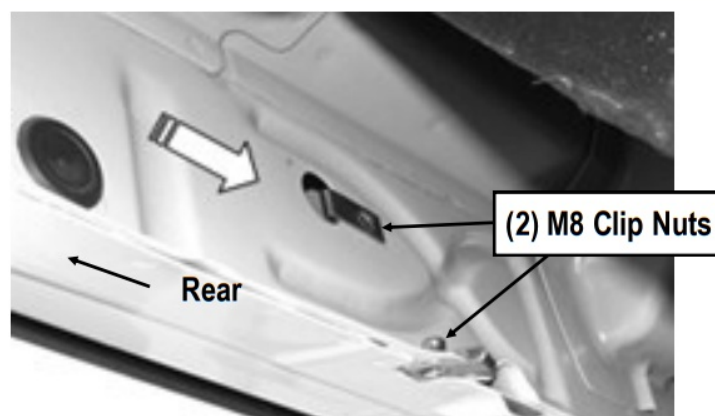


(Fig 5) Driver Rear Mounting Bracket Location


STEP 3

Assemble Driver Front Mounting Bracket and Driver Front Mounting Plate as shown (Fig 6). And then Bolt the

Assembled Mounting Bracket to the M8 Clip Nuts and/or the factory threaded holes on Driver Side Front Mounting Location with (2) M8 x1.25-25mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (Fig 7). Snug but do not fully tighten the hardware.

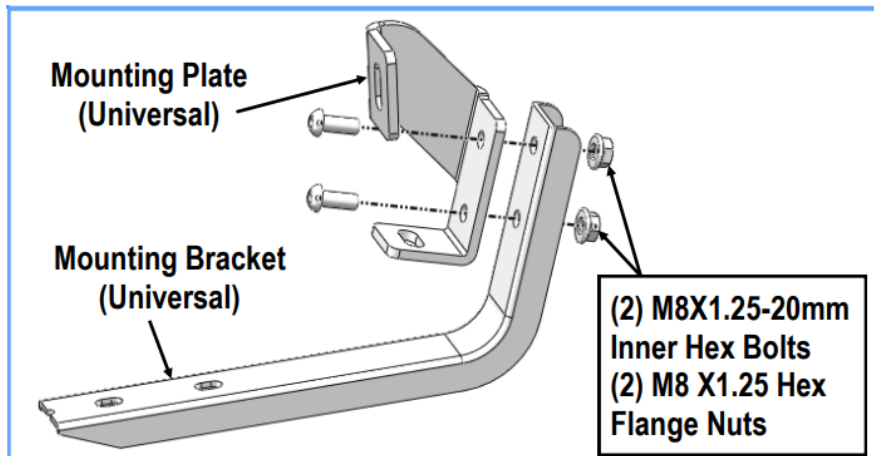

(Fig 6) Driver Front Mounting Bracket Assembly

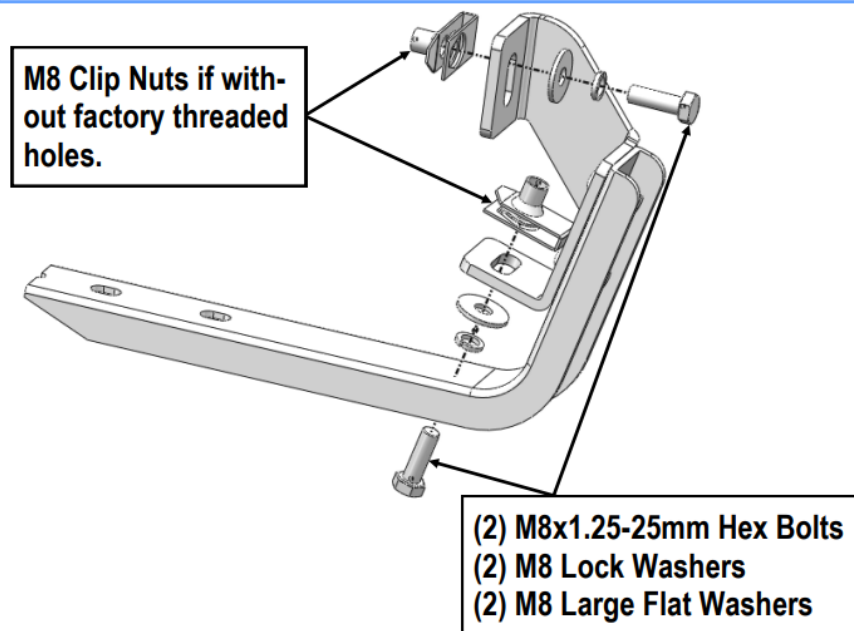

(Fig 7) Assembled Driver Front Bracket Installed

STEP 4

Repeat Steps 1—3 to install the (3) remaining driver side Brackets.

STEP 5

Once all (4) Driver mounting brackets are installed, then proceed to the Step Bar installation. (Figs 8 & 9)

(1) Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;



(2) Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.

(3) Slide the Slider (with carriage bolts) to the Step Bar.

(4) Repeat to install the other (3) sliders to the step bar.

(5) Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (8) M8 Large Flat Washers and (8) M8 Nylon Lock Nuts and (4) Sliders, (Fig 9). Do not fully tighten hardware at this time.

Note: The Sliders are packed with the Step Bars. Level and adjust the Step Bar and fully tighten all hardware.

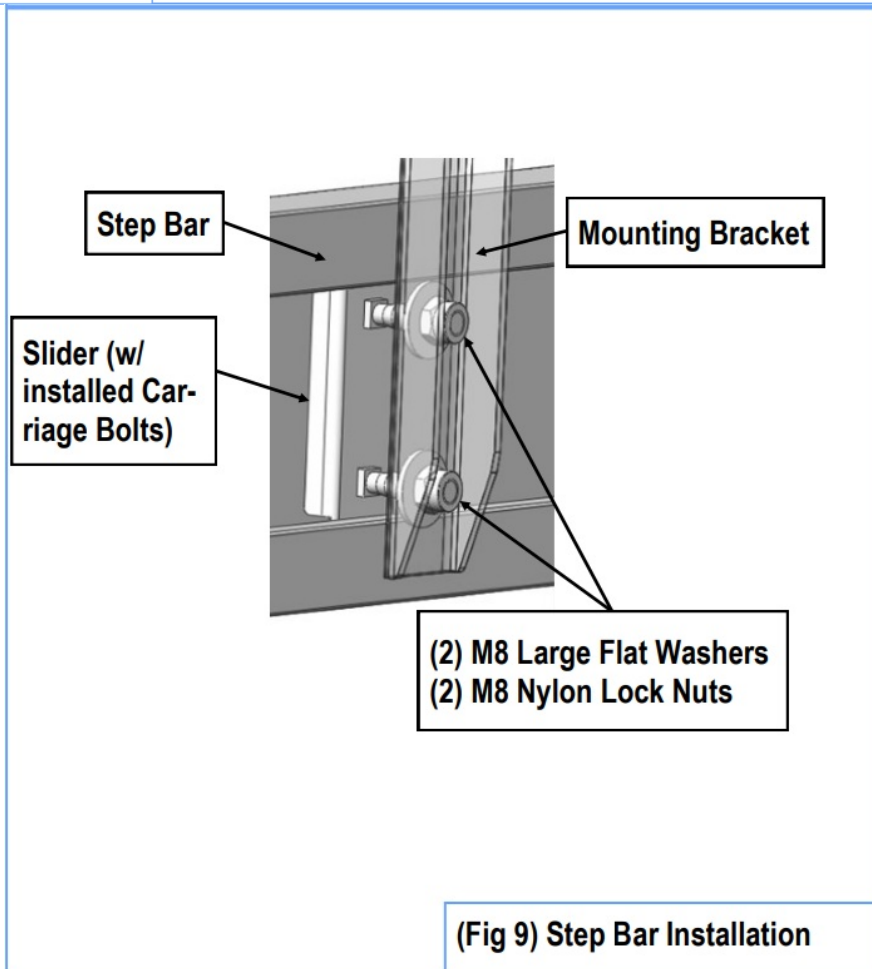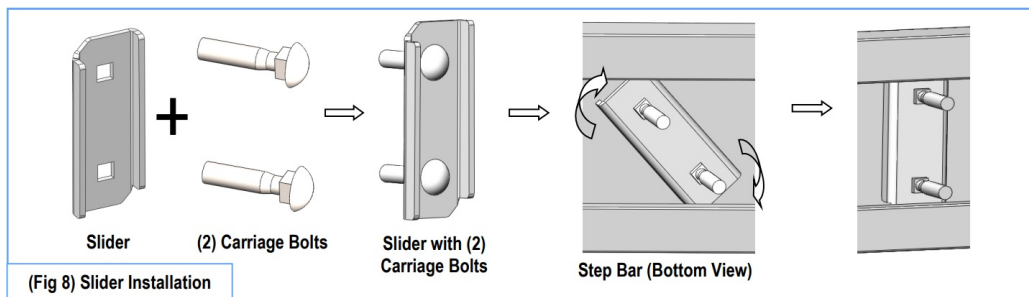

STEP 6

Move to the passenger side of the vehicle. On the passenger side, determine if the vehicle is equipped with a plastic diesel exhaust fluid (DEF) tank, (Fig 10 & 11).

Models without DEF tank, skip to Step 7.

Models with DEF tank: The tank sits close to the side of the body. With specialized tools, the Passenger Front Mounting Bracket can be installed but room is limited. It may be easier to drop the tank down to access the inner side of the body panel for bracket installation. Tank will not need to be removed, only dropped down for access to mounting location.

IMPORTANT: If tank is full, it will be very heavy and assistance is highly recommended to avoid injury or damage to the vehicle or the tank. It is recommended that installation is performed when the DEF tank is low on fluid before dropping the tank.

a. For 07-16 Models: with plastic lower tray under the tank, remove the (3) hex bolts attaching the tray to the frame, (Fig 10), and remove the tray. For 2017-Up 2500/3500 models: Remove the (4) hex bolts attaching the plastic cover to DEF tank, (Fig 11A) and remove the plastic cover, (Fig 11B).

b. Release the tank filler hose. Release the plug for the sending unit on the top of the tank.


c. Support the tank with a floor jack. Place a smooth flat surface, (wooden block for example), between the floor jack and the tank to avoid damaging the plastic tank. Do not push up on the tank; only support the weight of the tank with the jack.

d. Remove the (2) bolts securing the tank straps to the vehicle, (Fig 12). Tilt the straps to release from the brackets. Slowly lower the tank until the top of the tank is almost visible. Use blocks or stands to support the tank while installing the front Brackets.


e. Proceed to Step 7.



(Fig 10) 07-16 Passenger Side Front With DEF Tank Cover

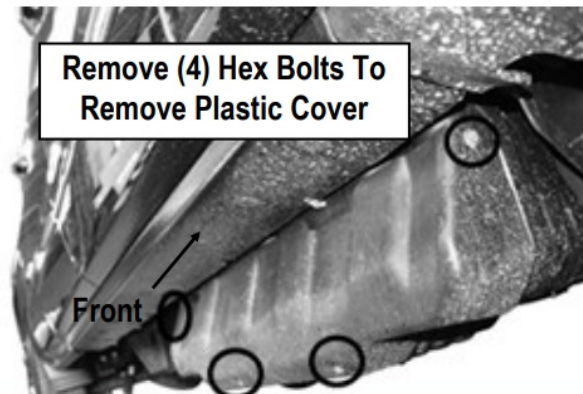

(Fig 11A) 2017-Up Passenger Side Pictured With DEF Plastic Tank Cover.

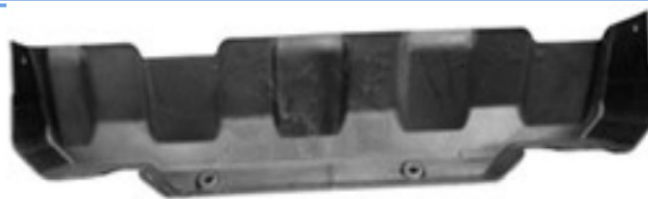

(Fig 11B) 2017 Passenger Side DEF Cover




(Fig 12) 07-16 Passenger Side DEF Tank And Cover


STEP 7

Locate the first tab on the edge of the pinch weld, attach the Passenger Front Mounting Bracket to the pinch weld and top body panel (Fig 13 & 14):

- Models with flat tab and hole: see Fig 13. Leave loose at this time.
- Models with weld-nut: see Fig14. Leave loose at this time.

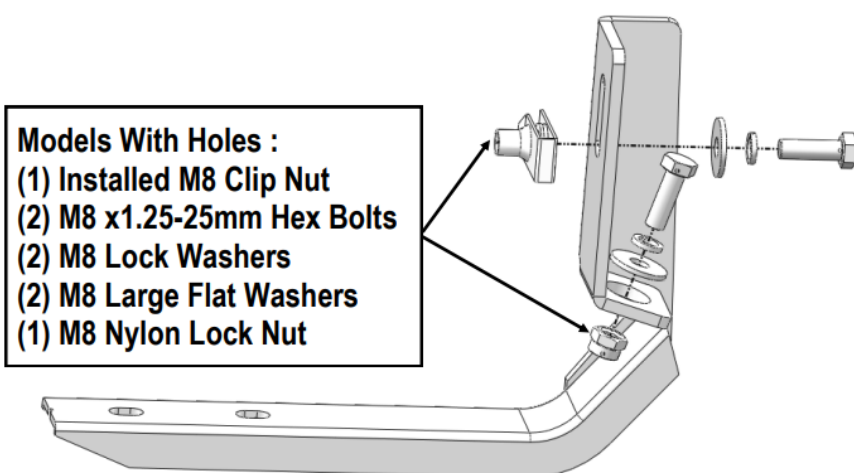

(Fig 13) Passenger Front Mounting Bracket Installation

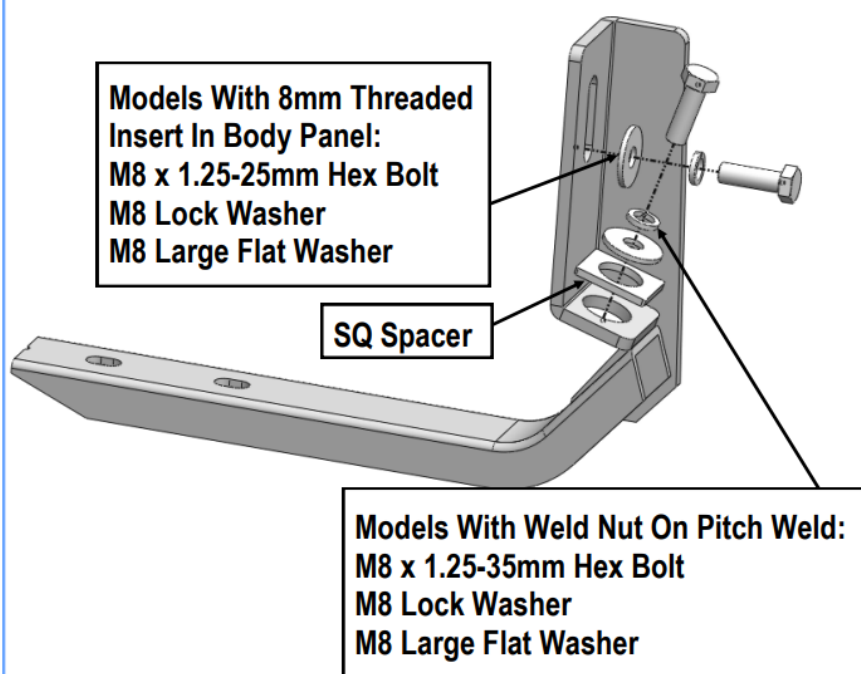


(Fig 14) Passenger Front Mounting Bracket Installation (Weld Nut If Equipped-Also See Fig 2)


STEP 8

Repeat Steps 2—4 for the (3) remaining passenger side mounting brackets installations.

2017-up 2500/3500 DEF tank models: Locate the 2nd tab bracket location along the bottom edge of the body, (pinch weld), (Fig 15). Hold the DEF cover in place and mark the 2nd Bracket location onto the cover, (Fig 16). Use a sharp knife or hacksaw blade to carefully cut a slot in the plastic cover to clear the 2nd Bracket, (Fig 17). Remove as little plastic as possible.

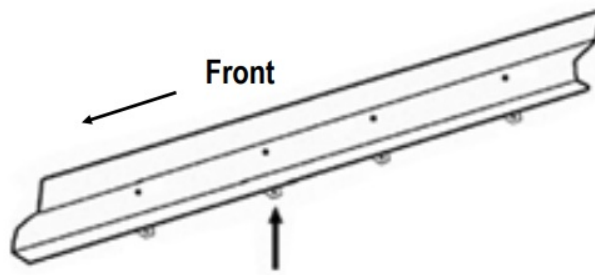

(Fig 15) Passenger 2nd Mounting Bracket Location From Back Of Body Panel

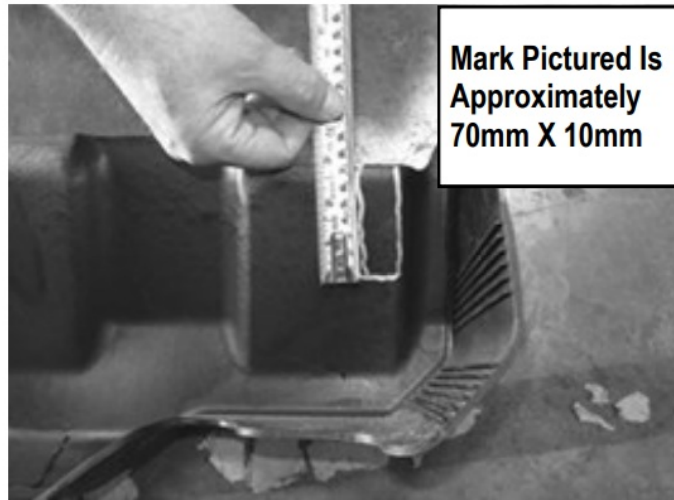

(Fig 16) 2017-Up Passenger Side DEF Cover Marked For Trimming



(Fig 17) 17-Up Passenger Side DEF Cut For Example Only

STEP 9

Repeat Step 5 to install the passenger side Step Bar.

STEP 10

Once the Step Bars are installed and all hardware fully tightened, reinstall the DEF tank and cover, if equipped, as described in Step 6.


The installation is completed!!!

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

Documents / Resources

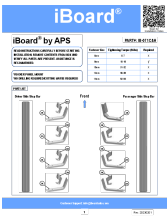

[iBoard IB-071C Running Boards](#) [pdf] Installation Guide
IB-071C Running Boards, IB-071C, Running Boards, Boards

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.