

iBoard IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps



iBoard IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps Owner's Manual

[Home](#) » [iBoard](#) » iBoard IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps Owner's Manual 

Contents

- [1 iBoard IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PART LIST](#)
- [6 Mounting Bracket List](#)
- [7 Hardware Package](#)
- [8 Installation Instructions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

iBoard[®]

iBoard IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps



Product Information

Specifications

- Product Name: Rocker Panel Mount
- Part Number: IB-234C&H
- No drilling required

Product Usage Instructions

Step 1: Passenger Side Front Installation

- Start installation from the passenger side front of the vehicle.
- Locate the rear factory running board mounting location along the inner side of the body.

Step 2: Attach Passenger Front Mounting Bracket

- Select (1) Passenger Front Mounting Bracket.
- Attach it to the factory studs using M8 Flat Washers and M8 Nylon Lock Nuts. Do not fully tighten the hardware at this time.

Step 3: Install Plastic Washers

- Slide M8 Plastic Washers over each of the factory mounting studs in the body panel to prevent corrosion.
- Do not install the Brackets without the Plastic Washers.

Step 4: Install Mounting Brackets

- Move to the passenger side centre & rear of the vehicle.
- Select a Mounting Bracket and repeat Steps 1-3 to install the passenger side Center & Rear Mounting Brackets.

Step 5: Install Step Bars

- Install the Sliders packed with the Step Bars. Level and adjust the Step Bar and fully tighten all hardware. Repeat Steps 1-5 for the other side Step Bar installation. The installation is completed!

Important Notes

- Periodic inspections are recommended to ensure all hardware is secure and tight.
- Use mild soap/non-abrasive products for cleaning to protect your bars/boards.

FAQ


- **Q:** What should I do if I encounter missing parts during installation?
- **A:** Contact customer support at info@iboardauto.com for assistance with missing parts.
- **Q:** How do I ensure proper tightening torque for different fastener sizes?
- **A:** Refer to the tightening torque specifications provided in the manual for different fastener sizes.

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM THE BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

- ROCKER PANEL MOUNT
- NO DRILLING REQUIRED

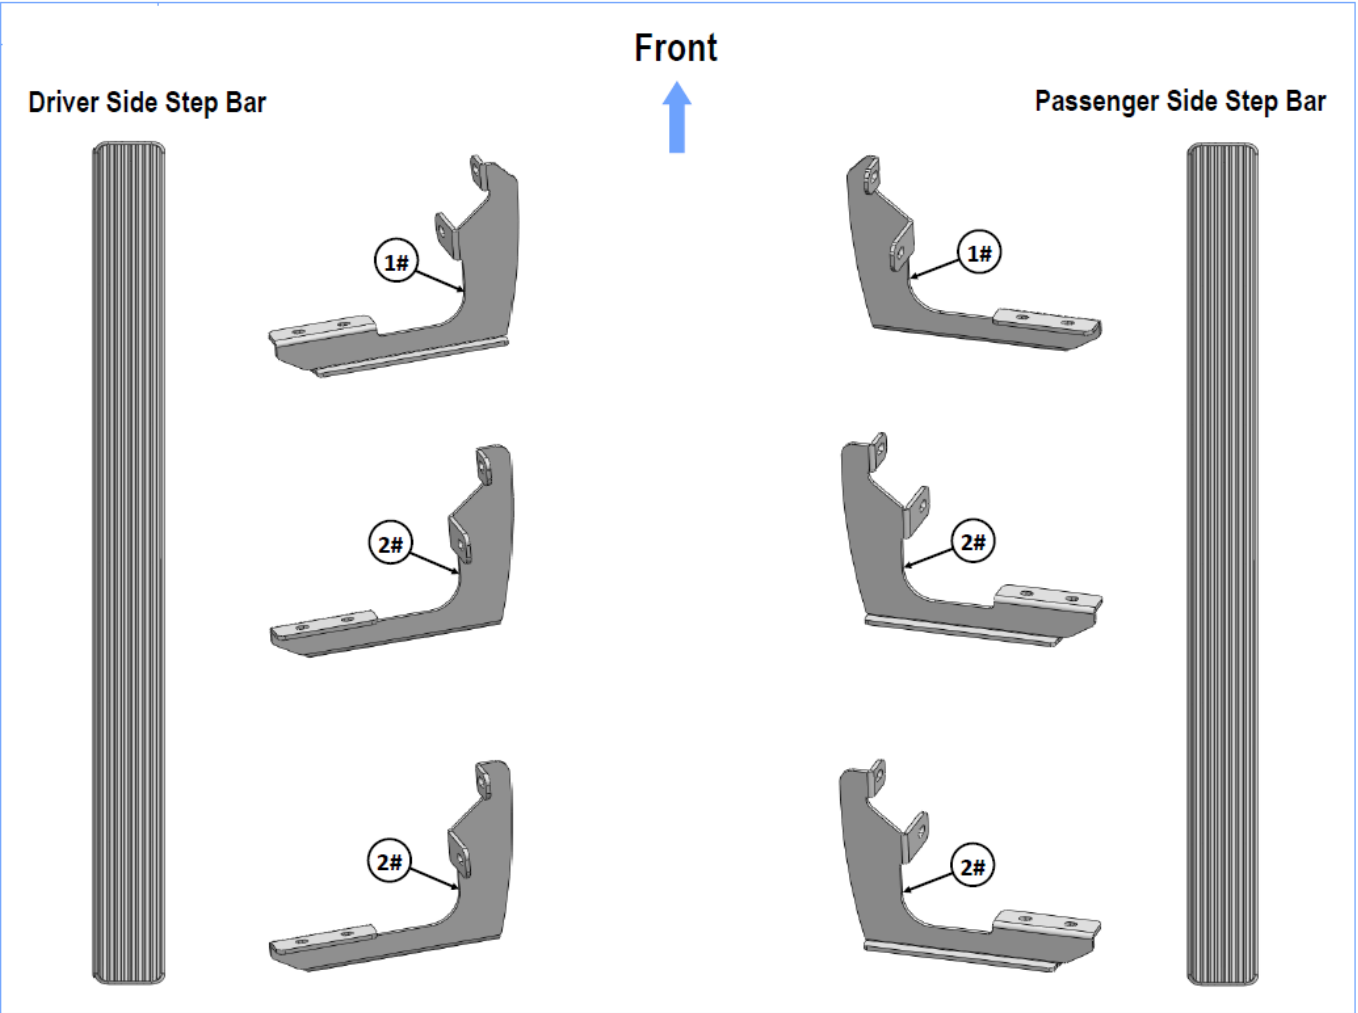


PART LIST







Mounting Bracket List

Item	Qty	Description	Item	Qty	Description
1#	2	Driver & Passenger Front Mounting Brackets	2#	4	Mounting Brackets

Hardware Package


Hardware Package A (For Bracket Installation)					
Item	Qty	Description	Item	Qty	Description
1#	12	M8 Plastic Washers	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Flat Washers			
<div>    </div> <div> <div>1#</div> <div>2#</div> <div>3#</div> </div> <div></div>					

Hardware Package B (For Stainless Steel Step Bar Installation)					
Item	Qty	Description	Item	Qty	Description
1#	12	M8X1.25-35mm Carriage Bolts	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Large Flat Washers	4#	6	Sliders (Packed with Step Bars)
<div>     </div> <div> <div>1 #</div> <div>2 #</div> <div>3 #</div> <div>4 #</div> </div>					

Installation Instructions

STEP 1


- Start installation from the passenger side front of the vehicle. Locate the rear factory running board mounting location along the inner side of the body, (Fig 1).

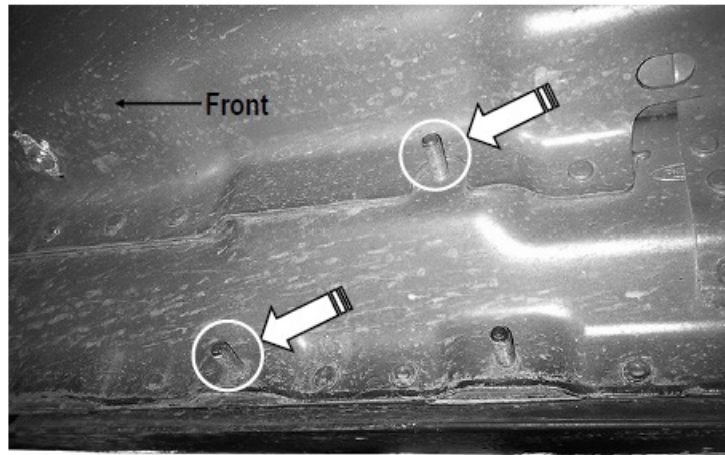

(Fig 1) Passenger Side Front Mounting Location

STEP 2


- Slide (1) M8 Plastic Washer over each of the (2) factory mounting studs in the body panel, (Fig 2).
- **IMPORTANT:** The M8 Plastic Washers are designed to prevent corrosion between the aluminium body panel and the steel Mounting Brackets.
- **Note:** Do not install the Brackets without the Plastic Washers.

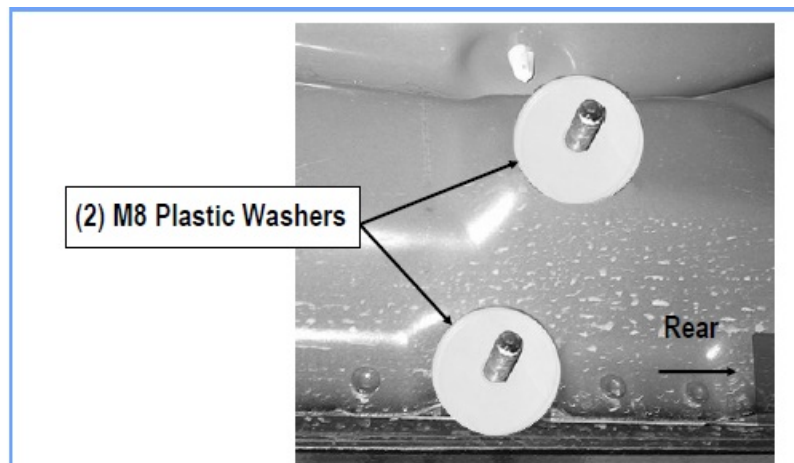

(Fig 2) Thread M8 Plastic Washers Onto (2) Mounting Studs

STEP 3

- Select (1) Passenger Front Mounting Bracket. Attach the Passenger Front Mounting Bracket to the (2) factory studs with (2) M8 Flat Washers and (2) M8 Nylon Lock Nuts, (Fig 3). Do not fully tighten the hardware at this time.

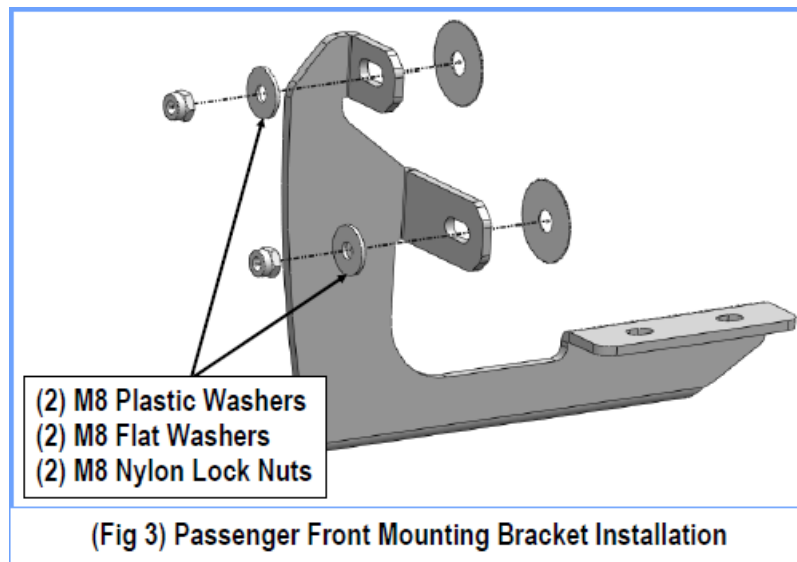

STEP 4

- Move to the passenger side centre & rear of the vehicle. Select (1) Mounting Bracket. NOTE: All (4) Mounting Brackets will fit left or right side. Repeat Steps 1—3 to install the passenger side Center & Rear Mounting Brackets.

STEP 5

Once all (3) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 4 & 5)

1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (2) sliders to the step bar.
5. Attach the Step Bar (with the Sliders) to the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (6) M8 Large Flat Washers (6) M8 Nylon Lock Nuts and (3)

Sliders, (Fig 5). Do not fully tighten the hardware at this time.


Note: The Sliders are packed with the Step Bars.

Level and adjust the Step Bar and fully tighten all hardware.

Repeat Steps 1-5 for the other side Step Bar installation. The installation is completed!

Attention

- Do periodic inspections of the installation to make sure that all hardware is secure and tight.
- In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

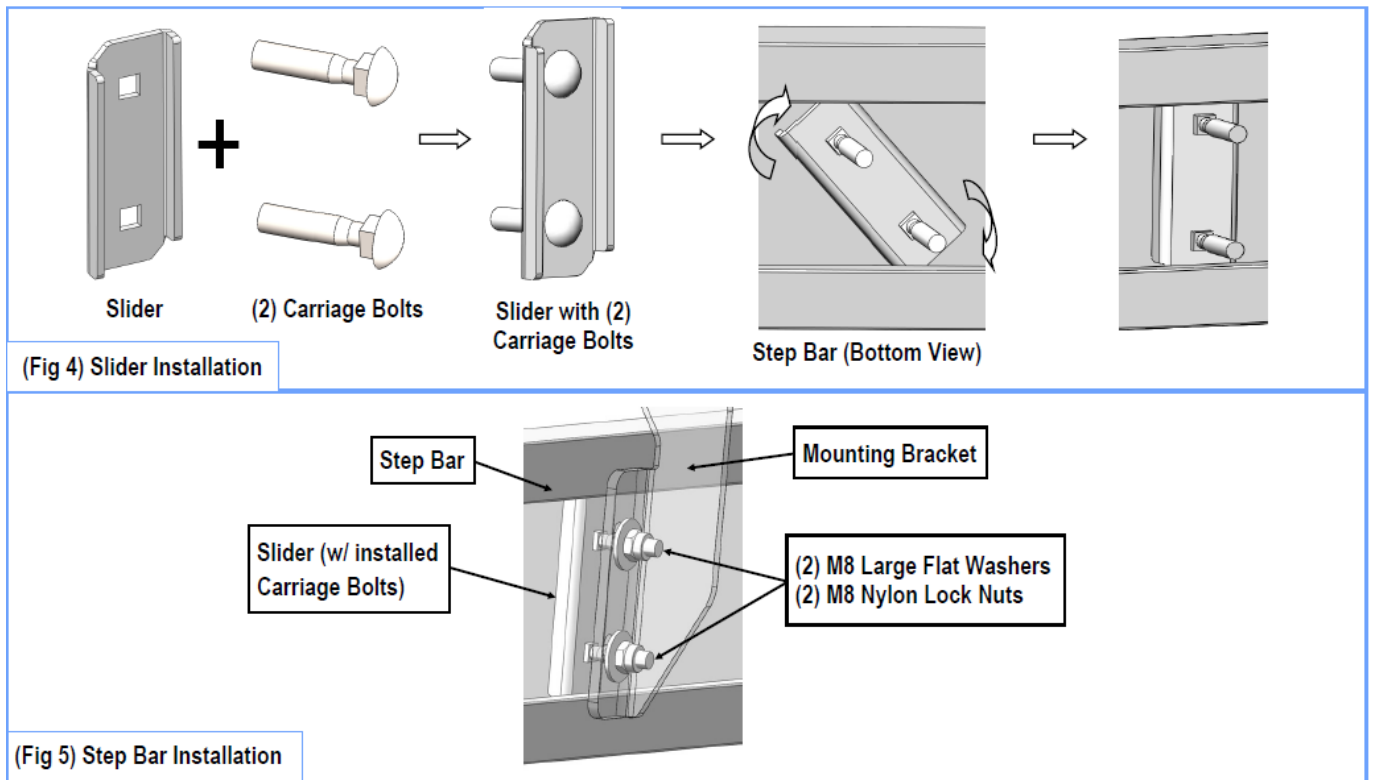

Customer Support: info@iboardauto.com.



Documents / Resources

iBoard®
 iBoard® by APS
 IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps

[iBoard IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps](#) [pdf] Owner's Manual
 IB-234C and H 6 Inches Running Boards Nerf Bars Side Steps, IB-234C and H, 6 Inches Runni
 ng Boards Nerf Bars Side Steps, Running Boards Nerf Bars Side Steps, Boards Nerf Bars Side
 Steps, Nerf Bars Side Steps, Bars Side Steps, Side Steps, Steps

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.