

iBoard®
iBoard IB-361C
Running Boards
Nerf Bars Side



iBoard IB-361C Running Boards Nerf Bars Side Installation Guide

[Home](#) » [iBoard](#) » iBoard IB-361C Running Boards Nerf Bars Side Installation Guide 

Contents

- [1 iBoard IB-361C Running Boards Nerf Bars Side](#)
- [2 Product Information](#)
- [3 FAQ](#)
- [4 PART LIST](#)
- [5 Hardware Packages](#)
- [6 Installation Instruction](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

iBoard®

iBoard IB-361C Running Boards Nerf Bars Side



Product Information

Specifications

- Part Number: IB-361C&H
- Fastener Sizes: 6mm, 8mm, 10mm, 12mm, 14mm
- Tightening Torque (ft-lbs): 6-7, 16-18, 31-32, 56-58, 92-94

FAQ

Q: Are there any specific tools required for installation?

A: No drilling is required for installation. Basic tools like a screwdriver and wrenches are recommended for assembly.

Q: What should I do if any parts are missing from the package?


A: Before starting installation, ensure all parts listed in the manual are present. If any parts are missing, contact customer support at info@iboardauto.com for assistance.

READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

- * ROCKER PANEL MOUNT
- * NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	√
12mm	56-58	X
14mm	92-94	X

PART LIST

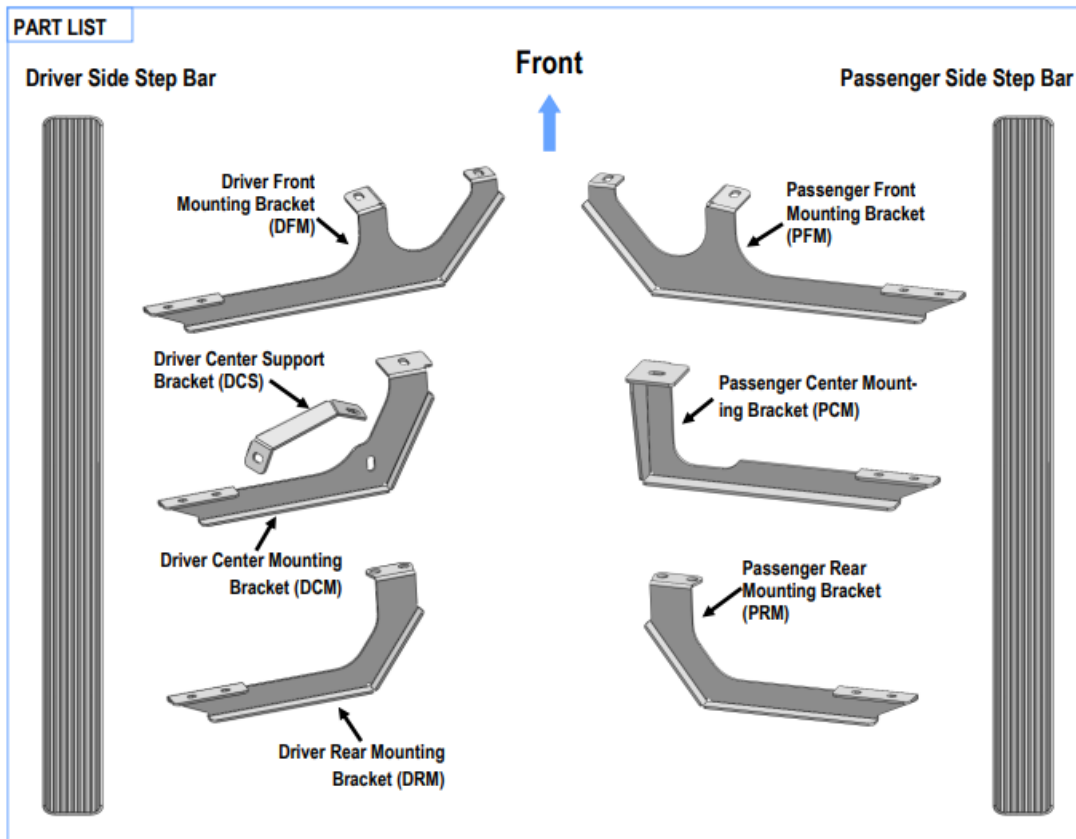

Hardware Packages

Hardware Package A (For Bracket Installation)					
Item	Qty	Description	Item	Qty	Description
1#	5	M10 L Bolt Plates	5#	9	M10 Flat Washers
2#	2	M10 T Bolt Plates	6#	8	M10 Lock Washers
3#	7	M10 Plastic Washers	7#	8	M10 Hex Nuts
4#	1	M10X1.5-30mm Hex Bolts			


1#



2#



3#


4#


5#


6#


7#


Hardware Package B (For Stainless Steel Step Bar Installation)					
Item	Qty	Description	Item	Qty	Description
1#	12	M8X1.25-35mm Carriage Bolts	3#	12	M8 Nylon Lock Nuts
2#	12	M8 Large Flat Washers	4#	6	Sliders (Packed with Step Bars)
					

Installation Instruction

STEP 1

Start installation from the passenger side front of the vehicle. Locate the factory holes at the bottom of the floor panel, (Fig 1). NOTE: The mounting locations may be covered by sealant or undercoating. Use a small screwdriver to poke through the sealant to uncover the hole.


IMPORTANT: Brackets must sit flat against sheet metal. If necessary, remove the sealant or undercoating covering the mounting locations on body panel before installing Brackets.

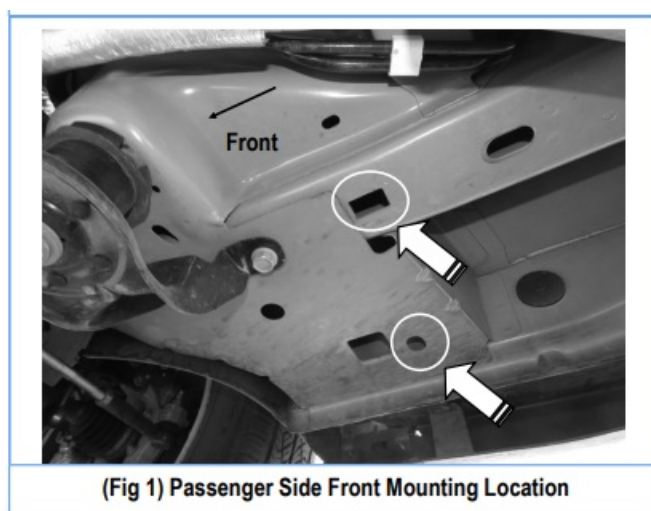

STEP 2



Select (2) M10 L Bolt Plates (2) M10 Plastic Washers. Partially thread the Plastic Washers onto the M10 L Bolt Plates. Insert the M10 L Bolt Plates with Plastic Washers into the front mounting holes, (Fig 2). Thread the Plastic Washer down tight against the floor panel. The Plastic Washer is designed to hold the Bolt Plate in place during Bracket installation.

NOTE: Hold the Passenger Front Mounting Bracket (PFM) up to the front mounting location to help determine the correct mounting holes.

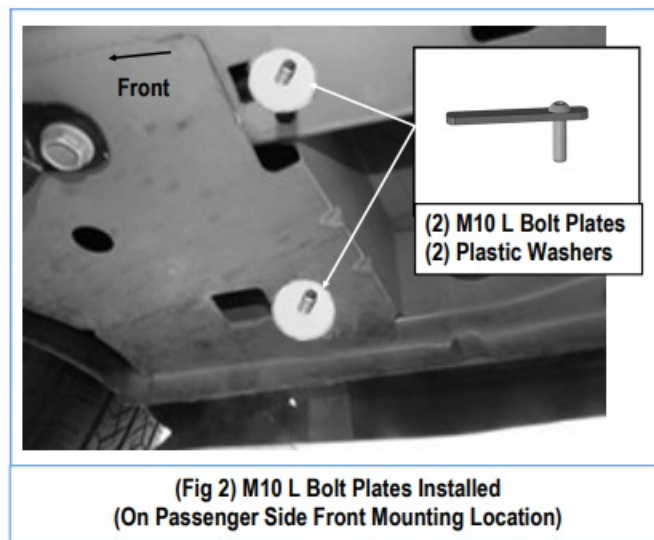

STEP 3


Attach the Passenger Front Mounting Bracket (PFM) to the in-stalled (2) M10 L Bolt Plates with (2) M10 Flat Washers, (2) M10 Lock Washers and (2) M10 Hex Nuts, (Fig 3 & 4). Do not fully tighten hardware at this time.

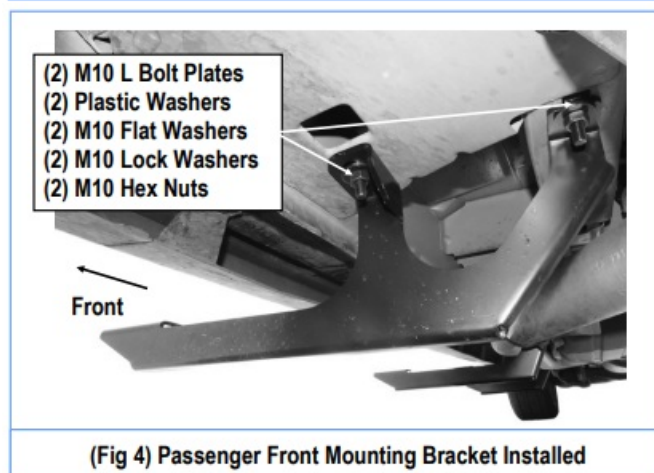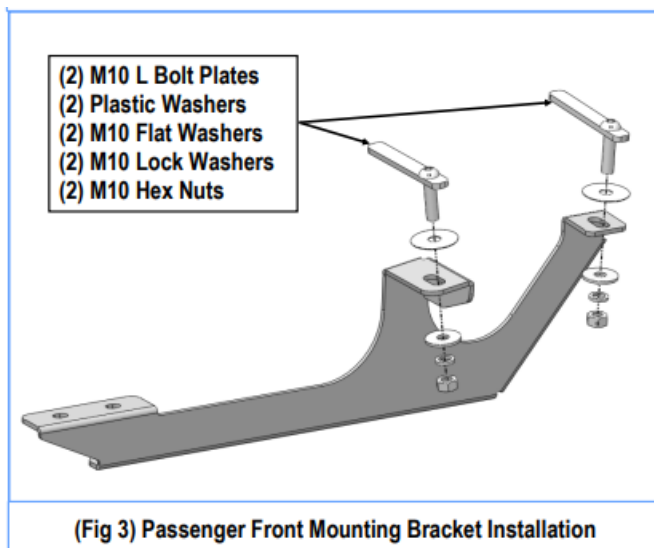


STEP 4

Move to the Passenger Side Center Mounting Location, (Fig 5). Locate the large slot above the passenger side exhaust pipe, (Fig 5).

Next, select (1) M10 T Bolt Plate and (1) Plastic Washer. Par-tially thread the Plastic Washer onto the M10 T Bolt Plate. In-sert the M10 T Bolt Plate with Plastic Washer into the front mounting hole, (Fig 6). Thread the Plastic Washer down tight against the floor panel. The Plastic Washer is designed to hold the M10 T Bolt Plate in place during Bracket installation.

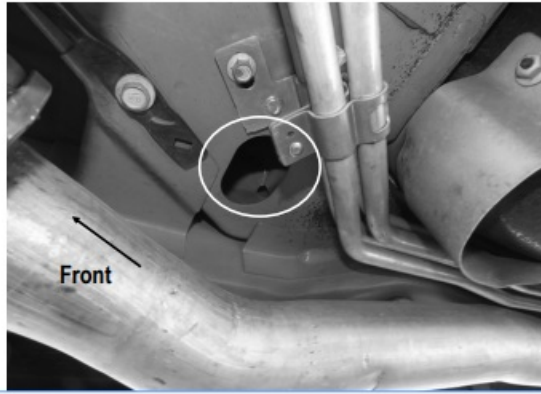


(Fig 5) Passenger Side Center Mounting Location

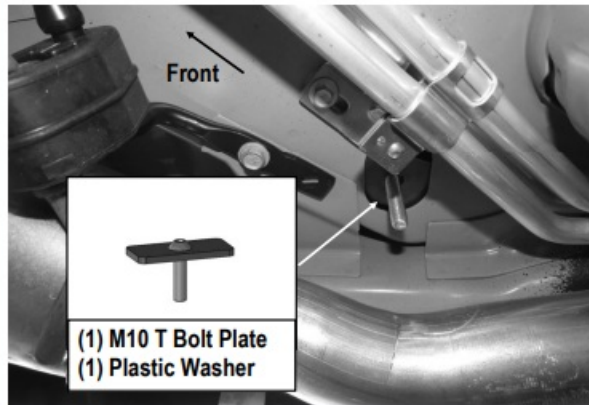

(Fig 6) M10 T Bolt Plate Installed
(On Passenger Side Center Mounting Location)

STEP 5


Attach the Passenger Center Mounting Bracket (PCM) to the installed M10 T Bolt Plate with (1) M10 Flat Washer, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 7). Do not fully tighten hardware at this time.

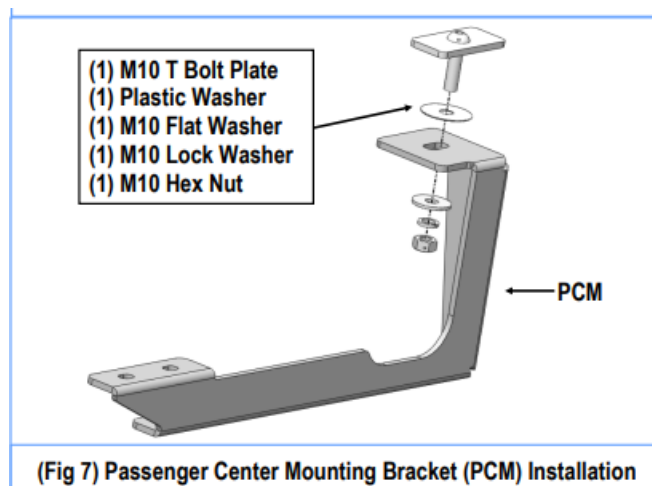

(Fig 7) Passenger Center Mounting Bracket (PCM) Installation


STEP 6

Move to the Passenger Side Rear Mounting Location, (Fig 8). Remove the (2) factory hex bolts (Fig 8).

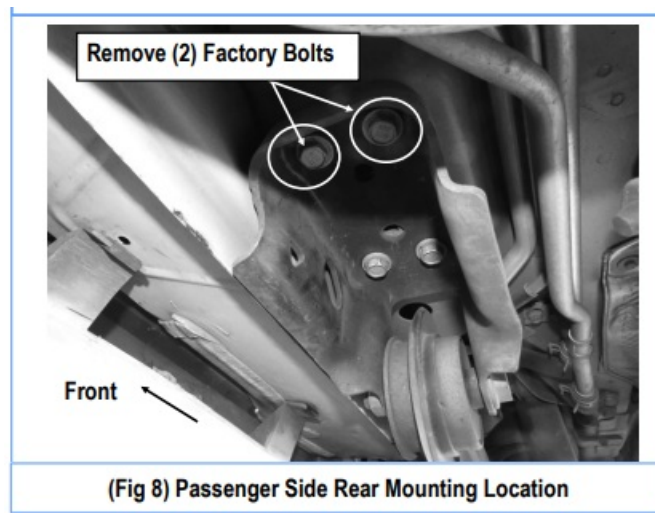

STEP 7

Reuse the (2) factory hex bolts to attach the Passenger Rear Mounting Bracket (PRM) to the rear mounting location, (Fig 9). Do not fully tighten hardware at this time.

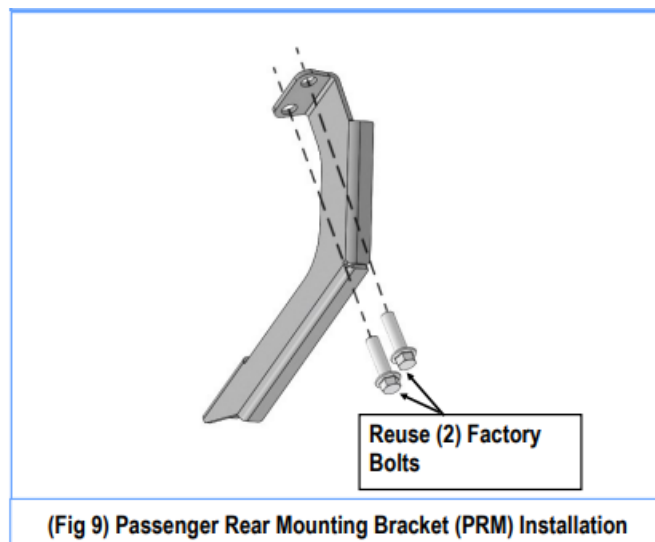

STEP 8

Once all (3) Passenger side mounting brackets are installed, then proceed to the Step Bar installation. (Figs 10 & 11)

1. Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
2. Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
3. Slide the Slider (with carriage bolts) to the Step Bar.
4. Repeat to install the other (2) sliders to the step bar.
5. Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (6) M8 Large Flat Washers and (6) M8 Nylon Lock Nuts and (3) Sliders, (Fig 11). Do not fully tighten hardware at this time.

Note: The Sliders are packed with the Step Bars.


Level and adjust the Step Bar and fully tighten all hardware.

STEP 9


Move to Driver side of the vehicle. Start installation from the driver side front of the vehicle. Repeat Steps 1-3 for

STEP 10


Move to the Driver Center Mounting Location, (Fig 12). Locate the large hole and remove the plastic plug coving the hole on the frame channel, (Fig 12). And then, Insert the remaining (1) M10 L Bolt Plate with (1) Plastic Washer and (1) M10 T Bolt Plate with (1) Plastic Washer into the holes, (Fig 12).

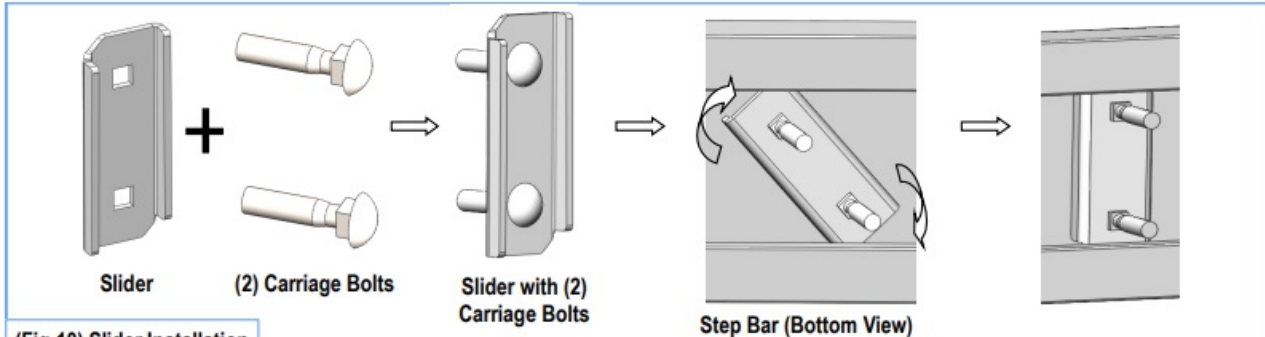


(Fig 10) Slider Installation

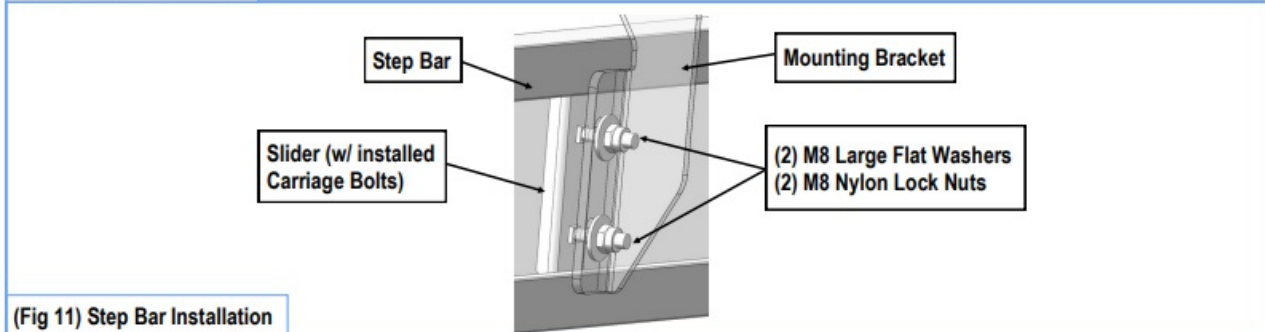

(Fig 11) Step Bar Installation

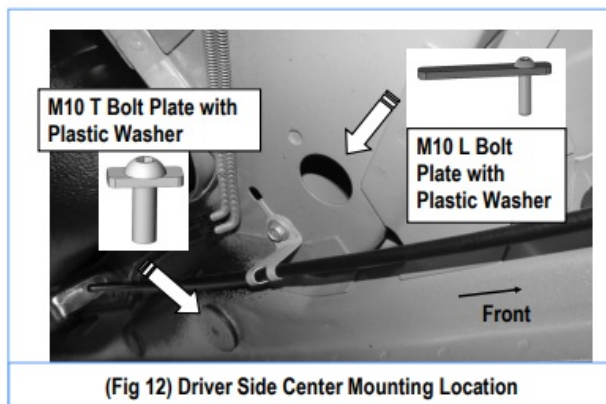

(Fig 12) Driver Side Center Mounting Location

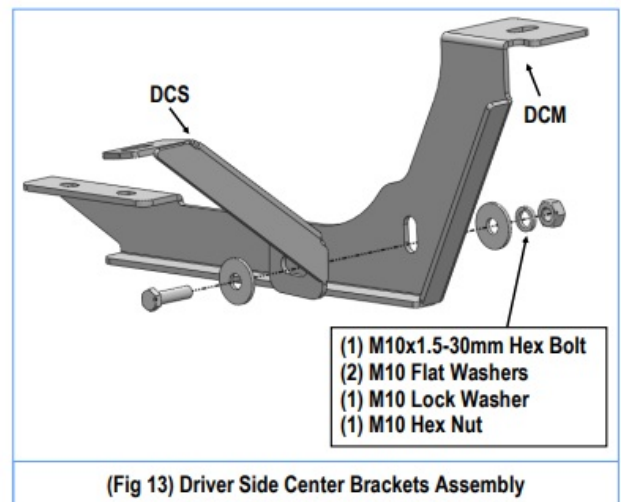


(Fig 13) Driver Side Center Brackets Assembly

STEP 11

Assemble Driver Center Mounting Bracket (DCM) and Driver Center Support Bracket (DCS) with (1) M10x1.5-30mm Hex Bolt, (2) M10 Flat Washers, (1) M10 Lock Washer and (1) M10 Hex Nut, (Fig 13). Do not fully tighten hardware at this time.

STEP 12

Next, repeat Steps 4-5 to install the assembled Driver Center Mounting Bracket (DCM) to the installed M10 L Bolt Plate, (Fig 14). Attach the Driver Center Support Bracket (DCS) to the installed M10 T Bolt Plate with (1) M10 Flat Washer, (1) M10 Lock Washer and (1) M10 x 1.5 Hex Nut, (Fig 14). Do not fully tighten hardware at this time.

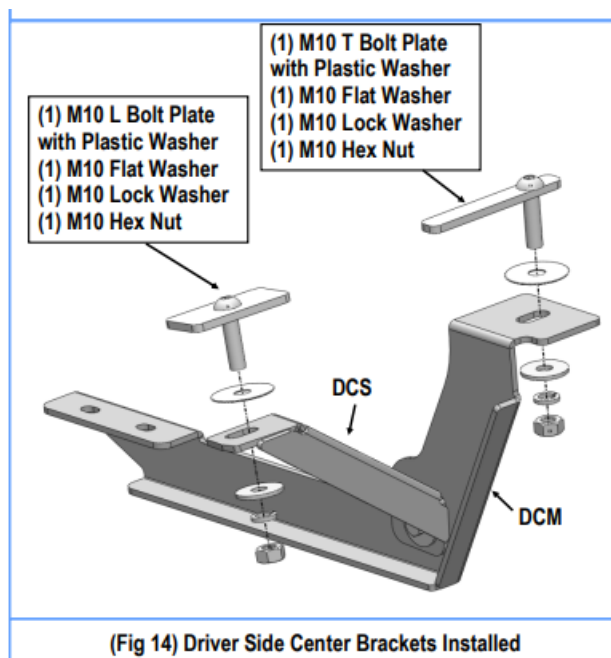

STEP 13

Repeat Steps 6-7 for Driver Rear Mounting Bracket (DRM) installation.

STEP 14

Repeat Steps 8-10 for driver side Step Bar installation. The installation is completed.

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.

Customer Support: info@iboardauto.com

Documents / Resources

	<p>iBoard IB-361C Running Boards Nerf Bars Side [pdf] Installation Guide IB-361C, IB-361H, IB-361C Running Boards Nerf Bars Side, IB-361C, Running Boards Nerf Bar s Side, Boards Nerf Bars Side, Nerf Bars Side, Bars Side</p>
--	--

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.