

iBoard IB-P082C Running Board 6 Black Installation Guide



Contents

- 1 iBoard®
 - 1.1 iBoard® by APS
 - 1.1.1 PART#: IB-P082C&J
 - 1.1.2 PART LIST
 - 1.1.2.1 STEP 1
 - 1.1.2.2 STEP 2
 - 1.1.2.3 STEP 3
 - 1.1.2.4 STEP 4
 - 1.1.2.5 STEP 5
- 2 Documents / Resources
 - 2.1 References
- 3 Related Posts

iBoard®

Scan for Installation Video

iBoard® by APS

PART#: IB-P082C&J


READ INSTRUCTIONS CAREFULLY BEFORE START ING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

- *BODY FRAME MOUNT
- *NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)	Required
6mm	6-7	X
8mm	16-18	√
10mm	31-32	X
12mm	56-58	X
14mm	92-94	X

PART LIST

Front

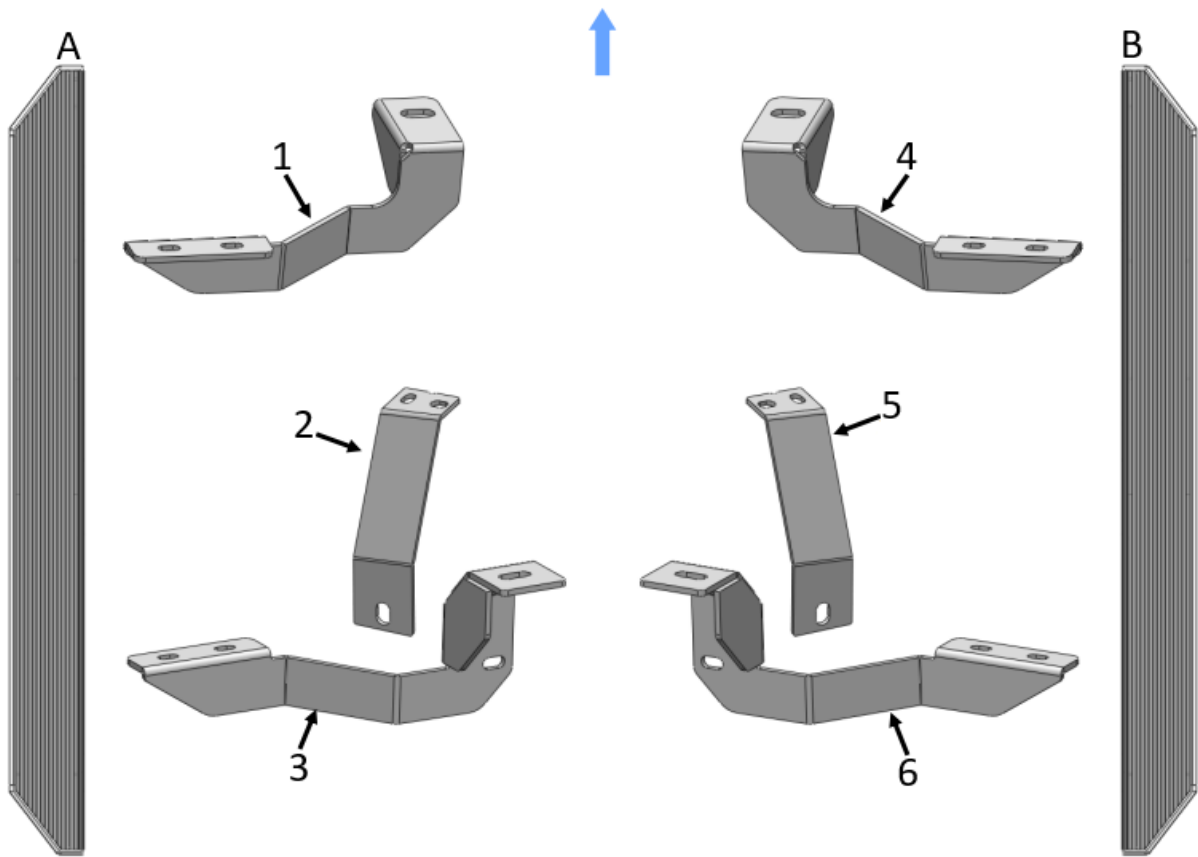

A: Driver Side Step Bar
B: Passenger Side Step Bar

1. Driver Front Mounting Bracket (DFM)
2. Driver Rear Support Bracket (DRS)
3. Driver Rear Mounting Bracket (DRM)
4. Passenger Front Mounting Bracket (PFM)
5. Passenger Rear Support Bracket (PRS)
6. Passenger Rear Mounting Bracket (PRM)


Hardware Package A (For Bracket Installation)

Item	QTY	Description
1#	6	M8X1.25-30mm Hex Bolts
2#	8	M8 Large Flat Washers
3#	6	M8 Lock Washers
4#	2	M8 Hex Nuts



Hardware Package B (For Step Bar Installation)

Item	QTY	Description
1#	8	M8X1.25-35mm Carriage Bolts
2#	8	M8 Large Flat Washers
3#	8	M8 Nylon Lock Nuts
4#	4	Sliders (Packed with Mounting Brackets)

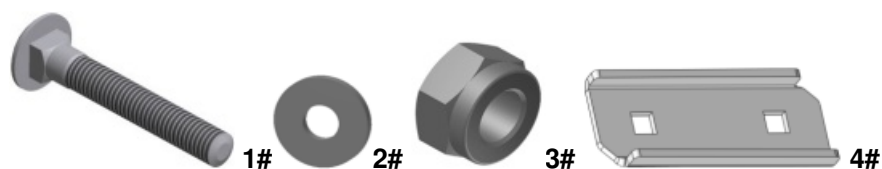


STEP 1

Start installation from the driver side front of the vehicle. Remove front body mount nut and washer located underside of the vehicle.

NOTE: Use a pair of pliers or a crescent wrench to hold the bolt to loose the nut, **(Fig 1)**.

STEP 2

Loosely attach Driver Front Mounting Bracket (**DFM**) using the factory nut and washer. **NOTE:** Keep factory rubber bushing and other factory body mount components in place **(Fig 1)**.

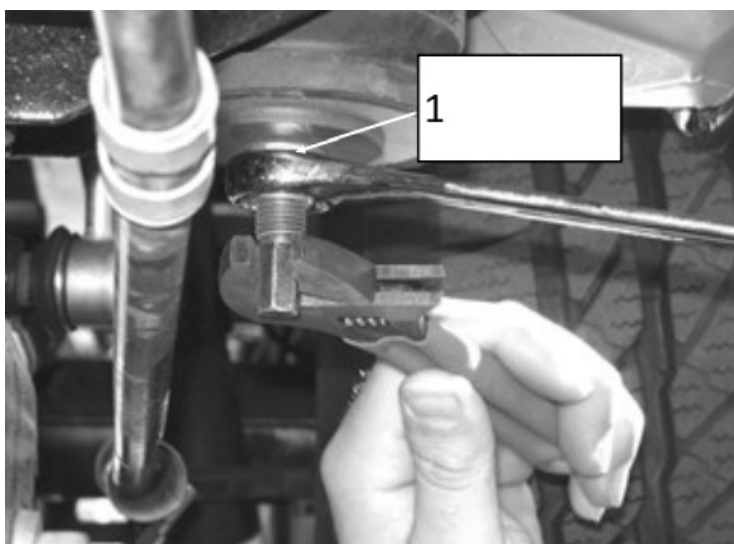


(Fig 1) Driver Side Front Mounting Location

1. Factory Nut And Washer

STEP 3

Move to the Driver Side Rear Mounting Location of the vehicle. Repeat **Steps 1-2** to install the Driver Rear Mounting Bracket (**DRM**), **(Fig 2)**.

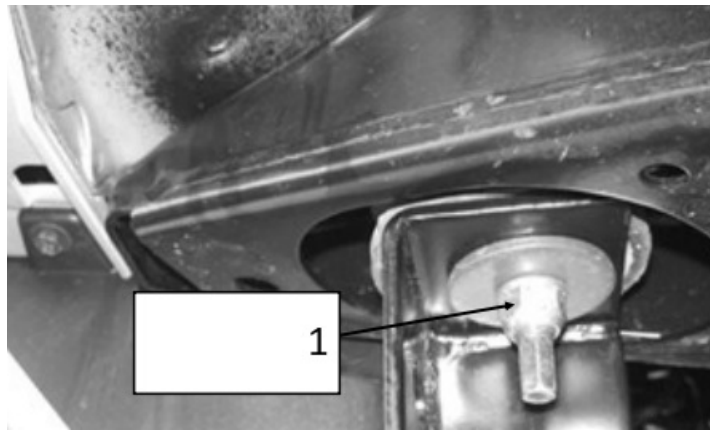


(Fig 2) Driver Rear Mounting Bracket Installation

1. Factory Nut And Washer

STEP 4


Locate the (2) factory threaded holes on the side panel beside the rear body mounting location. And attach the Driver Rear Support Bracket (**DRS**) to these factory holes by using the included (2) M8X1.25-30mm Hex Bolts, (2) M8 Lock Washers, and (2) M8 Large Flat Washers, (**Fig 3**).

Attach opposite side of Driver Rear Support Bracket (**DRS**) to Driver Rear Mounting Bracket (**DFM**) using the included (1) M8X1.25-30mm Hex Bolt, (1) M8 Lock Washer, (1) M8X1.25 Hex Nut, and (2) M8 Large Flat Washers, (**Figs 3 & 4**). Do not fully tighten at this time.

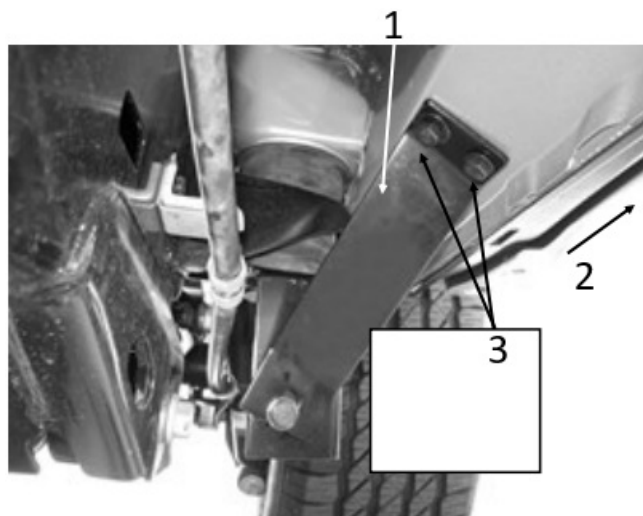

(Fig 3) Driver Rear Support Bracket Installed

1. DRS
2. Front
3. (2) M8X1.25-30mm Hex Bolts
(2) M8 Lock Washers
(2) M8 Large Flat Washers

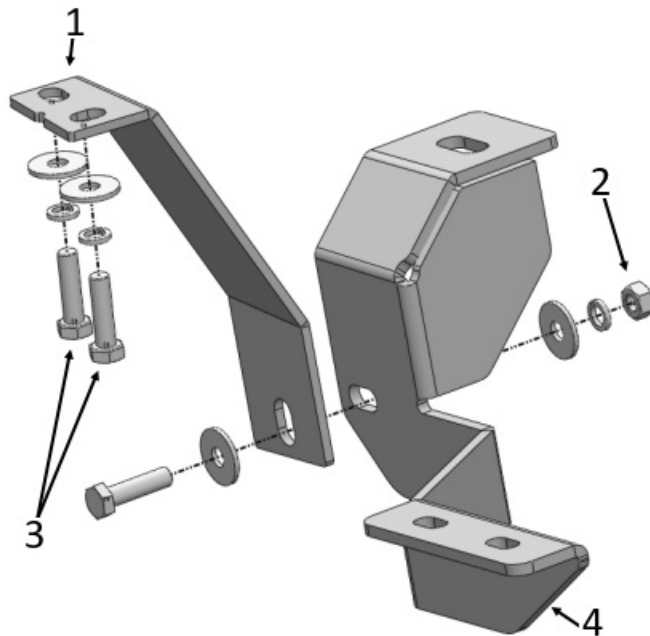

(Fig 4) Driver Rear Support Bracket Installation

1. DRS
2. (1) M8X1.25-30mm Hex Bolt
 - (1) M8 Lock Washer
 - (2) M8 Large Flat Washers
 - (1) M8 Hex Nut
3. (2) M8X1.25-30mm Hex Bolts
 - (2) M8 Lock Washers
 - (2) M8 Large Flat Washers
4. DRM

STEP 5

Once all (2) Driver side mounting brackets are installed, then proceed to the Step Bar installation. **(Figs 5 & 6)**

- (1) Select (1) Slider and (2) M8X1.25-35mm Carriage Bolts;
- (2) Install (2) M8X1.25-35mm Carriage Bolts in (1) Slider.
- (3) Slide the Slider (with carriage bolts) to the **Step Bar**.
- (4) Repeat to install the other (1) slider to the step bar.
- (5) Attach the Step Bar (with the Sliders) onto the installed mounting brackets. Position the Sliders to the installed brackets. Secure the Step Bar to the installed Brackets by using (4) M8 Large Flat Washers and (4) M8 Nylon Lock Nuts and (2) Sliders, **(Fig 6)**. Do not fully tighten hardware at this time.


Note: The Sliders are packed with the Mounting Brackets.

Level and adjust the Step Bar and fully tighten all hardware.

Repeat **Steps 1-5** for the other side Step Bar installation. **The installation is completed!!!**


Attention

**Do periodic inspections to the installation to make sure that all hardware is secure and tight.
In order to protect your bars/boards, please use mild soap/non-abrasive products for cleaning only.**

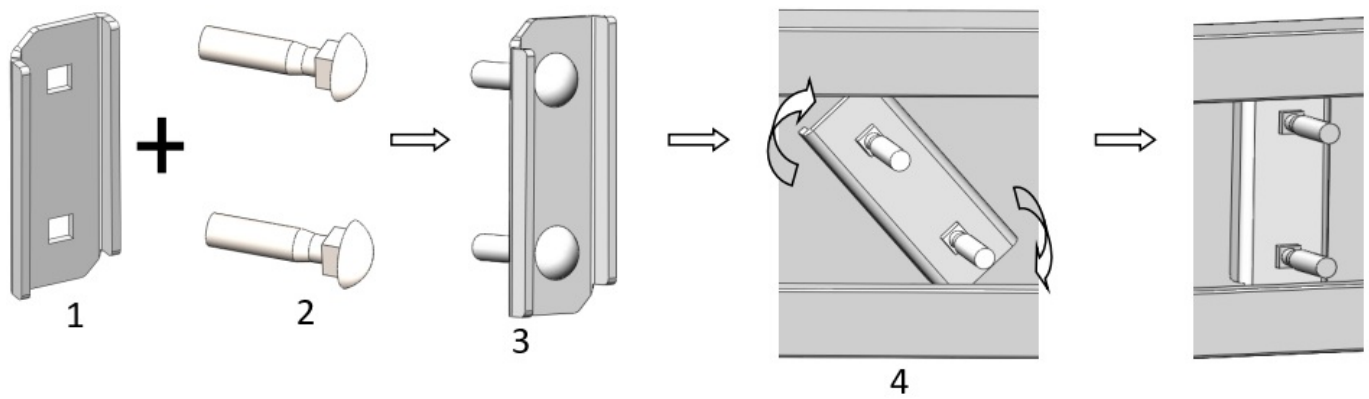

(Fig 5) Slider Installation

1. Slider
2. (2) Carriage Bolts
3. Slider with (2) Carriage Bolts
4. Step Bar (Bottom View)

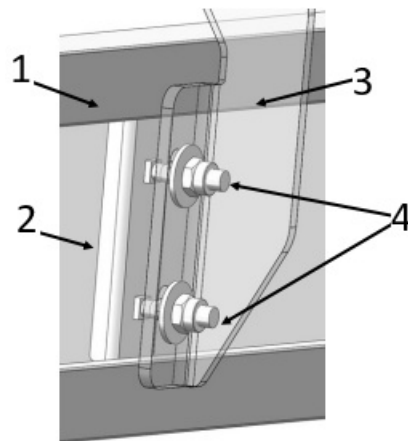


(Fig 6) Step Bar Installation

1. Step Bar
2. Slider (w/ installed Carriage Bolts)
3. Mounting Bracket
4. (2) M8 Large Flat Washers
(2) M8 Nylon Lock Nuts

Customer Support: info@iboardauto.com

Rev. 20231001

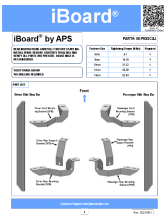

[iBoard IB-P082C Running Board 6 Black](#) [pdf] Installation Guide

IB-P082C, IB-P082J, IB-P082C Running Board 6 Black, IB-P082C, Running Board 6 Black, Board 6 Black

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.