




Ideal Standard K727267 Mounting Frame Instruction Manual

[Home](#) » [Ideal Standard](#) » Ideal Standard K727267 Mounting Frame Instruction Manual 


Ideal Standard K727267 Mounting Frame Instruction Manual




Contents



- [1 Package Contents](#)
- [2 Diminsions](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Package Contents

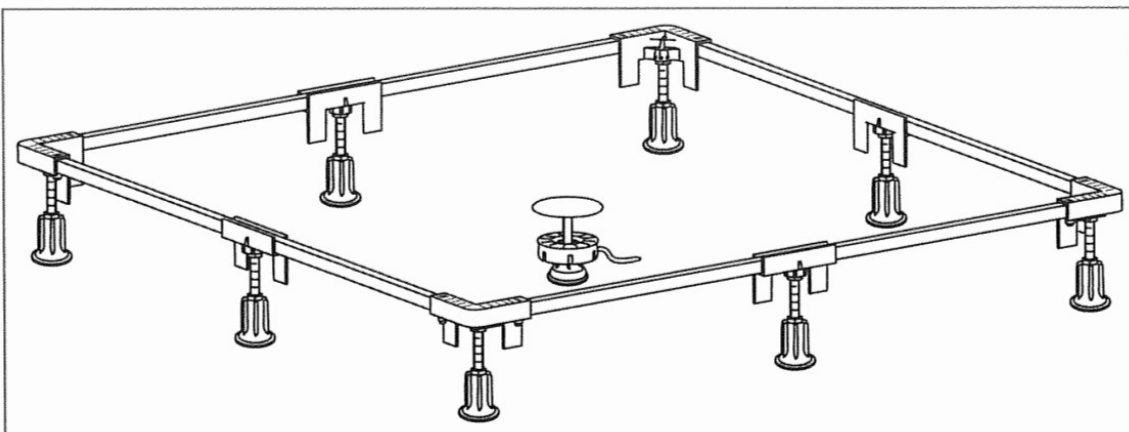


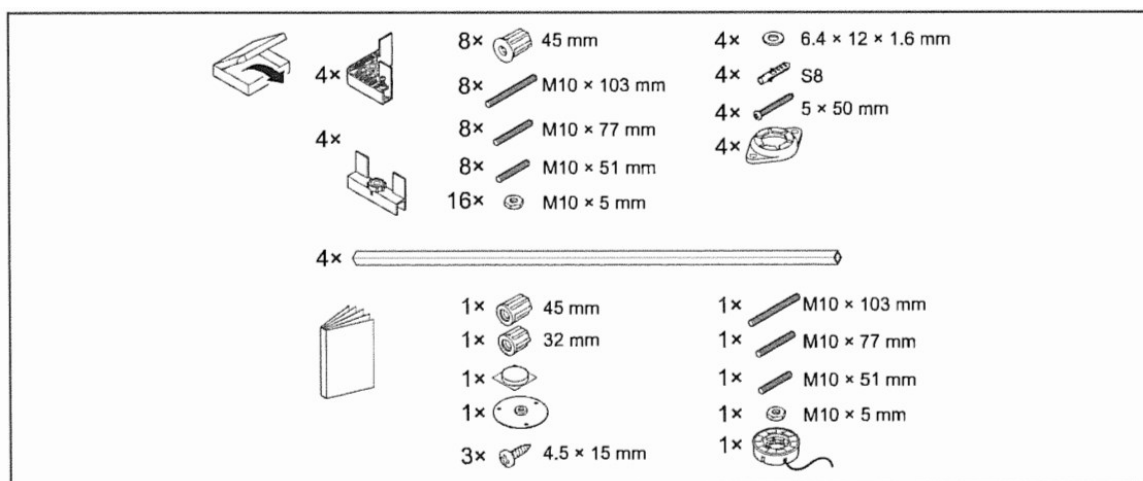



Diminsions

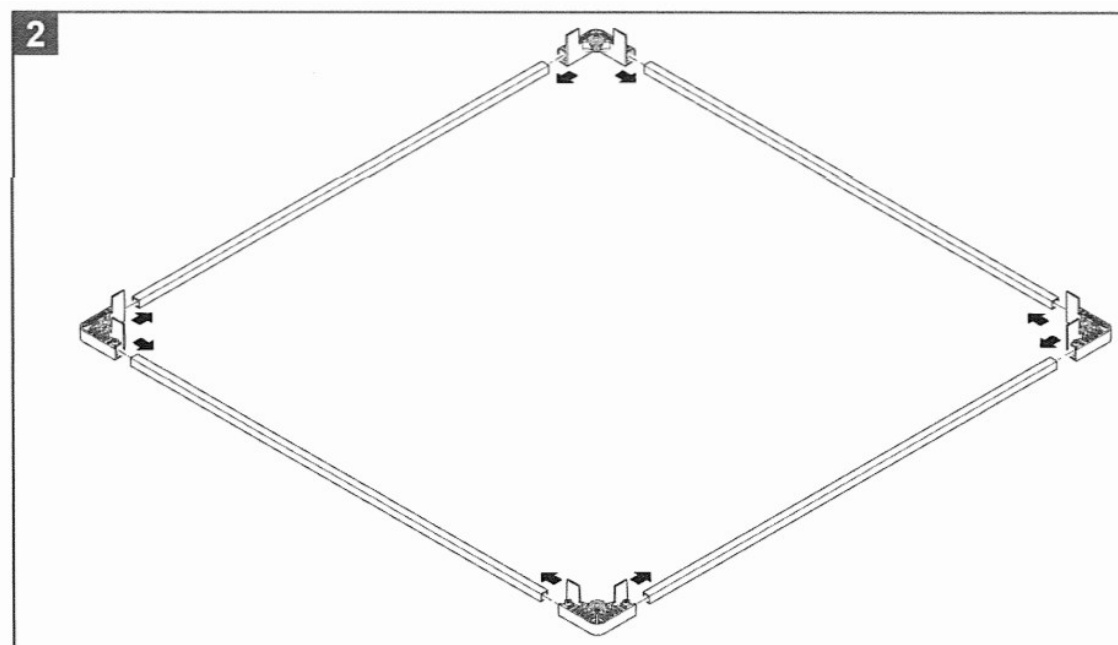
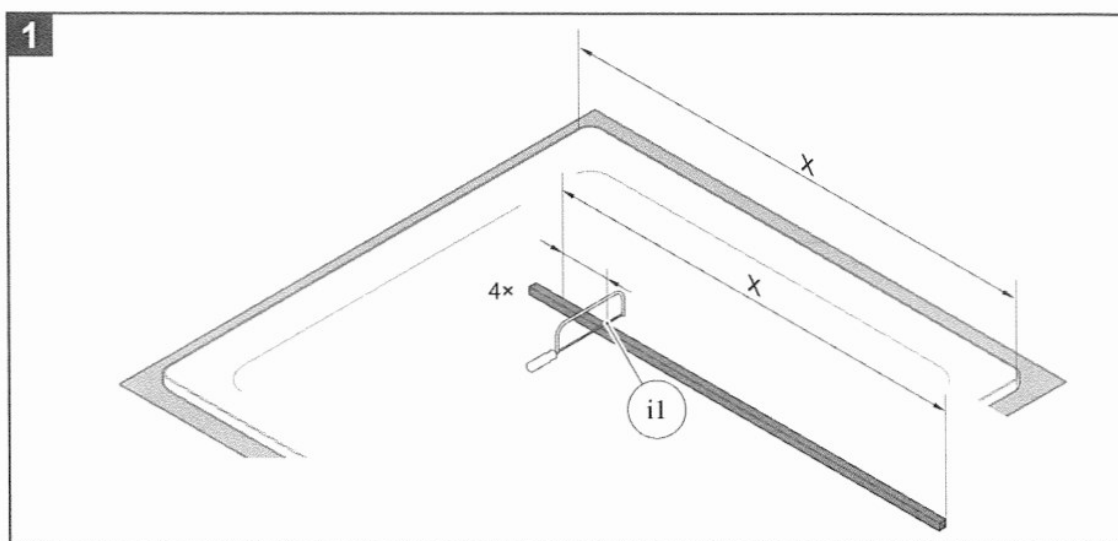


Steel shower tray

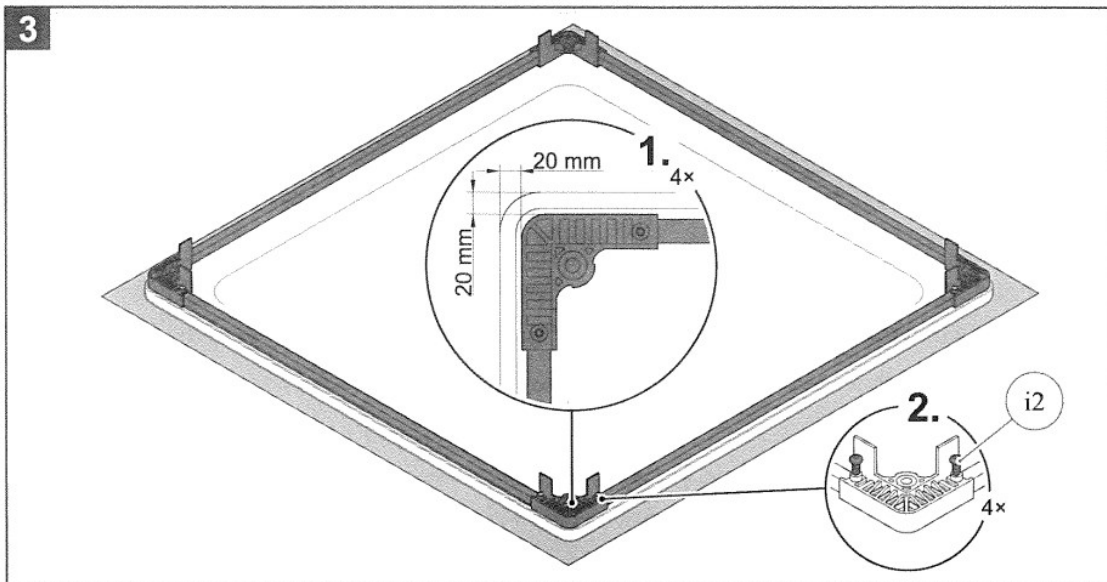


Acrylic shower tray

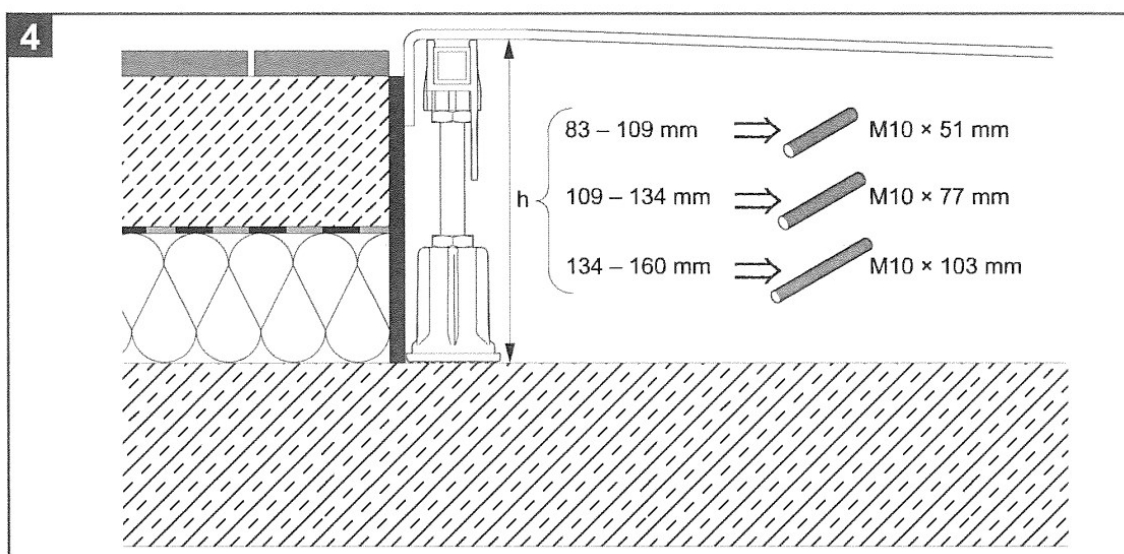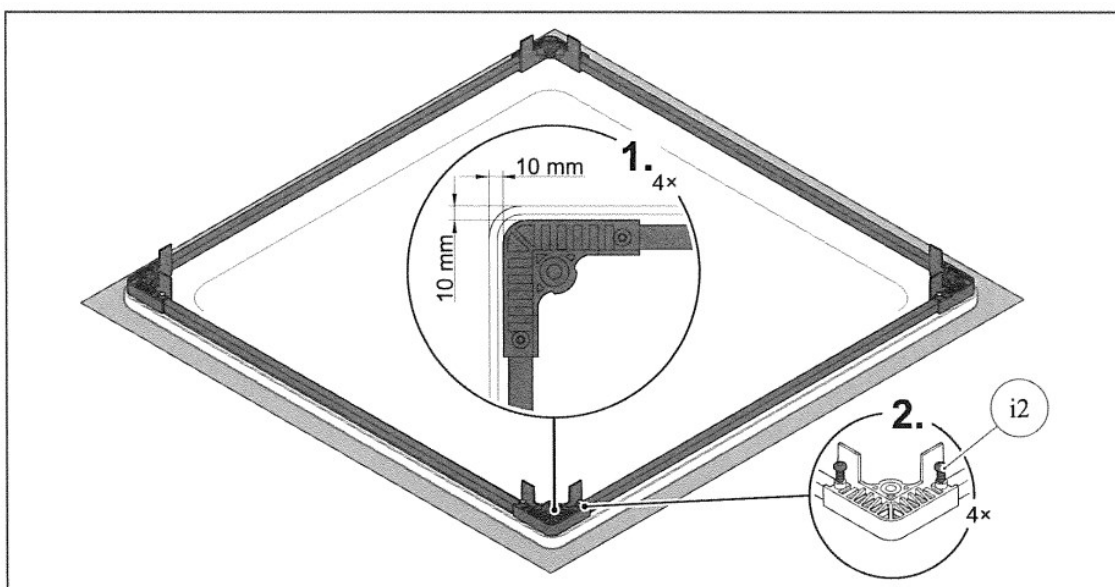


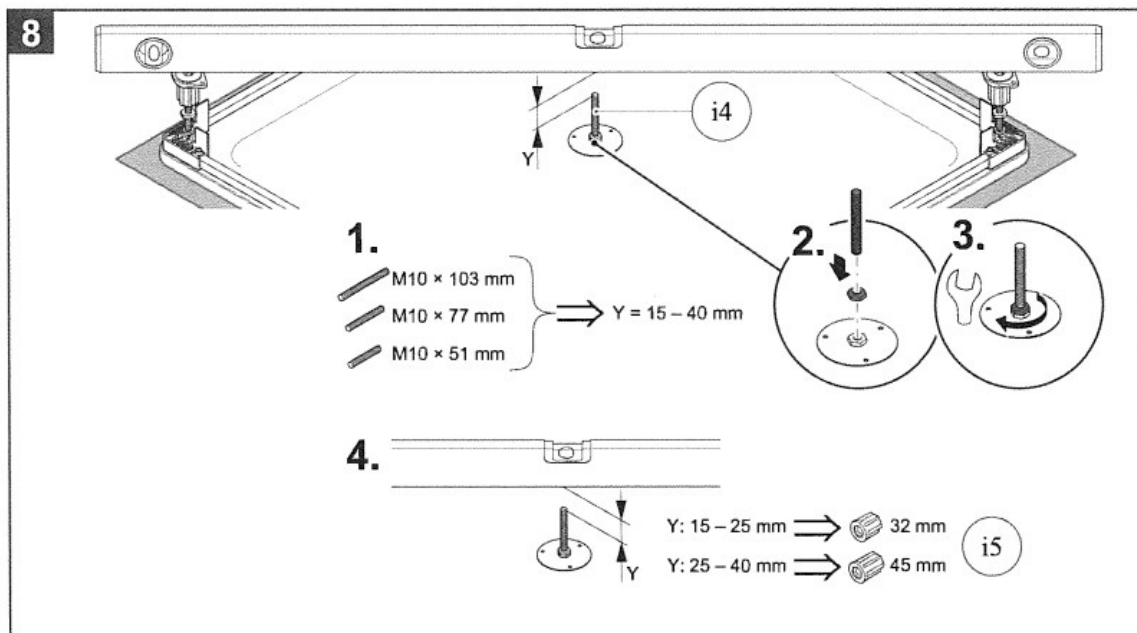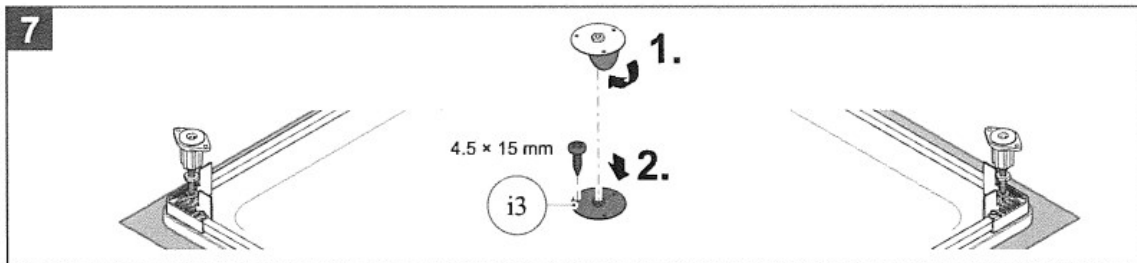


Steel shower tray

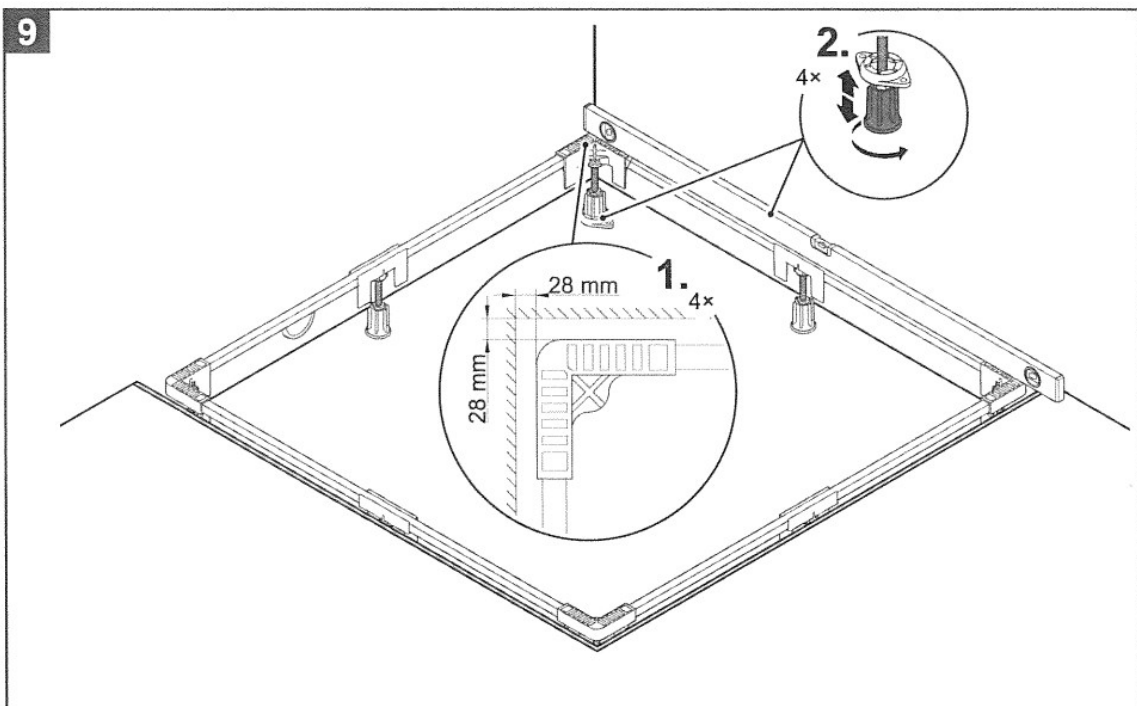


Acrylic shower tray

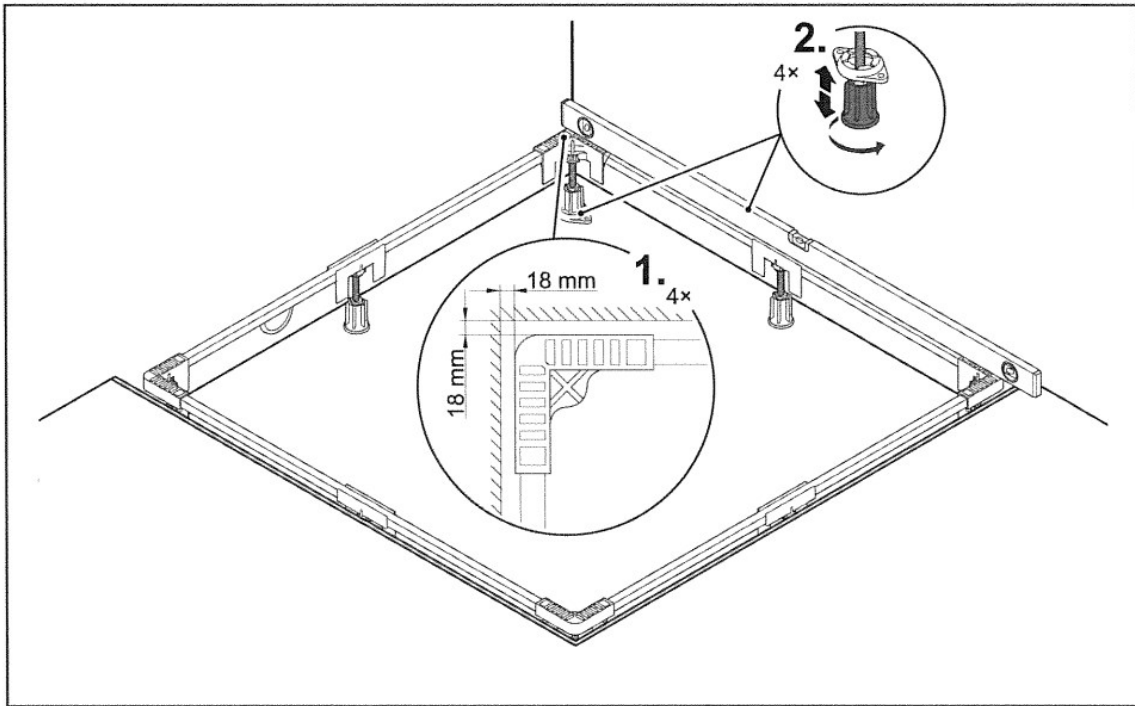


10

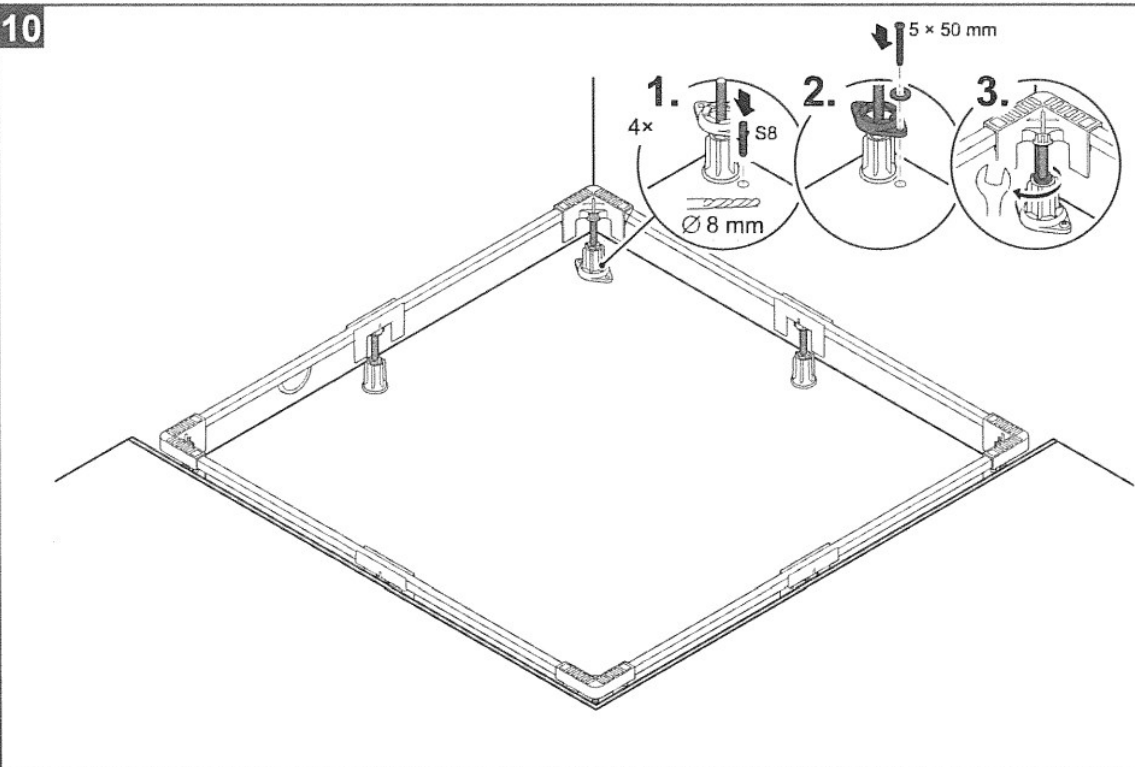


11

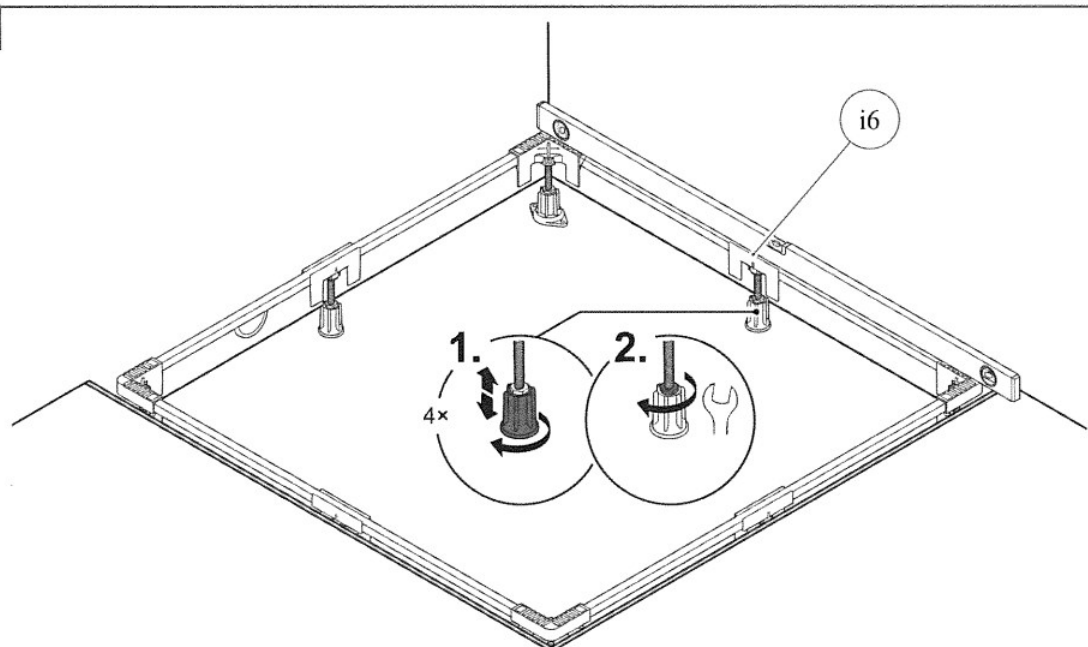


12

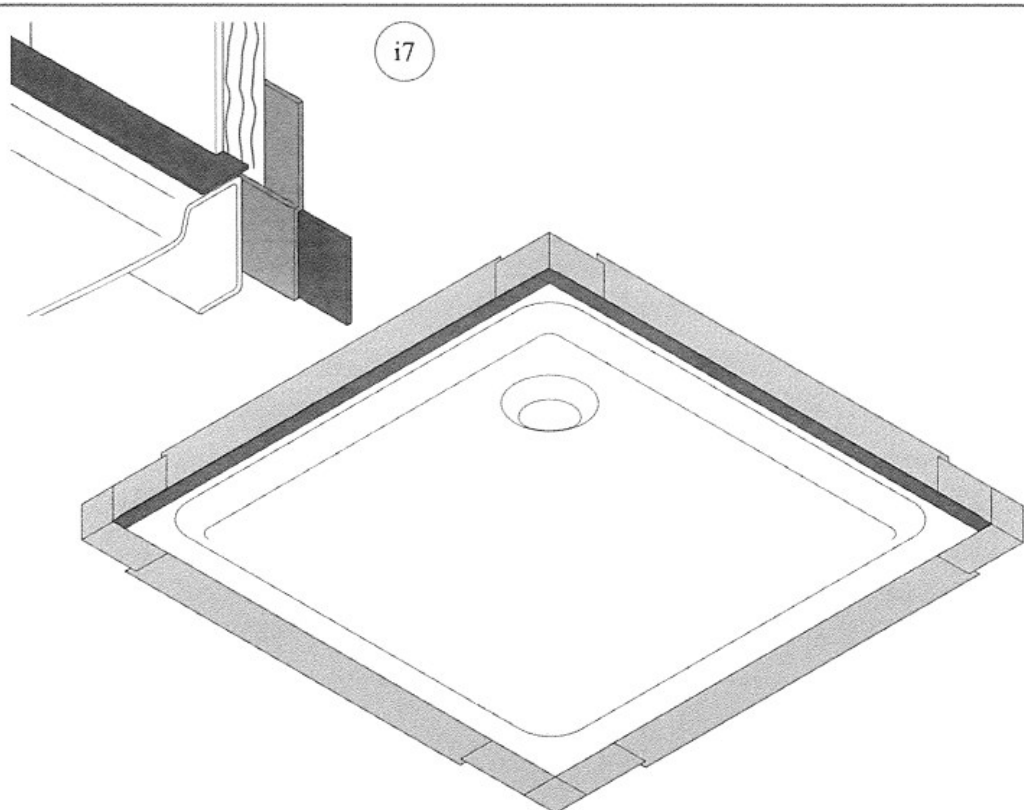


13

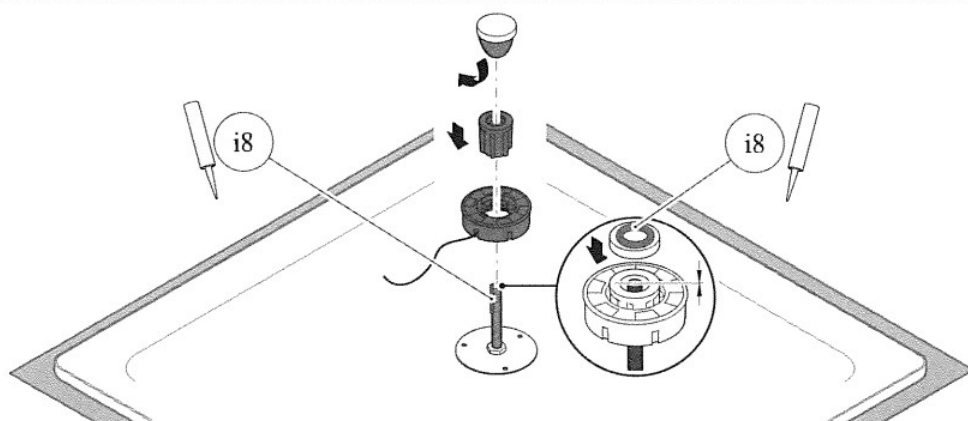


14

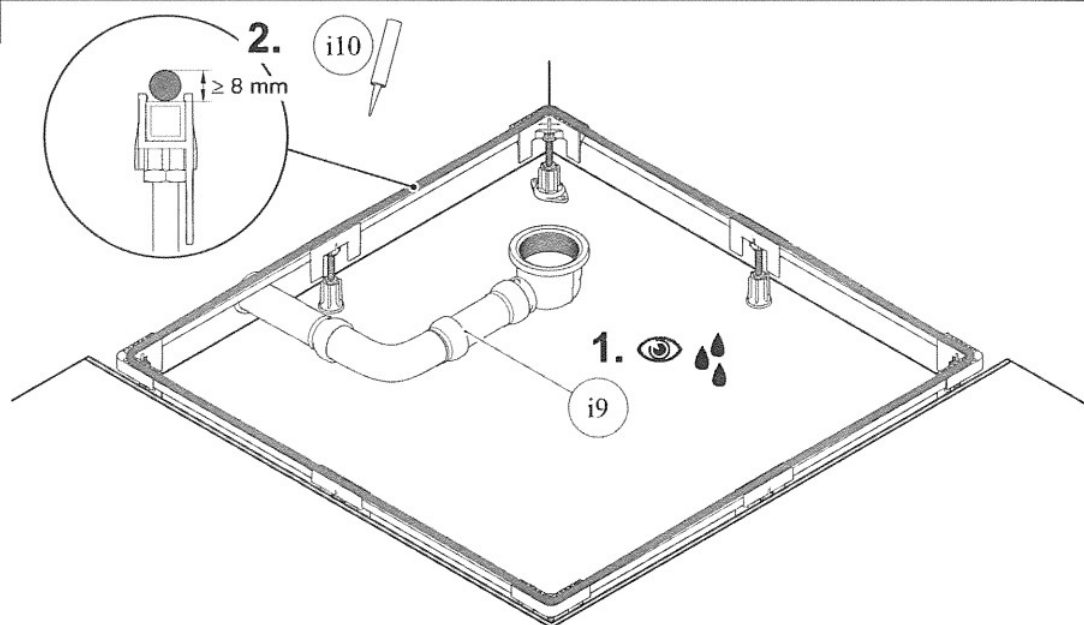


15

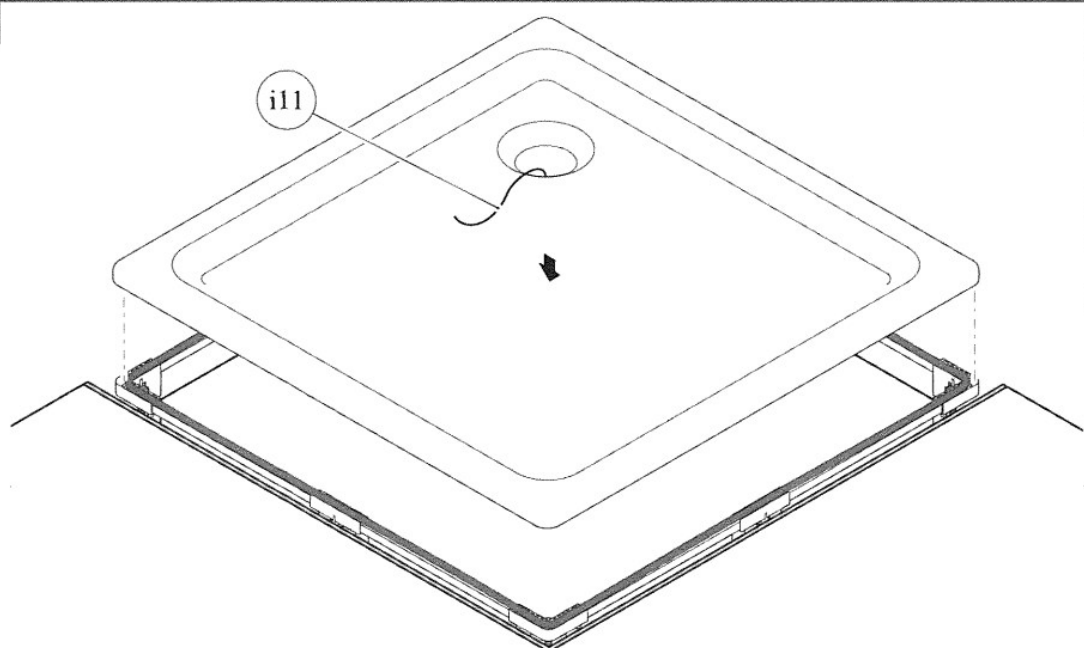


16

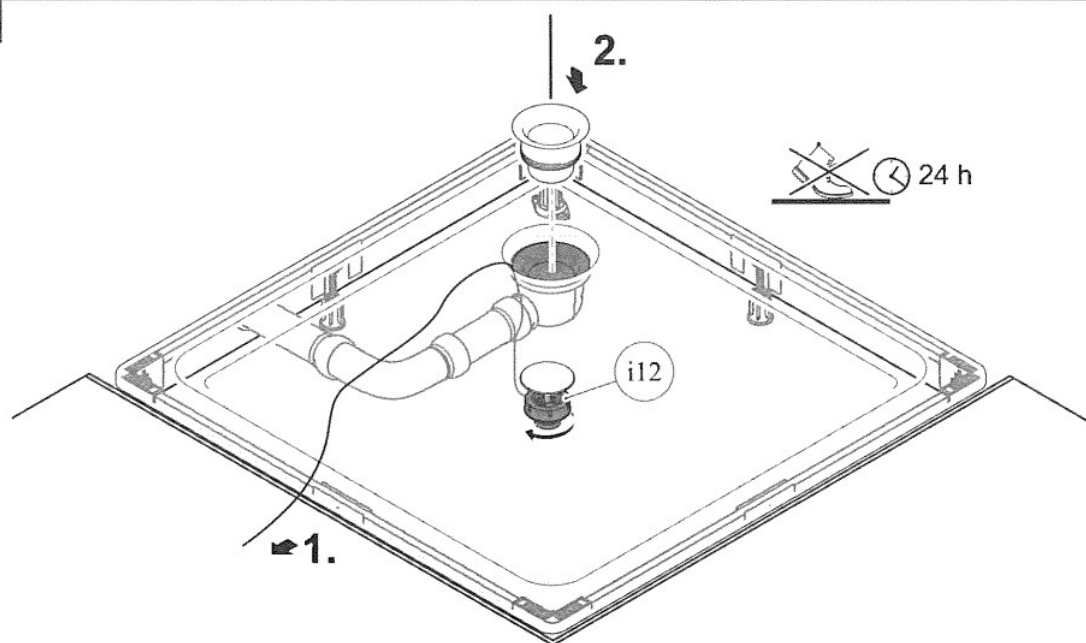

17

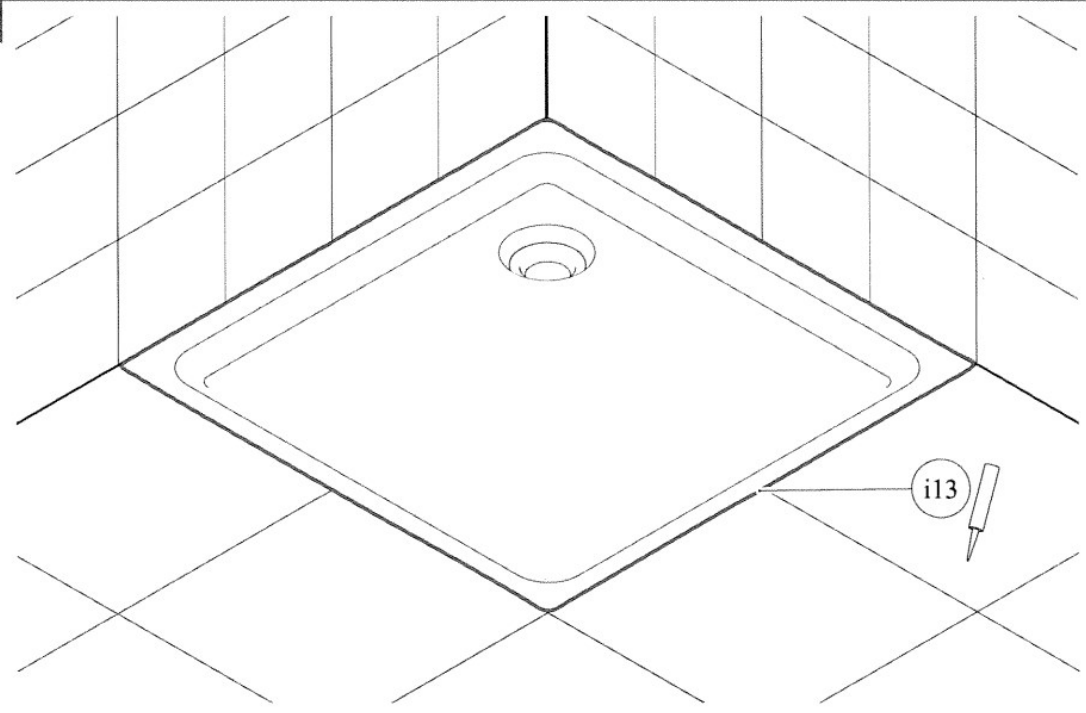

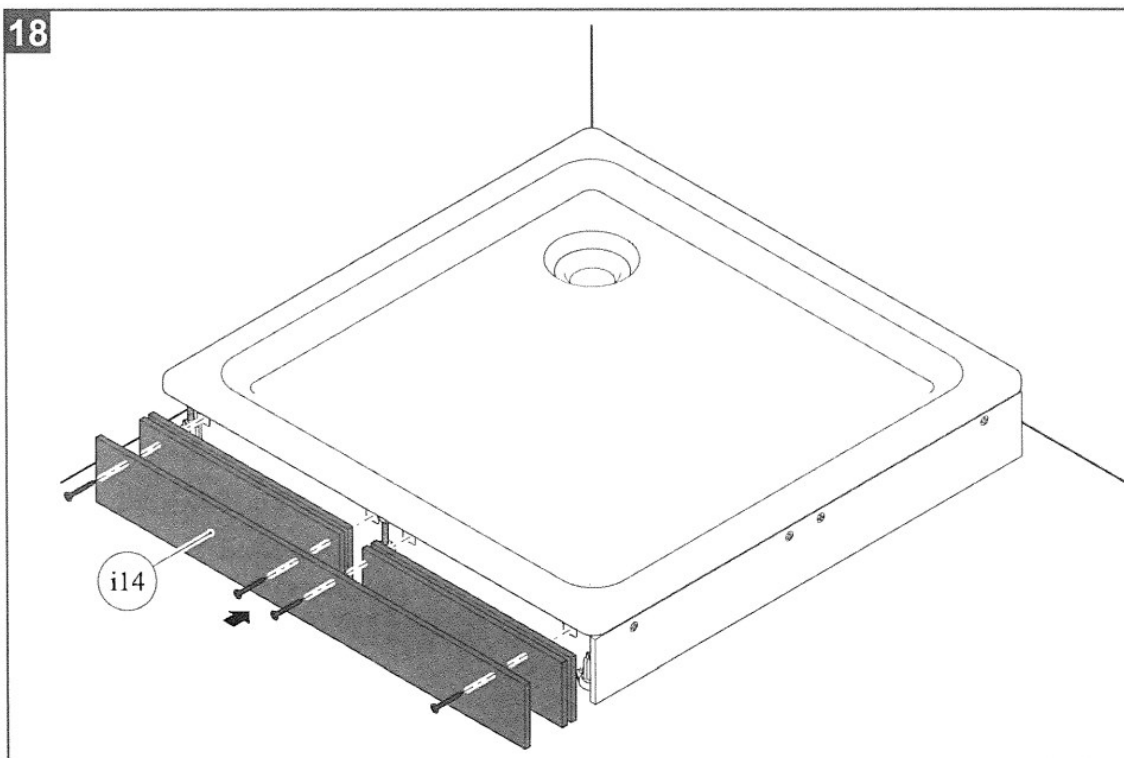

Application

Use the »Montagerahmen 1200 x 1200« only as follows:

- For installation of acrylic or steel shower trays up to 1200 x 1200 mm .
- Smallest possible size: 750 x 750 mm.
- For indoor use only.

Tips for processing


- The standard guidelines for each trade involved in the project should be closely followed.

Tips for installation

1. Shorten aluminium profile.
 - Steel shower tray: $x - 90$ mm.
 - Acrylic shower tray: $x - 75$ mm.
2. Tighten screws by hand.
3. Fasten attachment plate to the shower tray subfloor. Steel shower tray:
 - Fasten the attachment plate with adhesive. The surface must be free of dust, dirt, water and oily residue.
 Acrylic shower tray:
 - Fasten the attachment plate with screws. The shower tray subfloor must be at least mm thick. Please note screw length.
4. Select the right threaded rod. Shorten the threaded rod if necessary.
5. Select the right adjustable feet, place them to the side and screw them in just before installing the shower tray.
6. Turn the centre supports until they have contact with the floor.
7. Recommended installation:

- Place a seal between the shower tray and building structure using, e.g. a sealing strip.
 - Separate the shower tray from the building structure using, e.g., insulating/protective tape.
8. Attach centre foot.
 - Apply silicone to the threaded rod and screw on the adjustable foot until the underside is flush with the threaded rod.
 - Use the self-adhesive foil to attach the adhesive pad to the adjustable foot.
 - Apply silicone to the adhesive pad.
 9. Conduct a leakage test.
 10. Apply silicone.
 11. Thread the pull cord through the drain opening of the shower tray.
 12. Pull on the cord to extend the centre foot.
 - The centre foot has reached the floor when a strong resistance can be felt when pulling the cord.
 - Cut the pull cord and push it back into the drain opening of the shower tray.
 13. Seal the joints with silicone.
 14. Cover the installation frame (optional).

Documents / Resources

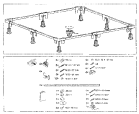	<p>Ideal Standard K727267 Mounting Frame [pdf] Instruction Manual K727267 Mounting Frame, K727267, Mounting Frame, Frame</p>
---	--