

Ideal Unshielded Modular Plugs Instructions

Home » IDEAL » Ideal Unshielded Modular Plugs Instructions

Contents

- 1 Ideal Unshielded Modular Plugs
- 2 INSTRUCTIONS FOR UNSHIELDED MODULAR PLUGS
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**




Ideal Unshielded Modular Plugs



INSTRUCTIONS FOR UNSHIELDED MODULAR PLUGS


• Remove 2.5 – 3.8 cm of jacket.

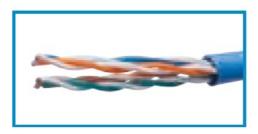


• Remove centre spline (CAT6).



• Untwist pairs to jacket base, and align in order. Trim ends flat.

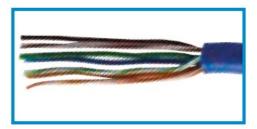

• Slide cable into connector until fully seated. Verify wiring order.

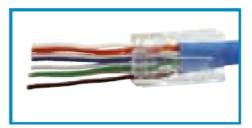

Place assembly into FT-45[™] tool. Squeeze handle closed.





IDEAL INDUSTRIES EMEA

Unit 3. Europa Court, Europa Boulevard, Westbrook, Warrington, WA5 7TN. UK. Tel: +44 (0)1925 44 44 46, Email: <u>eur.sales@idealindustries.com</u>. <u>www.idealind.com</u>

Documents / Resources



Ideal Unshielded Modular Plugs [pdf] Instructions

25 Pack, 100 Pack, Unshielded Modular Plugs, Unshielded Modular, Unshielded Plugs, Modular Plugs, Modular, Plugs

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.