



In Common Simon Surface Mount Light Installation Guide

[Home](#) » [In Common](#) » In Common Simon Surface Mount Light Installation Guide 

In Common Simon Surface Mount Light



Contents

[1 How to Install Your New Light](#)

[2 CAUTION](#)

[3 Contents](#)

[4 MOUNTING INSTRUCTIONS](#)


[5 Documents / Resources](#)

[5.1 References](#)

How to Install Your New Light


Please check that you received all of the components pictured in this guide. Reach out to us if anything is missing. It's very rare, but it happens. Don't forget to turn off the electrical power source.

Tools you will need that aren't included: standard wire stripper, Phillips head screwdriver.

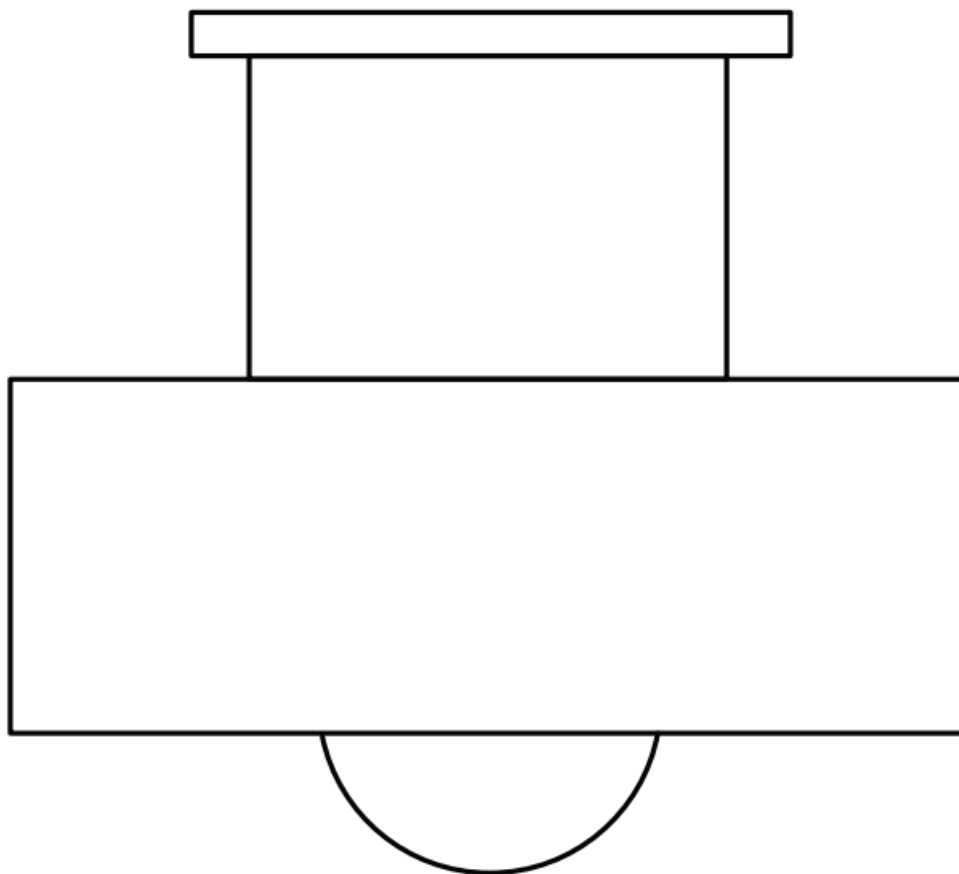


CAUTION

Electrical shock risk. Turn off electrical power at the main fuse box or circuit panel before beginning installation, servicing the light, or installing accessories. We recommend working with a qualified electrician familiar with the type of work you'd like done.

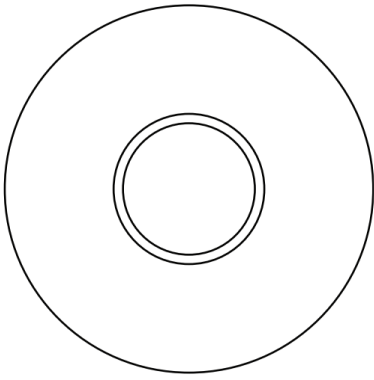


Contents

- **Part A** Backplate

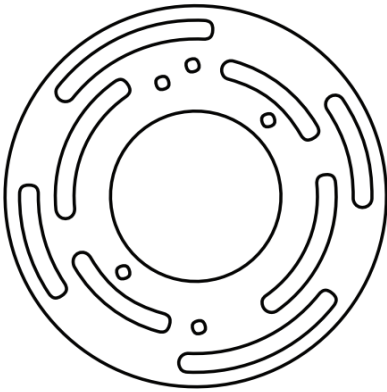



- **Part B** Canopy Cover

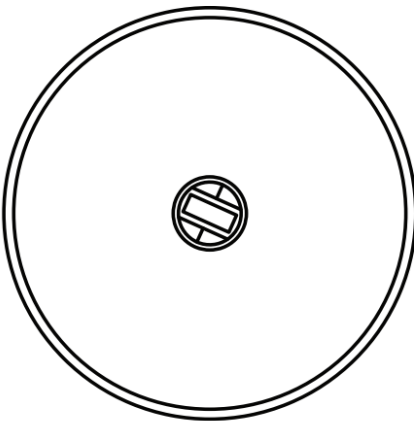


- **Part C** Hex Key




- **Part D** Wago Clips (x3)

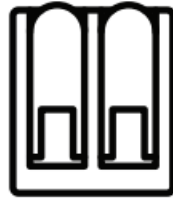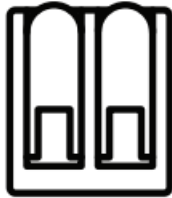

- **Part E** G9 LED Bulb

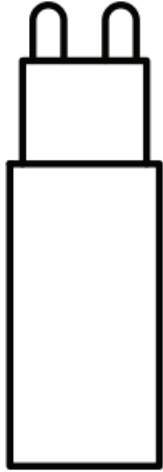


- **Part F** Orb 5 Diffuser

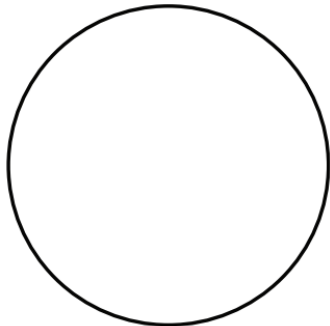


- **Part G** Mounting Screws (x2)




- **Part H** Glass Holder

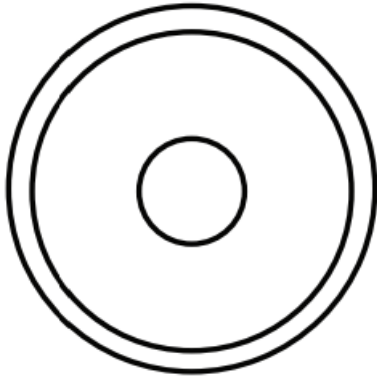

- **Part I** Set Screws (x2)

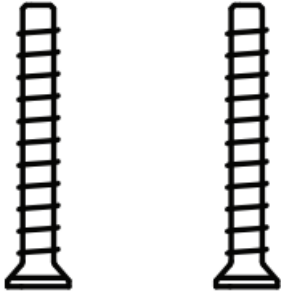


- **Part J** Simon Shade

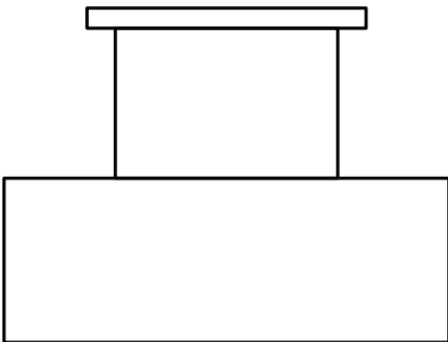


MOUNTING INSTRUCTIONS


Step 1: Turn off electrical power at the main fuse box or circuit panel before beginning installation.

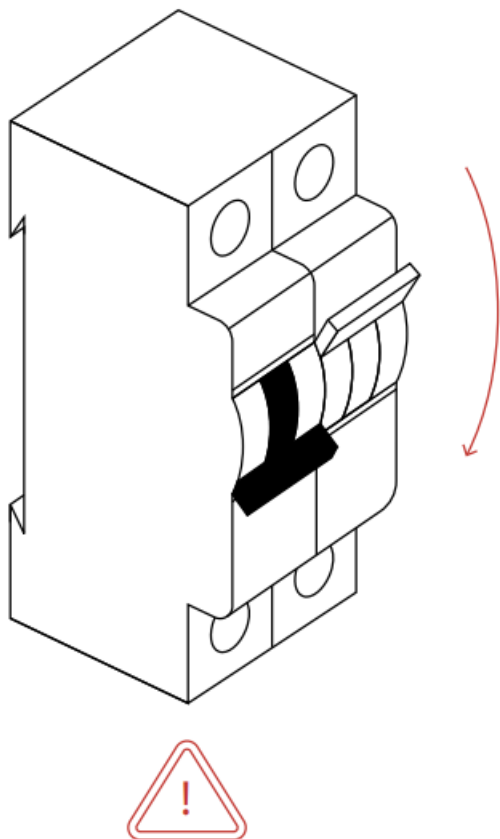


Step 2: Mount the backplate (A) to the junction box using a phillips head screwdriver to tighten the mounting screws (G).

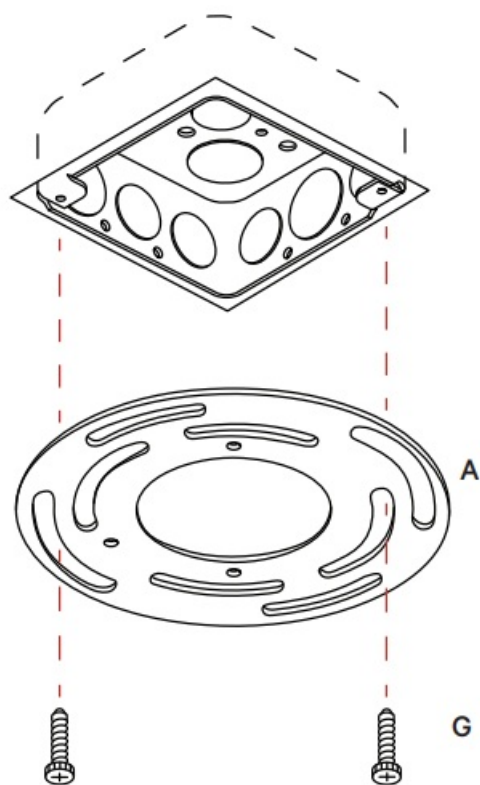


Step 3: Use the wago clips (D) to connect the fixture's wires to the corresponding wires from the junction box in the wall or ceiling. White is neutral; Black is live; Green/ Yellow is ground. One ground wire will be attached to the backplate (A), the other ground wire should come from the junction box. If needed use a wire stripper to remove 3/8" of the insulation from each wire before inserting them into the corresponding wago clip.

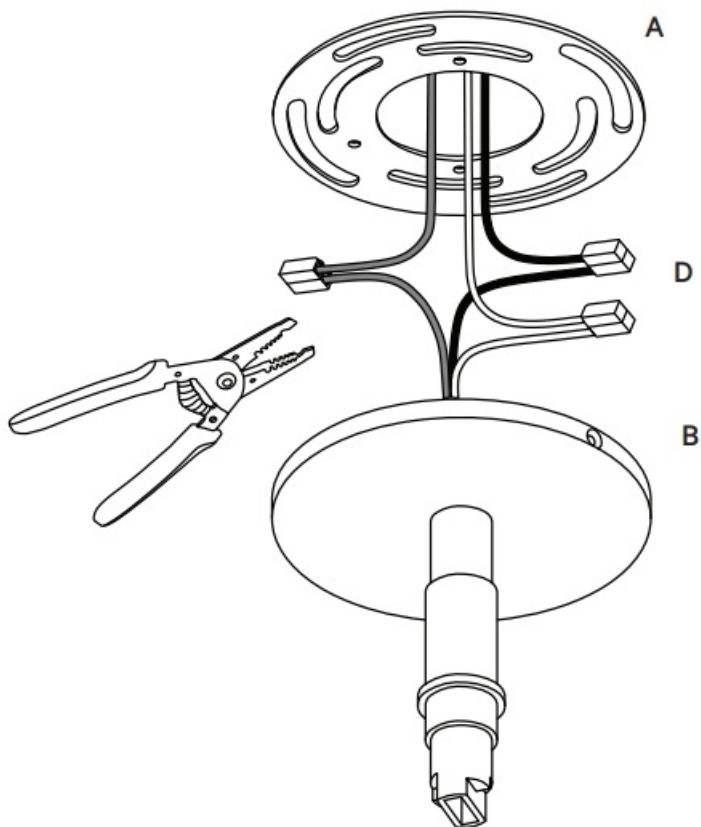


Step 4: Align the holes of the backplate (A) with the holes of the canopy cover (B) and secure the set screws (I) by tightening using the included L-shaped hex key (C).

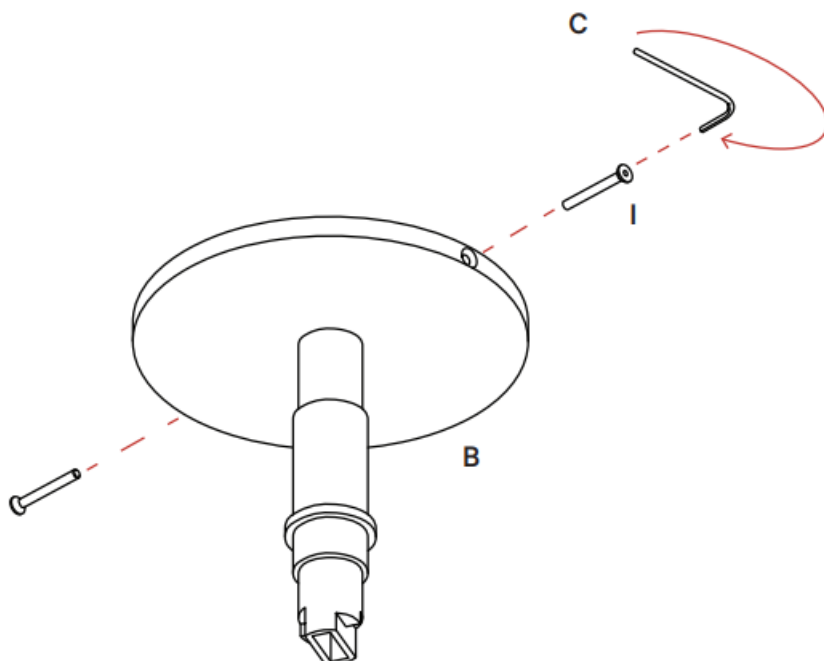

Step 5: Carefully slide the shade (J) up the socket. Attach shade (J) to backplate (B) by rotating glass holder (H) until components are fixed in place.

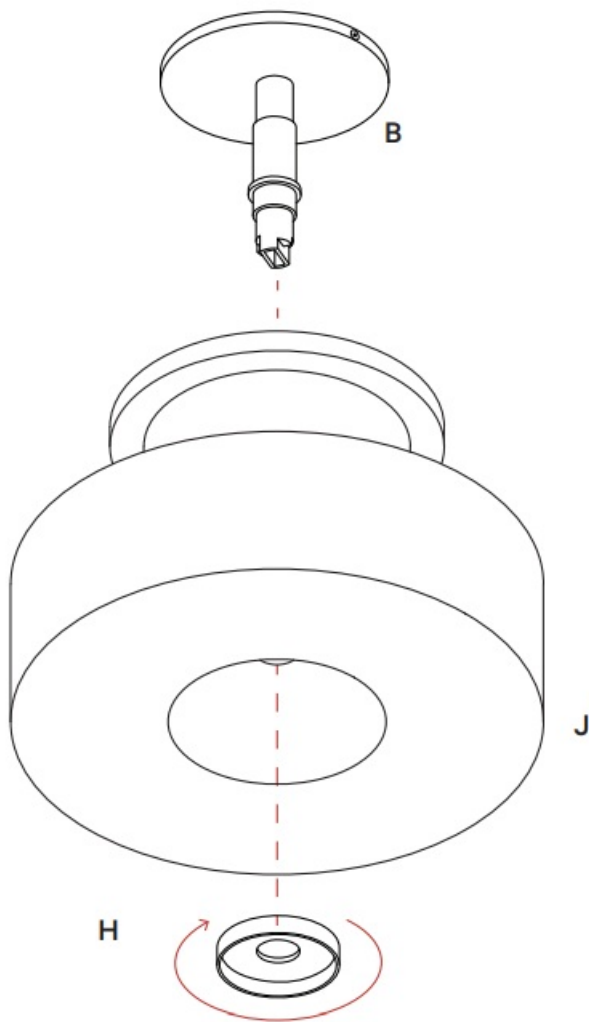


Step 6: Insert lightbulb (E) into the socket of the shade assembly

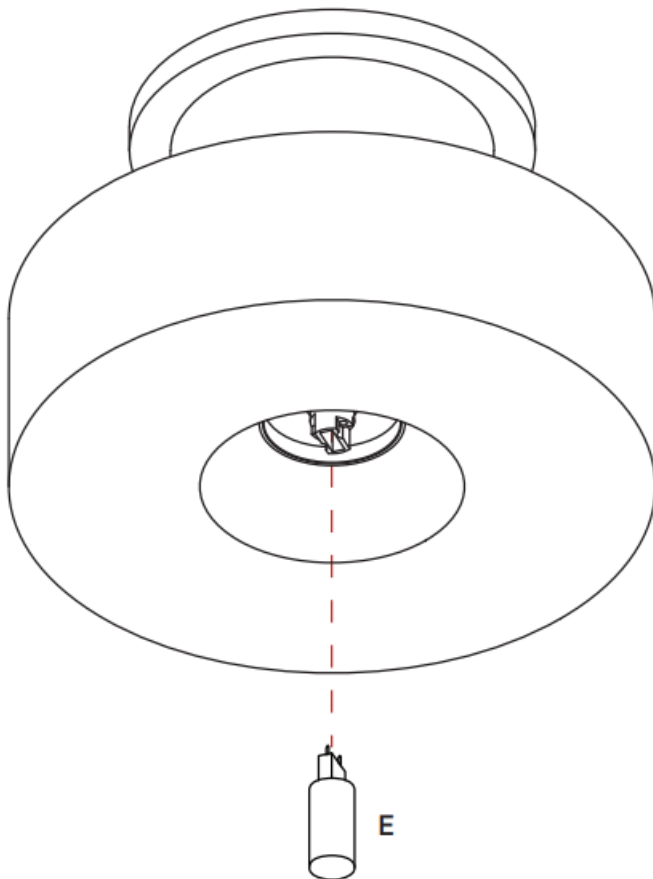

Step 7: Screw the diffuser (F) into the glass holder (H). Turn the power back on at the main fuse box or circuit

panel you disabled before installation.

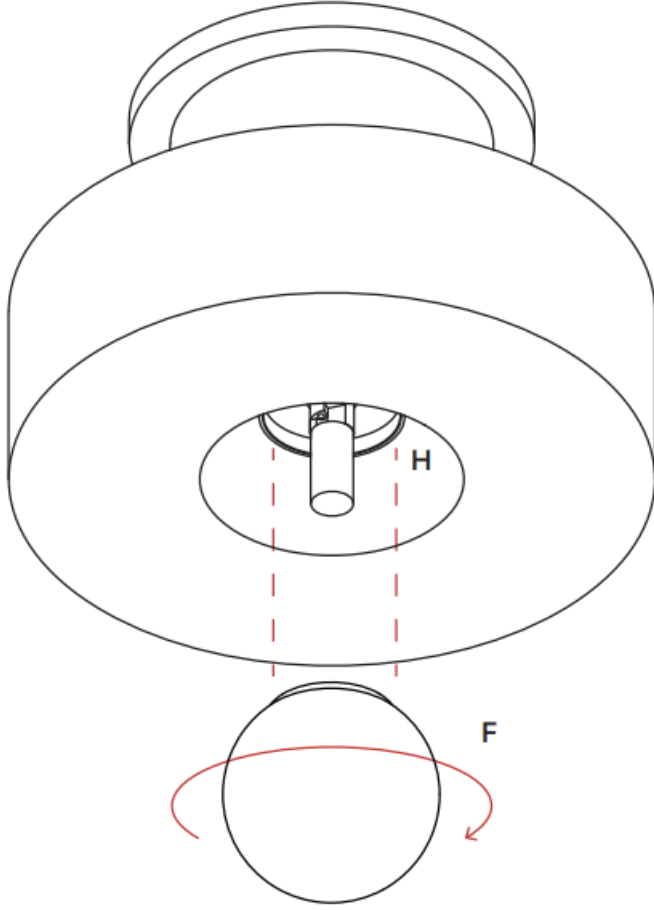

In Common With

Documents / Resources

[illegible]

References

- In Common With