



InCarTec 49-VW-01 Quadlock CANbus Steering Control Interface Instructions

[Home](#) » [InCarTec](#) » InCarTec 49-VW-01 Quadlock CANbus Steering Control Interface Instructions 

Contents

- [1 InCarTec 49-VW-01 Quadlock CANbus Steering Control Interface](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Volkswagen group CANbus interface](#)
- [5 Instructions](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

InCarTec

InCarTec 49-VW-01 Quadlock CANbus Steering Control Interface



Product Information

The 49-VW-01 Quadlock CANbus steering control interface is designed for Volkswagen, Seat, and Skoda vehicles. This interface provides steering wheel control commands to the new head unit and gives CAN signal outputs such as speed pulse (pink wire), illumination (orange wire), reverse gear (purple wire), and hand brake (green wire).

Product Usage Instructions

1. Before installing the interface, make sure to connect the patch lead (49-series) to the interface.
2. Connect the interface to the vehicle harness.
3. Use the following controls on the interface for various functions:
 - A – Volume up
 - B – Volume down
 - C – Track up
 - D – Track down
 - E – Source/Preset up/Phone*
 - F – Preset down/Source
 - G – Mute/Source/Phone answer
 - H – Preset down/Mute
 - I – Phone*/Phone answer
 - J – Phone reject
4. For phone-related functions, use short press to answer and long press to reject.

*The phone function may not be available in all models.

Volkswagen group CANbus interface

49-VW-01



Quadlock CANbus steering control interface for Volkswagen, Seat and Skoda vehicles This interface provides steering wheel control commands to the new head unit and gives CAN signal outputs; speed pulse (pink wire), illumination (orange wire), reverse gear (purple wire) and hand brake (green wire). When installing, make sure the patch lead (49- series) is connected to the interface before the interface is connected to the vehicle harness

Instructions



A	Volume up	B	Volume down
C	Track up	D	Track down
E	Source	F	Phone*
G	Mute		

*Short press answer / Long press reject




A	Volume up	B	Volume down
C	Track up	D	Track down
E	Push to talk ¹	F	Source
G	Phone*		

*Short press answer / Long press reject



A	Volume up	B	Volume down
C	Track up	D	Track down
E	Phone*	F	Source

*Short press answer / Long press reject

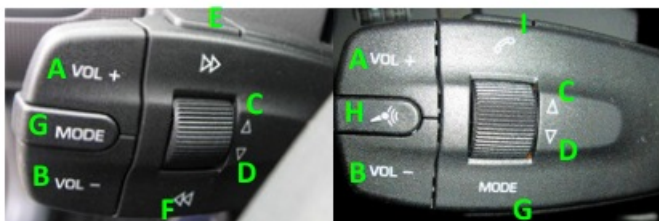

A	Volume up	B	Volume down
C	Track up	D	Track down
E	Preset up	F	Preset down
G	Source	H	Push to talk ¹
I	Phone*		

*Short press answer / Long press reject



A	Volume up	B	Volume down
C	Track up	D	Track down
E	Preset up	F	Preset down
G	Source	H	Mute
I	Phone answer	J	Phone reject



A	Volume up	B	Volume down
C	Track up	D	Track down
E	Phone*	F	Push to talk / Mute ¹

*Short press answer / Long press reject

¹Dependent on head unit fitted

Documents / Resources

	InCarTec 49-VW-01 Quadlock CANbus Steering Control Interface [pdf] Instructions 49-VW-01, 49-VW-01 Quadlock CANbus Steering Control Interface, Quadlock CANbus Steering Control Interface, Steering Control Interface
--	--