

IRONBISON IBDS-C001 Running Boards Side Steps Instruction Manual

Home » IRONBISON » IRONBISON IBDS-C001 Running Boards Side Steps Instruction Manual



Contents

- 1 IRONBISON IBDS-C001 Running Boards Side **Steps**
- 2 Torque & Tools
- **3 INSTALLATION**
- 4 Documents / Resources
 - 4.1 References



IRONBISON IBDS-C001 Running Boards Side Steps



Torque & Tools





Fastener Size	Tightening Torque (ft-lbs)	Wrench Required		Allen Wrench Required	
□ 6mm	□ 7-8.5	0	□ 10mm	/	□ 4mm
■ 8mm	■ 18-20		■ 13mm		□ 5mm
□ 10mm	□ 35-40		□ 16mm		□ 6mm
□ 12mm	□ 60-70		□ 18mm		□ 8mm

BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT DEPEND ON THE PARTS LIST. READ INSTRUCTIONS CAREFULLY. RUNNING BOARD IS HEAVY, ASSISTANCE IS HIGHLY RECOMMENDED TO AVOID POSSIBLE INJURY OR DAMAGE TO THE VEHICLE.

Part List

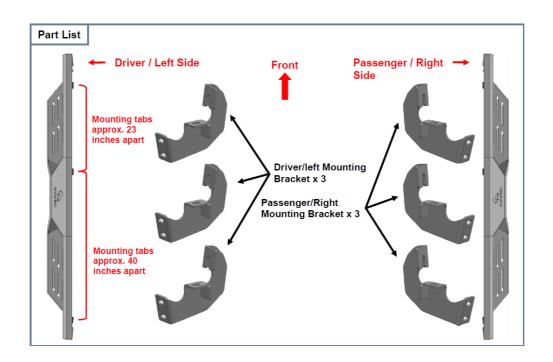

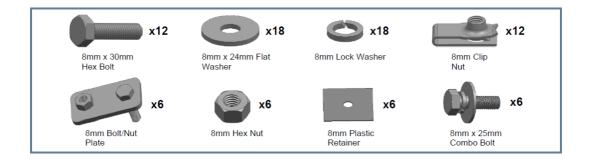


PLEASE NOTE THAT THE FOLLOWING PICTURES ARE BASED ON THE DRIVER SIDE INSTALLATION.

INSTALLATION


STEP 1:

Start the installation under the Driver/Left side of the vehicle. Locate the front mounting location along the bottom and inner side of the body panel, (Fig 1). Installation will use the 1st, 2nd and 4th mounting locations.


NOTE: It may help to hold a Bracket up in place to help determine the mounting holes to use along the bottom and inner side of the body

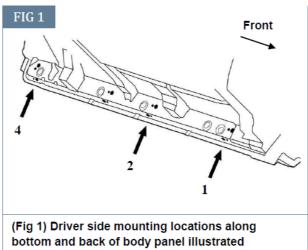


STEP 2 Remove rubber plugs as necessary from the holes in the side and bottom of the inner body panel, (Fig 2).

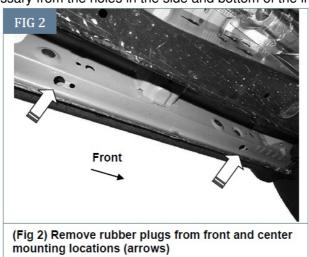


STEP 3: Select (2) 8mm Clip Nuts. Slide each Clip Nut into the large hole and over the smaller hole next to it. Line up threaded nut on the Clip Nut with smaller hole in body panel, (Fig 3)

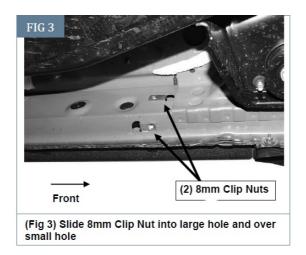


STEP 4: Select (1) Driver/Left Mounting Bracket. Attach the Mounting Bracket to the (2) Clip Nuts in the vehicle with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Fig 4). Do not tighten hardware.

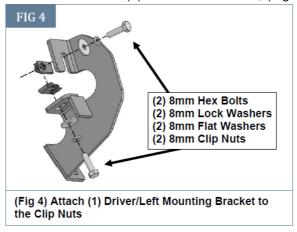


STEP 5: Repeat Steps 1—4 to attach the remaining (2) Driver/Left Mounting Bracket to the center and rear locations, (Figs 5 & 6). Do not tighten hardware.

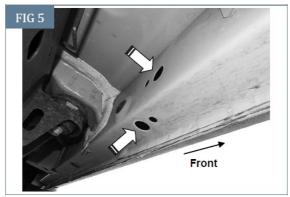

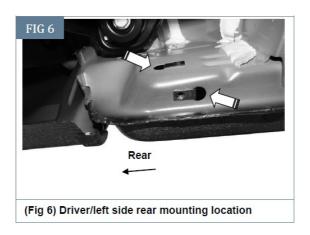


STEP 6: Select the Driver/Left Running Board. Insert (1) 8mm Bolt/Nut Plate into the front mounting tabs on the

Running Board. Thread (1) 8mm Plastic Retainer onto the threads of the Bolt/Nut Plate to hold it in place (Fig 7). Do not tighten hardware.

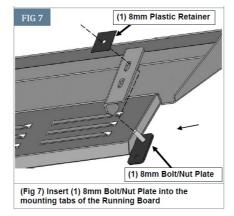

STEP 7: Repeat Step 6 insert (2) 8mm Bolt/Nut Plates into the center and rear mounting tabs.

STEP 8: Attach the Running Board to the (3) Mounting Brackets with (3) 8mm Flat Washers, (3) 8mm Lock Washers, (3) 8mm Hex Nuts and (3) 8mm Combo Bolts, (Fig 8). Do not tighten hardware.

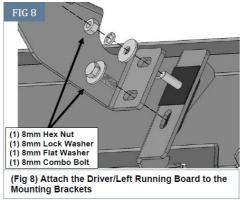

STEP 9: Level and adjust the Running Board and fully tighten all hardware.

STEP 10: Repeat Steps 1—9 to attach the Passenger/Right Running Board.

STEP 11: Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Attention: To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Running Boards. www.ironbisonauto.com

Documents / Resources



IRONBISON IBDS-C001 Running Boards Side Steps [pdf] Instruction Manual IBDS-C001 Running Boards Side Steps, IBDS-C001, Running Boards Side Steps, Boards Side Steps, Side Steps

References

IRONBISON

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.