



JEGS H11 Can Bus Xenon HID Kit Installation Guide

[Home](#) » [JEGS](#) » JEGS H11 Can Bus Xenon HID Kit Installation Guide 

Contents

- [1 JEGS H11 Can Bus Xenon HID Kit](#)
- [2 INSTALLATION](#)
- [3 Documents / Resources](#)




JEGS H11 Can Bus Xenon HID Kit



INSTALLATION

1. DISCONNECT THE VEHICLE'S BATTERY NEGATIVE TERMINAL
2. REMOVE THE DEM HALOGEN BULB FROM THE BULB SOCKET
3. INSTALL THE XENON BULB IN PLACE OF THE HALOGEN BULB
4. MOUNT THE XENON BALLAST WITH SUPPLIED BRACKETS
5. CONNECT EACH OF THE CORRESPONDING WIRE JUNCTIONS
6. IF NECESSARY, DRILL A HOLE IN THE BACK CAP FOR THE GROMMET

7. CONNECT BATTERY AND TEST SYSTEM, INSTALL HARNESS IF NECESSARY

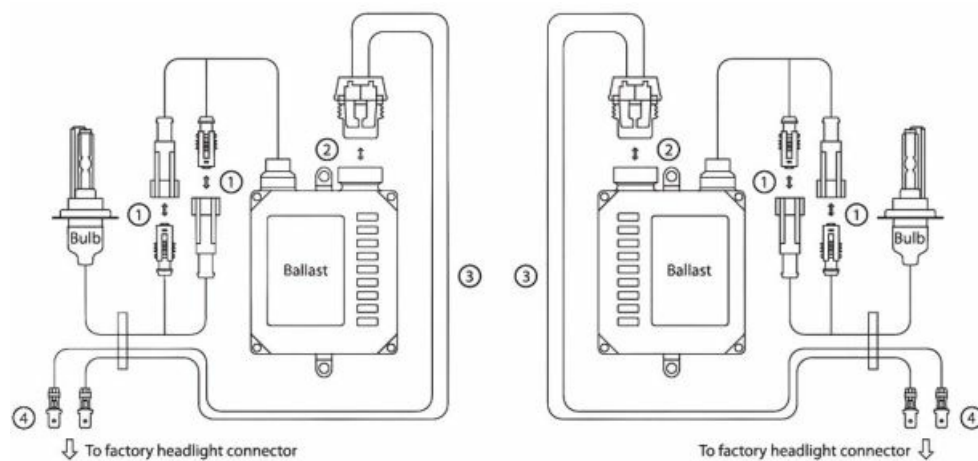

- BULB WIRE
- BALLAST CONNECTION
- HARNESS TO FACTORY
- FACTORY CONNECTOR

Documents / Resources

 HID XENON INSTALLATION DIAGRAM 1. Disconnect the negative battery terminal. 2. Remove the factory headlight bulb. 3. Connect the HID Xenon bulb to the ballast. 4. Connect the ballast to the factory headlight connector. 5. Connect the ballast to the factory headlight connector. 6. Connect the ballast to the factory headlight connector.	JEGS H11 Can Bus Xenon HID Kit [pdf] Installation Guide H11 Can Bus Xenon HID Kit, H11, Can Bus Xenon HID Kit, Xenon HID Kit, HID Kit
---	---