

### Juniper TH-3 Standing Height Collaboration Table Installation Guide

Home » JUNIPer » Juniper TH-3 Standing Height Collaboration Table Installation Guide The Collaboration Table Installation Table Installation

#### **Contents**

- 1 Juniper TH-3 Standing Height Collaboration **Table**
- 2 Product Usage Instructions
- **3 Parts List**
- **4 Connect Top Panel**
- **5 Insert Grommet**
- 6 Overview
- 7 Documents / Resources
  - 7.1 References
- **8 Related Posts**



**Juniper TH-3 Standing Height Collaboration Table** 



#### **Product Specifications**

• Product Name: TH-3 Standing-Height Collaboration Table

• Includes Add-Ons: A1 General Installation Guide

#### **Product Usage Instructions**

#### **Collaboration Table Assembly**

- 1. **Add Hardware into Side Panels:** Requires 4 wooden dowels, 2 cam locks, and 3 cam pins. Repeat for both panels.
- 2. Add Hardware to Modesty Panel: Requires 6 cam locks.
- 3. Add Hardware to Top Panel: Requires 10 cam pins.
- 4. **Connect Side Panels to Modesty Panel:** Align cam pins on side panels with open cam locks on modesty panel. Turn cam locks with a screwdriver to lock cam pins in place.
- 5. **Connect Top Panel:** Lower top panel onto the rest of the assembly. Align cam pins on the top panel with open cam locks on the modesty panel and side panels. Turn cam locks with a screwdriver to lock cam pins in place. Place cam lock covers over cam locks for a polished look.
- 6. Insert Grommet: Insert the grommet.

#### **Optional Power Module Installation**

1. **Attach Metal Clips and Insert into Surface:** Attach 2 metal clips to the back of the module base, then insert into pre-cut holes in the surface.

- 2. **Secure Module into Place:** Insert plastic clamps into holes on the bottom of the module. Rotate and then push against the surface to clamp the module into place.
- 3. **Power Management J-Clips:** Remove adhesive tape and stick J-clip to a clean, dry surface. Insert 1 wood screw through J-clip and into the laminate panel for additional security.

#### **Frequently Asked Questions**

#### 1. Q: What additional parts are needed for multiple collaboration tables?

A: Additional parts will be needed for each additional collaboration table, as listed in the Parts List section of the manual.

#### 2. Q: Can the power module be installed on any surface?

A: The power module should be inserted into pre-cut holes in the surface for proper installation.

Standing-Height
Collaboration Table
Includes Add-Ons: A1
General Installation Guide

#### **Collaboration Table Overview**


Standing-Height Collaboration Table All parts listed are for a collaboration table; additional parts will be needed for additional collaboration tables.

#### **Parts List**


Code	Qty.	Description	
Kit-CPT424	1	Top Panel	
	2	Side Panels	
	1	Modesty Panel	
CNWG	1	In-Surface Grommet	

#### **Add Hardware into Side Panels**


Requires 4 wooden dowels, 2 cam locks, and 3 cam pins. Repeat for both panels.

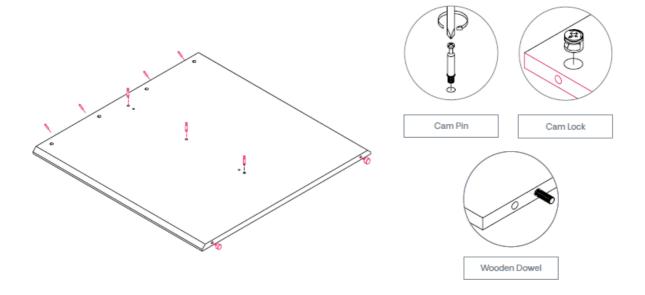

# Add Hardware to Modesty Panel Requires 6 cam locks

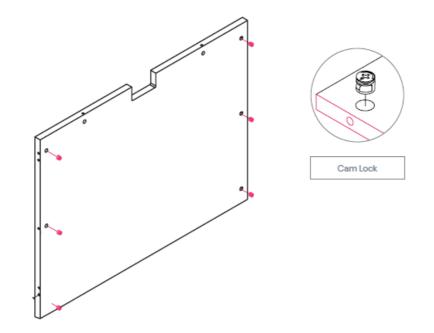


## Add Hardware to Top Panel Requires 10 cam pins.

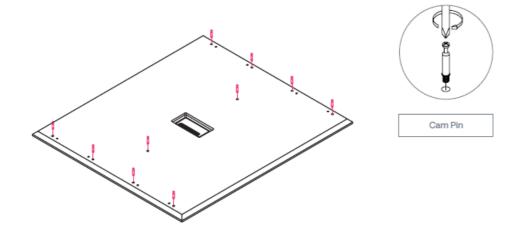


#### **Connect Side Panels to Modesty Panel**

Align cam pins on side panels with open cam locks on modesty panel. Turn cam locks with a screwdriver to lock cam pins in place.

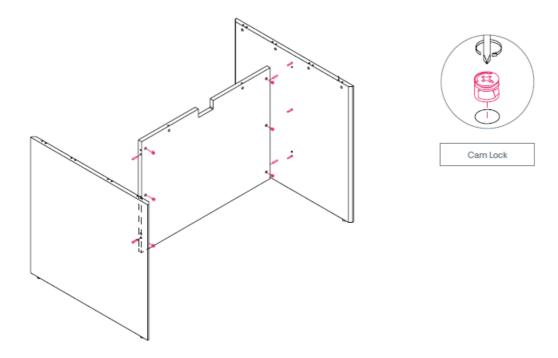


#### **Connect Top Panel**

Lower top panel onto rest of assembly. Align cam pins on top panel with open cam locks on modesty panel and side panels. Turn cam locks with a screwdriver to lock cam pins in place. Place cam lock covers over cam locks for a polished look.

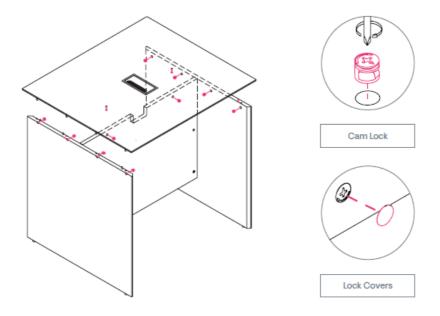

#### **Insert Grommet**

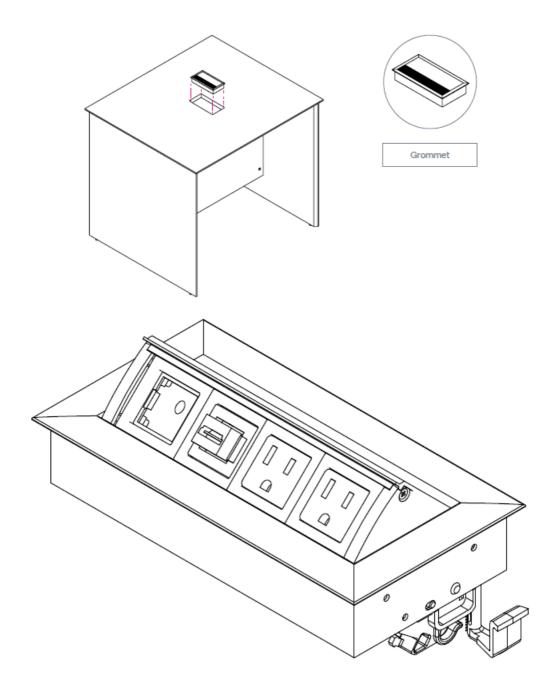

#### A1: Power Module

### Overview


Standing-Height Collaboration Table All parts listed are for a power module; additional parts will be needed for additional power modules.

#### **Parts List**

Code	Qty.	Description	
BPCONF2v2 or BP CONF3	1	In-Surface Power Module	
JC1	5	J-Clips	6


#### **Attach Metal Clips and Insert into Surface**

Attach 2 metal clips to back of module base, then insert into pre-cut holes in surface.

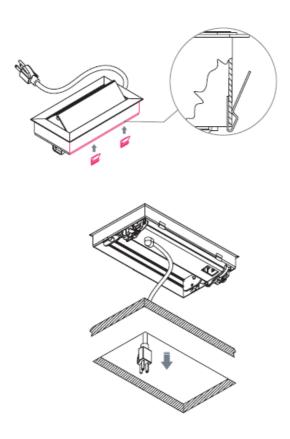

#### **Secure Module into Place**

Insert plastic clamps into holes on bottom of module. Rotate and then push against surface to clamp module into place.

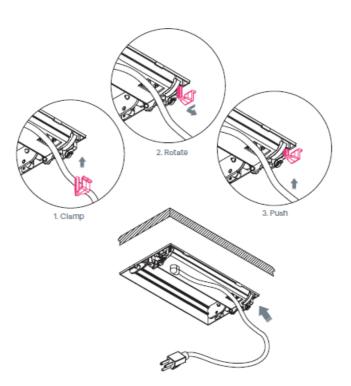

#### **Power Management J-Clips**

Remove adhesive tape and stick j-clip to a clean, dry surface. Insert 1 wood screw through j-clip and into laminate panel for additional security.

#### 1-866-999-0955 | hello@juniperoffice.com | juniperoffice.com

© 2023 Juniper Office | Version 23.0.0

#### **Documents / Resources**



<u>Juniper TH-3 Standing Height Collaboration Table</u> [pdf] Installation Guide TH-3, A1, TH-3 Standing Height Collaboration Table, TH-3, Standing Height Collaboration Table, Height Collaboration Table

#### References

- $\sqrt[4]{\text{Juniper}}$  Office Furniture for the Entire Workspace
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.