



KENDAL LIGHTING MS1R-BLK For Both Single and Multiple Tracks Instruction Manual

[Home](#) » [KENDAL LIGHTING](#) » KENDAL LIGHTING MS1R-BLK For Both Single and Multiple Tracks Instruction Manual 

Contents

- [1 KENDAL LIGHTING MS1R-BLK For Both Single and Multiple Tracks Instruction Manual](#)
- [2 CAUTION:](#)
- [3 NOTE:](#)
- [4 REMARQU](#)
- [5 Read More About This Manual & Download PDF:](#)
- [6 Documents / Resources](#)

KENDAL LIGHTING MS1R-BLK For Both Single and Multiple Tracks Instruction Manual



CAUTION:


1. BEFORE INSTALLING THE LIGHT FIXTURES, PLEASE READ THE INSTALLATION
2. DISCONNECT POWER AT CIRCUIT BREAKER BEFORE INSTALLATION OR SERVICING. 3. DONOT
INSTALL THE TRACK IN DAMP OR WET LOCATIONS.
3. THIS TRACK IS 120V, INDOOR USE ONLY
AVERTISSEMENT: 1. LIRE LES DIRECTIVES POUR L'INSTALLATION ATTENTIVEMENT AVANT
D'INSTALLER LES LUMINAIRES.
ENTRETIEN OU UNE REPARATION, 3. NE PAS INSTALLER LE RAIL DANS UN LIEU HUMIDE
4. CE RAIL A UN INDICE DE PROTECTION IP20— IL EST RESERVE A UN USAGE A
5. LES RACCORDEMENTS ELECTRIQUES DOIVENT ETRE EFFECTUES PAR UN ELECTRICIEN QUALIFIE

NOTE:


1. TRACK SECTIONS SHOULD BE JOINED TOGETHER ON THE FLOOR BEFORE INSTALLING INTO THE
CEILING.
2. WHEN INSTALLING LONGER TRACK RUNS UTILIZING MULTIPLE 96 WATT SECTIONS, YOU MUST
ENSURE THE ELECTRICAL CONNECTION BETWEEN EACH SECTION IS TERMINATED. ADDITIONAL 6
WATT SECTION WITHOUT THE USE OF MSA22
3. PIN CONNECTORS OR RECESSED CABLE CONNECTORS.

REMARQUE

1. LES PARTIES DU RAIL DOIVENT ETRE FIXEES ENSEMBLE SUR LE PLANCHER AVANT VIRSTALLATION AU PLAFOND.
2. LORS DE L'INSTALLATION DE RAILS PLUS LONGS EN UTIIISANT PLUSIEURS SECTIONS DE 96 W, VOUS DEVEZOUS ASSURER QUE LA CONNEXION ELECTRIQUE ENTRE CHAQUE SECTION EST EFFECTUEE. UNE NOUVELLE CONNEXION A PARTIR DU PILOTE DOIT ETRE. ETABLIE AU DEBUT DE CHAQUE SECTION DE 96 W SUPPLEMENTAIRE, ET CE, SANS LUTILISATION DE CONNECTEURS M\$422 A QUATRE BROCHES OU DE CONNECTEURS DE CRBLE ENCASTRES.

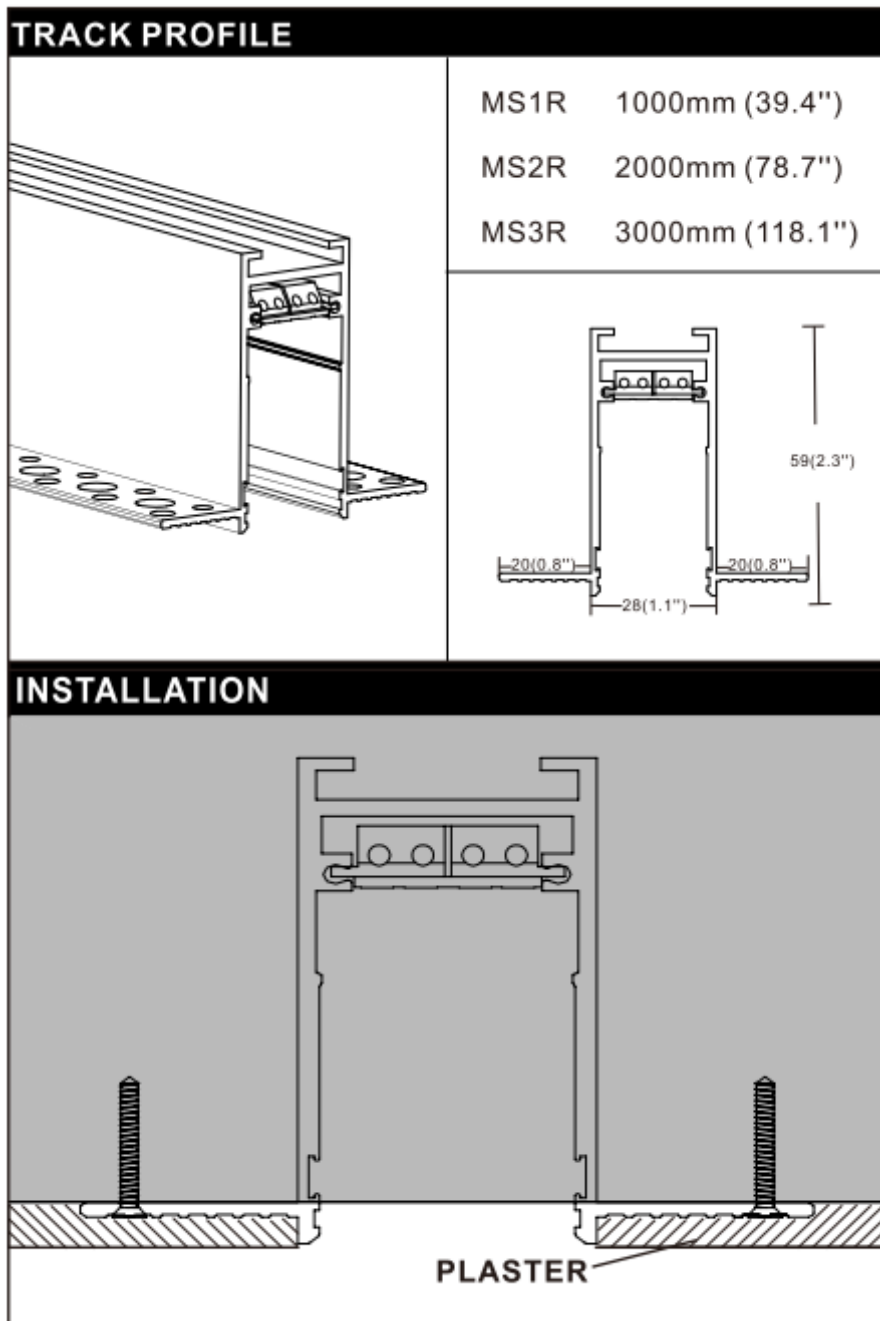

END CAPS

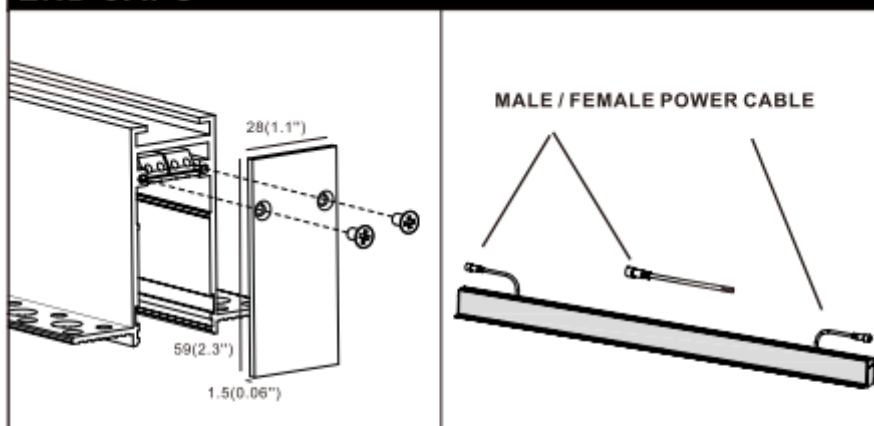

INCLUDED HARDWARE

MS1R (ONE METER TRACK) INCLUDES:

2 × SCREWS  2 × WALL PLUGS  2 × PIN2 

1 × ALLEN WRENCH  1 × MALE POWER CABLE 

MS2R (TWO METER TRACK) INCLUDES:

4 × SCREWS  4 × WALL PLUGS  2 × PIN2 

1 × ALLEN WRENCH  1 × MALE POWER CABLE 


MS3R (THREE METER TRACK) INCLUDES:

6 × SCREWS  6 × WALL PLUGS  2 × PIN2 


1 × ALLEN WRENCH  1 × MALE POWER CABLE 

INSTALLATION


POSITION

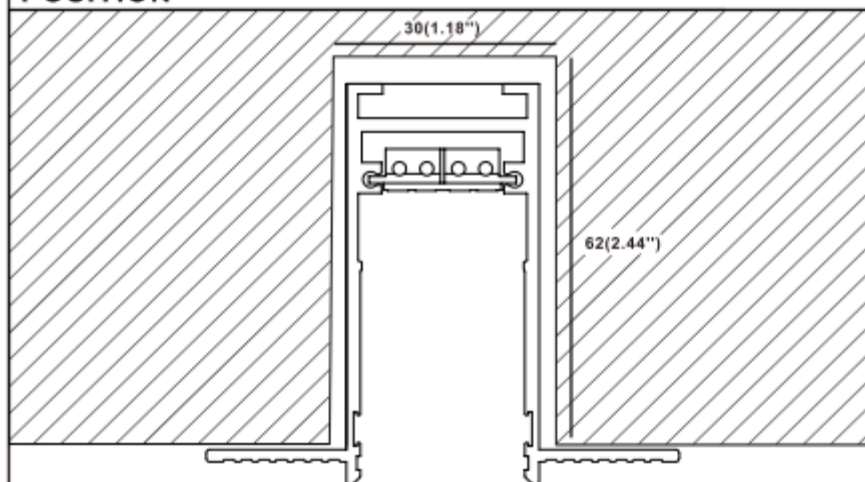


STEP 1 REMOVE TRACK AND ACCESSORIES FROM BOX

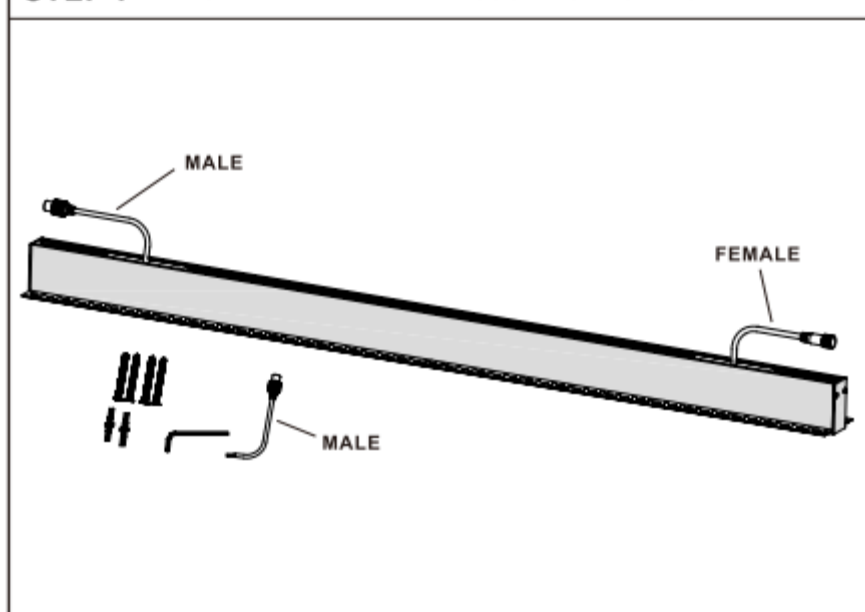

STEP 2 CONNECT THE PROVIDED MALE POWER CABLE TO THE FEMALE TRACK CABLE BY LINING UP THE ARROWS ON THE CABLE CONNECTORS AND PUSH TOGETHER. SECURE WITH THE CABLE NUT.

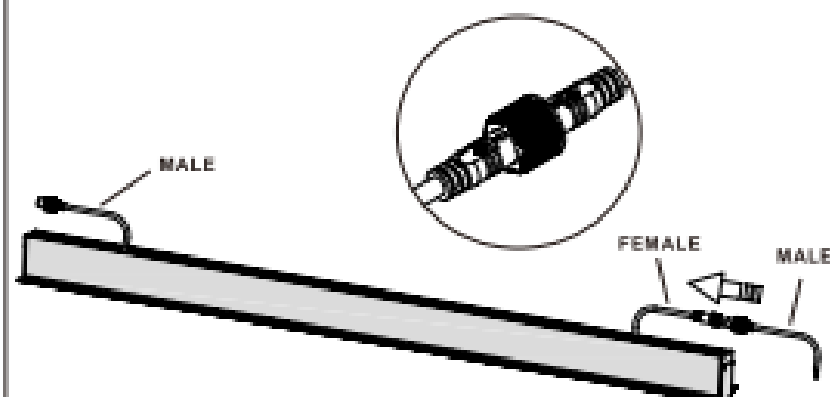


STEP 3 CUT HOLE FOR RECESSED TRACK


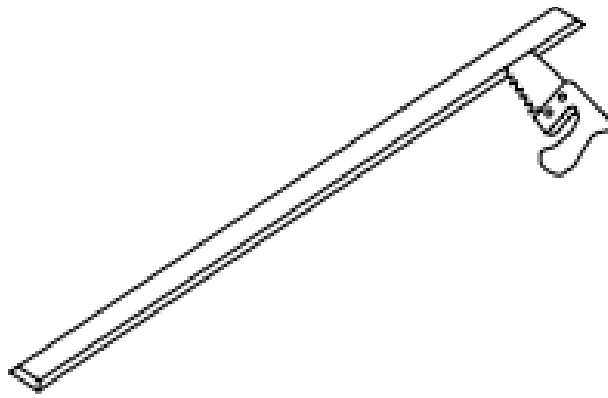


HOLE LENGTH SHOULD BE TOTAL LENGTH OF TRACK PLUS 1/4"
HOLE WIDTH SHOULD BE 1 5/16"
HOLE DEPTH SHOULD BE MIN. 3"

STEP 4 CONNECT POWER FROM REMOTE DRIVER(a) TO PROVIDED POWER CABLE(b), CONNECT MALE POWER CABLE (b) TO TRACK POWER CABLE (c), INSTALL TRACK

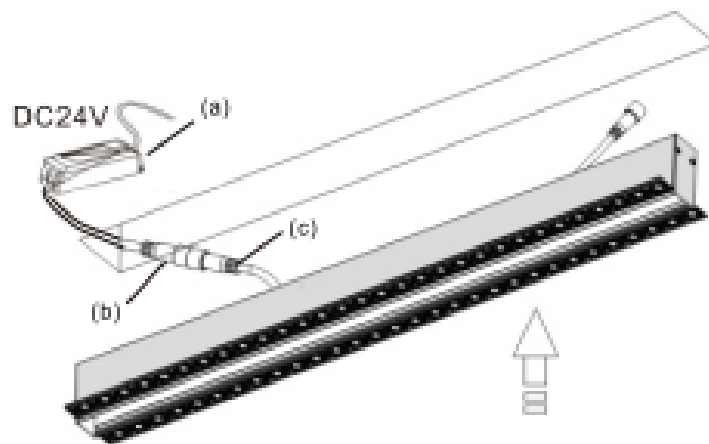


STEP 5 ATTACH TRACK WITH SCREWS

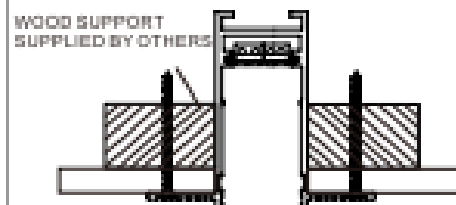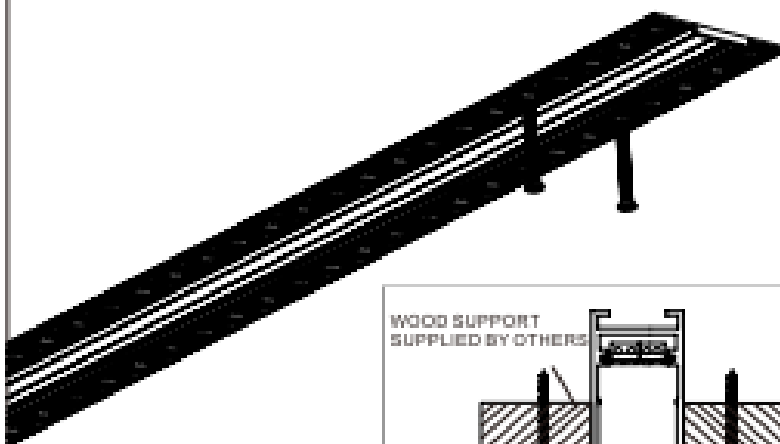


STEP 6 INSTALL THE MSAR11 RECESSED TRACK COVER ONTO THE TRACK




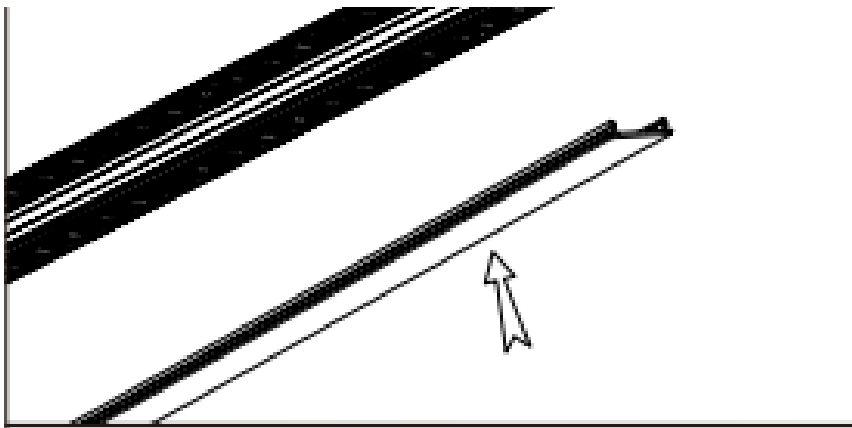


STEP 7 TAPING

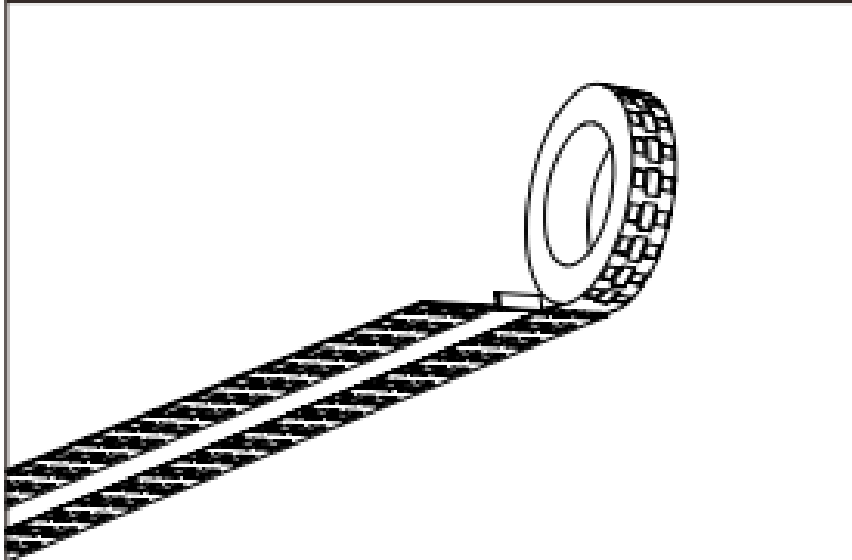

STEP 8 PLASTERING

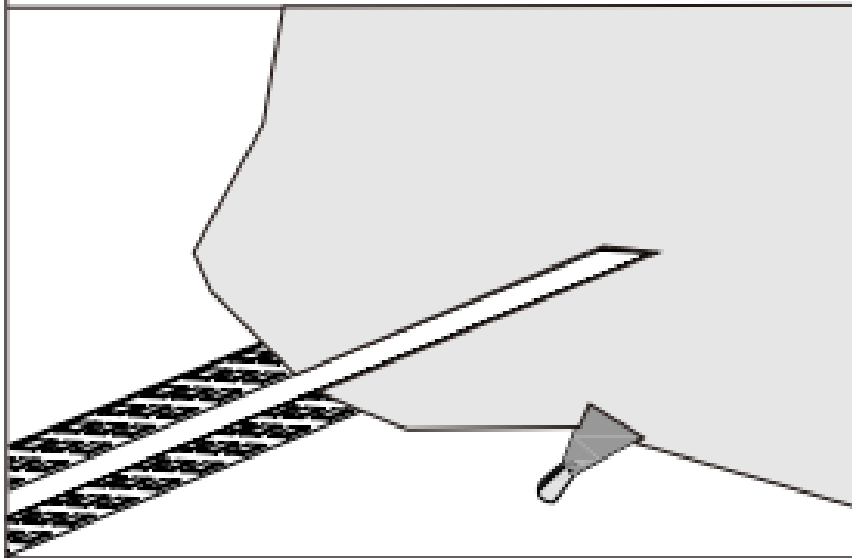


STEP 9 PAINTING

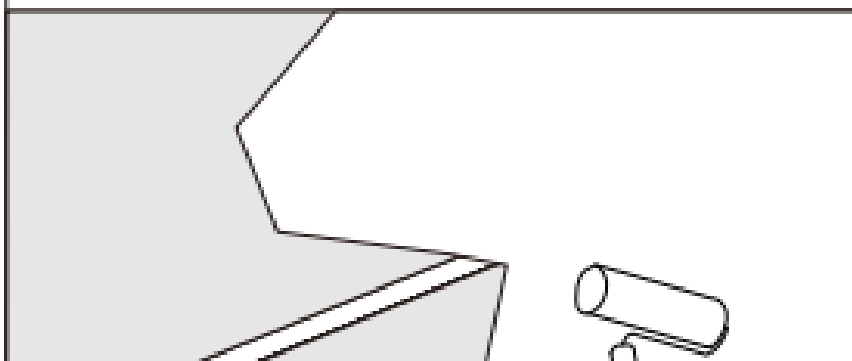




STEP 10 REMOVE THE MSAR11 RECESSED TRACK COVER FROM TRACK

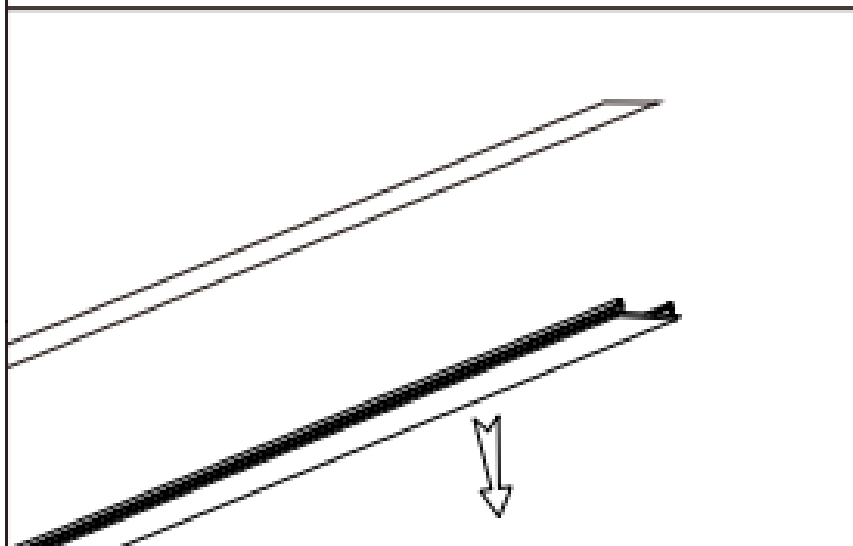


STEP 11 FINISHED INSTALLATION OF THE TRACK

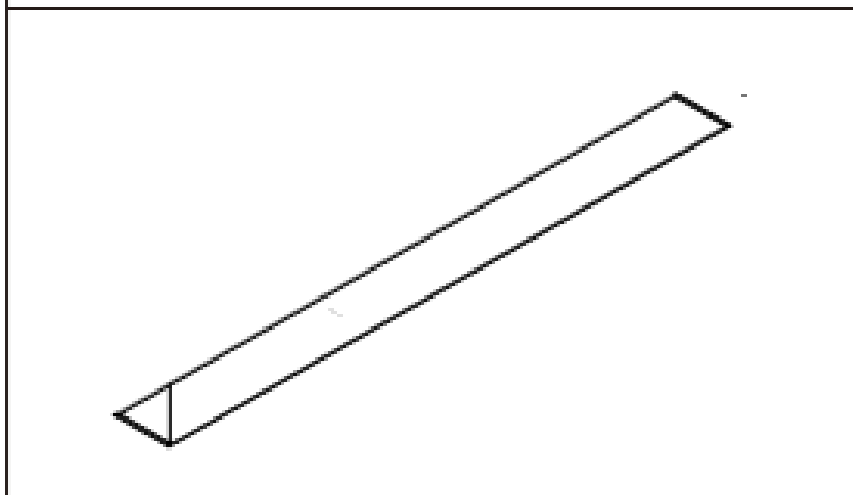


STEP 12 INSTALL ELEMENTS


NOTE: CALCULATE THE WATTAGE OF ALL ELEMENTS BEING USED TO MAKE SURE MAXIMUM WATTAGE OF REMOTE DRIVER IS NOT BEING EXCEEDED.

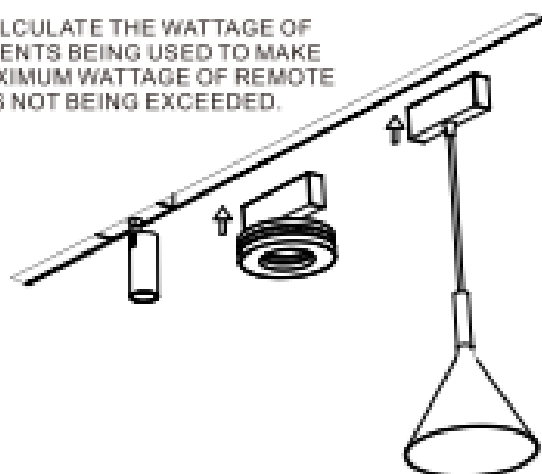


TRACK PROFILE

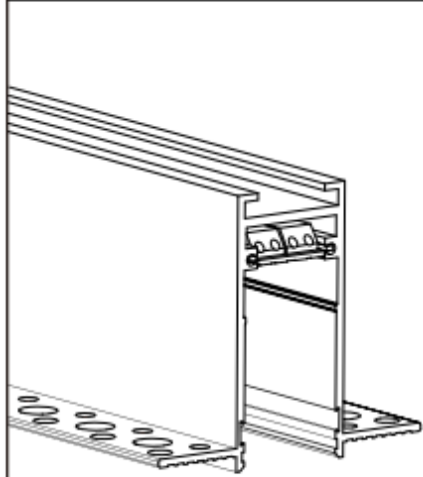


MS1R	1000mm (39.4")
MS2R	2000mm (78.7")
MS3R	3000mm (118.1")

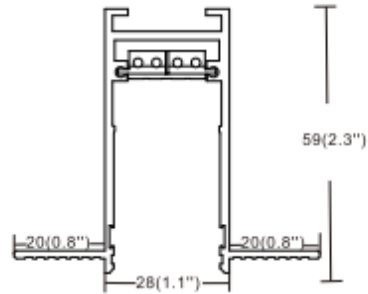

INSTALLATION

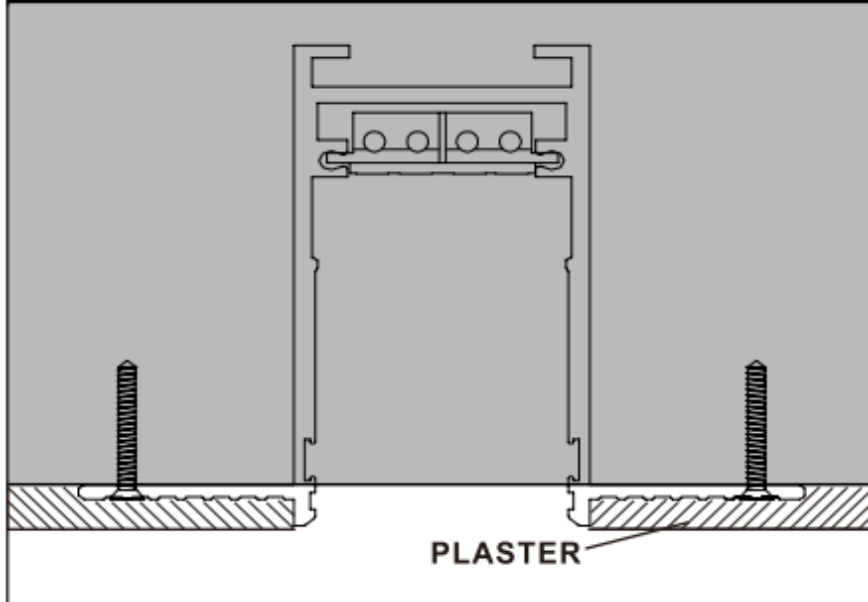

END CAPS

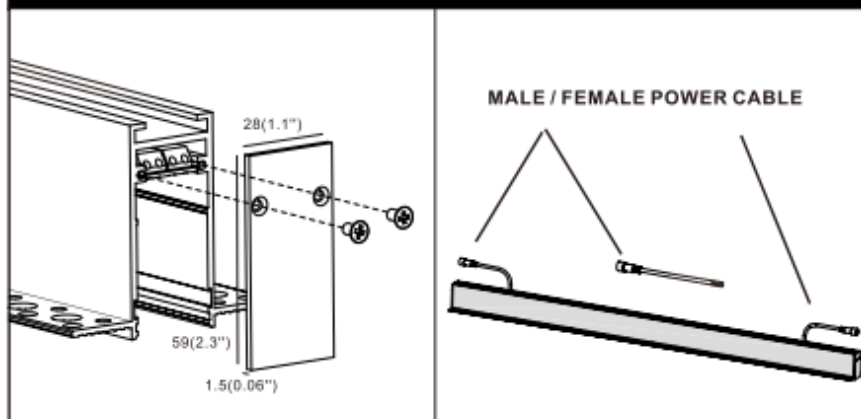

INCLUDED HARDWARE

MS1R (ONE METER TRACK) INCLUDES:

2 × SCREWS  2 × WALL PLUGS  2 × PIN2 

1 × ALLEN WRENCH  1 × MALE POWER CABLE 

MS2R (TWO METER TRACK) INCLUDES:

4 × SCREWS  4 × WALL PLUGS  2 × PIN2 

1 × ALLEN WRENCH  1 × MALE POWER CABLE 


MS3R (THREE METER TRACK) INCLUDES:

6 × SCREWS  6 × WALL PLUGS  2 × PIN2 


1 × ALLEN WRENCH  1 × MALE POWER CABLE 

INSTALLATION


POSITION

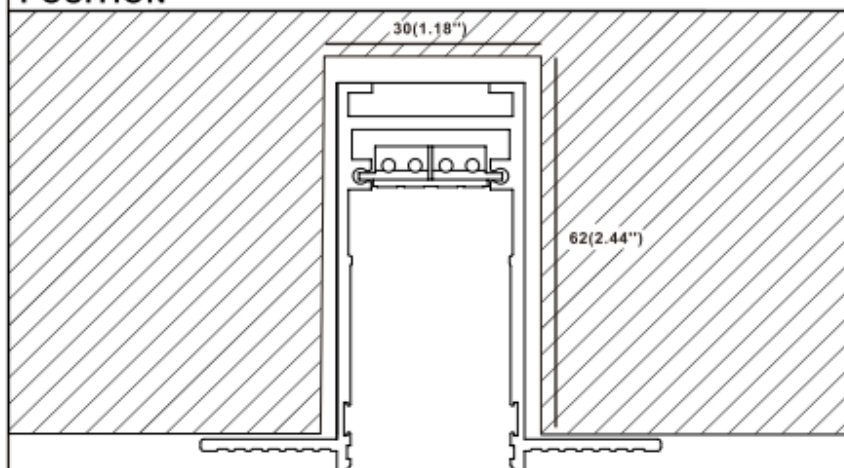


STEP 1 REMOVE TRACK AND ACCESSORIES FROM BOX

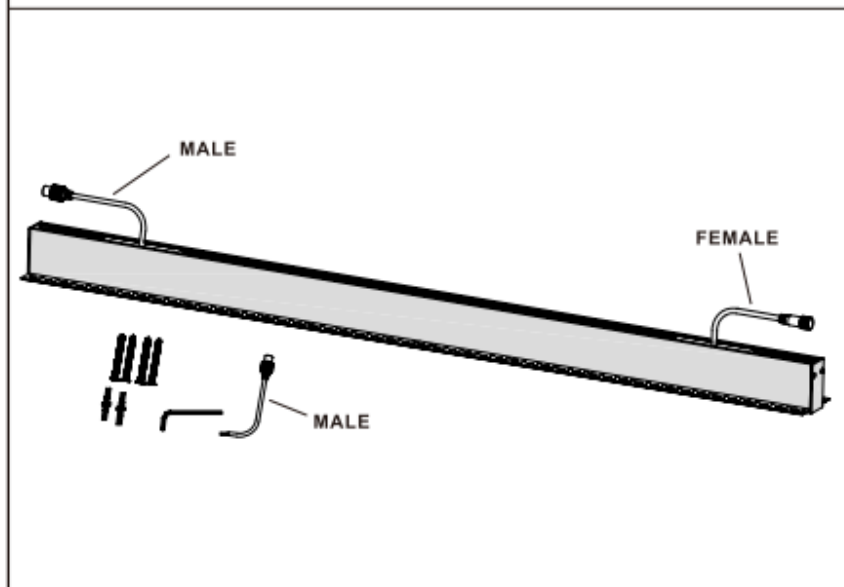

STEP 2 CONNECT THE PROVIDED MALE POWER CABLE TO THE FEMALE TRACK CABLE BY LINING UP THE ARROWS ON THE CABLE CONNECTORS AND PUSH TOGETHER. SECURE WITH THE CABLE NUT.

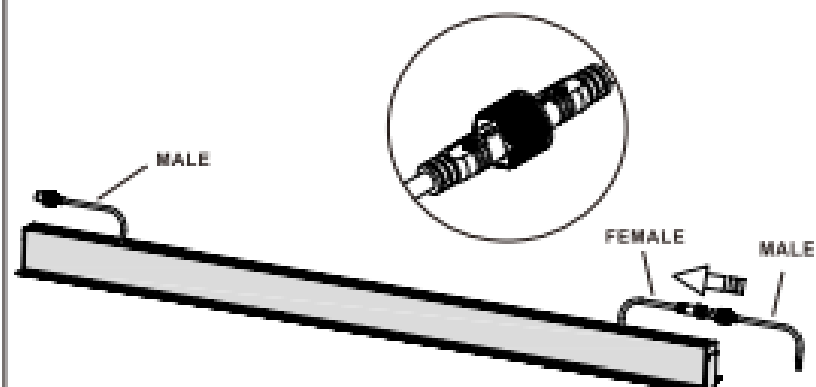


STEP 3 CUT HOLE FOR RECESSED TRACK


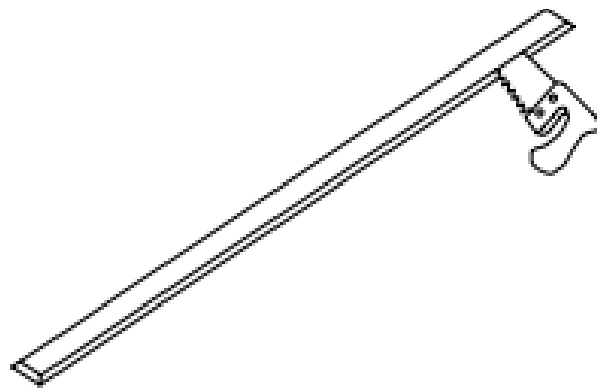


HOLE LENGTH SHOULD BE TOTAL LENGTH OF TRACK PLUS 1/4"
HOLE WIDTH SHOULD BE 1 5/16"
HOLE DEPTH SHOULD BE MIN. 3"

STEP 4 CONNECT POWER FROM REMOTE DRIVER(a) TO PROVIDED POWER CABLE(b), CONNECT MALE POWER CABLE (b) TO TRACK POWER CABLE (c), INSTALL TRACK

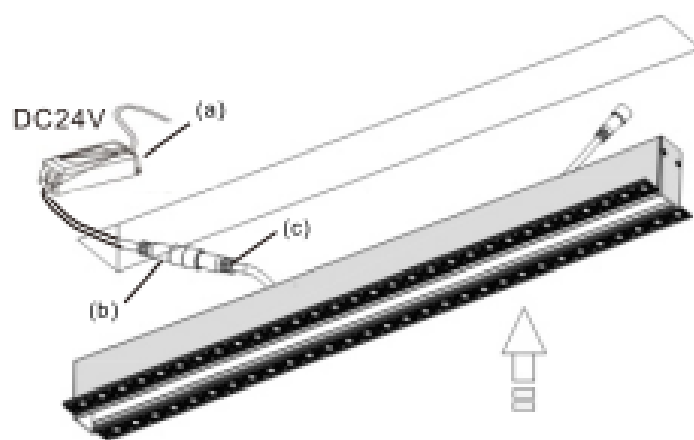


STEP 5 ATTACH TRACK WITH SCREWS

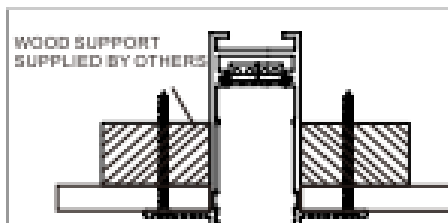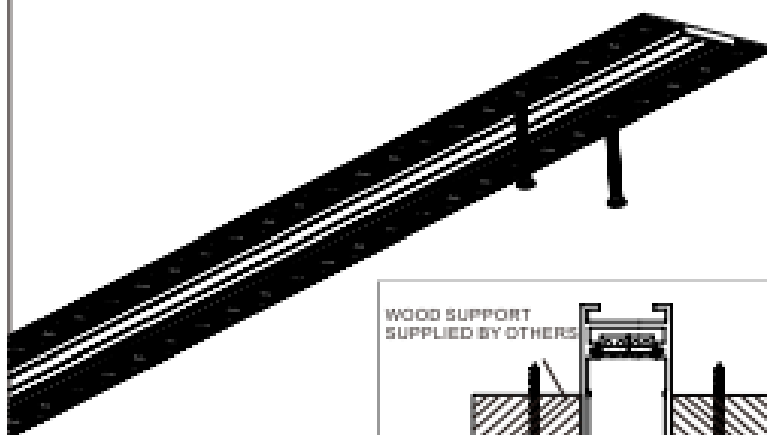


STEP 6 INSTALL THE MSAR11 RECESSED TRACK COVER ONTO THE TRACK




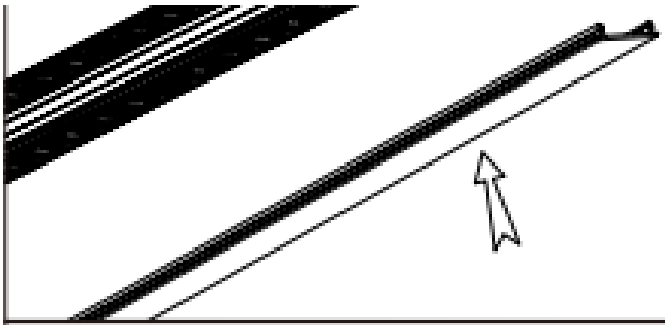


STEP 7 TAPING

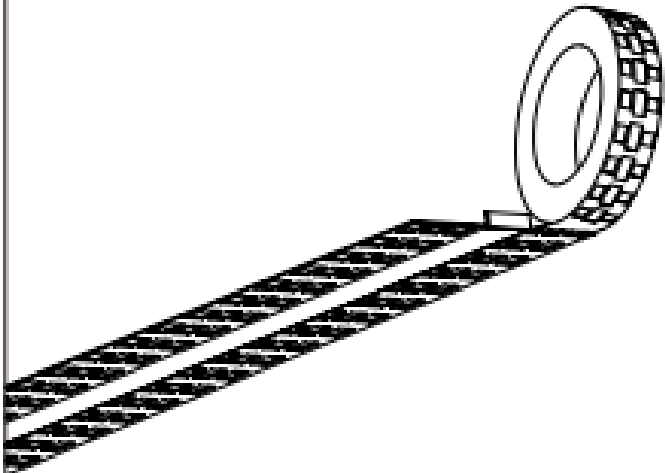


STEP 8 PLASTERING

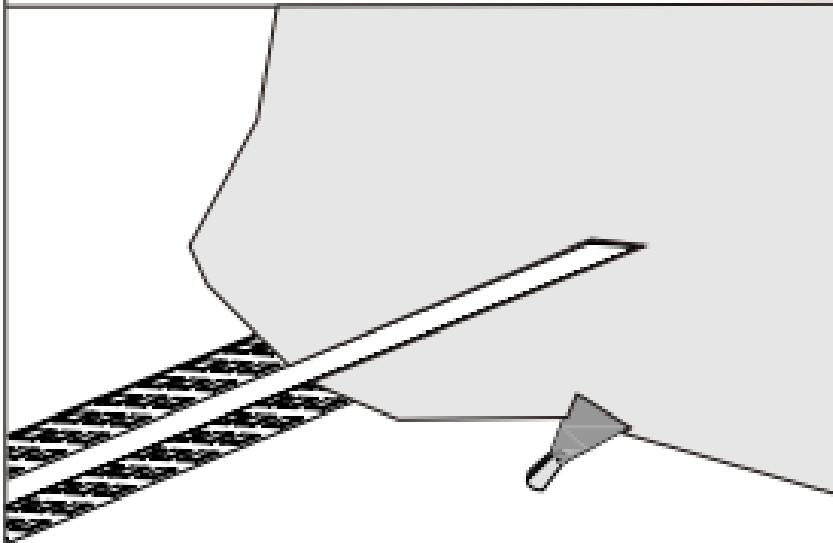


STEP 9 PAINTING

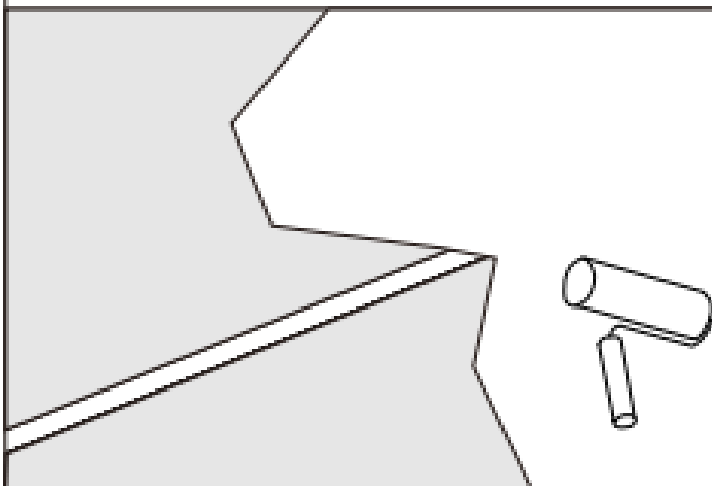

STEP 10 REMOVE THE MSAR11 RECESSED TRACK COVER FROM TRACK

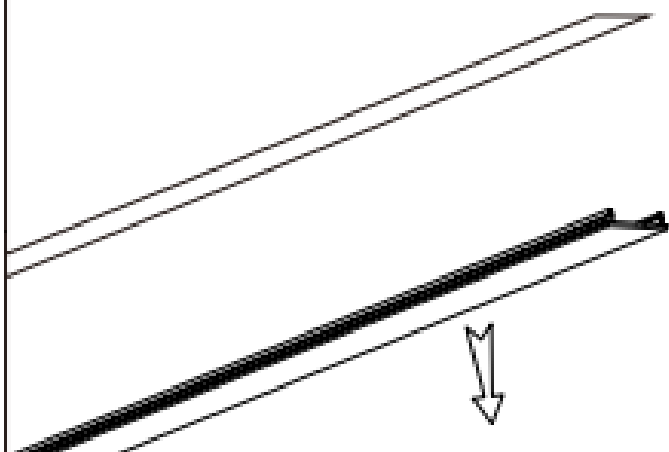


STEP 11 FINISHED INSTALLATION OF THE TRACK

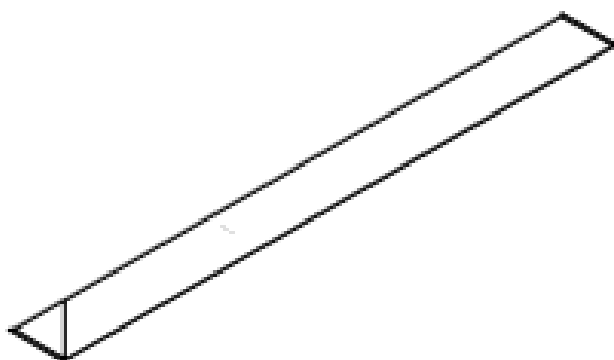


STEP 12 INSTALL ELEMENTS

NOTE: CALCULATE THE WATTAGE OF ALL ELEMENTS BEING USED TO MAKE SURE MAXIMUM WATTAGE OF REMOTE DRIVER IS NOT BEING EXCEEDED.

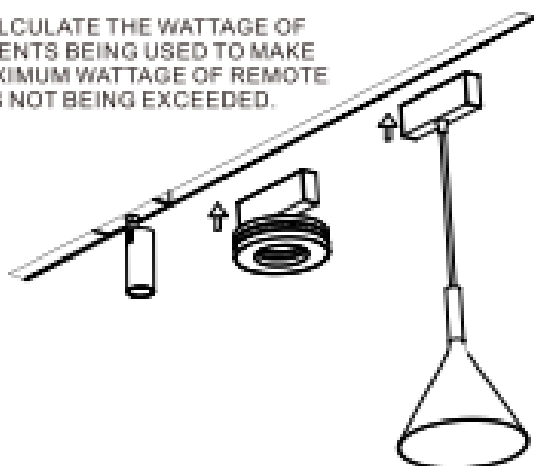

Documents / Resources

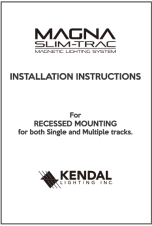	KENDAL LIGHTING MS1R-BLK For Both Single and Multiple Tracks [pdf] Instruction Manual MS1R-BLK For Both Single and Multiple Tracks, MS1R-BLK, For Both Single and Multiple Tracks, Single and Multiple Tracks, Multiple Tracks, Tracks
---	--

[Manuals+](#)