



Keychron K15 Pro Wireless Custom Mechanical Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron K15 Pro Wireless Custom Mechanical Keyboard User Guide 

Keychron K15 Pro Wireless Custom Mechanical Keyboard User Guide



If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.


Contents

- [1 Switch To The Right System](#)
- [2 Connect Bluetooth](#)
- [3 Connect Cable:](#)
- [4 The VIA Key Remapping Software](#)
- [5 The Layan](#)
- [6 The Backlight](#)
- [7 Adjust The Backlight Brightness](#)
- [8 Adjust The Backlight Spec'd](#)
- [9 Watch T Building Tutorial On Our Website](#)
- [10 Factory Reset](#)
- [11 Documents / Resources](#)

Switch To The Right System



Please make sure the system toggle on the top left corner has been switched to the same system as your

computer's operating system.

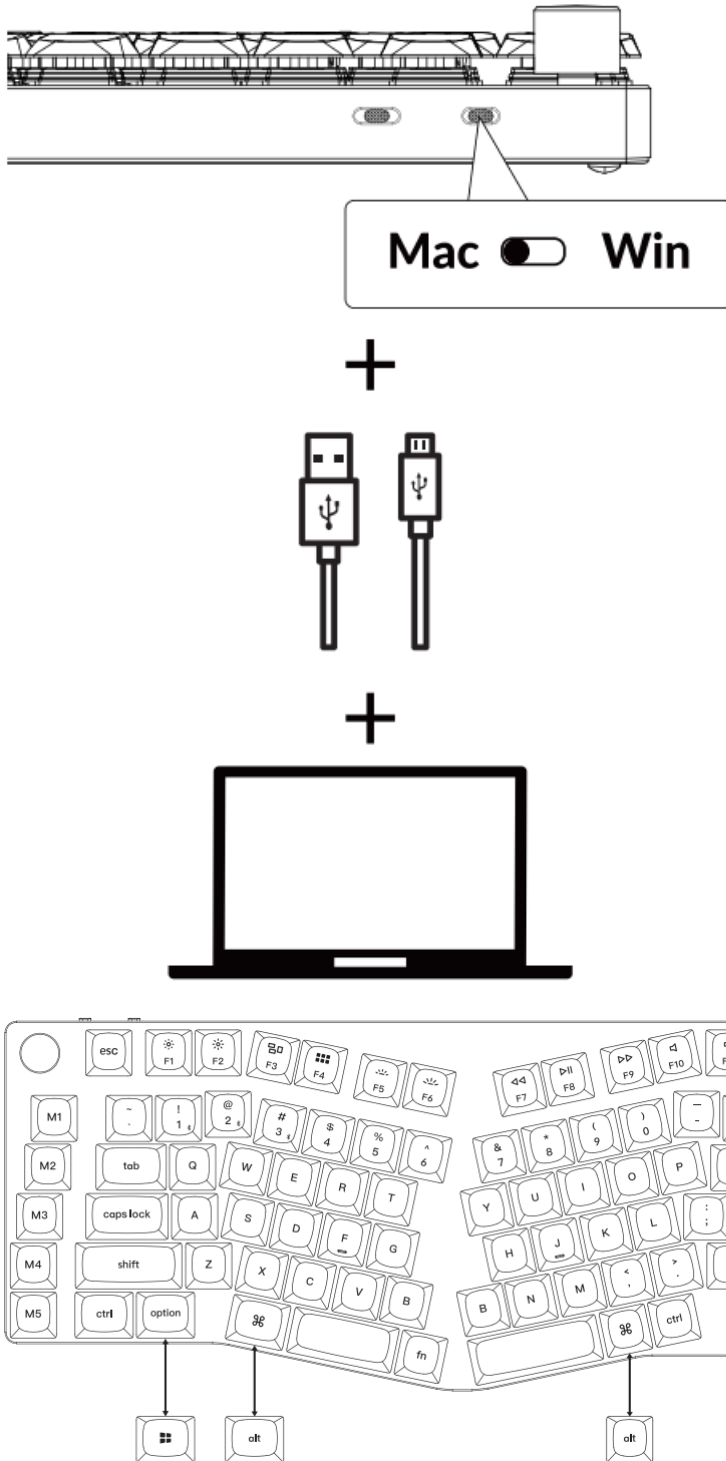


Connect Bluetooth

Press fn + 1 (for 4 seconds) and pair with device named Keychron K15 Pro.

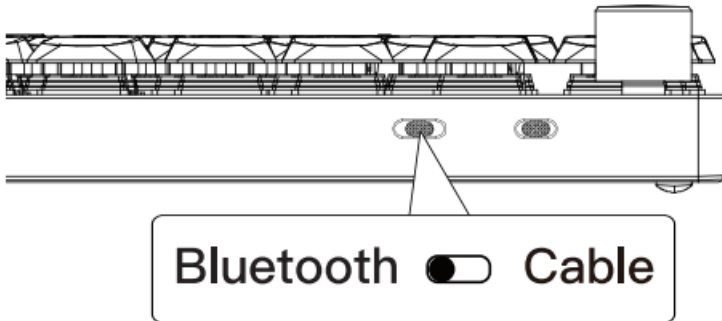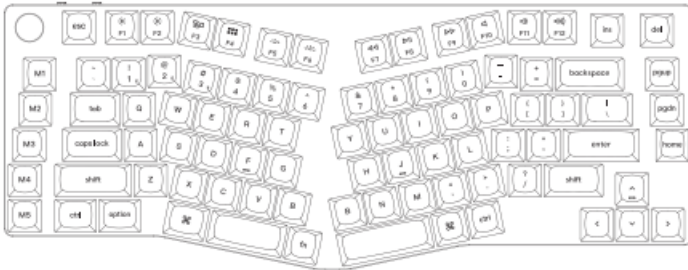

Switch toggle to Bluetooth

Connect Cable:

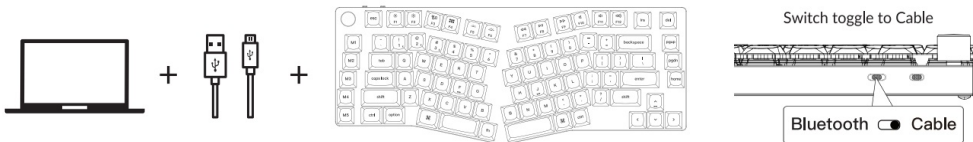

The VIA Key Remapping Software


Please visit usevia.app to use the online VIA software to remap the keys. If the VIA cannot recognize your keyboard, please reach our support to get the instruction.

- The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.
- VIA only works when the keyboard is connected by wire to the computer.




The Layan


There are four layers of key stings on the Keyboard. The layer 0 and Ayer 1 3reforthe Mac system. The layer 2and Ayer 3are for the Windows system.

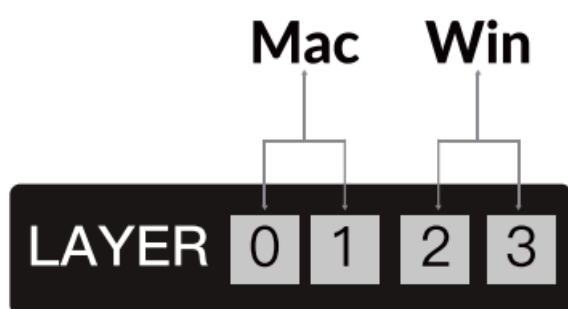

If your system toggle stitched tombac, then the layer Owl be acthated

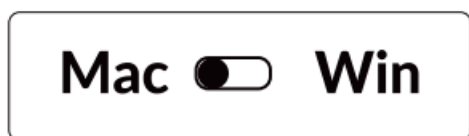


If your system toggle stitched to Windows, then the layer 2 will be activated. Remember that f you. are sing it n Windows mode, please make changes o the aye 2 instead of the op layer the flyer O, "This s a common mistake people are making.

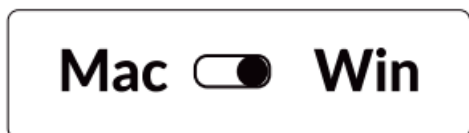


The Backlight

Pres fin-+ To change the lighting effect

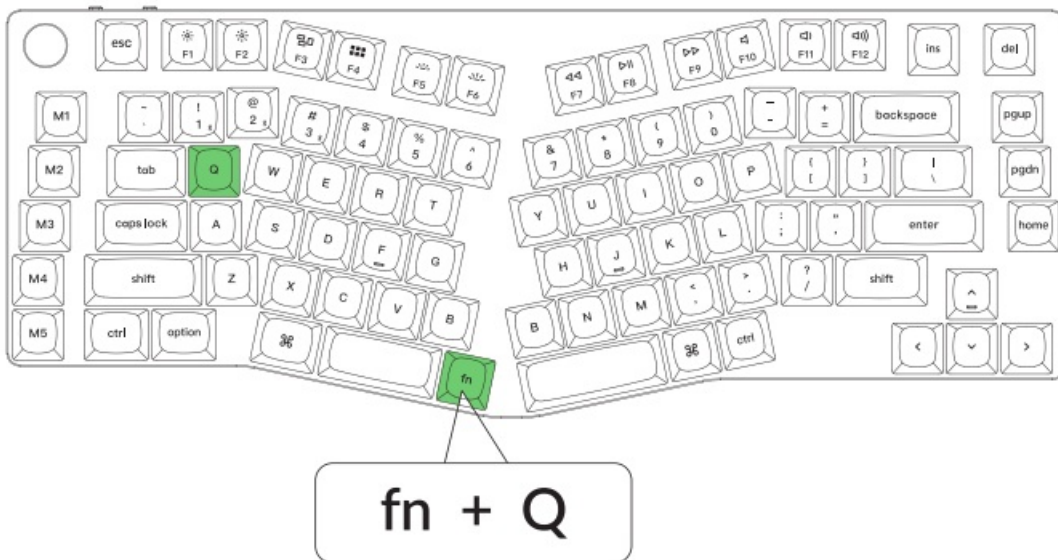


Press fn + tab to turn the backlight on/off

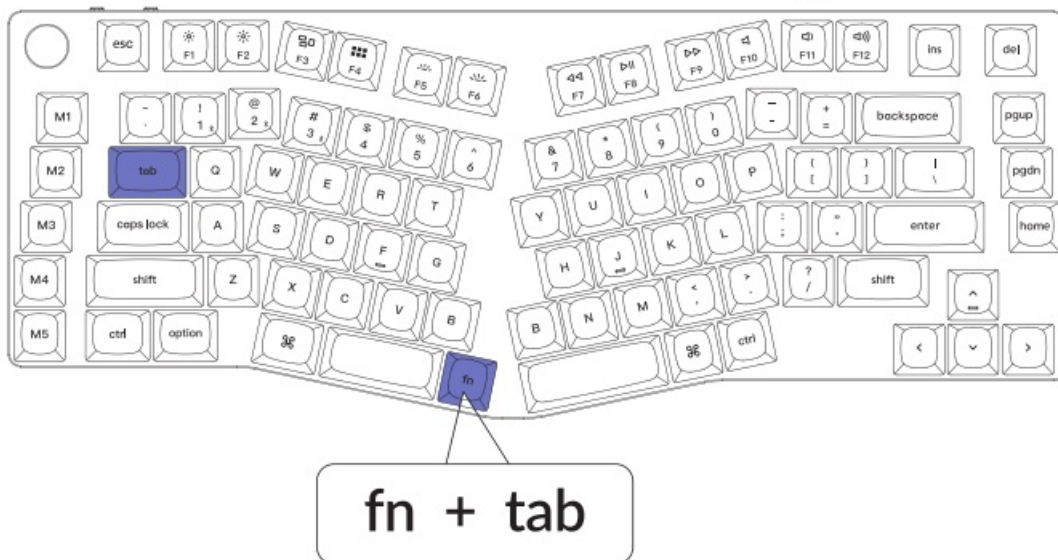


Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness.

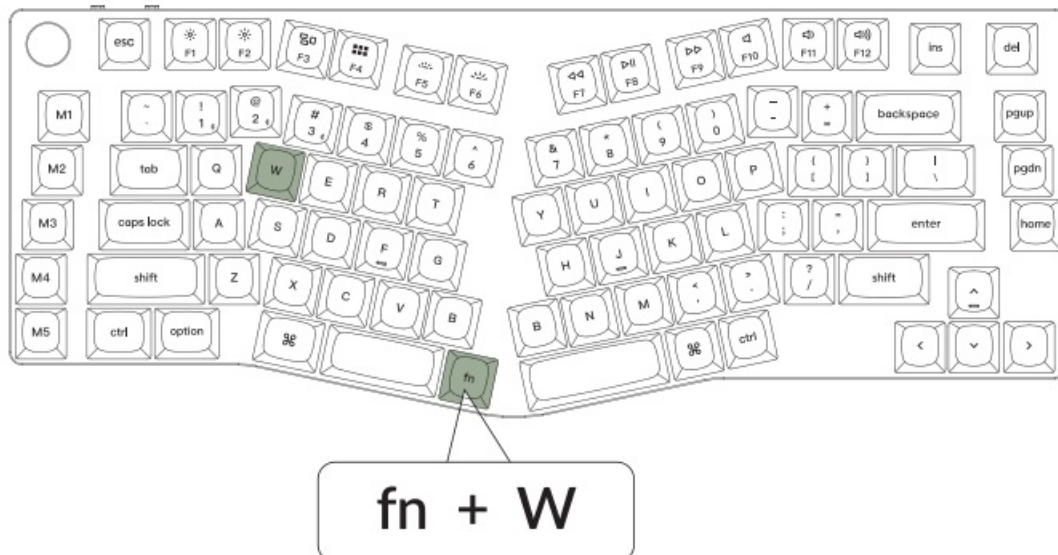


Press fn + S to decrease the backlight brightness

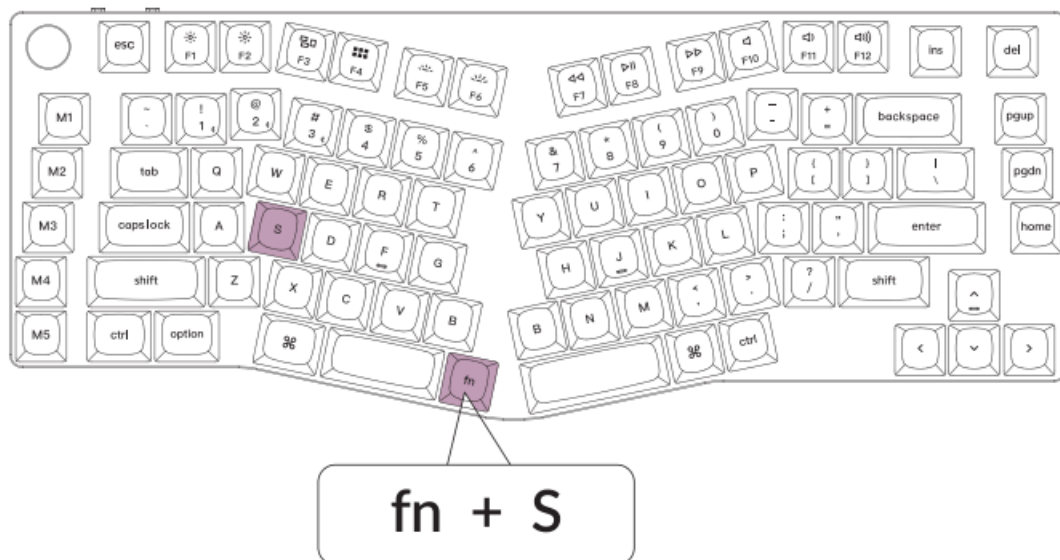


Adjust The Backlight Spec'd

Press + T to increase the light effect speed

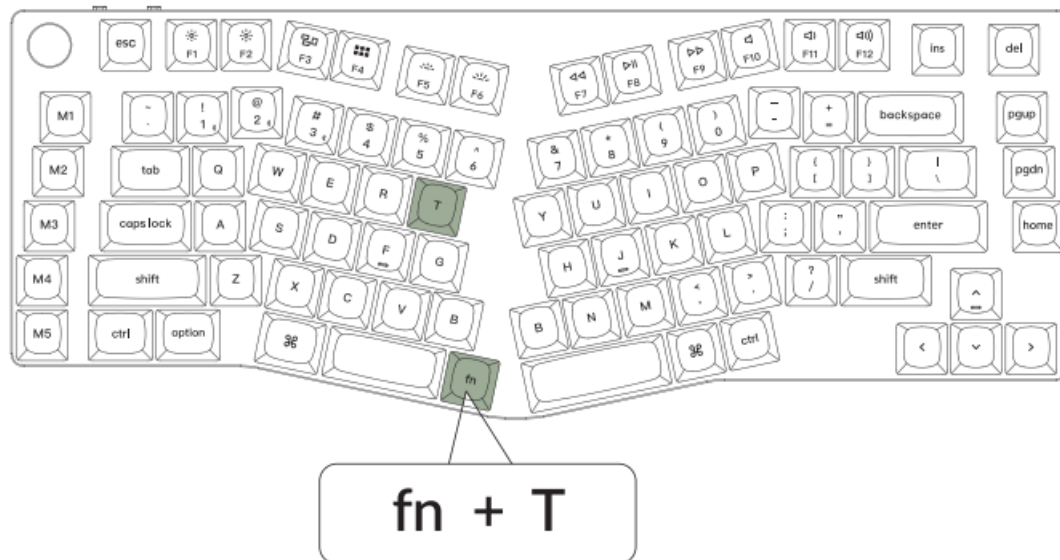


Press fn + G to decrease the light effect speed

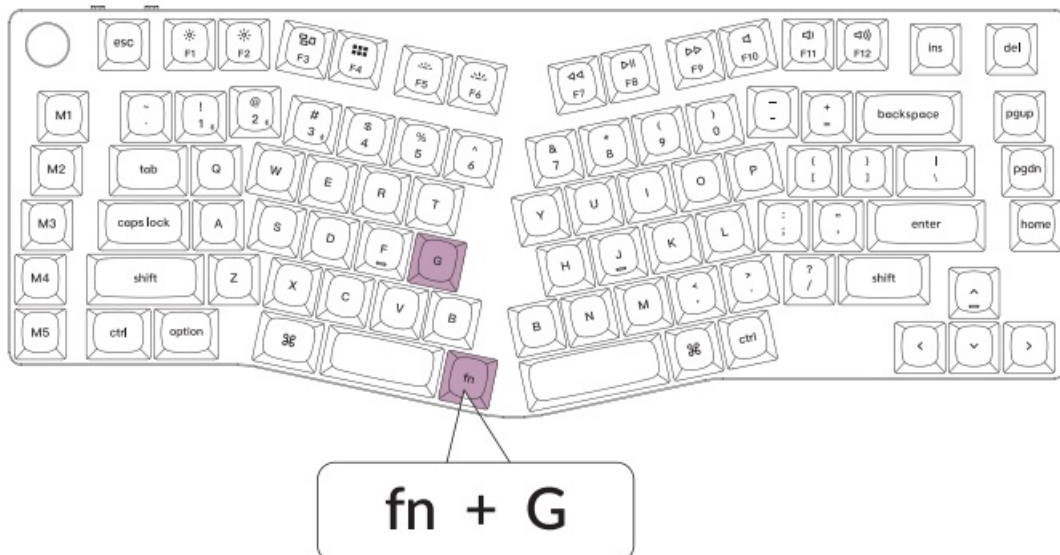

Watch T Building Tutorial On Our Website

If you are building the keyboard of the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yours.

Factory Reset

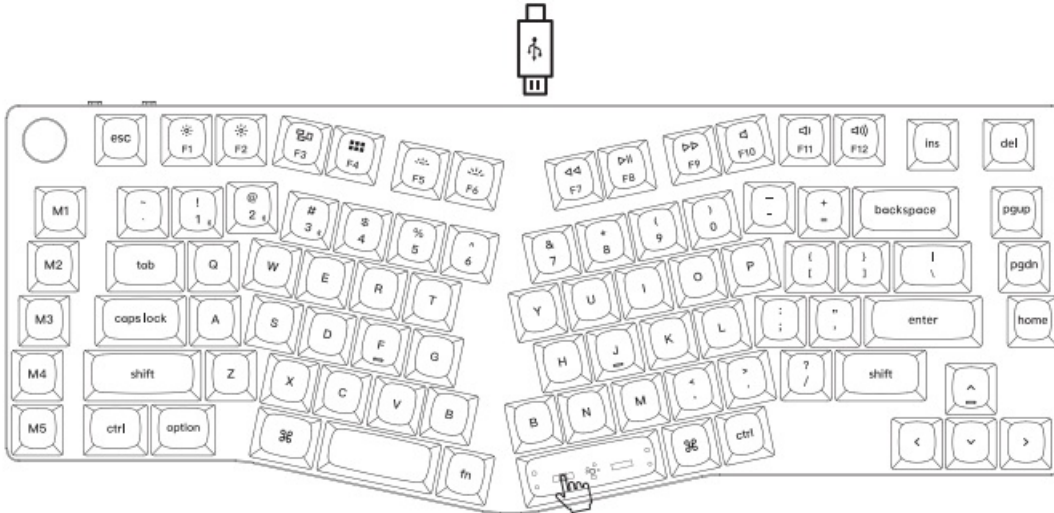

Troubleshooting? Don't know what's going on with the keyboard?


1. Troubleshooting? Don't know what's going on with the keyboard? Plug in the power cable and switch the keyboard to Cable mode.
2. Factory reset the keyboard by pressing fn + J + Z (for 4 seconds).
3. Download the right firmware and QMK Toolbox from our website.
4. Switch the keyboard to OFF mode and remove the space bar keycap to find the reset button on the PCB.
5. Hold the reset key first, then switch the keyboard to Cable mode. Release the reset key, and the keyboard will now enter DFU mode.
6. Flash the firmware with the QMK Toolbox.
7. Factory reset the keyboard again by pressing fn +J+Z (for 4 seconds).

* Step by step guide can be found on our website.

Not Happy

support@keychron.com

Documents / Resources

	Keychron K15 Pro Wireless Custom Mechanical Keyboard [pdf] User Guide K15 Pro, K15 Pro Wireless Custom Mechanical Keyboard, Wireless Custom Mechanical Keyboard, Custom Mechanical Keyboard, Mechanical Keyboard, Keyboard
---	---