



Keychron K17 Pro Low Profile Custom Wireless Mechanical Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron K17 Pro Low Profile Custom Wireless Mechanical Keyboard User Guide 

Keychron

K17 Pro Low Profile Custom Wireless Mechanical Keyboard User Guide

Contents

- [1 K17 Pro Low Profile Custom Wireless Mechanical Keyboard](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

K17 Pro Low Profile Custom Wireless Mechanical Keyboard

Search “RGB keymap” here to download the JSON file if VIA does not automatically recognize keymap of the K17 Pro: <https://www.keychron.com/pages/k17-pro-factory-reset-and-firmware-flash>

VIA Software for macOS, Windows, Linux: <https://usevia.app/#/>

How to Use VIA on Your Keychron K Pro Series Keyboard: <https://www.keychron.com/blogs/archived/how-to-use-via-to-program-your-keyboard>


K17 Pro Source Code, please search “source code” on the product page on our official website.

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Quick Start Guide


1. Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer’s operating system.

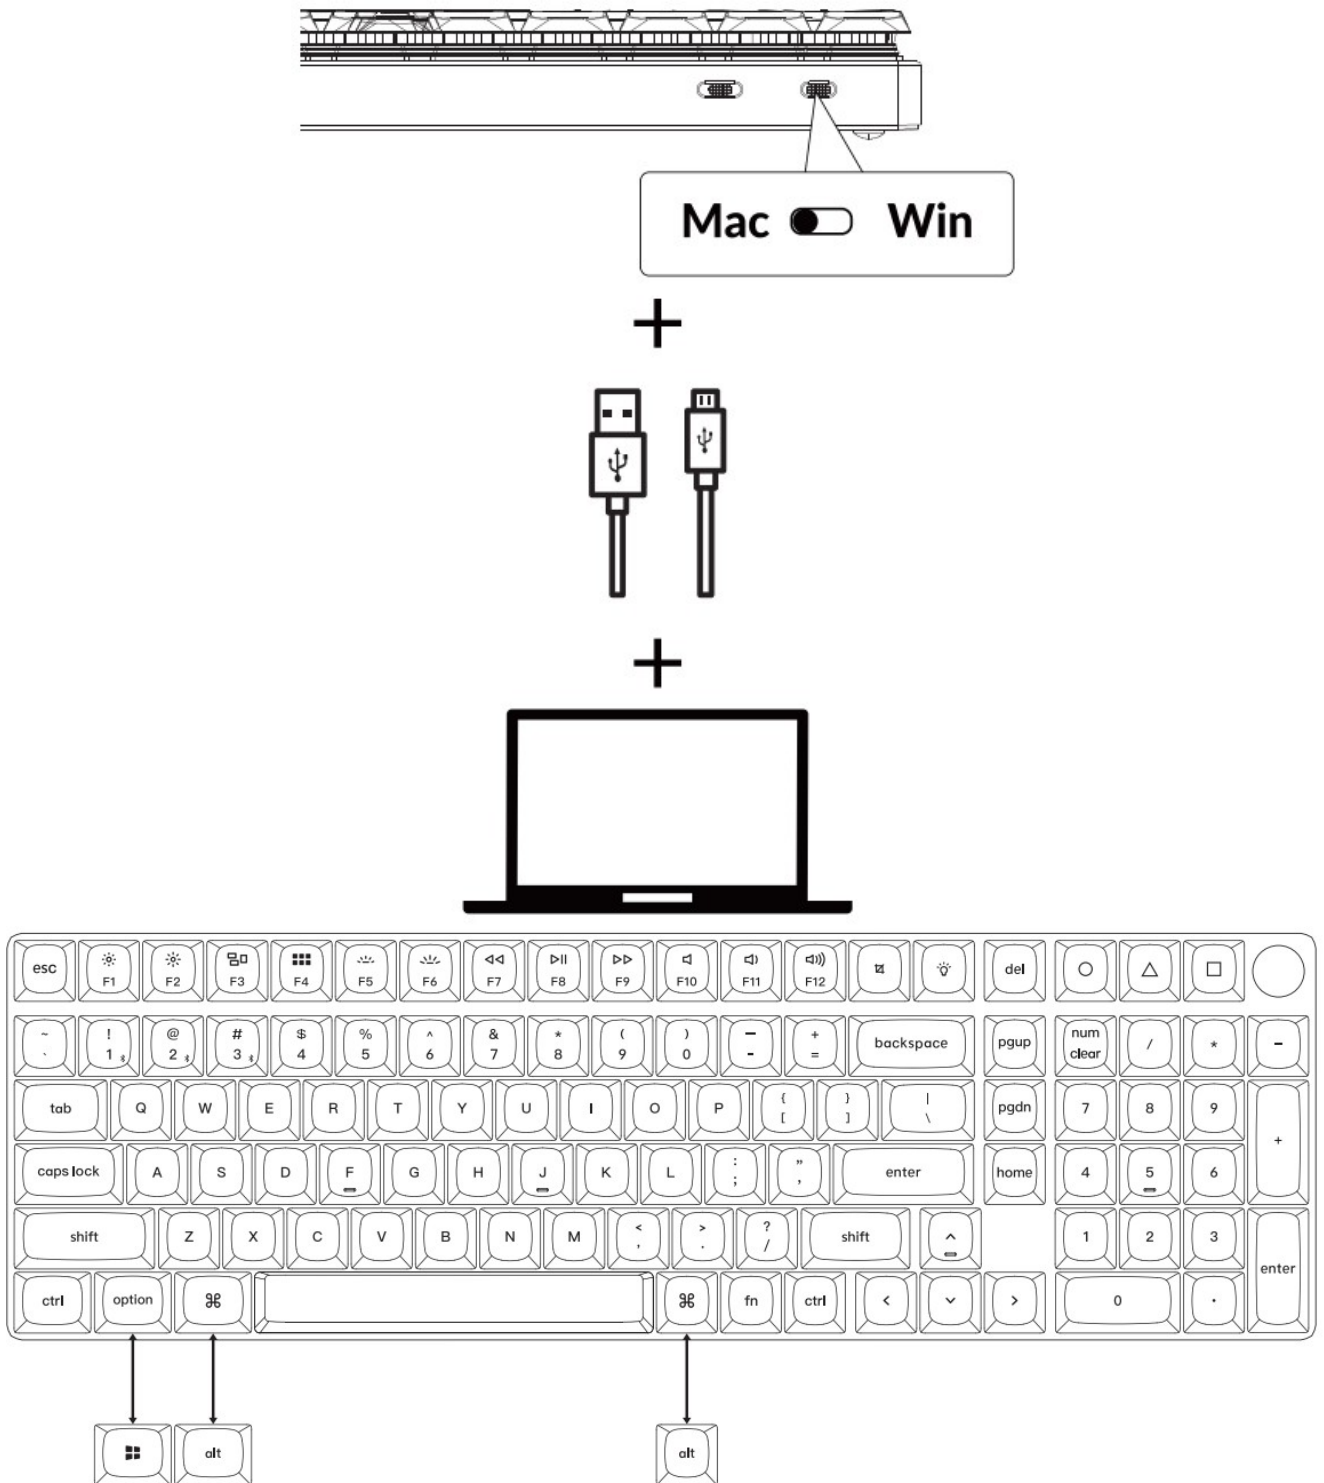

2. Connect Bluetooth

Press fn + 1 (for 4 seconds) and pair with device named Keychron K17 Pro.

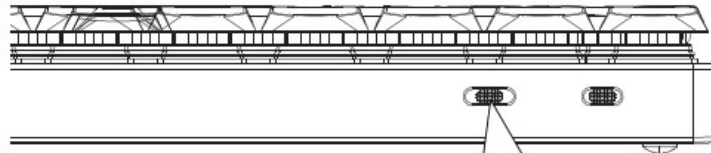

Bluetooth ☒ Cable

Switch toggle to Bluetooth


3. Connect Cable




+



+

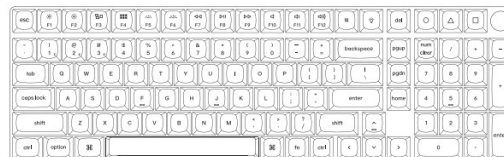

Switch toggle to Cable



Bluetooth ☐ Cable

4. The VIA Key Remapping Software

Please visit usevia.app to use the online VIA software to remap the keys.

If the VIA cannot recognize your keyboard, please reach our support to get the instruction.


* The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.

* VIA only works when the keyboard is connected by wire to the computer.



5. The Layers


There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

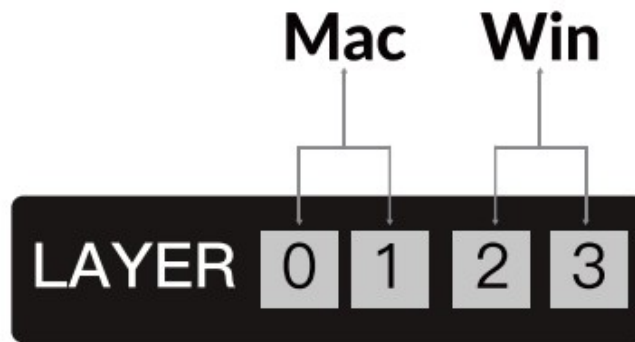

If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.

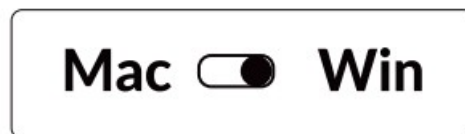

6. The Backlight

Press fn + Q to change the lighting effect



fn + Q

Press fn + tab to turn the backlight on/off



fn + tab

7. Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



fn + W


Press fn + S to decrease the backlight brightness




fn + S

8. Adjust The Backlight Speed

Press fn + T to increase the light effect speed

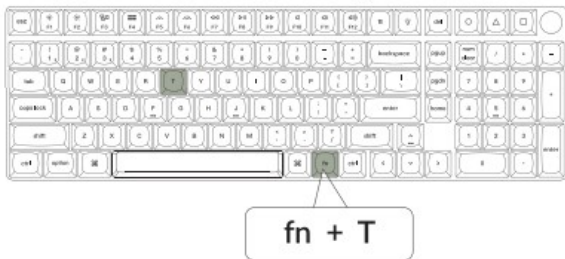

Press fn + G to decrease the light effect speed

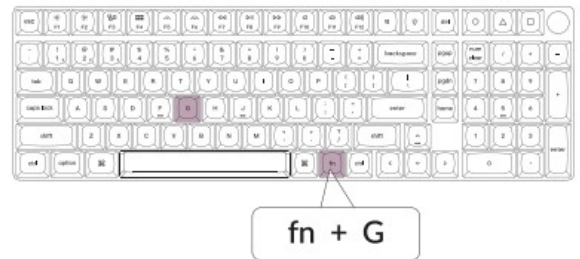


9. Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.



10. Factory Reset

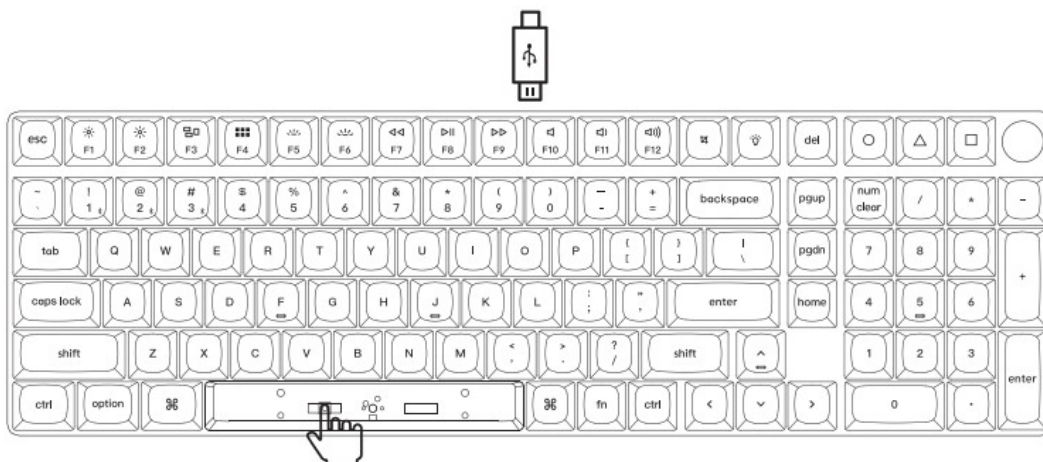

Keychron



Not Happy





support@keychron.com

Documents / Resources

[Keychron K17 Pro Low Profile Custom Wireless Mechanical Keyboard](#) [pdf] User Guide
K17 Pro, K17 Pro Low Profile Custom Wireless Mechanical Keyboard, Low Profile Custom Wireless Mechanical Keyboard, Profile Custom Wireless Mechanical Keyboard, Custom Wireless Mechanical Keyboard, Wireless Mechanical Keyboard, Mechanical Keyboard, Keyboard

References

-  [VIA](#)
-  [VIA](#)
- © [How to use VIA to program your keyboard – Keychron | Wireless Mechanical Keyboards for Mac, Windows and Android](#)
- © [K17 Pro Factory Reset and Firmware Flash – Keychron | Wireless Mechanical Keyboards for Mac, Windows and Android](#)
- [User Manual](#)