




Keychron K6 Pro Wireless Custom Mechanical Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron K6 Pro Wireless Custom Mechanical Keyboard User Guide 

Keychron

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Quick Start Guide

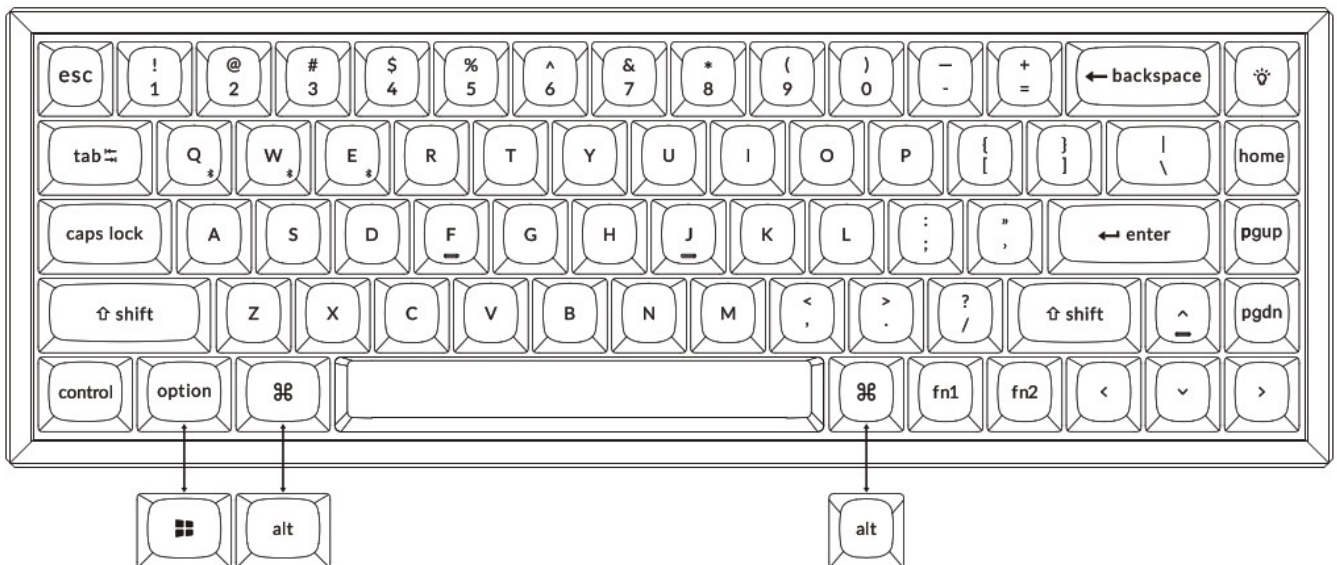


Contents

- [1 Connect Bluetooth](#)
- [2 Connect Cable](#)
- [3 The VIA Key Remapping Software](#)
- [4 The Layers](#)
- [5 Multimedia Key and Function Key](#)
- [6 The Backlight](#)
- [7 Adjust The Backlight Brightness](#)
- [8 Warranty](#)
- [9 Watch The Building Tutorial On Our Website](#)
- [10 Factory Reset](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)


Connect Bluetooth

Press fn1 + Q (for 4 seconds) and pair with device named Keychron K6 Pro

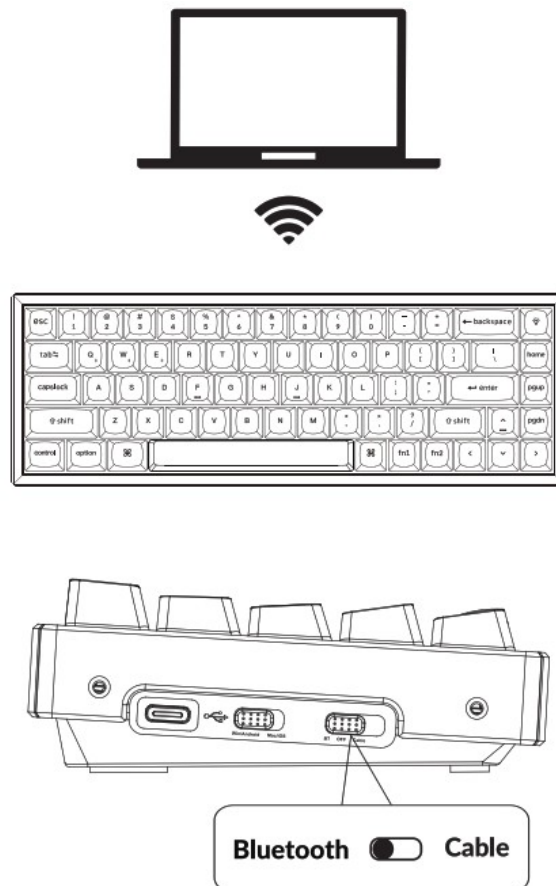

Switch toggle to Bluetooth

Connect Cable

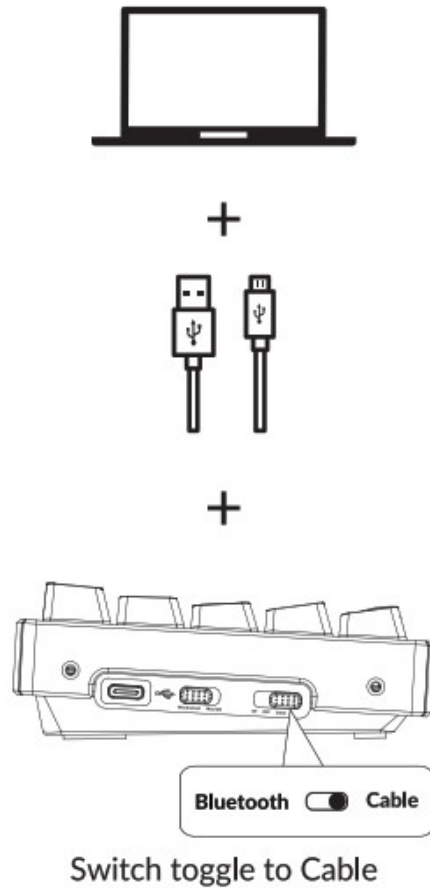

The VIA Key Remapping Software

Please visit caniusevia.com to download the latest VIA software to remap the keys.


If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction. (VIA only works when the keyboard is connected by wire to the computer.)




The Layers

There are five layers of key settings on the keyboard. The layer 0 is for the Mac system. The layer 1 is for the Windows system.


The layer 2 is for the Mac Multimedia keys. The layer 3 is for the Windows Multimedia keys. The layer 4 is for the Function keys.

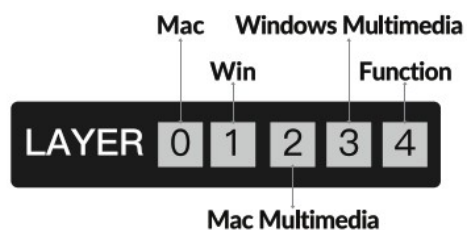

If your system toggle is switched to Mac, then the layer 0 will be activated.

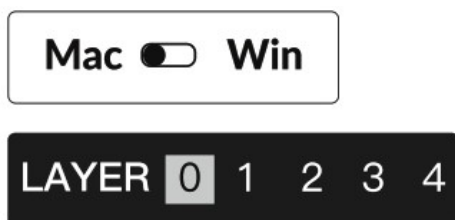


If your system toggle is switched to Windows, then the layer 1 will be activated.

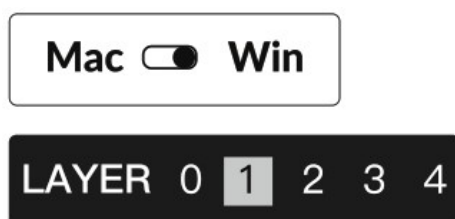


Multimedia Key and Function Key


Multimedia keys




Function keys



In order to get Multimedia Key, you need to press fn1 and




In order to get Function Key, you need to press fn2 and




The Backlight

Press fn1 + A to change the lighting effect

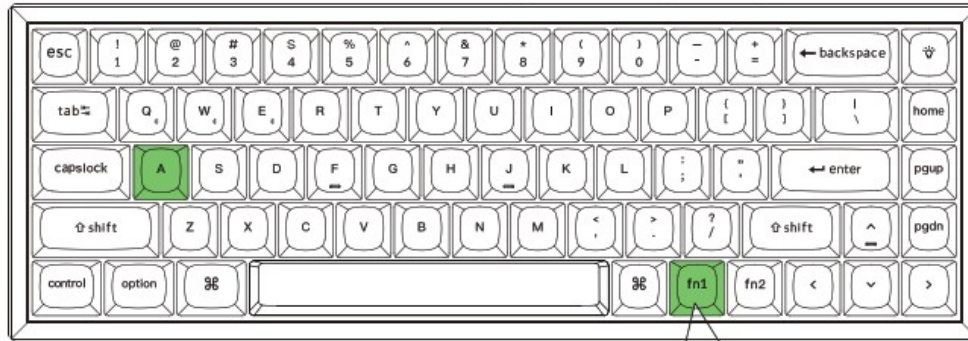

fn1 + A


Press fn1 + caps lock to turn the backlight on/off

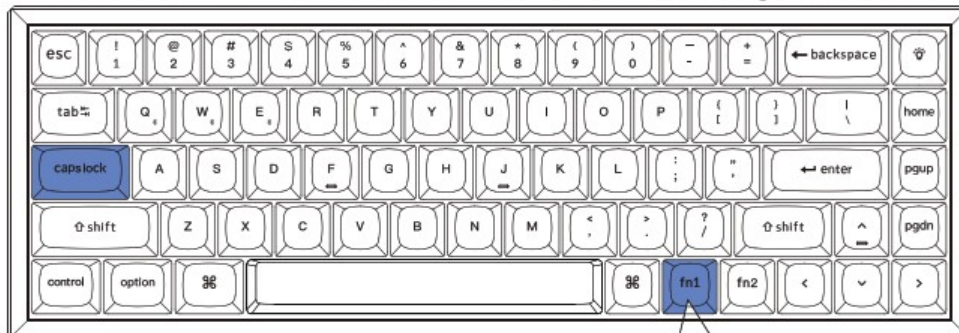

fn1 + caps lock


Adjust The Backlight Brightness

Press fn1 + S to increase the backlight brightness

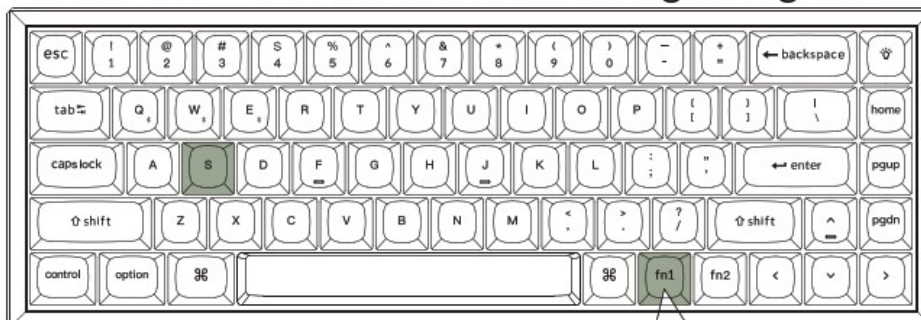

fn1 + S

Press fn1 + X to decrease the backlight brightness

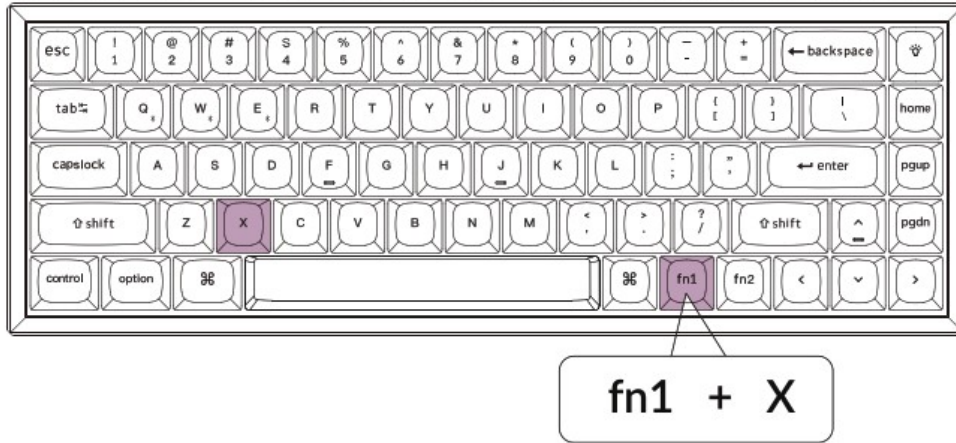


Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.




Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.

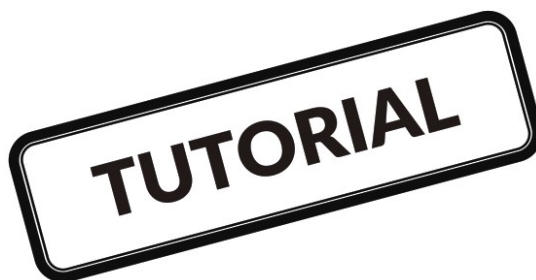

Factory Reset

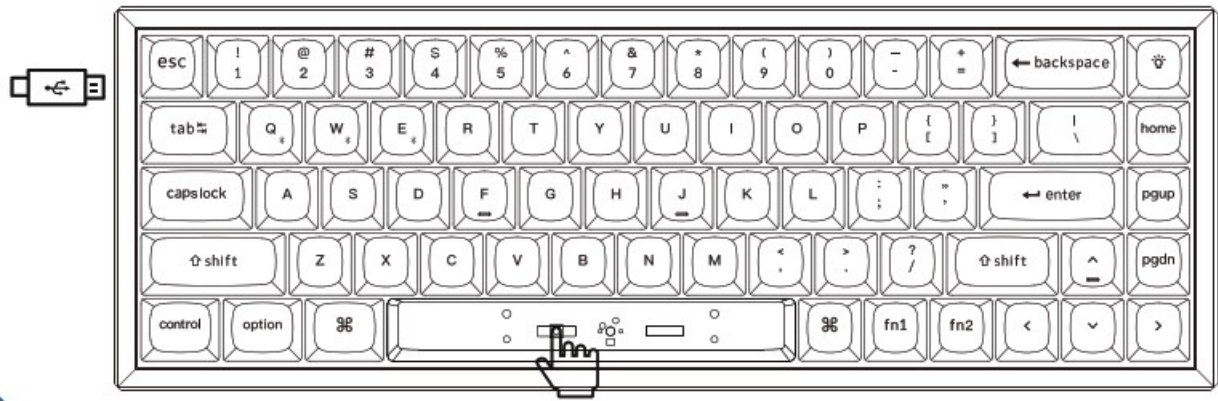

Troubleshooting? Don't know what's going on with the keyboard?

1. Try factory reset by pressing fn2 + J + Z (for 4 seconds).
 2. Download the right firmware for your keyboard from our website.
Remove the power cable from the keyboard.
 3. Remove the space bar keycap to find the reset button on the PCB and switch the keyboard to cable mode.
 4. Hold the reset key while plugging in the power cable and then release the reset key. The keyboard now will enter DFU mode.
 5. Flash the firmware with the QMK Toolbox.
 6. Factory reset the keyboard again by pressing fn2 + J + Z (for 4 seconds).
- * Step by step guide can be found on our website.



Not Happy



support@keychron.com

Documents / Resources



[Keychron K6 Pro Wireless Custom Mechanical Keyboard](#) [pdf] User Guide
K6 Pro, Wireless Custom Mechanical Keyboard, K6 Pro Wireless Custom Mechanical Keyboard, Mechanical Keyboard, Keyboard