

[Skip to content](#)

Manuals+

User Manuals Simplified.



KOBALT 54439 Affix Hooks Instructions

[Home](#) » [Kobalt](#) » KOBALT 54439 Affix Hooks
Instructions

Contents [hide](#)

[1 KOBALT 54439 Affix Hooks](#)

[2 Affix Hooks](#)

[3 Documents / Resources](#)


[4 Related Posts](#)



KOBALT 54439 Affix Hooks



Affix Hooks

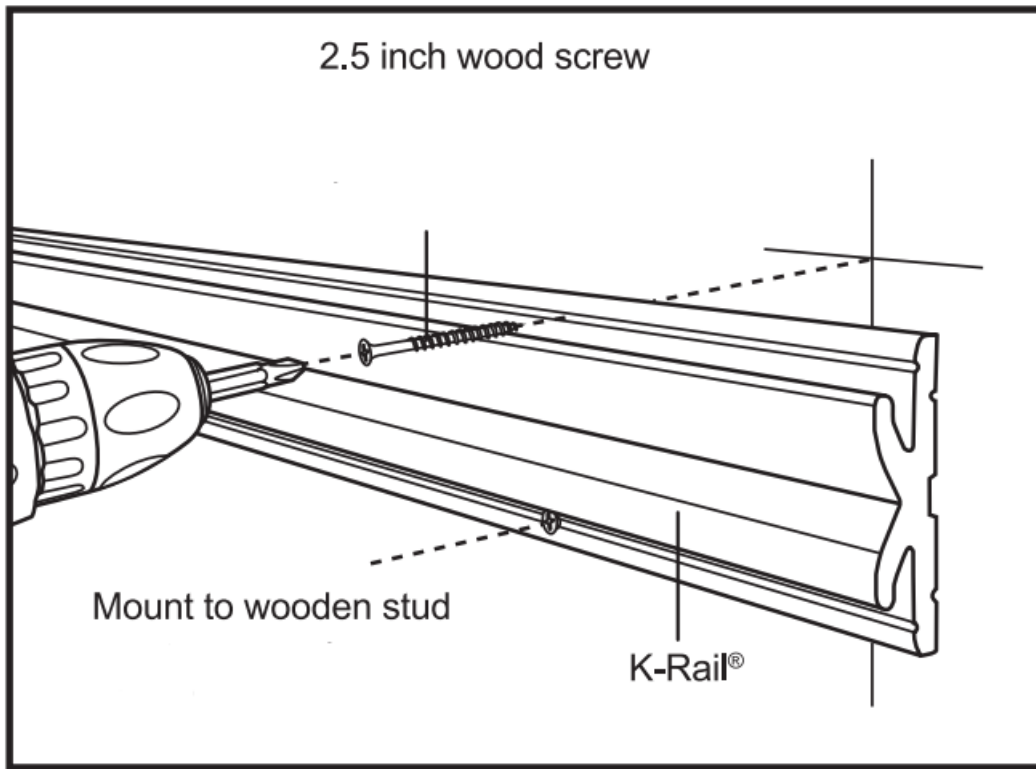

1. Snap the top lip onto the top groove.
2. Snap the bottom lip onto the bottom groove.

Wood Mount

Install with #12 K-Rail screws (item #0103681)


Concrete Mount

Install with flathead masonry screws

Warning:

1. DO NOT drill through electrical wiring during installation.
2. Always wear eye protection that complies with current ANSI Standards Z87.1.
3. Always disconnect the power source before using tools on electrical boxes, fittings or any workpiece that may conduct electricity. Electric shock or electrocution could result.

Documents / Resources

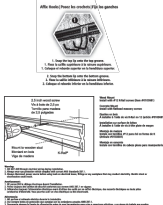

[KOBALT 54439 Affix Hooks](#) [pdf] Instructions
54439 Affix Hooks, 54439, Affix Hooks, Hooks

[Manuals+](#),

- [home](#)
- [privacy](#)