



KOLINK ARGB MIDI Tower Case User Manual

[Home](#) » [KOLINK](#) » KOLINK ARGB MIDI Tower Case User Manual 

Contents

- [1 KOLINK ARGB MIDI Tower Case](#)
- [2 EI PANEL REMOVAL](#)
- [3 EI MOTHERBOARD INSTALLATION](#)
- [4 D ACCESSORY PACK CONTENT](#)
- [5 EI POWER SUPPLY INSTALLATION](#)
- [6 GRAPHICS CARD/PCI-E CARD INSTALLATION](#)
- [7 HDD INSTALLATION](#)
- [8 SSD INSTALLATION \(REAR](#)
- [9 TOP FAN INSTALLATION](#)
- [10 FRONT/REAR FAN INSTALLATION](#)
- [11 WATERCOOLING RADIATOR INSTALLATION](#)
- [12 PANEL INSTALLATION](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)




KOLINK ARGB MIDI Tower Case




EI PANEL REMOVAL

- Left Panel – Open the door fully using the attached handle and take off the hinges.
- Right Panel – Unscrew the two thumbscrews and slide off.
- Front Panel – Find the bottom cut out, stabilize the chassis with one hand, and pull from the cutout with a little force until the clips release.

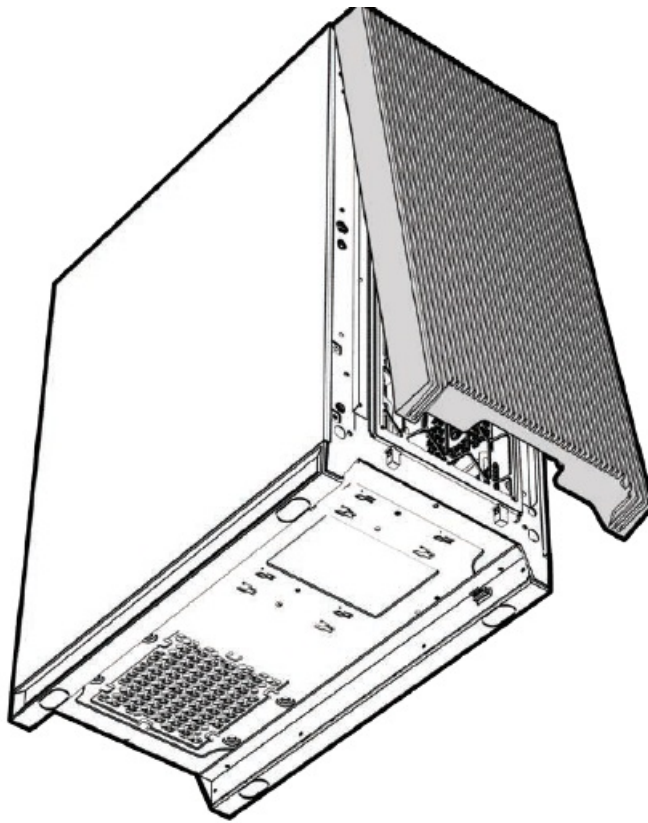
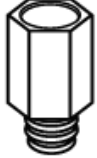



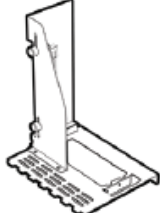


EI MOTHERBOARD INSTALLATION

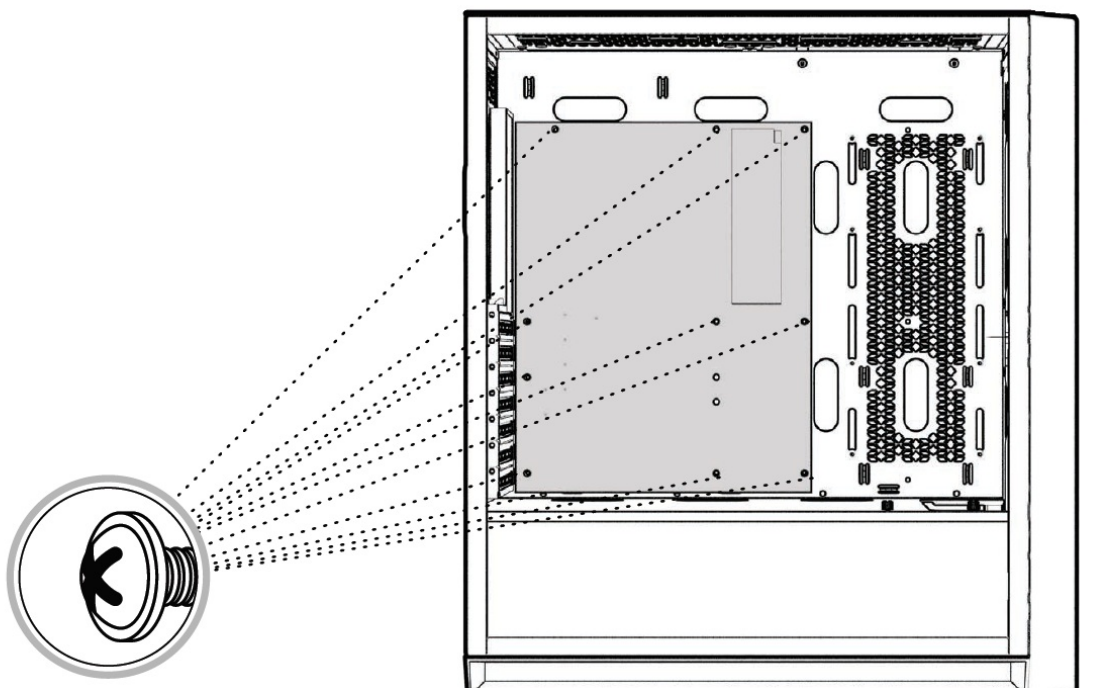- Align your motherboard with the chassis to locate where the stand-offs should be installed. Once done, remove the motherboard and fasten stand-offs accordingly.
- Insert your motherboard I/O plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the I/O plate.
- Use the provided motherboard screws to attach your motherboard to the chassis.




D ACCESSORY PACK CONTENT

x12  Motherboard/SSD Screws	x3  Motherboard Stand-off	x8  PSU Screw	x12  3.5" Drive Screw	x4  Cable Tie
x1  Vertical GPU Mount				

EI POWER SUPPLY INSTALLATION

- Place PSU in the bottom rear of the case, within the PSU shroud.
- Align the holes and secure with screws.

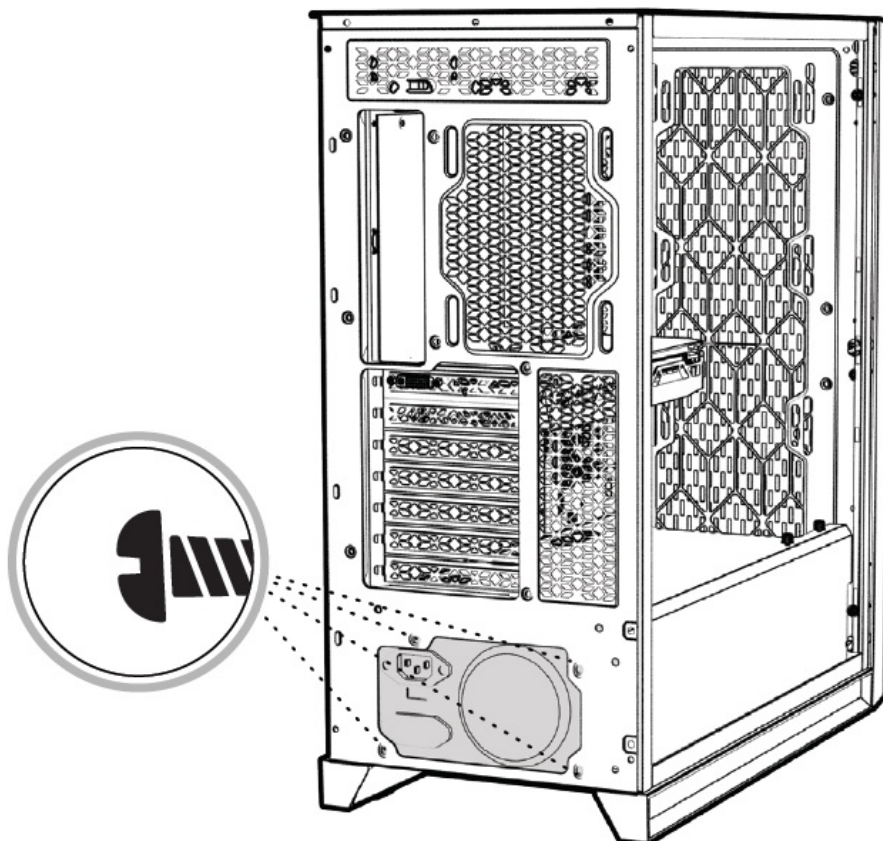


GRAPHICS CARD/PCI-E CARD INSTALLATION

- Remove the rear PCI-E slot covers as necessary (depending on the slot size of your card) , Carefully position


and slide your PCI-E card into place, then secure with the add-on card screws supplied.

- If mounting vertically, attach the providing vertical GPU bracket to the PCI-E slot area, secure your PCI-E riser cable to it (sold separately) and attach the cable to the motherboard. Carefully position your PCI-E card, attach to the rear PCI-E slots and secure with the add-on screws supplied.

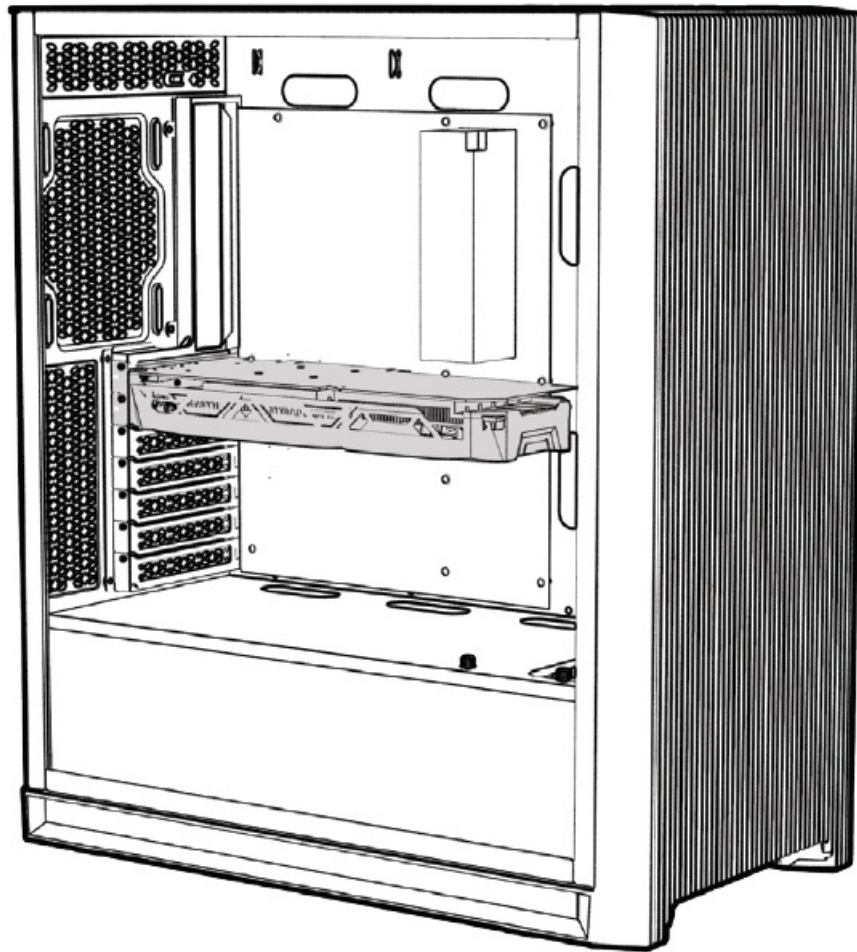


HDD INSTALLATION

Place the 3.5" HOD into/an top of the HOD bracket and screw in if required.

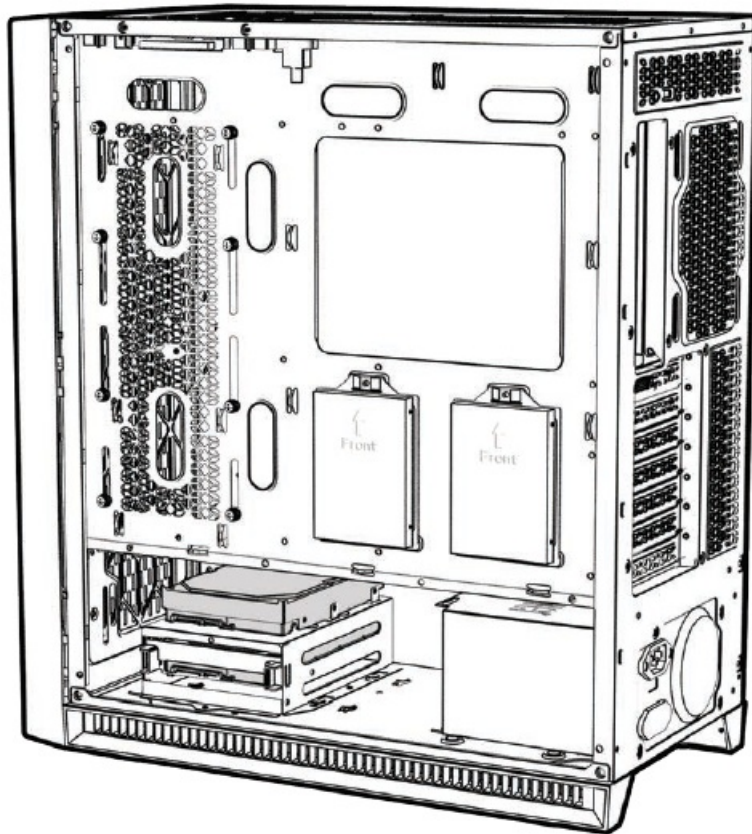

SSD INSTALLATION (REAR

- Remove the bracket from the rear of the motherboard plate,
- attach your 2.5" drive and then screw back into place Place the 2.5" HDD/SSD into/on top of the HOD bracket and screw in if required.

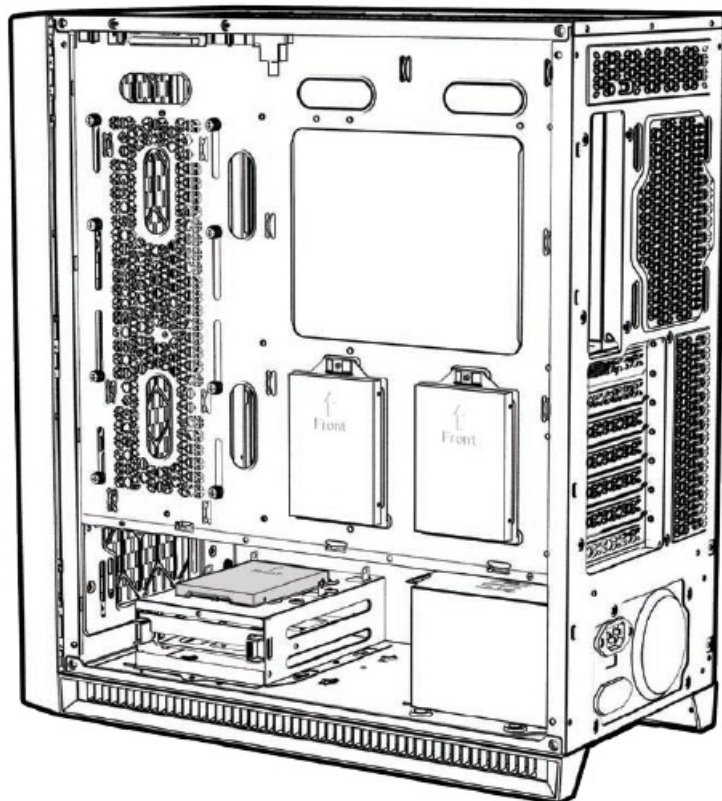


TOP FAN INSTALLATION

- Remove the dust filter from the top of the case.
- Align your fan(s) to the screw holes on the top of the chassis and secure with screws.
- Replace your dust filter once secured.


FRONT/REAR FAN INSTALLATION

Align your fan(s) to the screw holes on the top of the chassis.

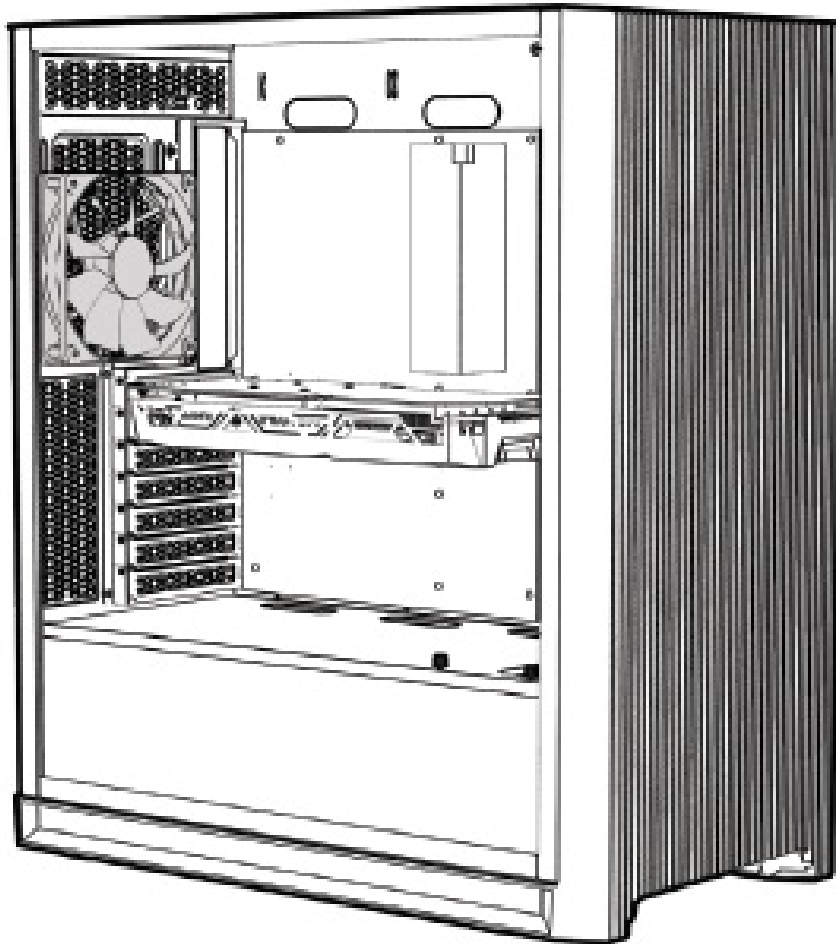

WATERCOOLING RADIATOR INSTALLATION

Secure the fans to the radiator, then fasten the radiator inside the chassis by securing with screws from the outside,

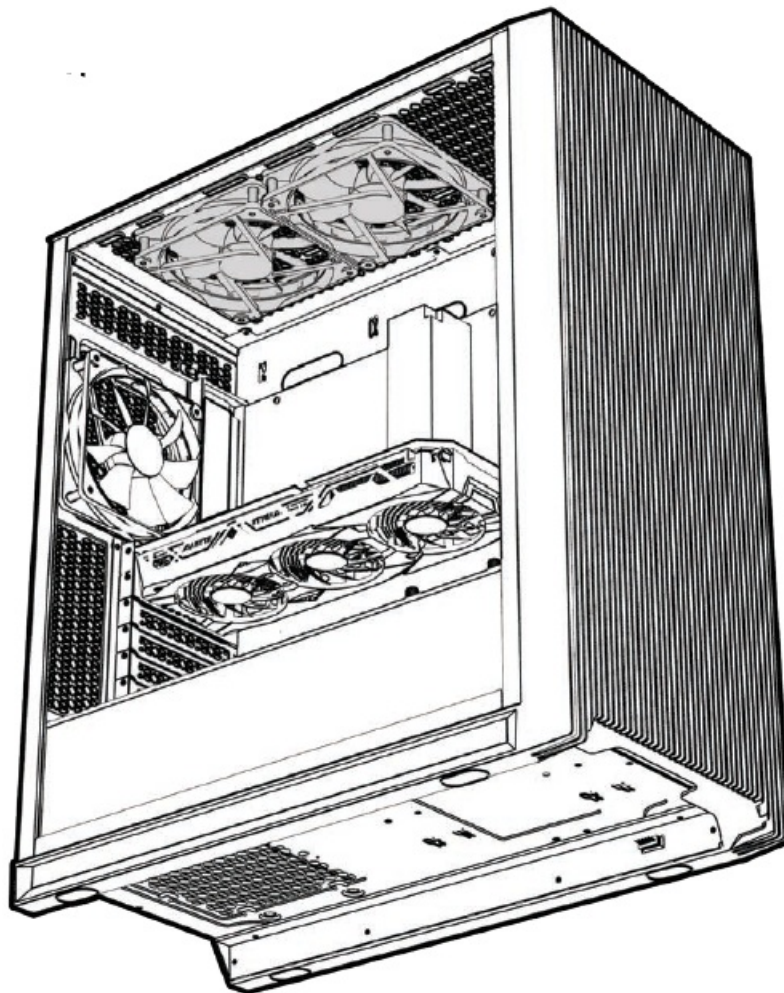

PANEL INSTALLATION

- Carefully check the labelling of each connector from the I/O panel to identify their function.
- Cross reference with the motherboard manual to locate where each wire should be installed, then secure one at a time. Please ensure they are installed in the correct polarity to avoid non-function or damage.

Pro Gamers ware GmbH

- Gaul3stral3e 1, 10589 Berlin, Deutschland
- info@gamersware.com
- +49(0)30 83797272
- www.kolink.eu | support@kolink.eu

Documents / Resources



[KOLINK ARGB MIDI Tower Case](#) [pdf] User Manual
 ARGB MIDI Tower Case, ARGB, MIDI Tower Case, Tower Case, Case