



KOLINK B084C8BZQD Void Rift Midi Tower Case User Manual

[Home](#) » [KOLINK](#) » KOLINK B084C8BZQD Void Rift Midi Tower Case User Manual 

Contents


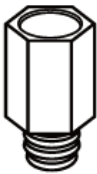



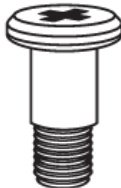


- [1 KOLINK B084C8BZQD Void Rift Midi Tower Case](#)
- [2 ACCESSORY PACK CONTENTS](#)
- [3 PANEL REMOVAL](#)
- [4 Installations](#)
 - [4.1 MOTHERBOARD INSTALLATION](#)
 - [4.2 POWER SUPPLY INSTALLATION](#)
 - [4.3 GRAPHICS CARD/PCI-E CARD INSTALLATION](#)
 - [4.4 2.5" SSD INSTALLATION \(REAR\)](#)
 - [4.5 3.5" HDD INSTALLATION](#)
 - [4.6 TOP FAN INSTALLATION](#)
 - [4.7 FRONT/REAR FAN INSTALLATION](#)
 - [4.8 WATERCOOLING RADIATOR INSTALLATION](#)
 - [4.9 I/O PANEL INSTALLATION](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



KOLINK B084C8BZQD Void Rift Midi Tower Case



ACCESSORY PACK CONTENTS



x18  Motherboard/SSD Screws	x3  Motherboard Stand-off	x4  PSU Screw	x8  Fan Screw
x8  3.5" Drive Screw	x8  Add-on Screw	x8  Add-on part for HDD/SSD	x5  Cable Tie

PANEL REMOVAL

FRONT/SIDE PANEL REMOVAL


- Take off the front panel by pulling carefully from the bottom of the panel.
- Remove the left side panel by removing the 4 thumbscrews and lift the glass side panel away from the case.

- Remove the right side panel by removing the two rear thumbscrews and sliding the panel backwards.

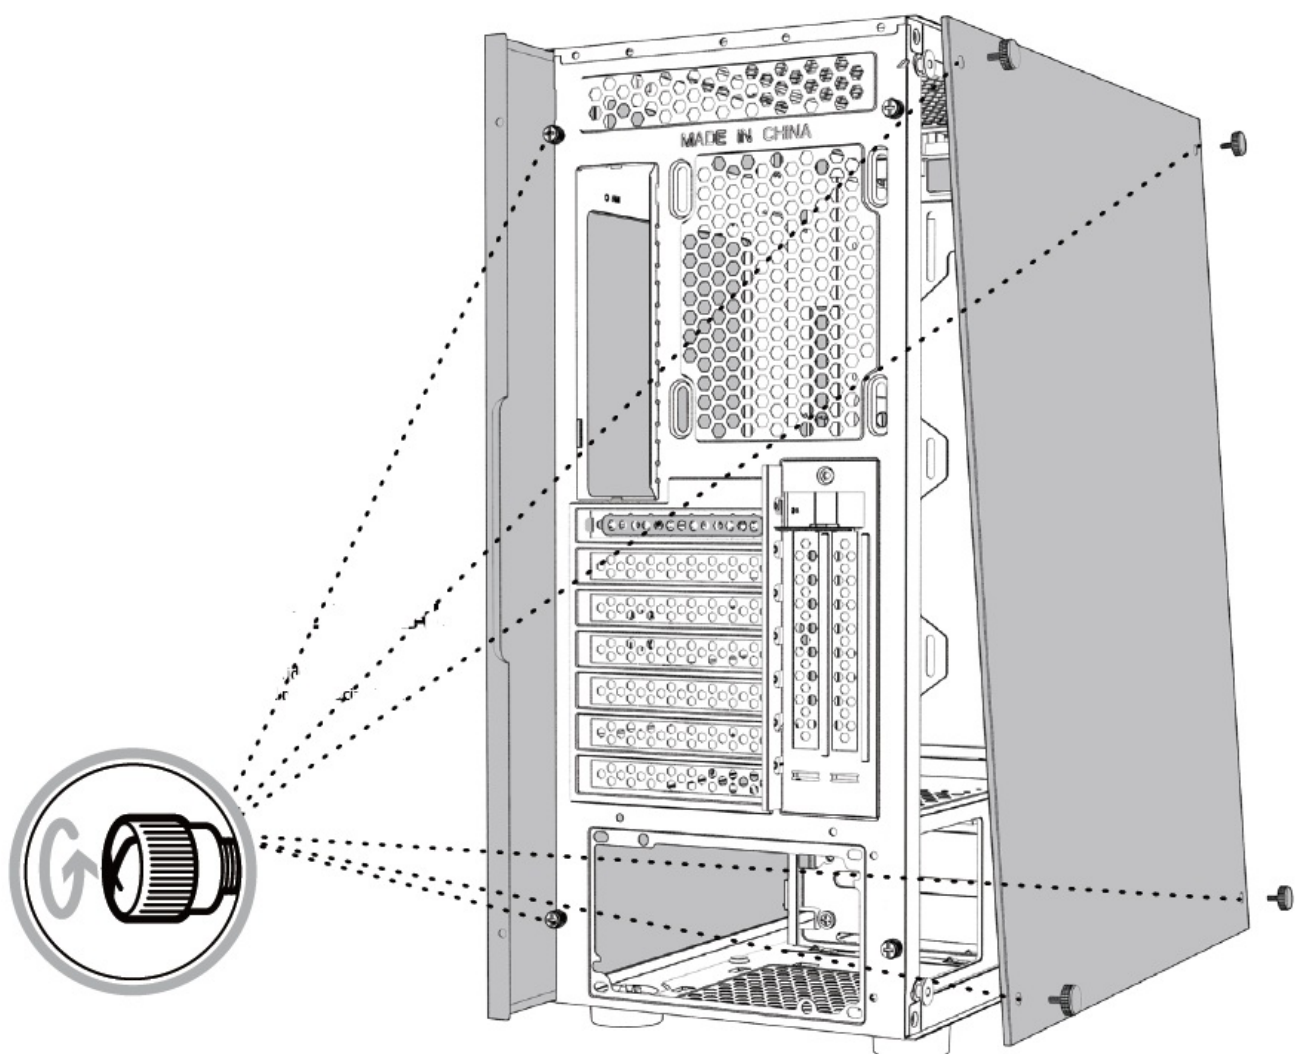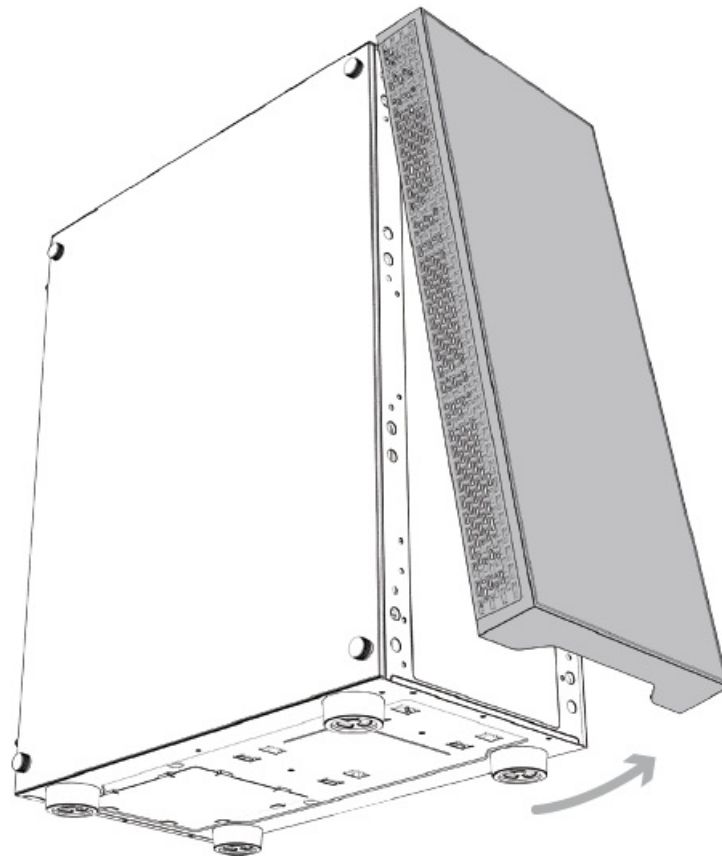


MOTHERBOARD INSTALLATION

- Align your motherboard with the chassis to locate where the stand-offs should be installed. Once done, remove the motherboard and fasten stand-offs accordingly.
- Insert your motherboard I/O plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the I/O plate.
- Use the provided motherboard screws to attach your motherboard to the chassis.

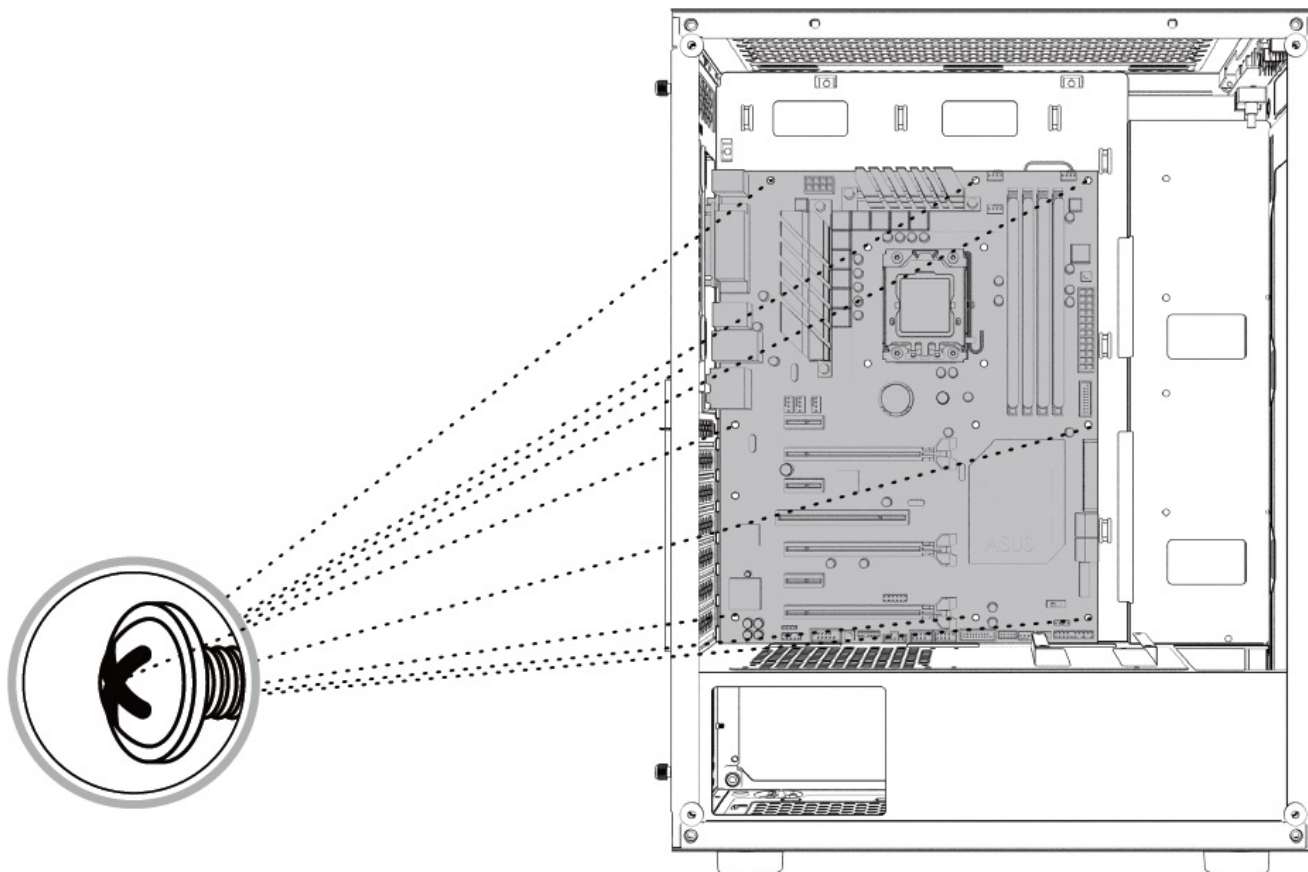


POWER SUPPLY INSTALLATION

- Place PSU in the bottom rear of the case, within the PSU shroud.
- Align the holes and secure with screws.

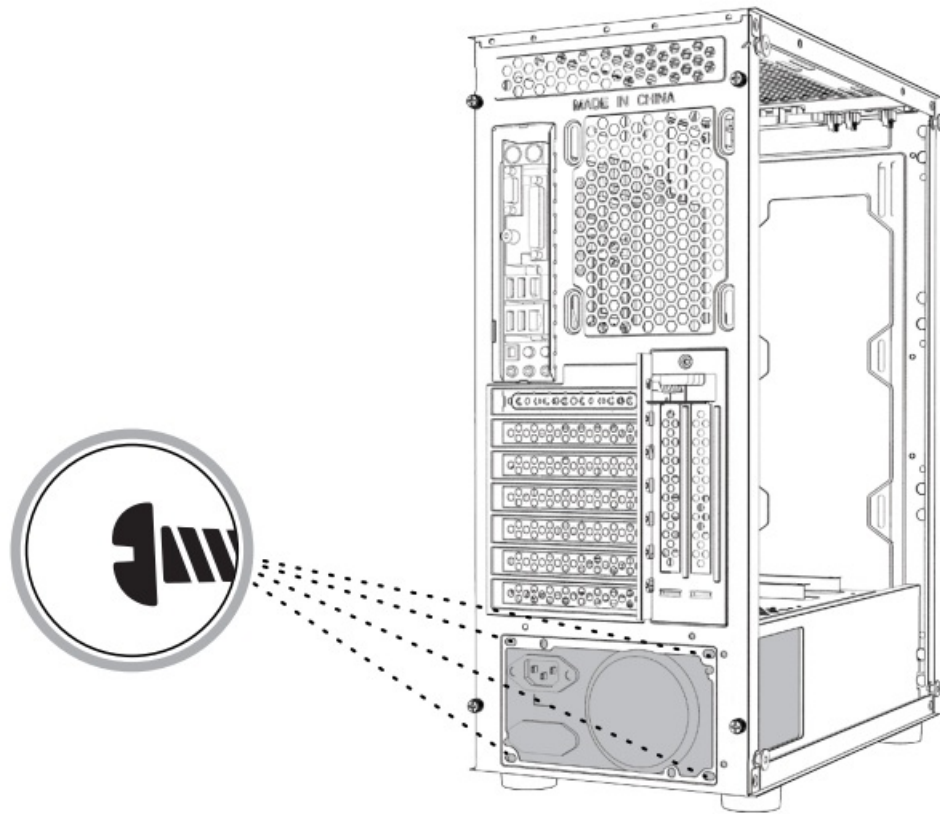


GRAPHICS CARD/PCI-E CARD INSTALLATION

- Remove the rear PCI-E slot covers as necessary (depending on the slot size of your card)
- Carefully position and slide your PCI-E card into place, then secure with the add-on card screws supplied.
- If mounting vertically, attach the provided vertical GPU bracket to the PSU shroud, secure your Kolink PCI-E riser cable to it (sold separately) and attach the cable to the motherboard. Remove the rear PCI-E slot covers as necessary, then carefully position your PCI-E card, slot into the PCI-E riser mount and secure with the add-on screws supplied.

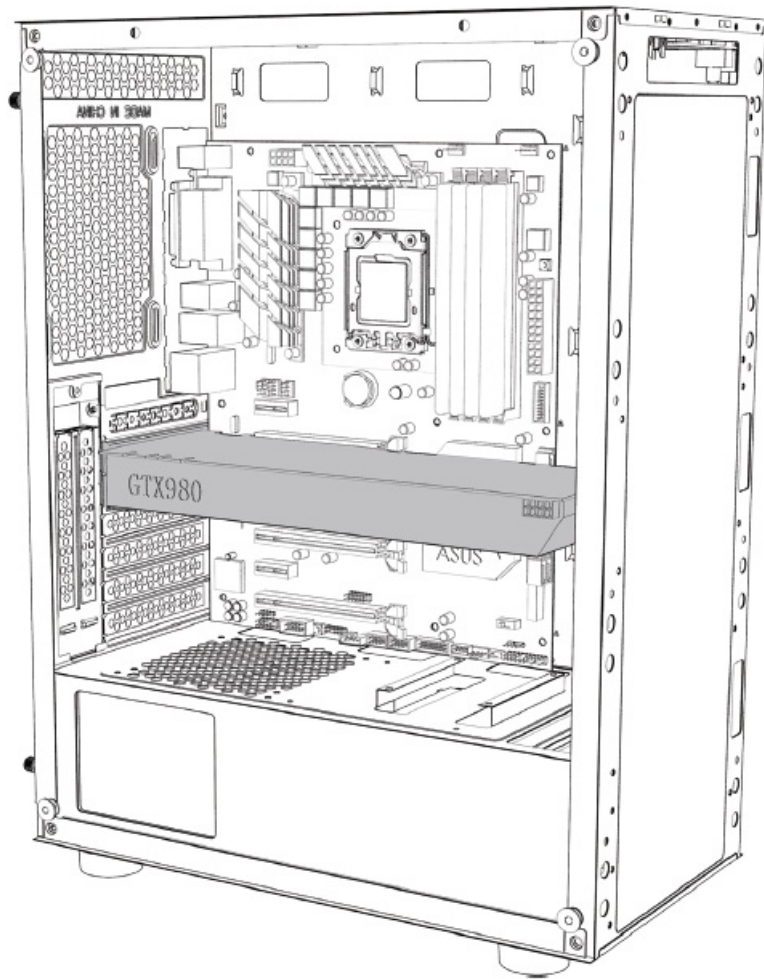


2.5" SSD INSTALLATION (REAR)

- Remove the bracket from the rear of the motherboard plate, attach your 2.5" drive and then screw back into place.

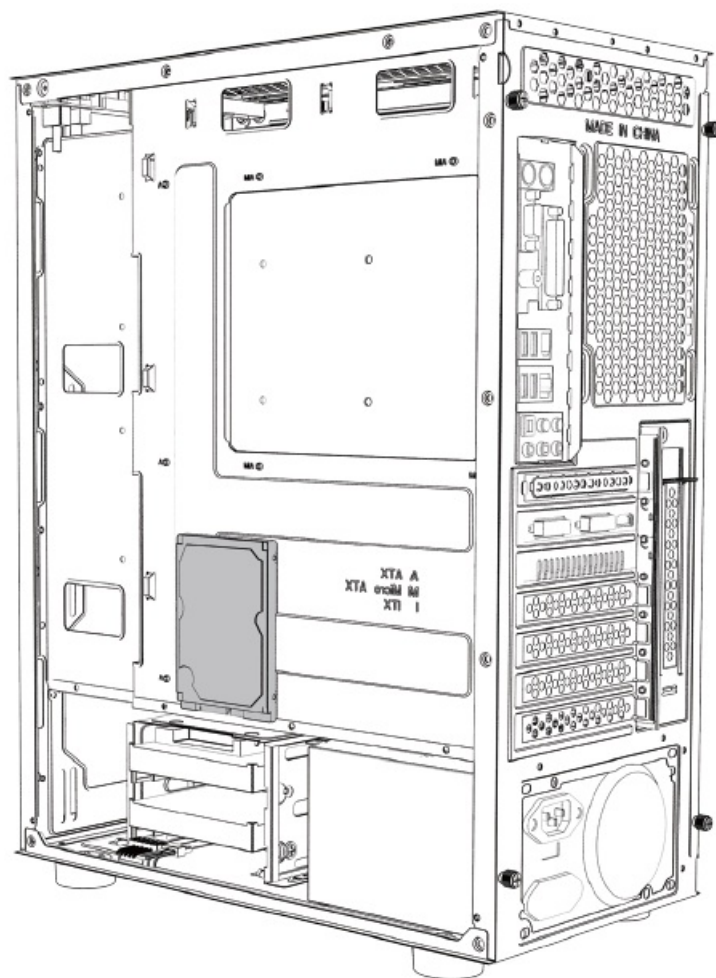


- Place the 2.5" HDD/SSD into/on top of the HDD bracket and screw in if required.

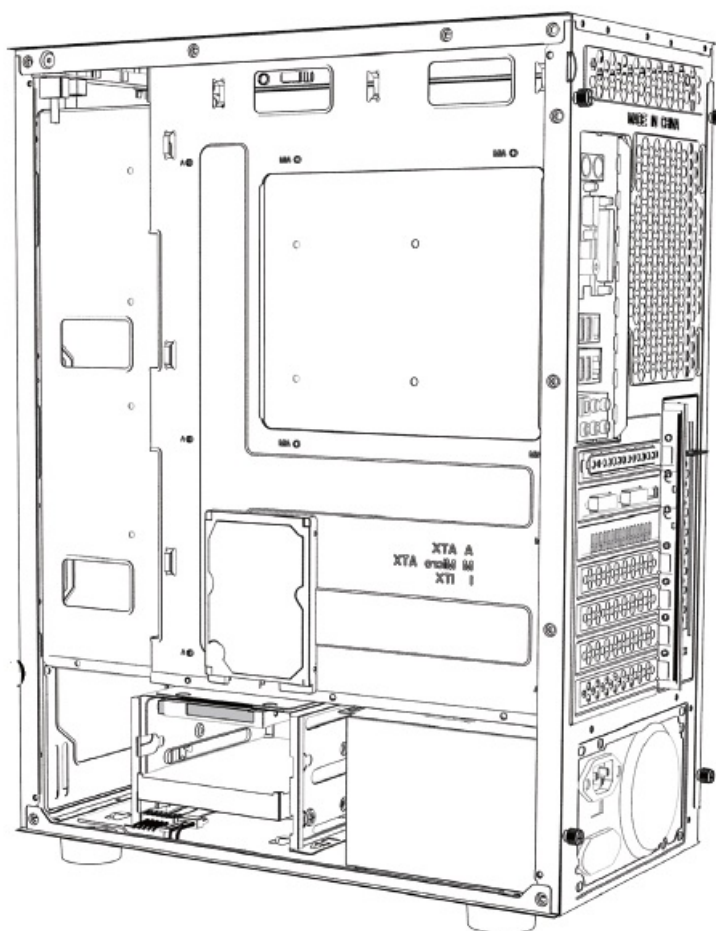


3.5" HDD INSTALLATION

- Place the 3.5" HDD into/on top of the HDD bracket and screw in if required.

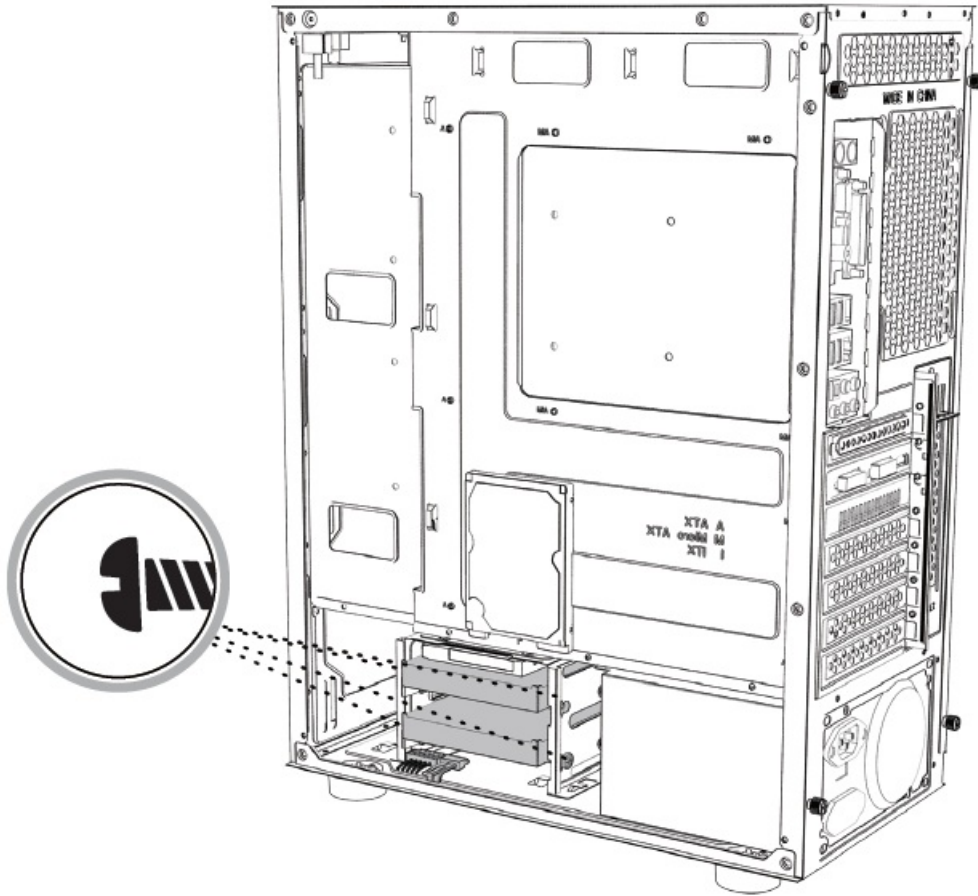


TOP FAN INSTALLATION

- Remove the dust filter from the top of the case.
- Align your fan(s) to the screw holes on the top of the chassis and secure with screws.
- Replace your dust filter once secured.

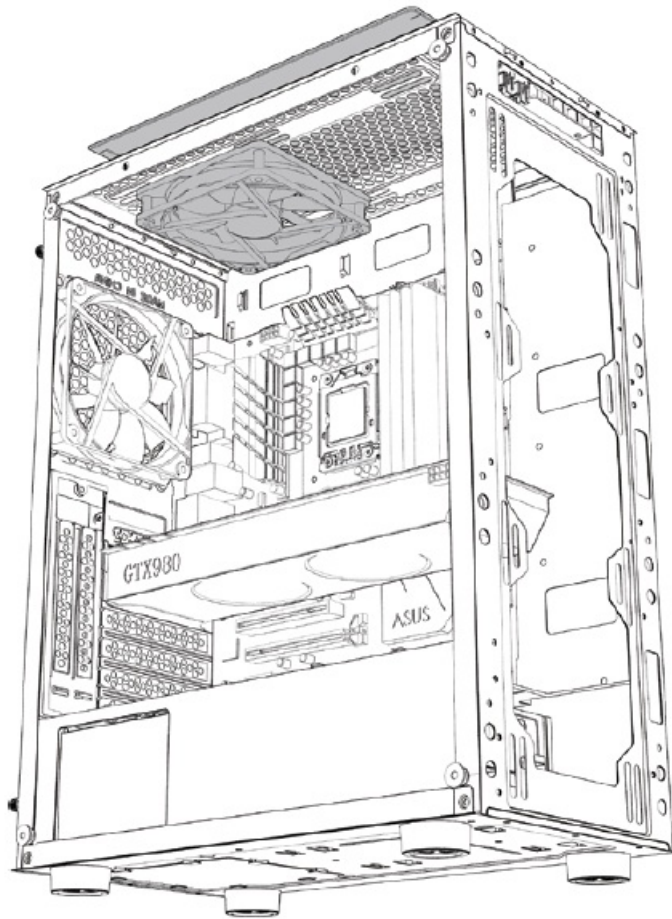

FRONT/REAR FAN INSTALLATION

- Align your fan to the screw holes on the chassis and secure with screws.

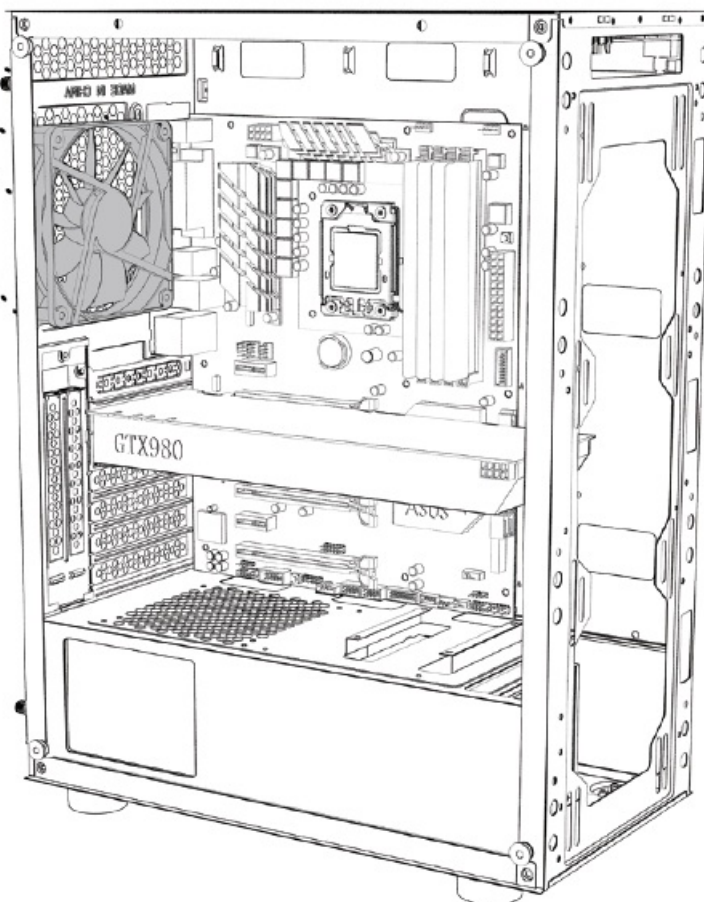


WATERCOOLING RADIATOR INSTALLATION

- Secure the fans to the radiator, then fasten the radiator inside the chassis by securing with screws from the outside.

I/O PANEL INSTALLATION

- Carefully check the labelling of each connector from the I/O panel to identify their function.
- Cross reference with the motherboard manual to locate where each wire should be installed, then secure one at a time. Please ensure they are installed in the correct polarity to avoid non-function or damage.

Documents / Resources



[KOLINK B084C8BZQD Void Rift Midi Tower Case](#) [pdf] User Manual
B084C8BZQD Void Rift Midi Tower Case, B084C8BZQD, Void Rift Midi Tower Case