



KOLINK Big Chungus Shredded Midi Tower ARGB Showcase User Manual

[Home](#) » [KOLINK](#) » KOLINK Big Chungus Shredded Midi Tower ARGB Showcase User Manual 










**KOLINK Big Chungus Shredded Midi-Tower ARGB Showcase
User Manual**



Contents


- [1 ACCESSORY PACK CONTENTS](#)
- [2 PANEL REMOVAL](#)
- [3 MOTHERBOARD INSTALLATION](#)
- [4 I/O PANEL INSTALLATION](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

ACCESSORY PACK CONTENTS

x10  Motherboard/SSD Screws	x1  Motherboard Stand-off	x5  PSU Screw	x4  3.5" Drive Screw
x9  Rubber Grommet	x5  Cable Tie	x9  Thumb Screw	


PANEL REMOVAL

- Left Panel – Remove from packaging and attach to the side panel in the correct orientation using the supplied thumbscrews.
- Right Panel – Remove from packaging and attach to the side panel in the correct orientation using the supplied thumbscrews.
- Front Panel – Unscrew from both sides if needed and lift away (note, side panels must be removed first).
- Top Panel – Unscrew from both sides if needed and lift away (note, side panels must be removed first).

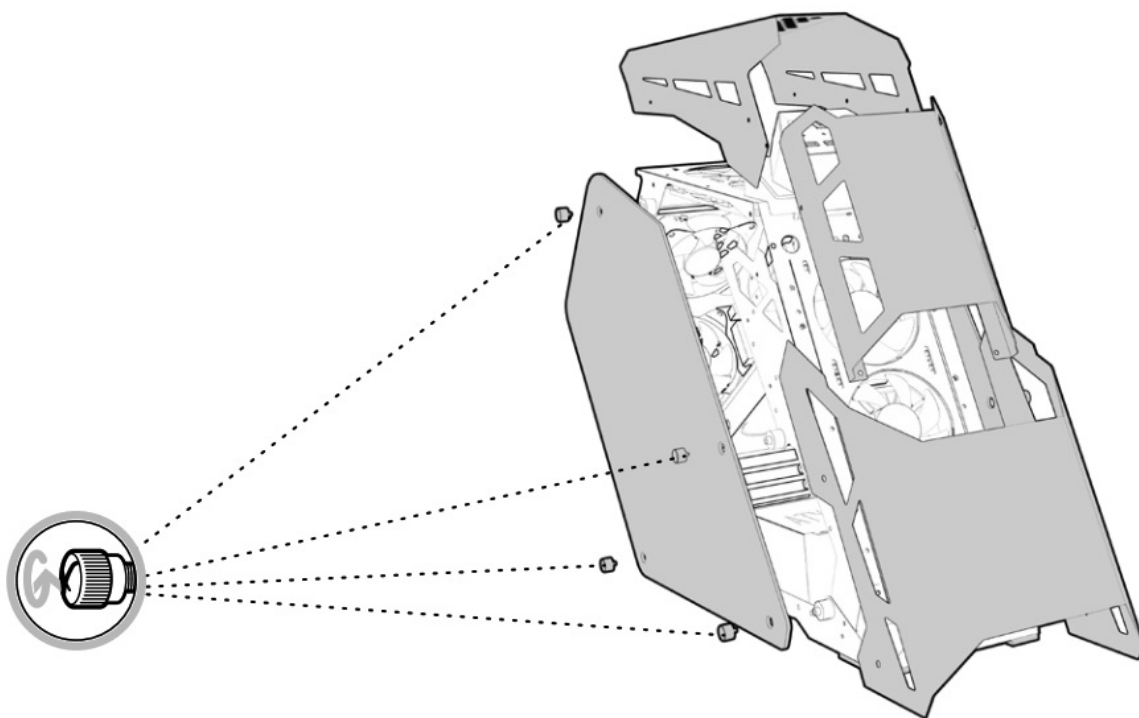


MOTHERBOARD INSTALLATION

- Align your motherboard with the chassis to locate where the stand-offs should be installed. Once done, remove the motherboard and fasten stand-offs accordingly.
- Insert your motherboard I/O plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the I/O plate.
- Use the provided motherboard screws to attach your motherboard to the chassis.

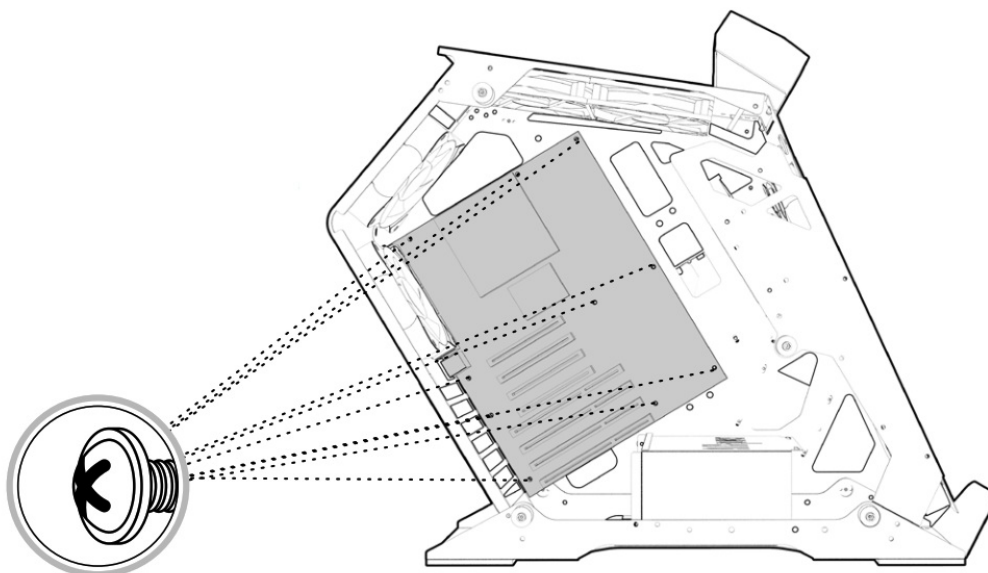


POWER SUPPLY INSTALLATION

- Remove the PSU bracket from the case by removing the screws
- Align the holes of your PSU to the bracket and secure it with screws.
- Re-attach the bracket to the case and secure it with screws.

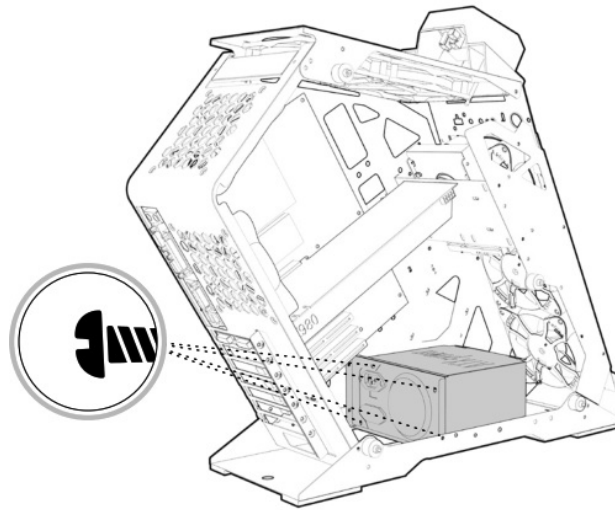


GRAPHICS CARD/PCI-E CARD INSTALLATION

- Remove the rear PCI-E slot covers as necessary (depending on the slot size of your card)
- Carefully position and slide your PCI-E card into place, then secure with the add-on card screws supplied.

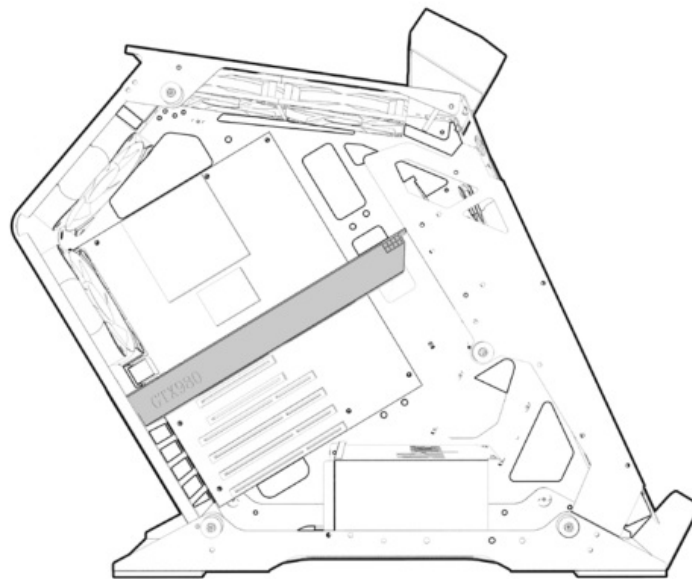


3.5"/2.5" HDD INSTALLATION

- Unscrew and remove the HDD bracket from the case.
- Attach your HDD's/SSD to the bracket using the supplied screws.
- Insert the bracket back into the case and reattach using the screws from before.

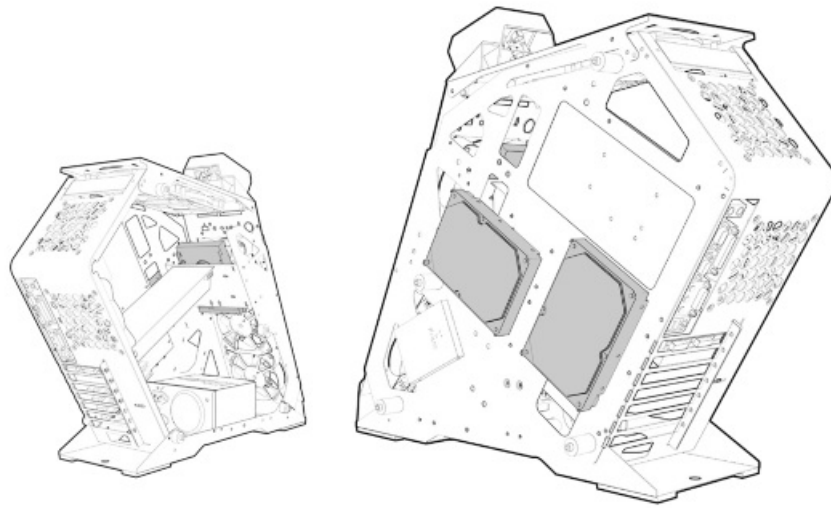


TOP FAN INSTALLATION

- Align your fan(s) to the screw holes on the top of the chassis and secure it with screws.

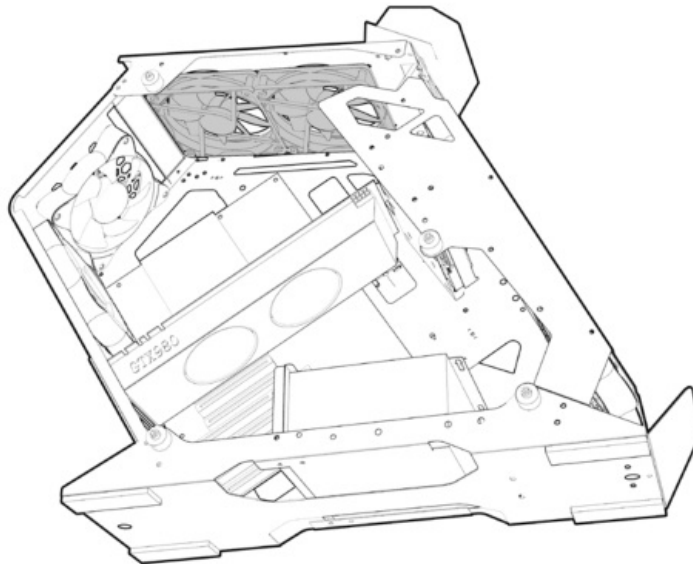

FRONT/REAR FAN INSTALLATION

- Align your fan to the screw holes on the chassis and secure it with screws.

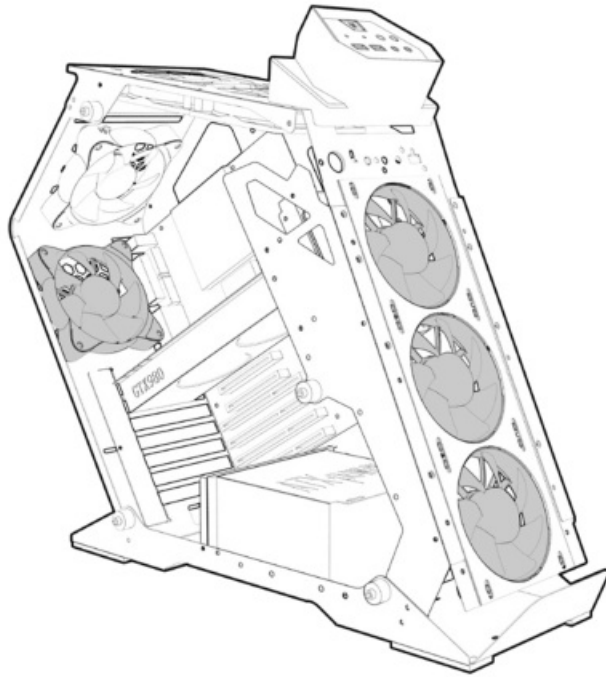

WATERCOOLING RADIATOR INSTALLATION


- Secure the fans to the radiator, then fasten the radiator inside the chassis by securing it with screws from the outside.



I/O PANEL INSTALLATION

- Carefully check the labeling of each connector from the I/O panel to identify their function.
- Cross-reference with the motherboard manual to locate where each wire should be installed, then secure one at a time. Please ensure they are installed in the correct polarity to avoid non-function or damage.

Documents / Resources



[KOLINK Big Chungus Shredded Midi Tower ARGB Showcase](#) [pdf] User Manual
Big Chungus Shredded, Midi Tower ARGB Showcase, Big Chungus Shredded Midi Tower ARGB Showcase