



KOLINK Observatory Y ARGB Midi Tower Case User Manual

[Home](#) » [KOLINK](#) » KOLINK Observatory Y ARGB Midi Tower Case User Manual 


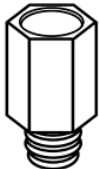






KOLINK Observatory Y ARGB Midi Tower Case User Manual



Contents


- 1 ACCESSORY PACK CONTENTS
- 2 PANEL REMOVAL
- 3 MOTHERBOARD INSTALLATION
- 4 POWER SUPPLY INSTALLATION
- 5 GRAPHICS CARD/PCI-E CARD INSTALLATION
- 6 2.5" SSD INSTALLATION (R)
- 7 2.5" SSD INSTALLATION (R)
- 8 3.5" HDD INSTALLATION
- 9 TOP FAN INSTALLATION
- 10 FRONT/REAR FAN INSTALLATION
- 11 WATERCOOLING RADIATOR INSTALLATION
- 12 I/O PANEL INSTALLATION
- 13 Documents / Resources
- 14 Related Posts

ACCESSORY PACK CONTENTS

x32  Motherboard/SSD Screws	x6  Motherboard Stand-off	x4  PSU Screw	x8  3.5" Drive Screw
x8  Fan Screw	x6  Cable Tie	x2  Thumb Screw	x2  Add-on Card Screw


PANEL REMOVAL

- Left Panel – Pull the tab to open the hinged glass panel and lift off the hinges
- Right Panel – Unscrew the two thumbscrews and slide off.
- Front Panel – Find the bottom cut out, stabilise the chassis with one hand, and pull from the cutout with a little force until the clips release.

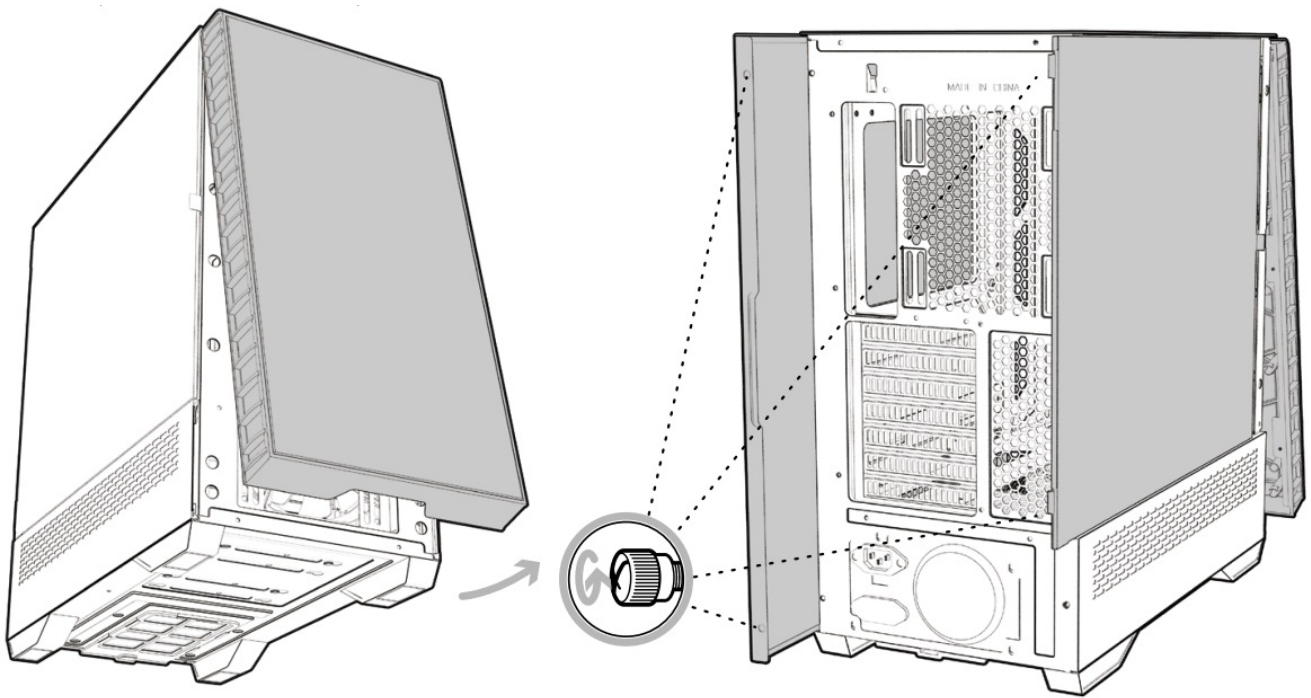


MOTHERBOARD INSTALLATION

- Align your motherboard with the chassis to locate where the stand-offs should be installed.
Once done, remove the motherboard and fasten stand-offs accordingly.
- Insert your motherboard I/O plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the I/O plate.
- Use the provided motherboard screws to attach your motherboard to the chassis.

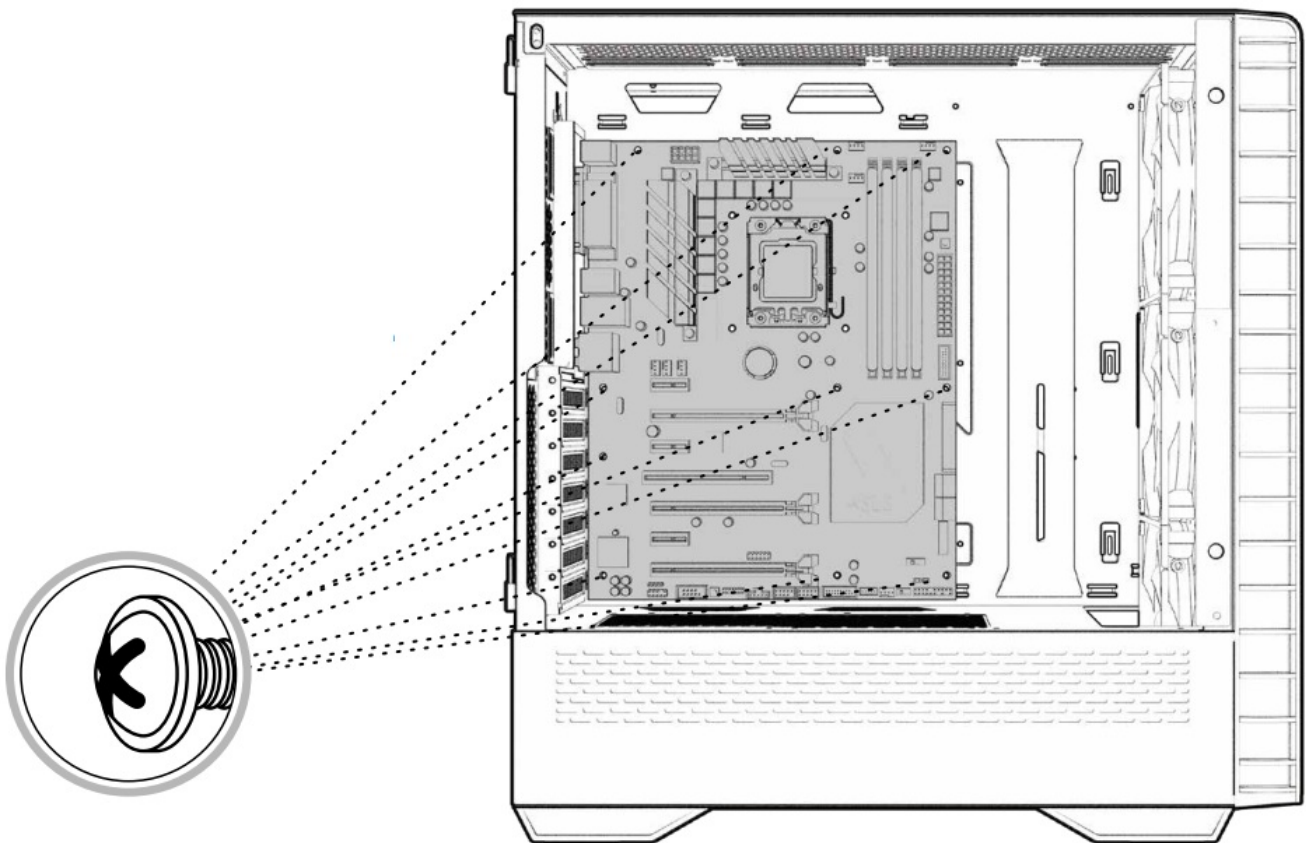


POWER SUPPLY INSTALLATION

- Place PSU in the bottom rear of the case, within the PSU shroud.
- Align the holes and secure with screws.

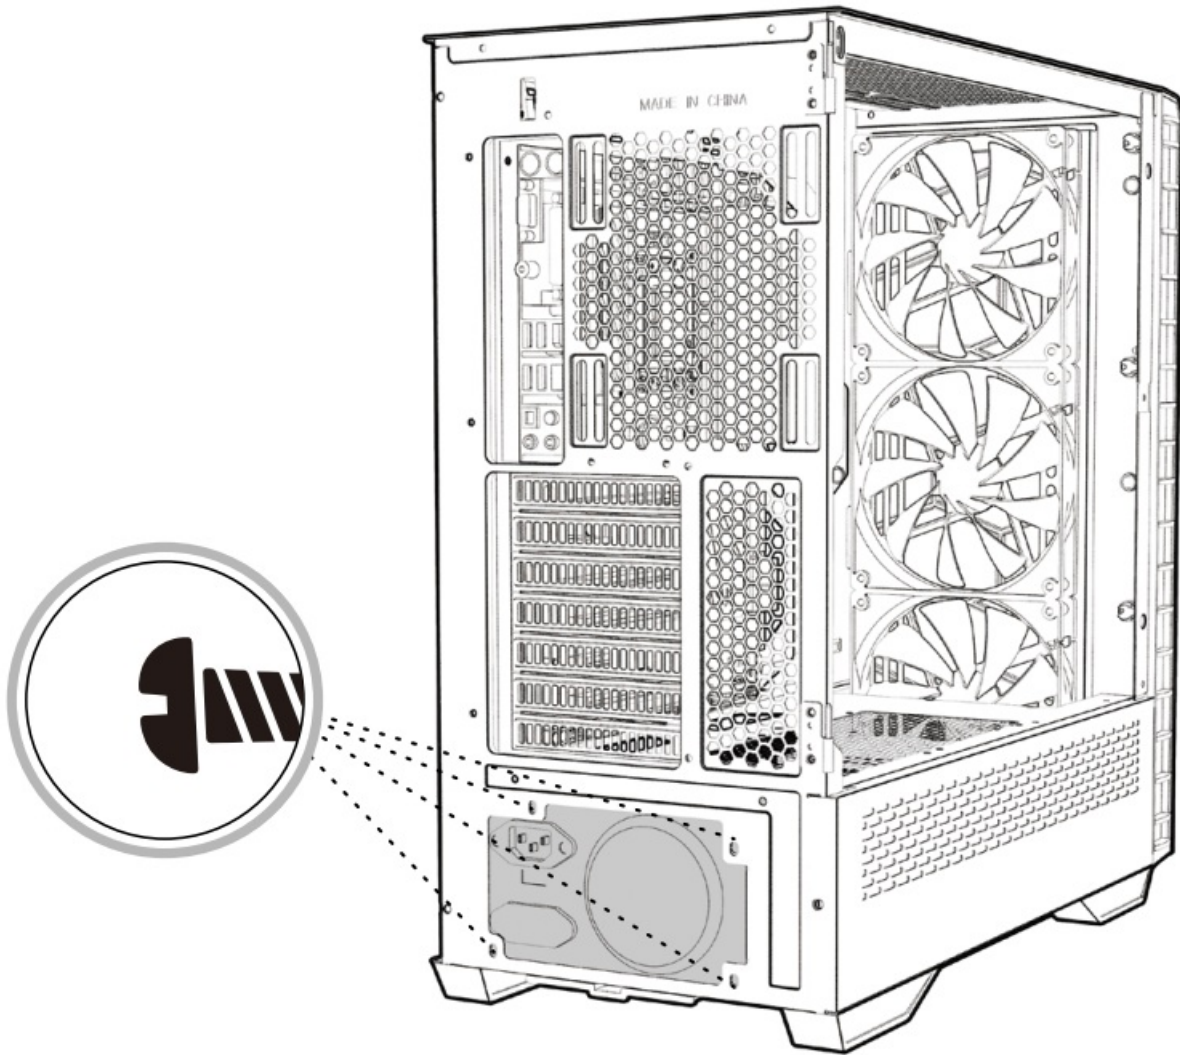


GRAPHICS CARD/PCI-E CARD INSTALLATION

- Remove the rear PCI-E slot covers as necessary (depending on the slot size of your card)
- Carefully position and slide your PCI-E card into place, then secure with the add-on card screws supplied.
- Graphics card can also be mounted vertically using the Vertical GPU bracket & riser cable kit (sold separately)

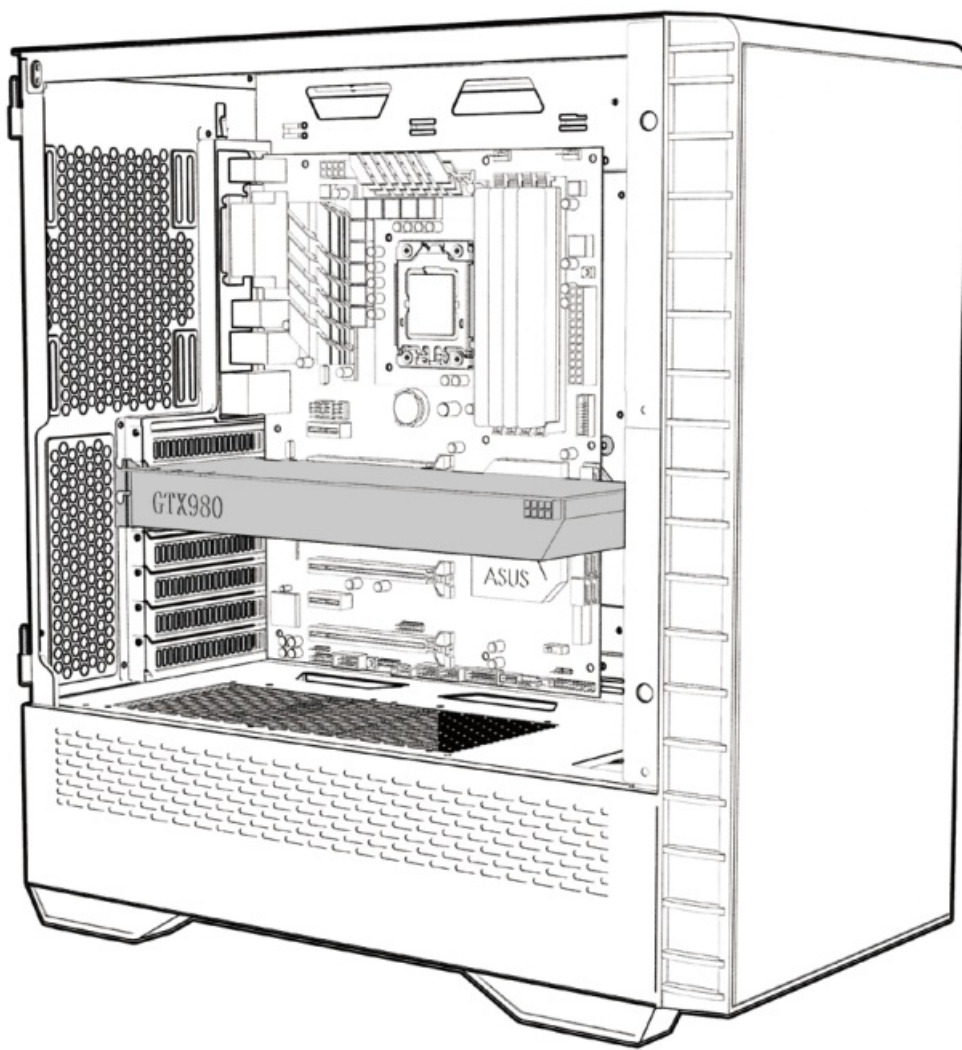


2.5" SDD INSTALLATION (R)

- Remove the bracket from the rear of the motherboard plate, attach your 2.5" drive and then screw back into place.

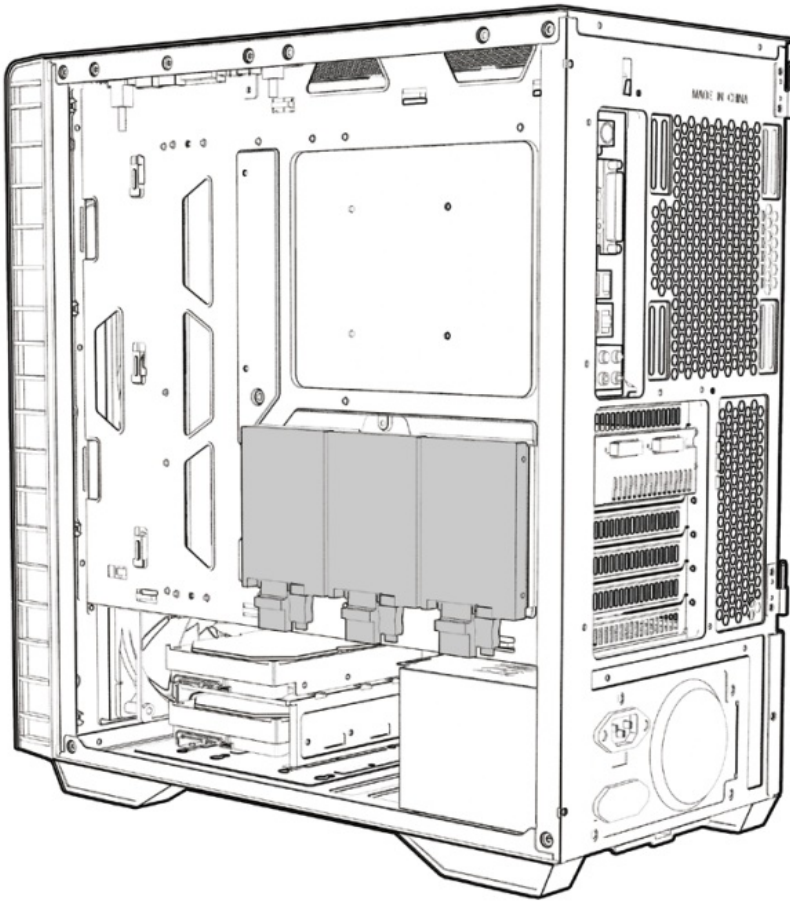


2.5" SDD INSTALLATION (R)

- Place the 2.5" HDD/SSD into/on top of the HDD bracket and screw in if required.

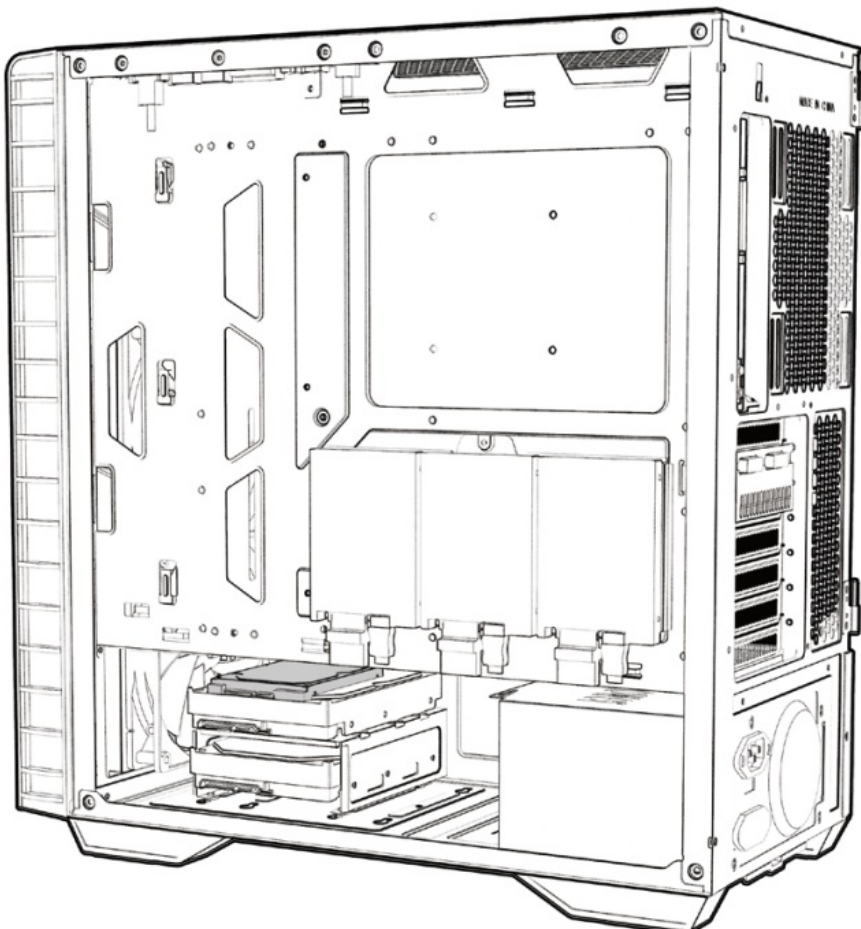


3.5" HDD INSTALLATION

- Place the 3.5" HDD into/on top of the HDD bracket and screw in if required.

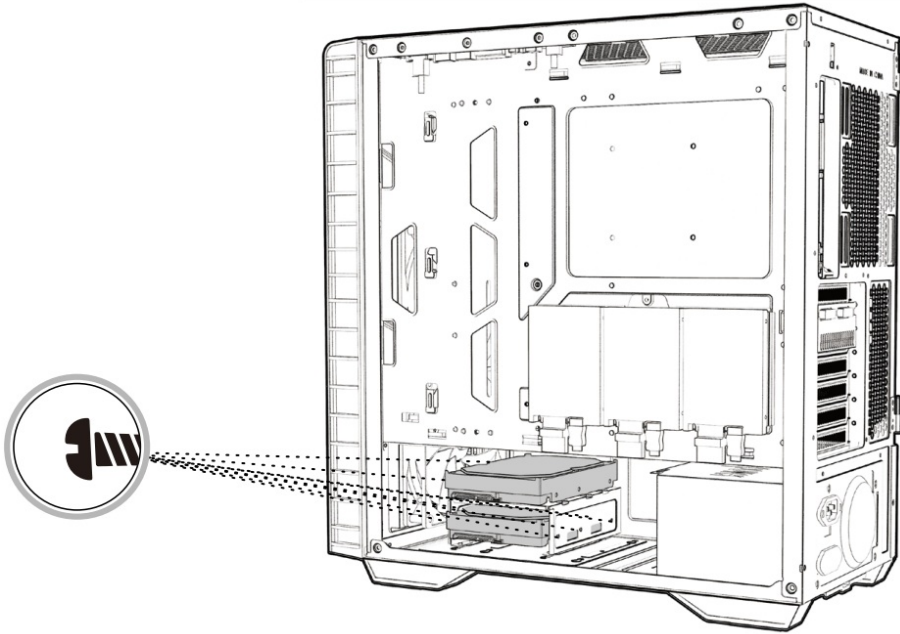


TOP FAN INSTALLATION

- Remove the dust filter from the top of the case.
- Align your fan(s) to the screw holes on the top of the chassis and secure with screws.
- Replace your dust filter once secured.

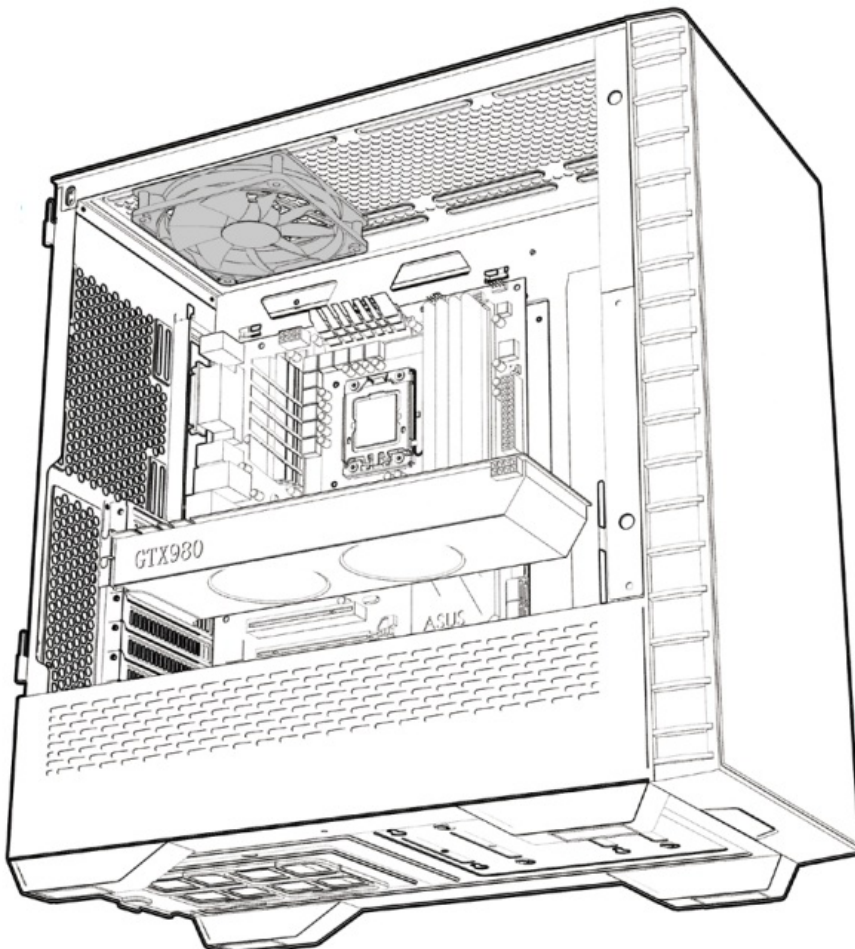


FRONT/REAR FAN INSTALLATION

- Align your fan to the screw holes on the chassis and secure with screws.

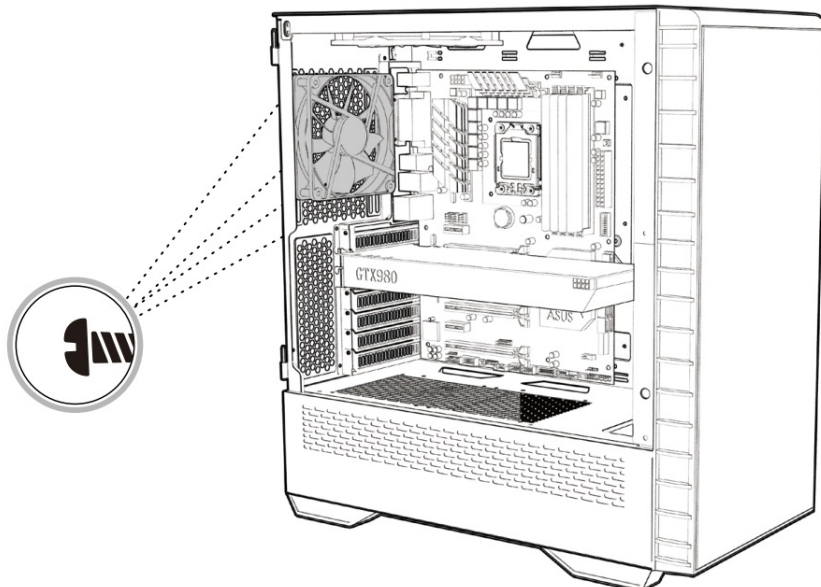

WATERCOOLING RADIATOR INSTALLATION

- Secure the fans to the radiator, then fasten the radiator inside the chassis by securing with screws from the outside.

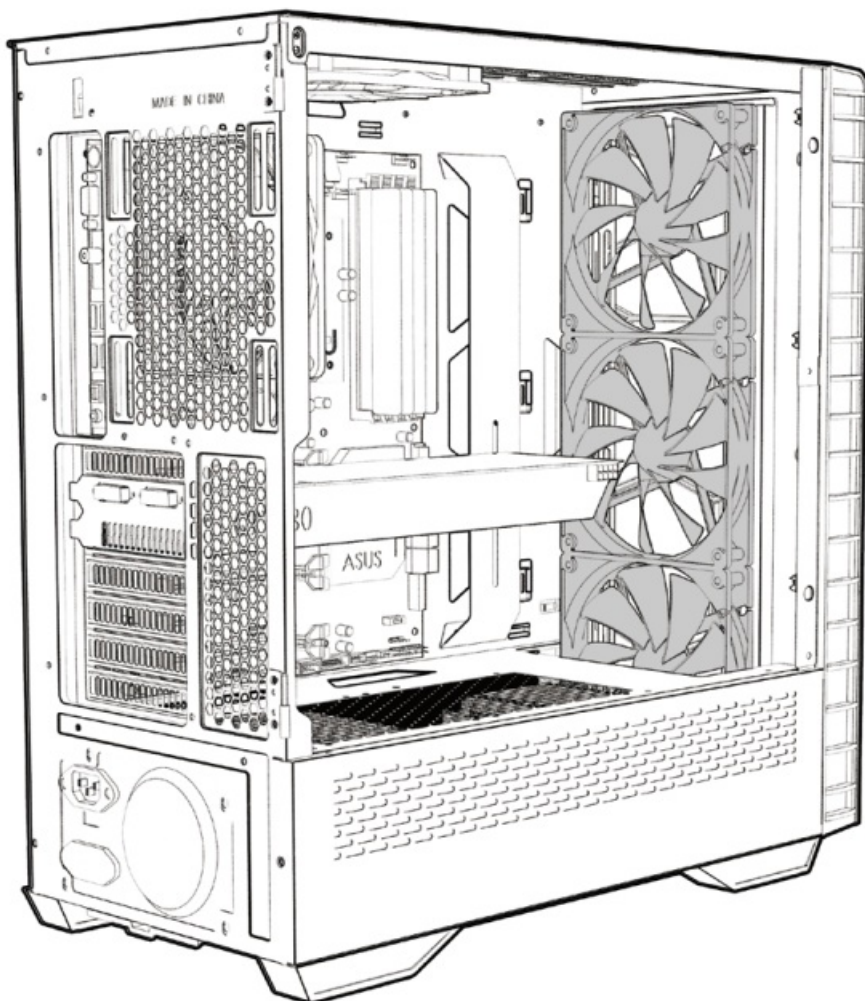


I/O PANEL INSTALLATION

- Carefully check the labelling of each connector from the I/O panel to identify their function.
- Cross reference with the motherboard manual to locate where each wire should be installed, then secure one at a time. Please ensure they are installed in the correct polarity to avoid non-function or damage.



Documents / Resources

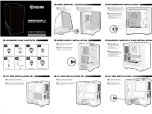	<p>KOLINK Observatory Y ARGB Midi Tower Case [pdf] User Manual Observatory Y ARGB Midi Tower Case, ARGB Midi Tower Case, Midi Tower Case, Tower Case , Observatory Y</p>
---	--