

KOLINK Stronghold Prime Midi Tower Case



KOLINK Stronghold Prime Midi Tower Case User Manual

[Home](#) » [KOLINK](#) » KOLINK Stronghold Prime Midi Tower Case User Manual 

Contents







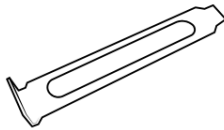
- [1 KOLINK Stronghold Prime Midi Tower Case](#)
- [2 ACCESSORY PACK CONTENTS](#)
- [3 PANEL REMOVAL](#)
- [4 MOTHERBOARD INSTALLATION](#)
- [5 I/O PANEL INSTALLATION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)




KOLINK Stronghold Prime Midi Tower Case




ACCESSORY PACK CONTENTS

x14  Motherboard/SSD Screws	x3  Motherboard Stand-off	x11  PSU Screw	x4  3.5" Drive Screw
x4  Thumb Screw	x10  Fan Screw	x1  PCI Slot	

PANEL REMOVAL

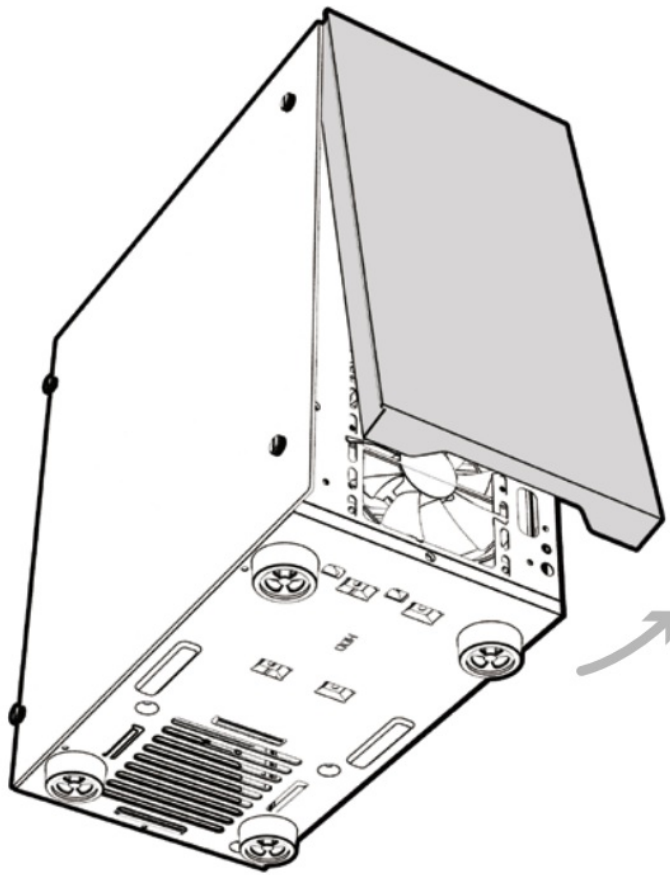


- Left Panel – Unscrew the 4 thumbscrews and lift off carefully.
- Right Panel – Unscrew the two thumbscrews and slide off.

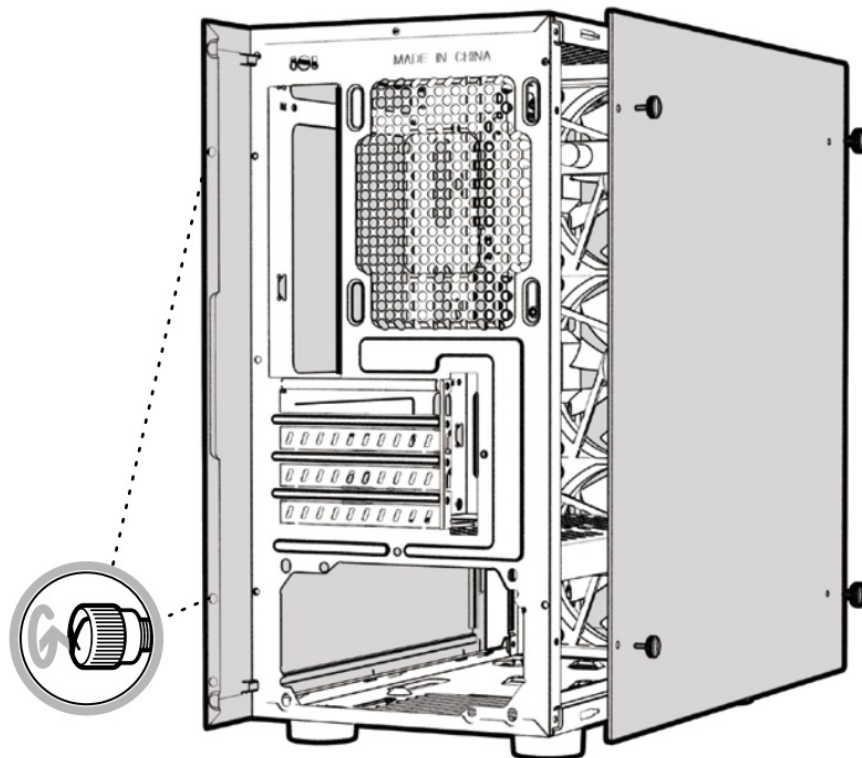


- Front Panel – Find the bottom cutout, stabilise the chassis with one hand, and pull from the cutout with a little force until the clips release.

MOTHERBOARD INSTALLATION

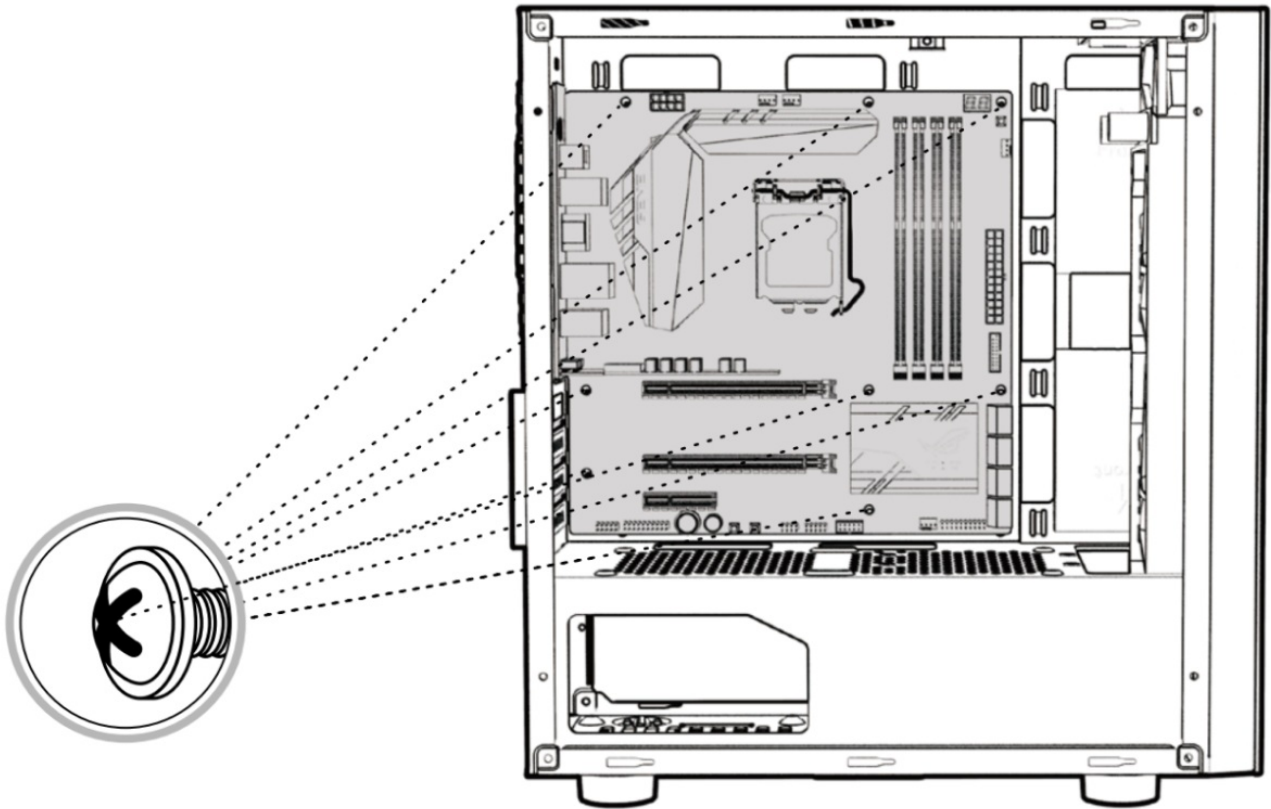

- Align your motherboard with the chassis to locate where the stand-offs should be installed.
- Once done, remove the motherboard and fasten stand-offs accordingly.
- Insert your motherboard I/O plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the I/O plate.
- Use the provided motherboard screws to attach your motherboard to the chassis.


POWER SUPPLY INSTALLATION

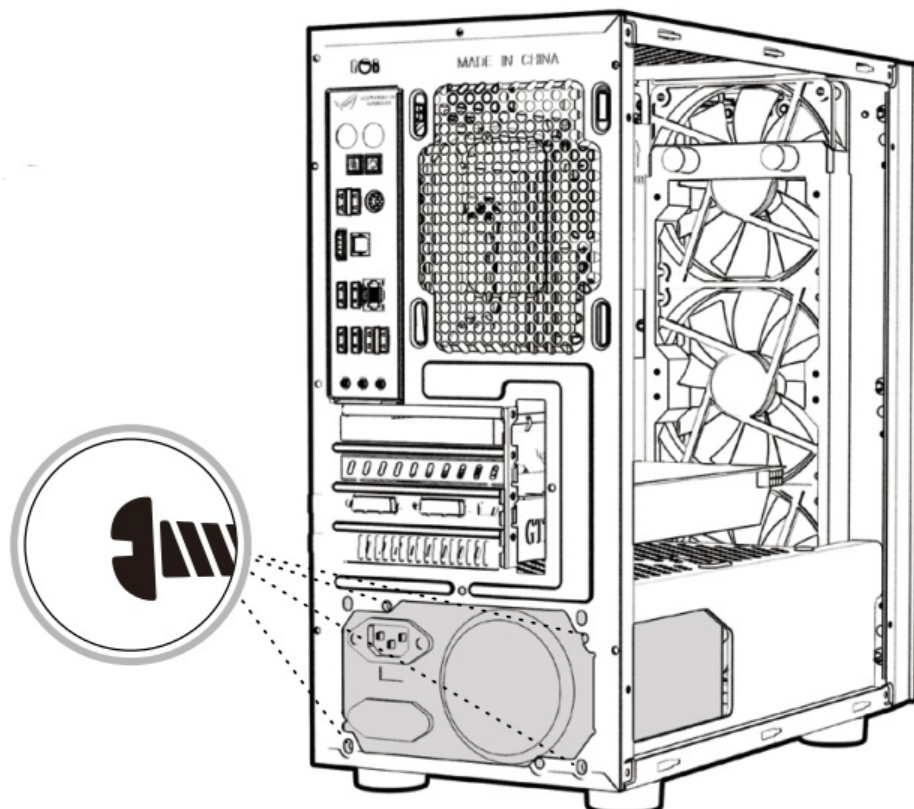

- Place the PSU in the bottom rear of the case, within the PSU shroud.
- Align the holes and secure them with screws.

GRAPHICS CARD/PCI-E CARD INSTALLATION


VIDEO CARD/PCI-E CARD INSTALLATION

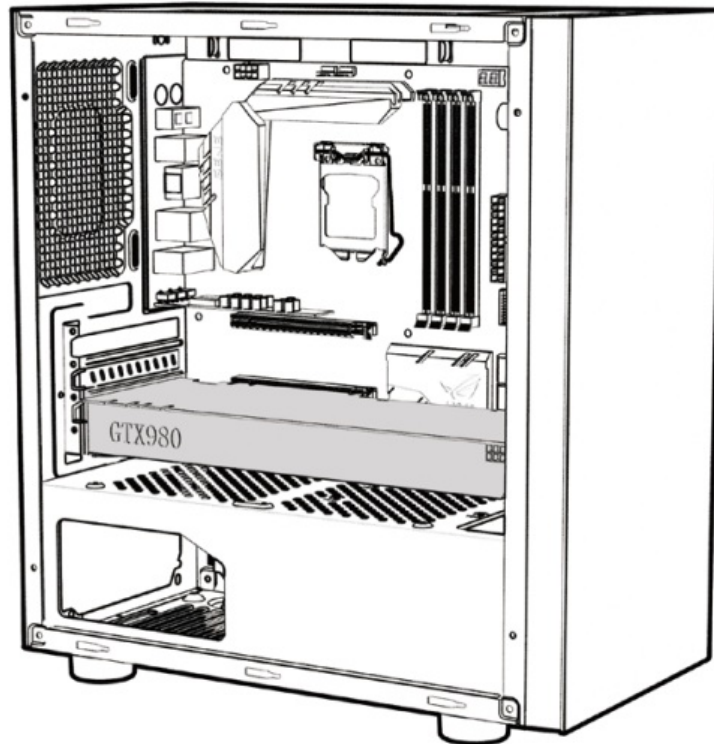

- Carefully position and slide your card into place, (thing on the slot size of your card) secure with the add-on card screws supplied.


2.5" SSD INSTALLATION (FRONT)

Align your SSD with the holes next to the motherboard plate and secure it from behind with screws.

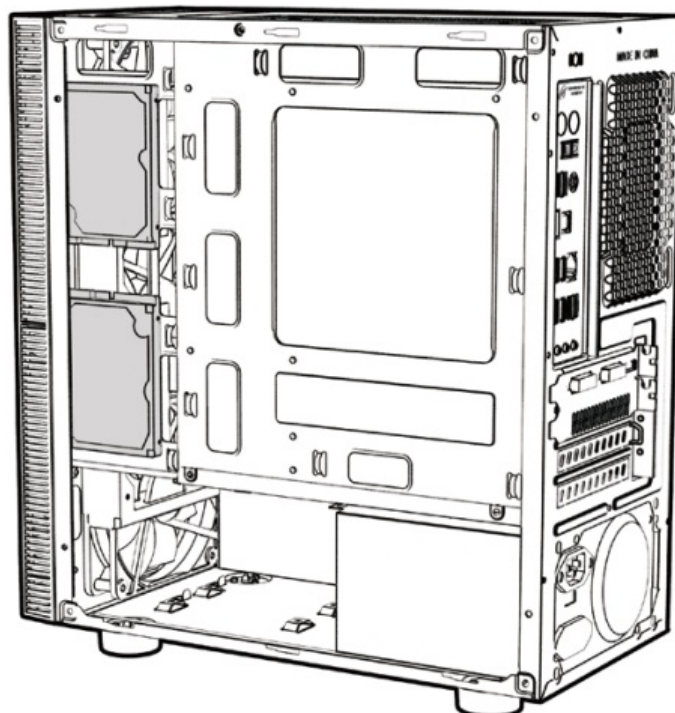


3.5" HDD/2.5" SSD INSTALLATION

Allen the 3.5" HDD/2.5" SSD with the screw holes on the PSU shroud or on the bottom of the chassis and secure with screws.

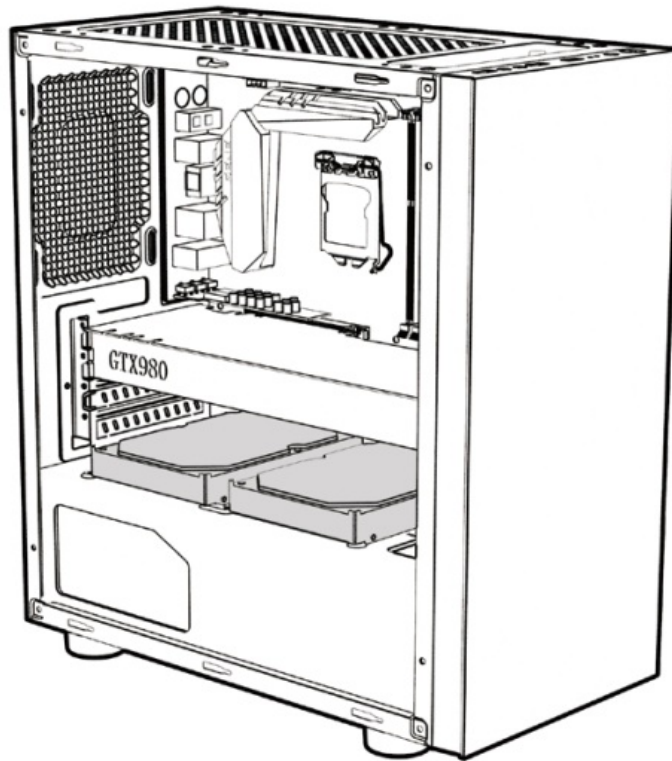


TOP FAN INSTALLATION

Align your fan(s) to the screw holes on the top of the chassis and secure with screws.

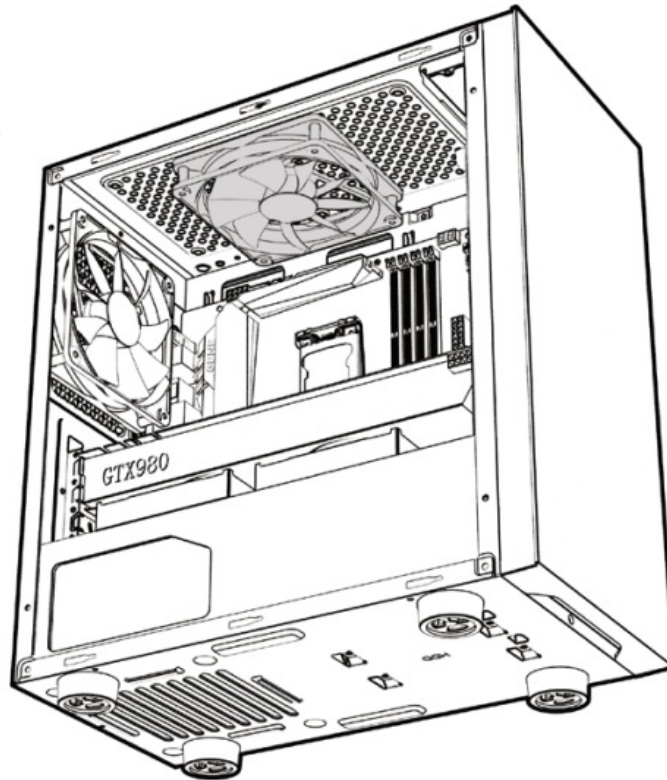

FRONT/REAR FAN INSTALLATION

Align your fan to the screw holes on the chassis and secure with screws.

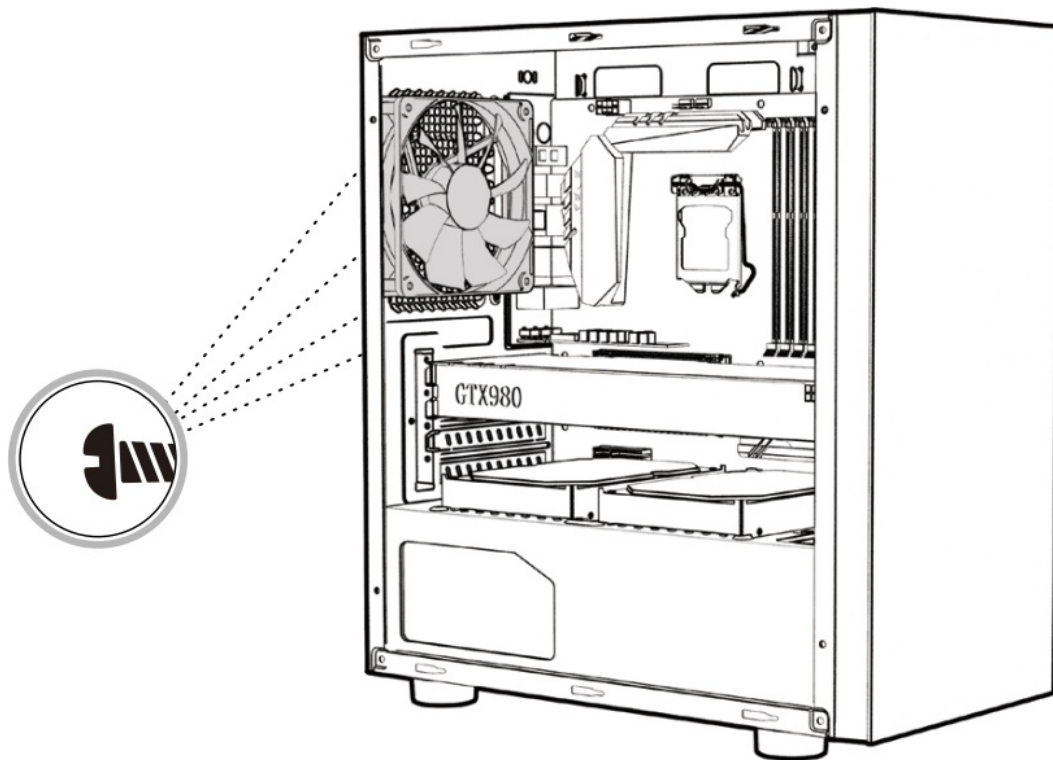

WATERCOOLING RADIATOR INSTALLATION

Secure the fans to the radiator, then fasten the radiator inside the chassis by securing it with screws from the outside.

1/O PANEL INSTALLATION

- Carefully check the labelling of each connector from the 1/O panel to identify its function.
- Cross-reference with the motherboard manual to locate where each wire should be installed, then secure one at a time.
- Please ensure they are installed in the correct polarity to avoid non-function or damage.

Documents / Resources

	KOLINK Stronghold Prime Midi Tower Case [pdf] User Manual Stronghold Prime Midi Tower Case, Stronghold, Prime Midi Tower Case, Midi Tower Case, Tower Case
	KOLINK Stronghold Prime Midi Tower Case [pdf] User Manual Stronghold Prime Midi Tower Case, Stronghold, Prime Midi Tower Case, Midi Tower Case, Tower Case, Case

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.