



## KOLINK V2 Levante MIDI TOWER CASE User Manual

[Home](#) » [KOLINK](#) » KOLINK V2 Levante MIDI TOWER CASE User Manual 

### Contents











- [1 KOLINK V2 Levante MIDI TOWER CASE](#)
- [2 ACCESSORY PACK CONTENTS](#)
- [3 PANEL REMOVAL](#)
- [4 MOTHERBOARD INSTALLATION](#)
- [5 POWER SUPPLY INSTALLATION](#)
- [6 GRAPHICS CARD/P CI-E CARD INSTALLATION](#)
- [7 2.5" SSD INSTALLATION \(REAR\)](#)
- [8 2.5" SSD INSTALLATION \(FRONT\)](#)
- [9 3.5" HDD INSTALLATION](#)
- [10 FRONT/REAR FAN INSTALLATION](#)
- [11 TOP FAN INSTALLATION](#)
- [12 WATERCOOLING RADIATOR INSTALLATION](#)
- [13 I/O PANEL INSTALLATION](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)



**KOLINK V2 Levante MIDI TOWER CASE**




## ACCESSORY PACK CONTENTS
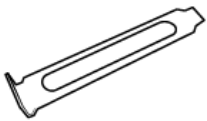
<b>x12</b>  Motherboard/SSD Screws	<b>x6</b>  Motherboard Stand-off	<b>x1</b>  Side Stand-off	<b>x4</b>  PSU Screw	<b>x3</b>  Add-on Card Screw
<b>x4</b>  3.5" Drive Screw	<b>x2</b>  Fan Screw	<b>x4</b>  Thumb Screw	<b>x3</b>  Cable Tie	<b>x1</b>  PCI Slot

## PANEL REMOVAL


- Left Panel – Unscrew the 4 thumbscrews and lift off carefully.
- Right Panel – Unscrew the 4 thumbscrews and lift off carefully.
- Top Panel – Carefully grasp the front edge of the top panel, stabilize the chassis with one hand, and pull the top edge upwards with a little force until the clips release (be wary of connected wires from the I/O panel).

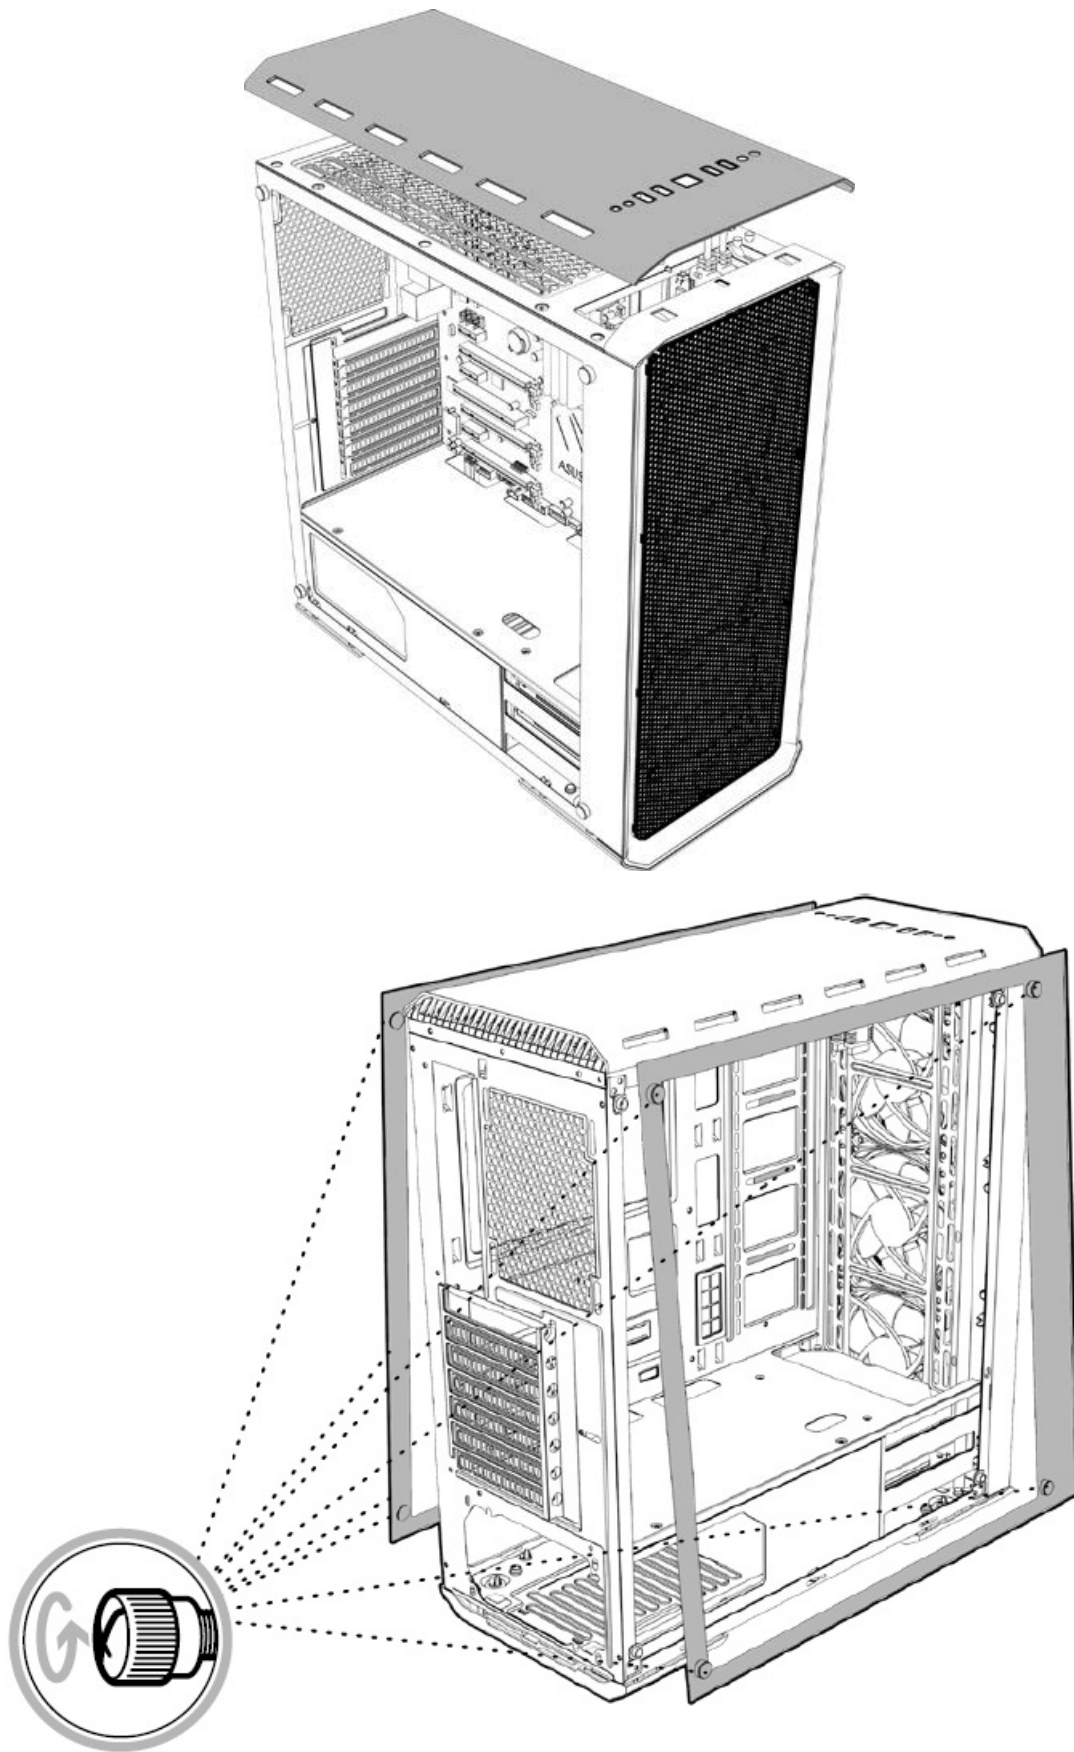

## MOTHERBOARD INSTALLATION


- Align your motherboard with the chassis to locate where the stand-offs should be installed. Once Done, remove the mother bard and fasten stand-offs accordingly.
- Insert your mother tiara 1/0 plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the 1/0 plate.

- Use the provided motherboard screws to attach your motherboard to the chassis.

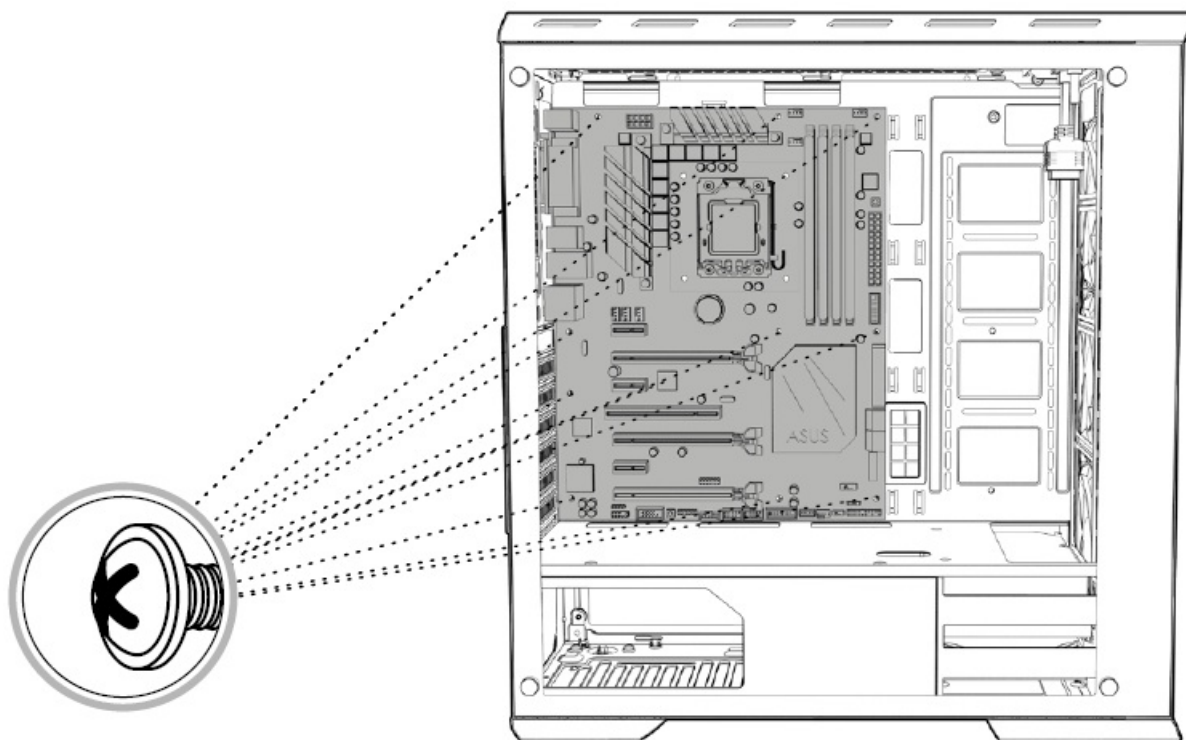

## POWER SUPPLY INSTALLATION



- Place PSU in the bottom rear of the case, within the PSU shroud.
- Align the holes and secure with screws.

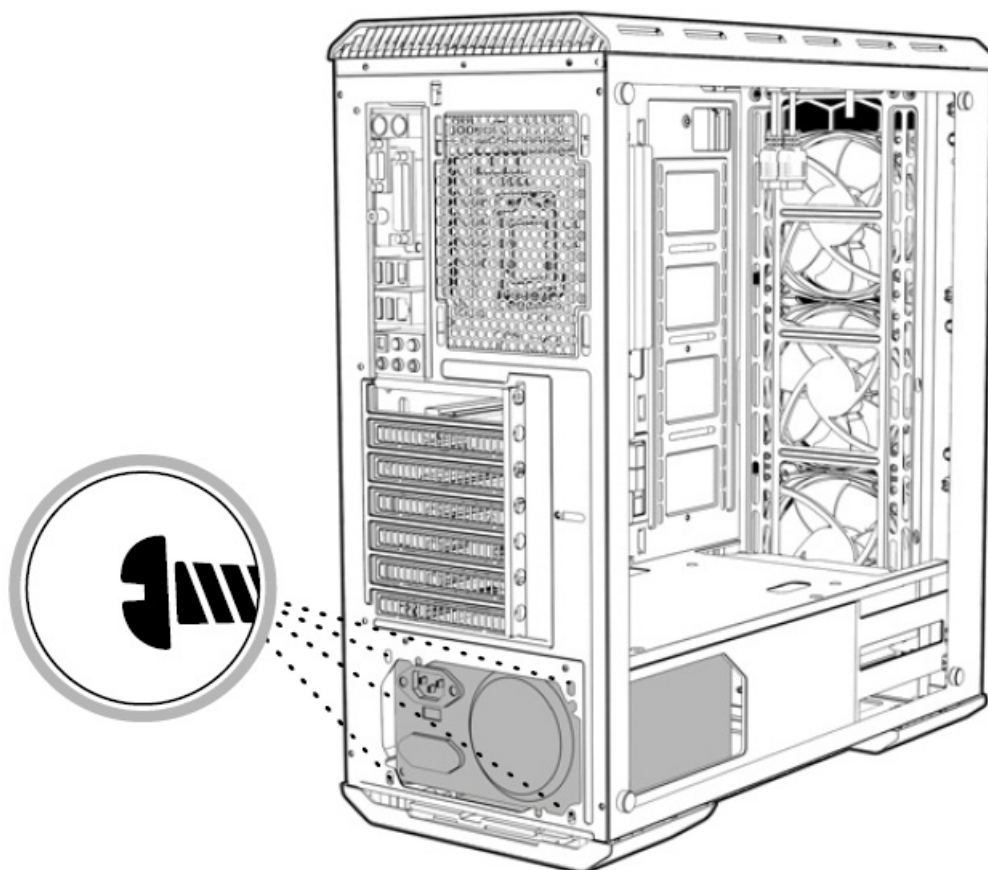




## GRAPHICS CARD/P CI-E CARD INSTALLATION

- Remove the rear PCI-E slot covers as necessary (depending on the slot size of your card).
- Carefully position and slide your PCI-E card into place, then secure with the add-on card screws supplied.

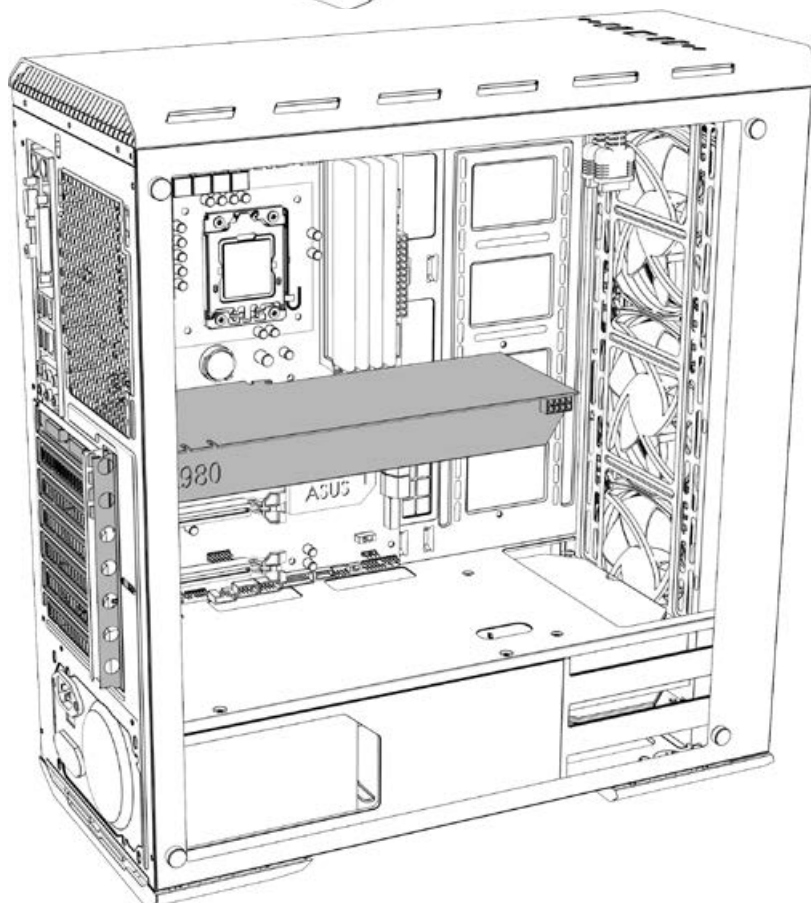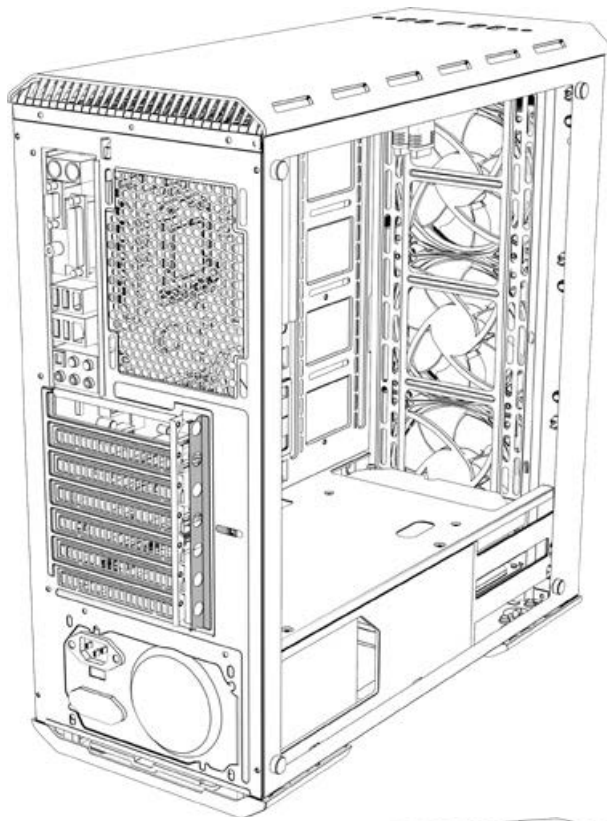


## 2.5" SSD INSTALLATION (REAR)

- Unscrew the SSD bracket, attach SSD to the bracket and screw back onto the rear motherboard plate.

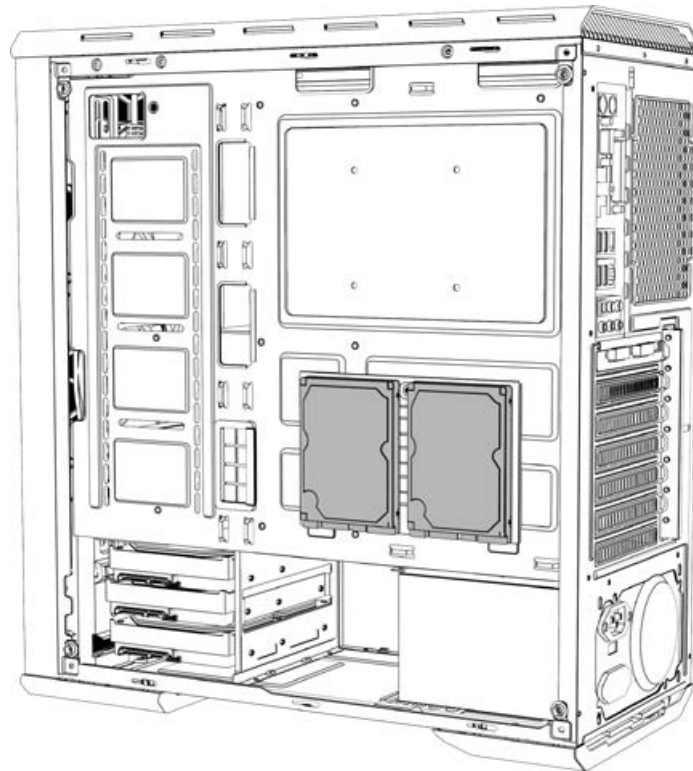


## 2.5" SSD INSTALLATION (FRONT)

- Place your 2.5" drive on the mounts and secure with screws from behind.

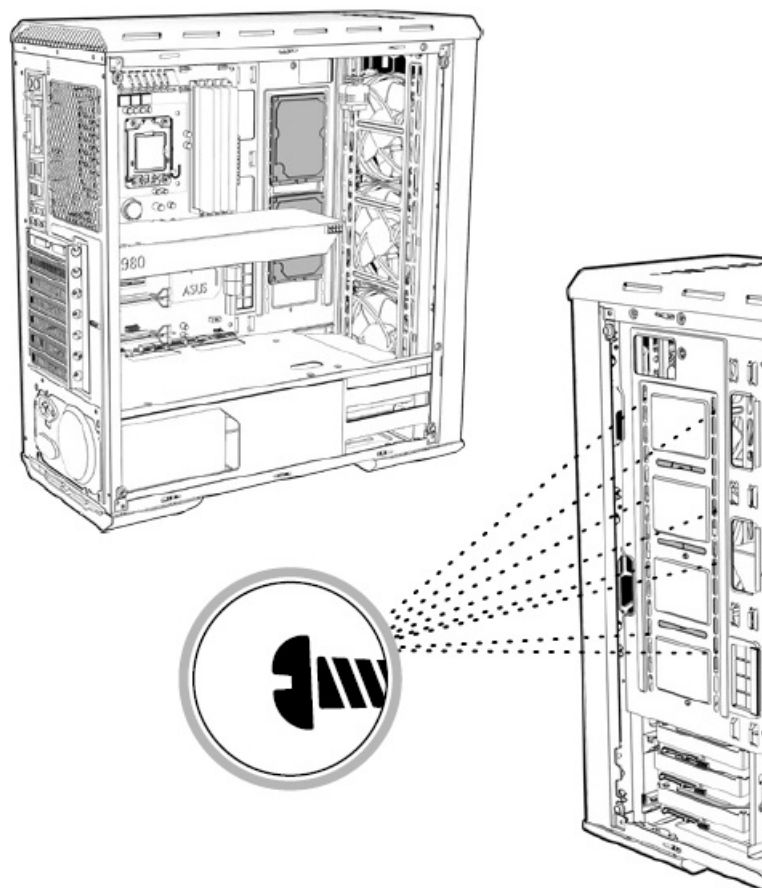


## 3.5" HDD INSTALLATION

- Attach 2 screws to the left side of the hard drive. Slide the drive into the 3.5" bays at the rear of the case. Secure the drive on the right side using the provided screws and hand tighten.

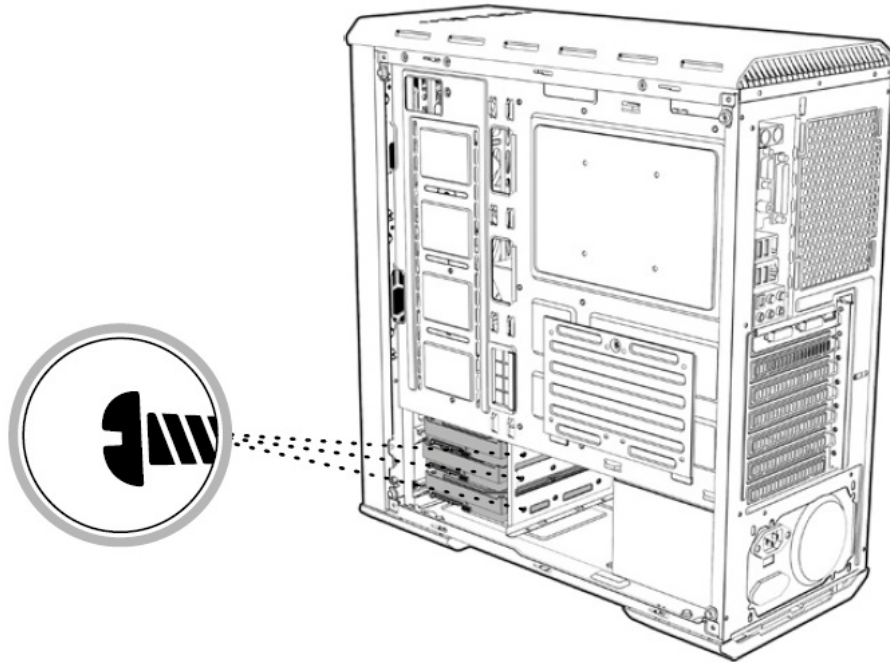


## FRONT/REAR FAN INSTALLATION

- Align your fan to the screw holes on the chassis and secure with screws.

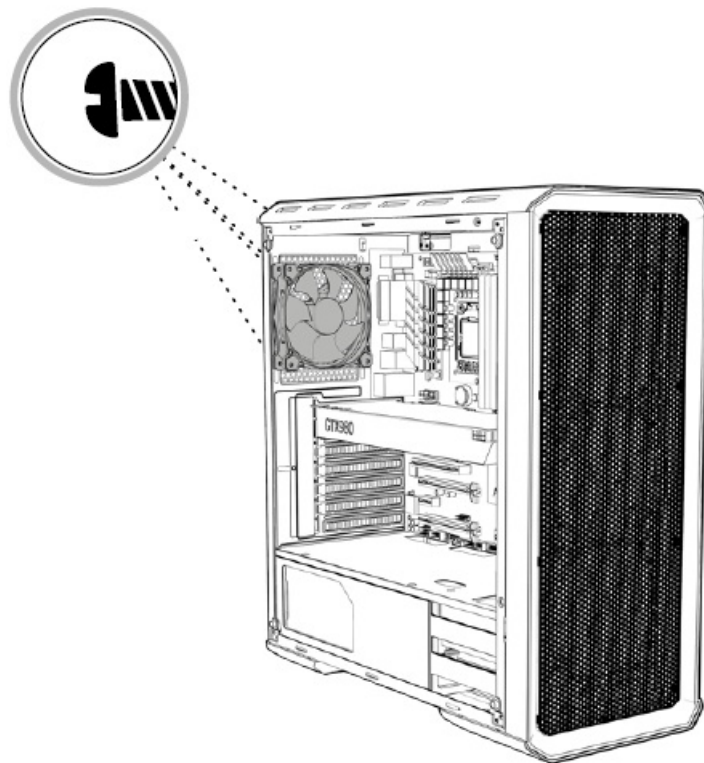

## TOP FAN INSTALLATION

- Remove the top panel using the procedure outlined in step 1. Align your fan(s) to the screw holes on the top of the chassis and secure with screws. Replace your top panel once secured.

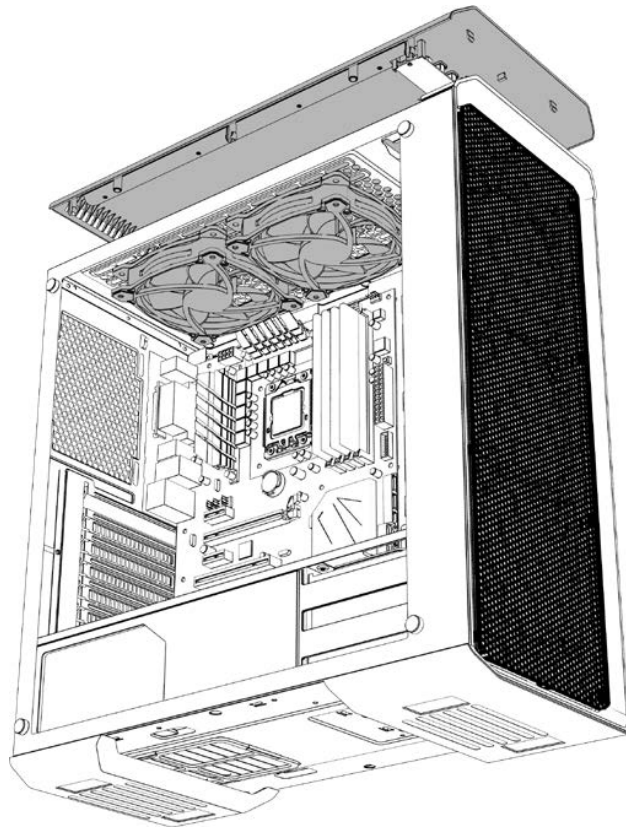


## WATERCOOLING RADIATOR INSTALLATION

- Secure the fans to the radiator, then fasten the radiator inside the chassis by securing with screws from the Outside.

## I/O PANEL INSTALLATION

- Carefully check the labelling of each connector from the I/O panel to identify their function.
- Cross reference with the motherboard manual to locate where each wire should be installed, then secure one at a time. Please ensure they are installed in the correct polarity to avoid non-function or damage.

## Documents / Resources

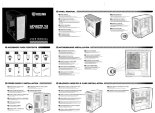

[KOLINK V2 Levante MIDI TOWER CASE](#) [pdf] User Manual  
V2 Levante MIDI TOWER CASE, V2, Levante MIDI TOWER CASE, MIDI TOWER CASE