

LUXRITE LR23460 1 MODULE INTERCHANGEABLE TRIM User Manual

[Home](#) » [LUXRITE](#) » LUXRITE LR23460 1 MODULE INTERCHANGEABLE TRIM User Manual 



1" MODULE INTERCHANGEABLE TRIM – 5CCT SELECTABLE
LR23460

Contents

- [1 LR23460 1 MODULE INTERCHANGEABLE TRIM](#)
- [2 PRE-INSTALLATION](#)
- [3 DRIVER WIRING](#)
- [4 FIXTURE INSTALLATION:](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

LR23460 1 MODULE INTERCHANGEABLE TRIM

IMPORTANT: READ ALL INSTRUCTIONS BEFORE INSTALLING FIXTURES. KEEP FOR FUTURE REFERENCE.

SAFETY: FOR YOUR SAFETY, THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH LOCAL ELECTRICAL CODES AND ORDINANCES. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.


WARNING: MAKE SURE POWER IS OFF FROM THE ELECTRICAL PANEL BEFORE STARTING INSTALLATION OR ATTEMPTING ANY MAINTENANCE. INDOOR INSTALLATION ONLY.

TOOLS REQUIRED: SAW, MEASURING TAPE, ELECTRICAL WIRING (USE TAPE AND GAUGE SUITABLE FOR APPLICATION TO CONNECT THE FIXTURES).

PRE-INSTALLATION


1. Mount the appropriate trim (Round or Square) on the module.(**Fig. 1**)

2. Twist the trim to lock on the module securely.
3. Turn power OFF from the electrical panel before starting the installation
4. Locate a suitable position to place the fixture and open it in accordance with the cutout dimensions (Refer to cutout template) for the appropriate size.
5. Run an electrical wire from the switch (power supply) through the mounting hole. Use NMD90 Romex or BX cable.

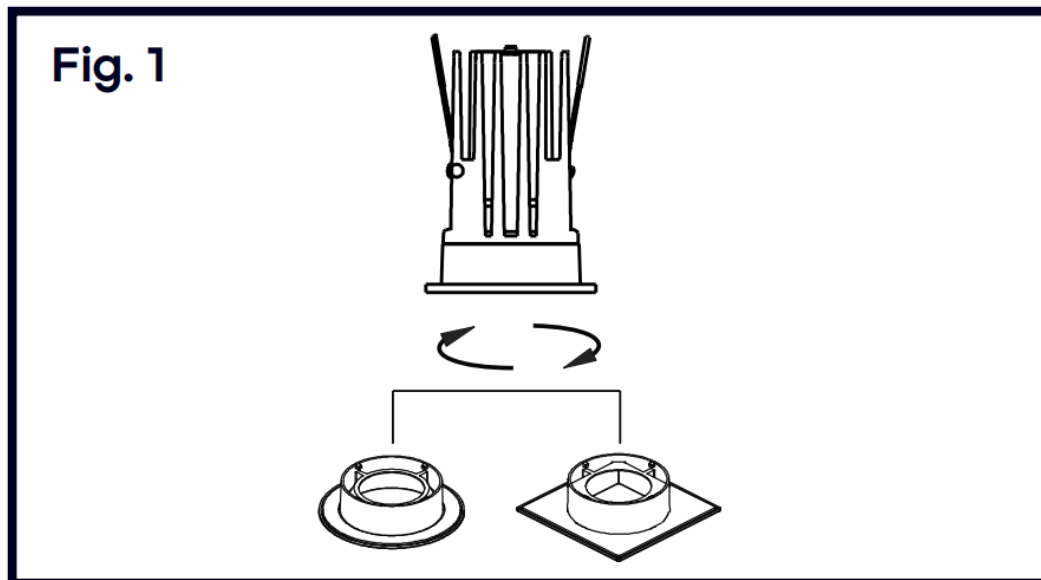


DRIVER WIRING

1. Open the hardwire box swing cover and remove the appropriate knockout(s).
2. Insert the electrical supply cable through the knockout and secure it with a cable connector (sold separately).
3. Using wire nuts, connect the green ground wire of the cable to the green wire on the box. Connect the black wire of the cable to the black wire of the box. (**Fig. 2**)

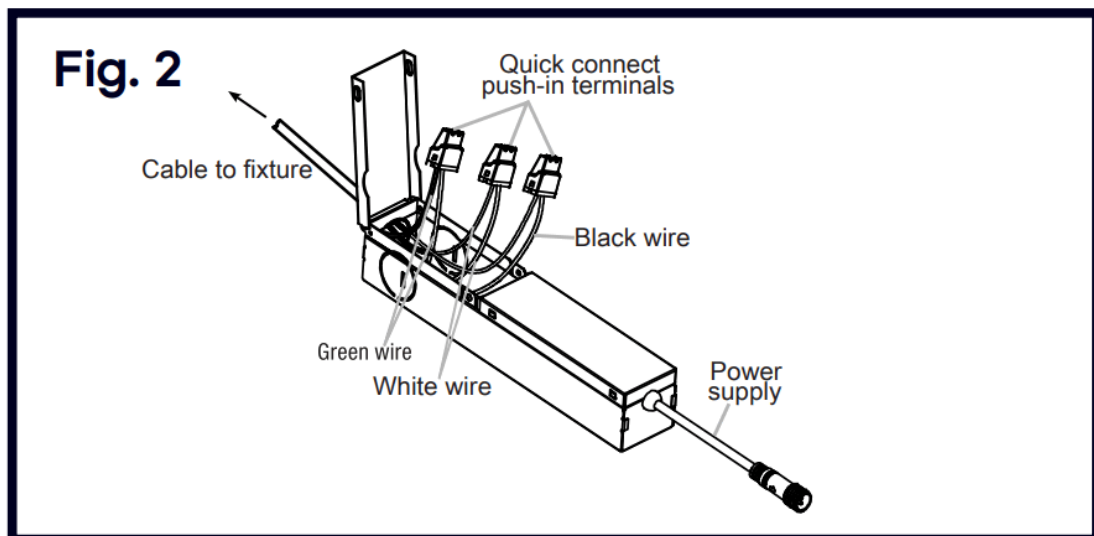


4. Place all wiring and connections back into the box and close the cover.
5. Insert hardwire box through the mounting hole. (**Fig. 3**)

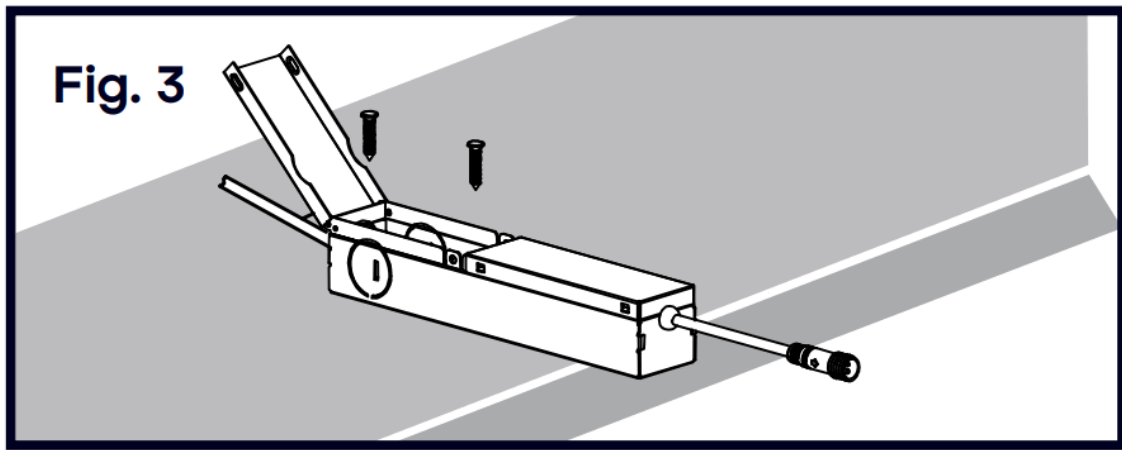

NEW CONSTRUCTION APPLICATIONS: Hardwire box shall be firmly secured to studs, joists, or similar fixed structural units.


REMODEL APPLICATIONS: Do not require the hardwire box to be firmly secured after the mounting plates, studs, joists, or structural units have been concealed.

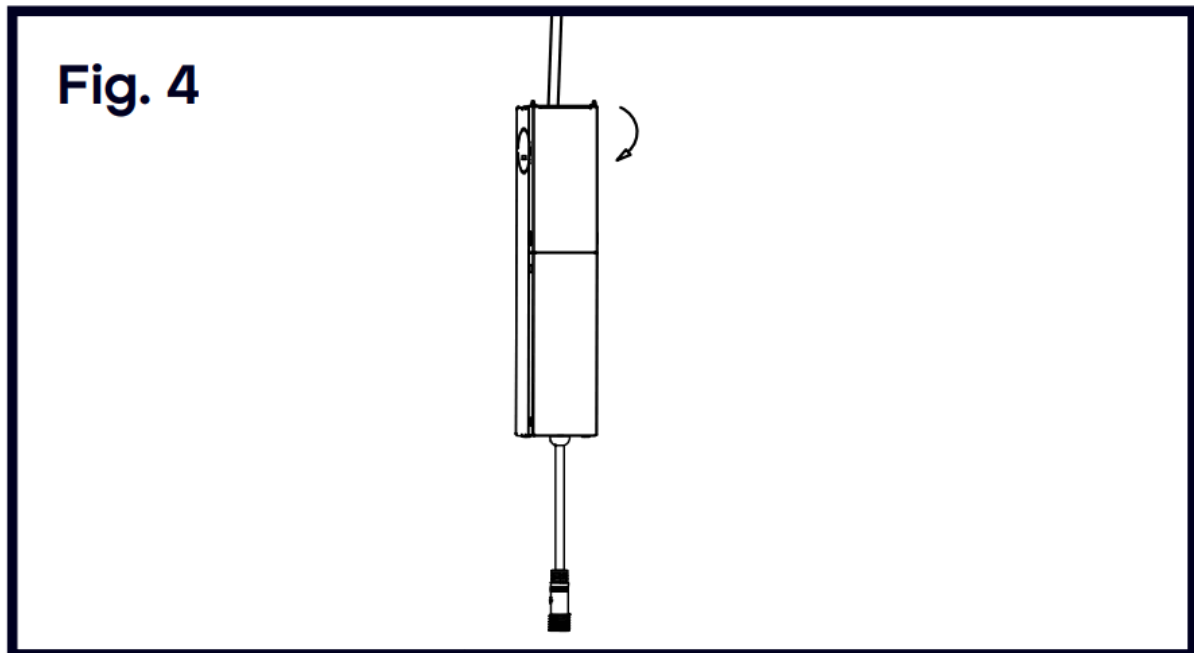

FIXTURE INSTALLATION:


1. Connect the fixture to the hardwire box by inserting and twisting the male/female connectors. (**Fig. 5**)

Fig. 5


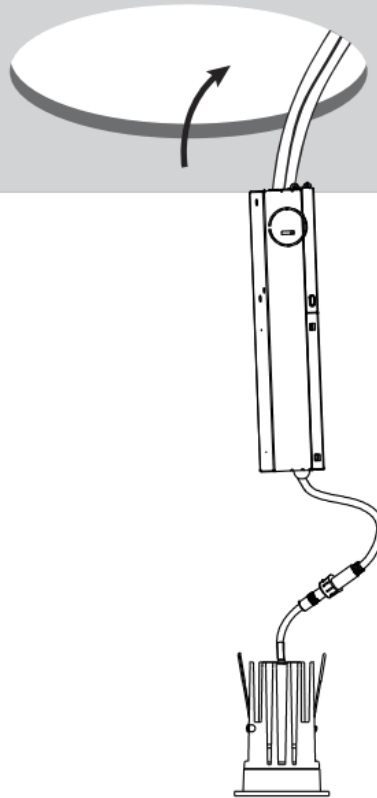



2. Push spring-loaded clips on the fixture upwards and insert the fixture base into the mounting hole. Release the clips and fixture will be pulled flush to the ceiling (**Fig. 6**)

Fig. 6

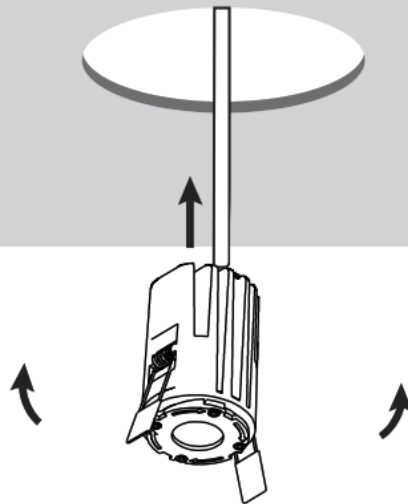

3. Once assembly is complete, turn on the power to confirm fixture is working properly.

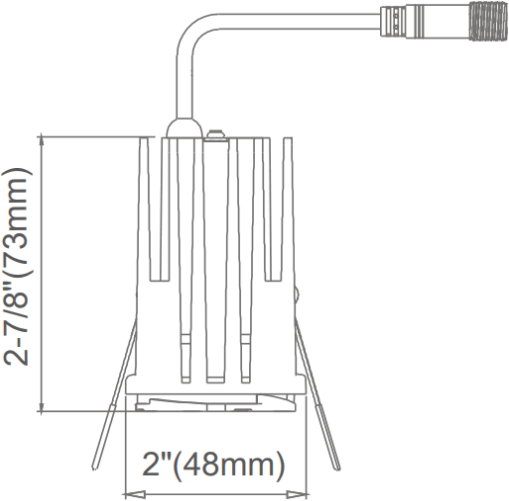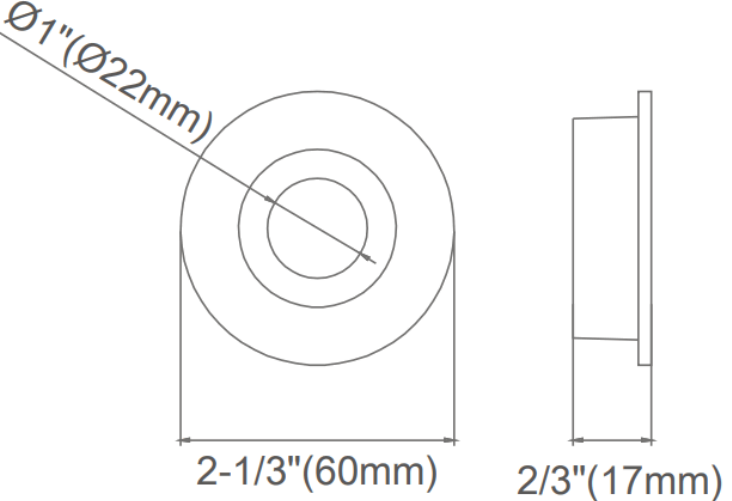	
<p>1" MODULE</p>	<p>1" ROUND TRIM</p>
<p> CUTTING DIAMETER: Ø 2.12" (54MM)</p>	

732-882-1500
luxrite.com

Documents / Resources

	<p>LUXRITE LR23460 1 MODULE INTERCHANGEABLE TRIM [pdf] User Manual LR23460 1 MODULE INTERCHANGEABLE TRIM, 1 MODULE INTERCHANGEABLE TRIM, I NTERCHANGEABLE TRIM</p>
---	---

References

- [!\[\]\(8c4dca64662d21542001ca0ed7eeb688_img.jpg\) Luxrite](#)