

Tell Free(US): 3235971109

 $\textbf{Website:} www.mcombo.com \ \ Amazon\, sold\, by: MCombo$

Warranty Claim: sales@mcombo.com


Sales & Technical Questions: sales@mcombo.com sales@exacme.com

CONGRATULATIONS!

Mcombo Accent Chair with ottoman - a name synonymous with classic design and the carrier of value and quality. Our products are directly from factory and eliminated the cost of middlemen. The Accent Chair with ottoman is a high-quality shading solution to enhance comfortable feelings as you try to enjoy the nice day.


WARRANTY

- All warranties are to the original purchaser from MCOMBO ONLY
- MCOMBO ® will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- MCOMBO ® All of chairs come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

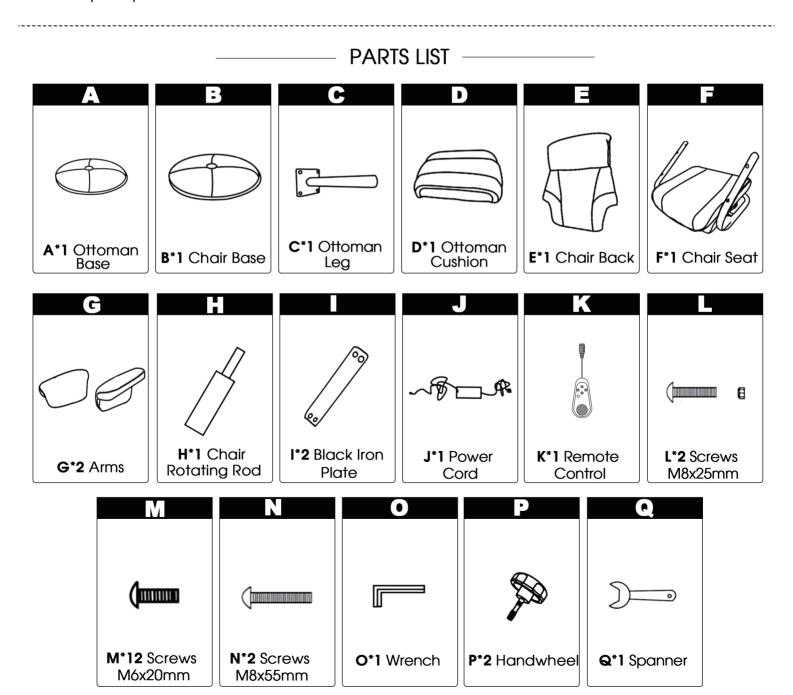

Please remove all protective foam.

Ottoman Assembly

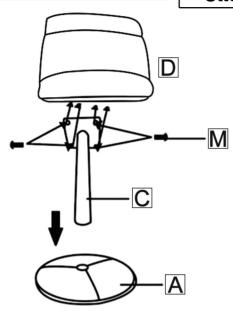


Step 1


Fix the Ottoman Base (#A) and Ottoman Cushion (#D) together with the Ottoman Leg (#C) use Screws (#M).

Chair Assembly

Step 2

Connect Chair Base (#B) and Chair Seat (#F) with Rotating Rod (#H).

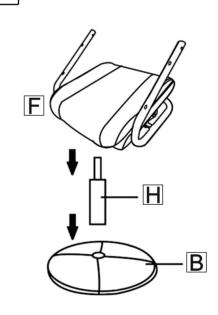

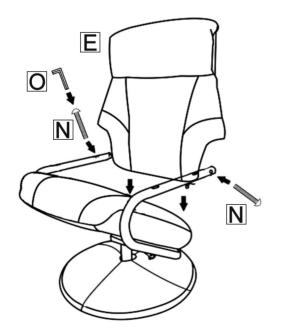


Step 3

Fix both sides of the Backrest (#E) to the Armrest Frame with Screws (#N&#O).


Step 4

- 1. Fix the small iron pieces under the backrest and behind the seat cushion with Screws (#L&#Q).
- 2. Fix the Handwheels **(#P)** to the sides of the chair.

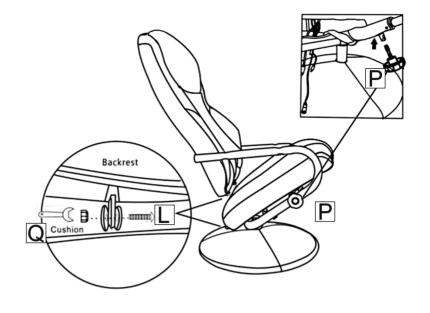


Step 5

- 1.Align Black Iron Plate #I with the holes in the Armrest Frame;
- 2. Attach one side of Black Iron Plate #I to the Armrest Frame with Bolts #M;
- 3.Attach Right & Left Arms **#G** to the other side of Iron Plate **#I** with Bolts **#M**; Tighten all bolts and the armrest is installed.

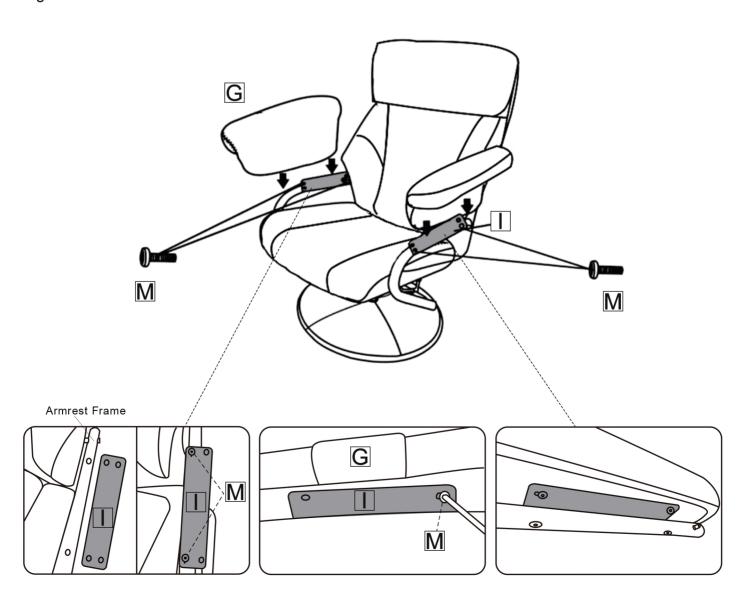

Step 6

- 1. Power Cord (#J-black): Connect 2 black connectors.
- 2. Romote Control (#K-black): Connect 2 black connectors.
- 3. Vibrating Cord (white): Connect 2 white connectors on the backrest and the seat cushion.

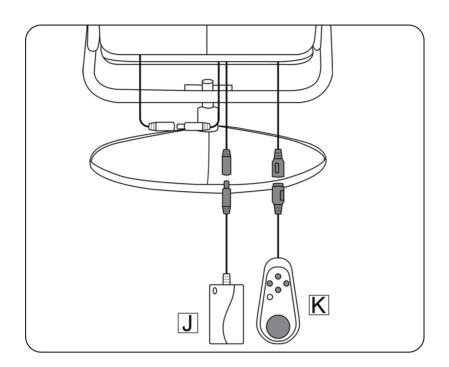



Now you can relax your body on this chair and even decorate your living room!



KINDLY REMINDER

If you have any questions about the product or use, please feel free to contact sales@mcombo.com