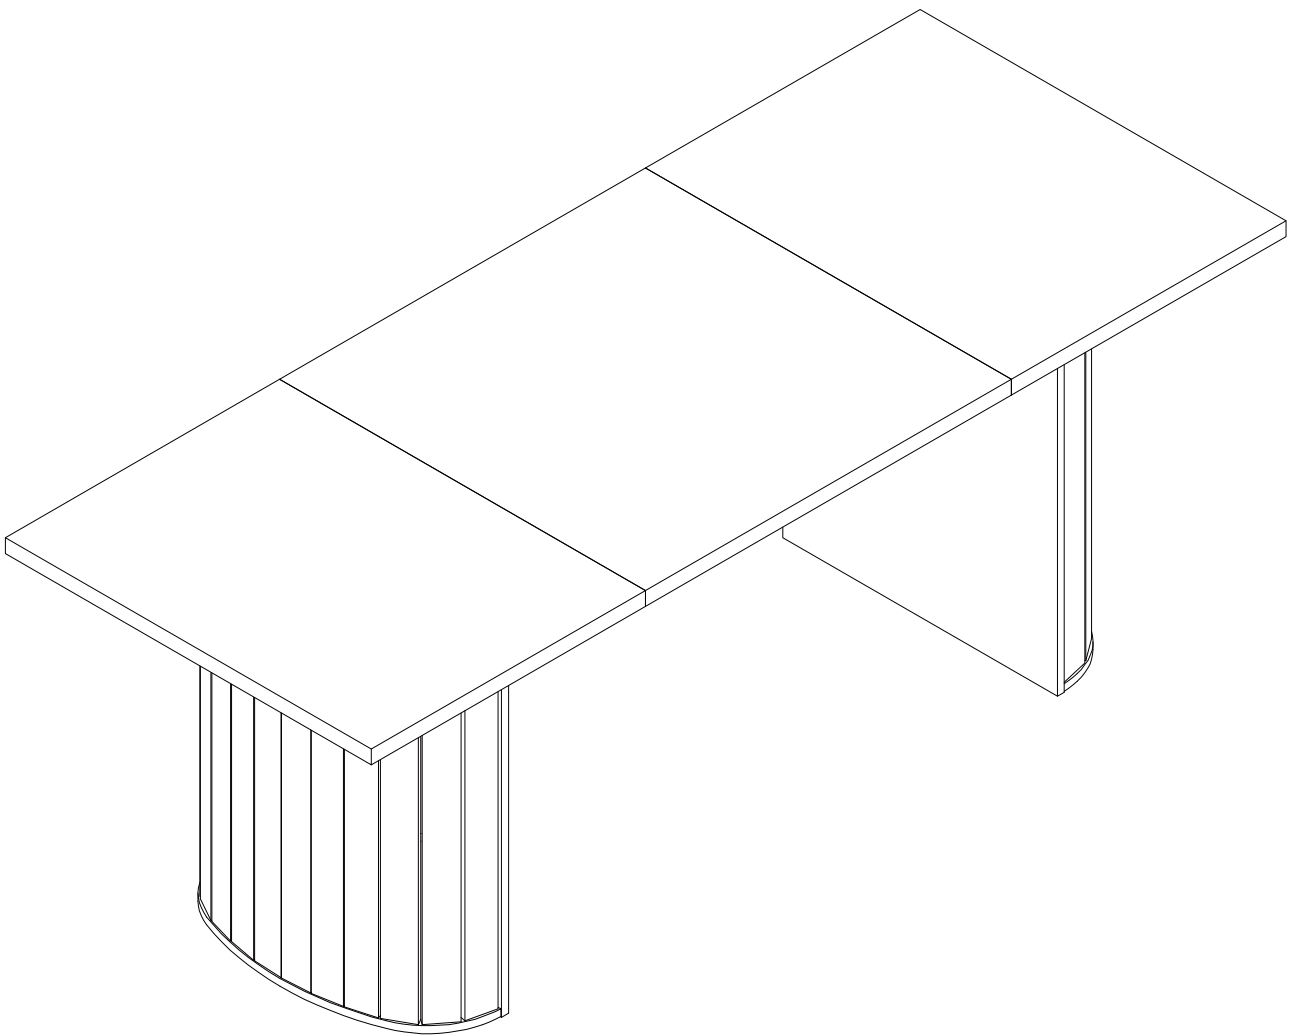




DESIGNED FOR LIFE

Assembly Instructions



Table

Model No.
HOGA-J0330



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.



Installation Video

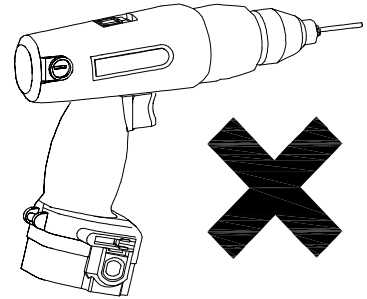
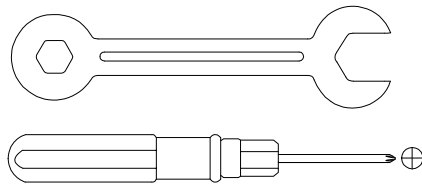
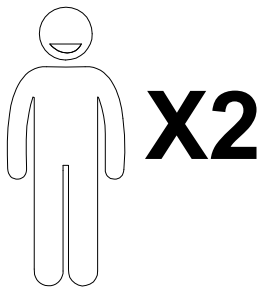
Step2

Search with the Model No.
(on the bottom left corner of the title page)



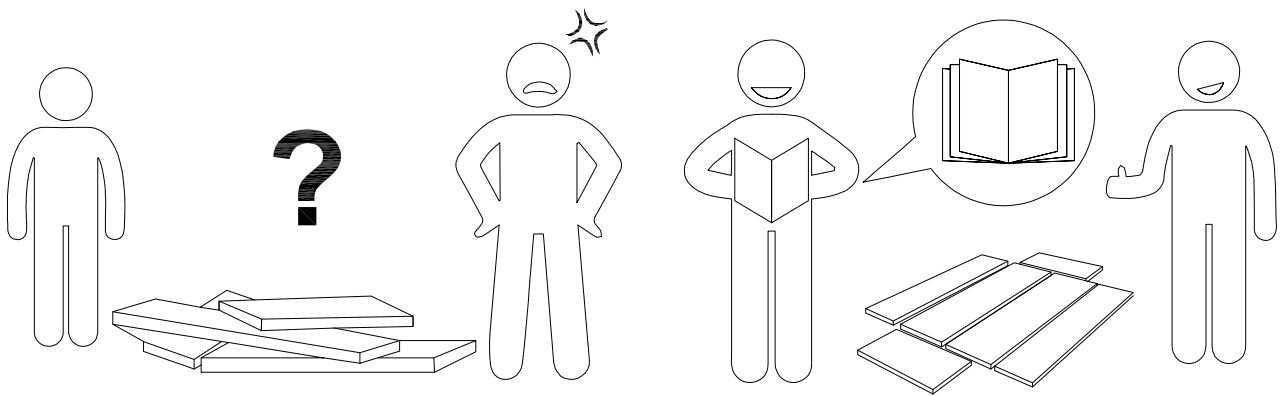
HOGA-J0330

Note: If you can't find the assembly video, please contact us.



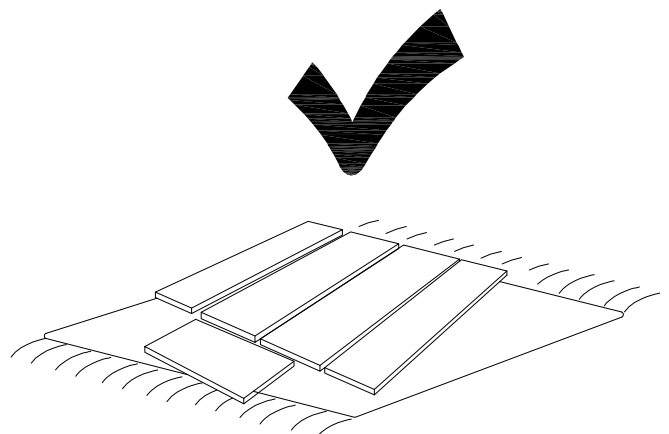
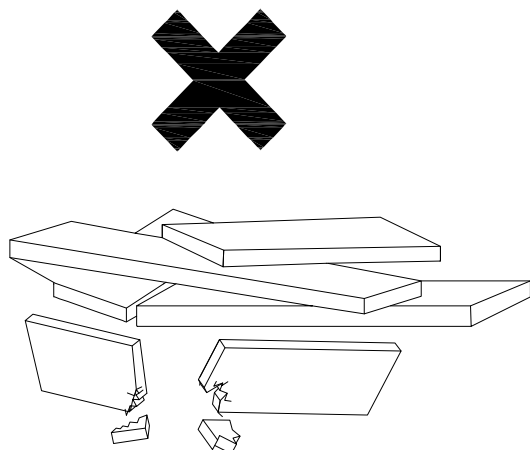
We recommend using hand tools for assembly.

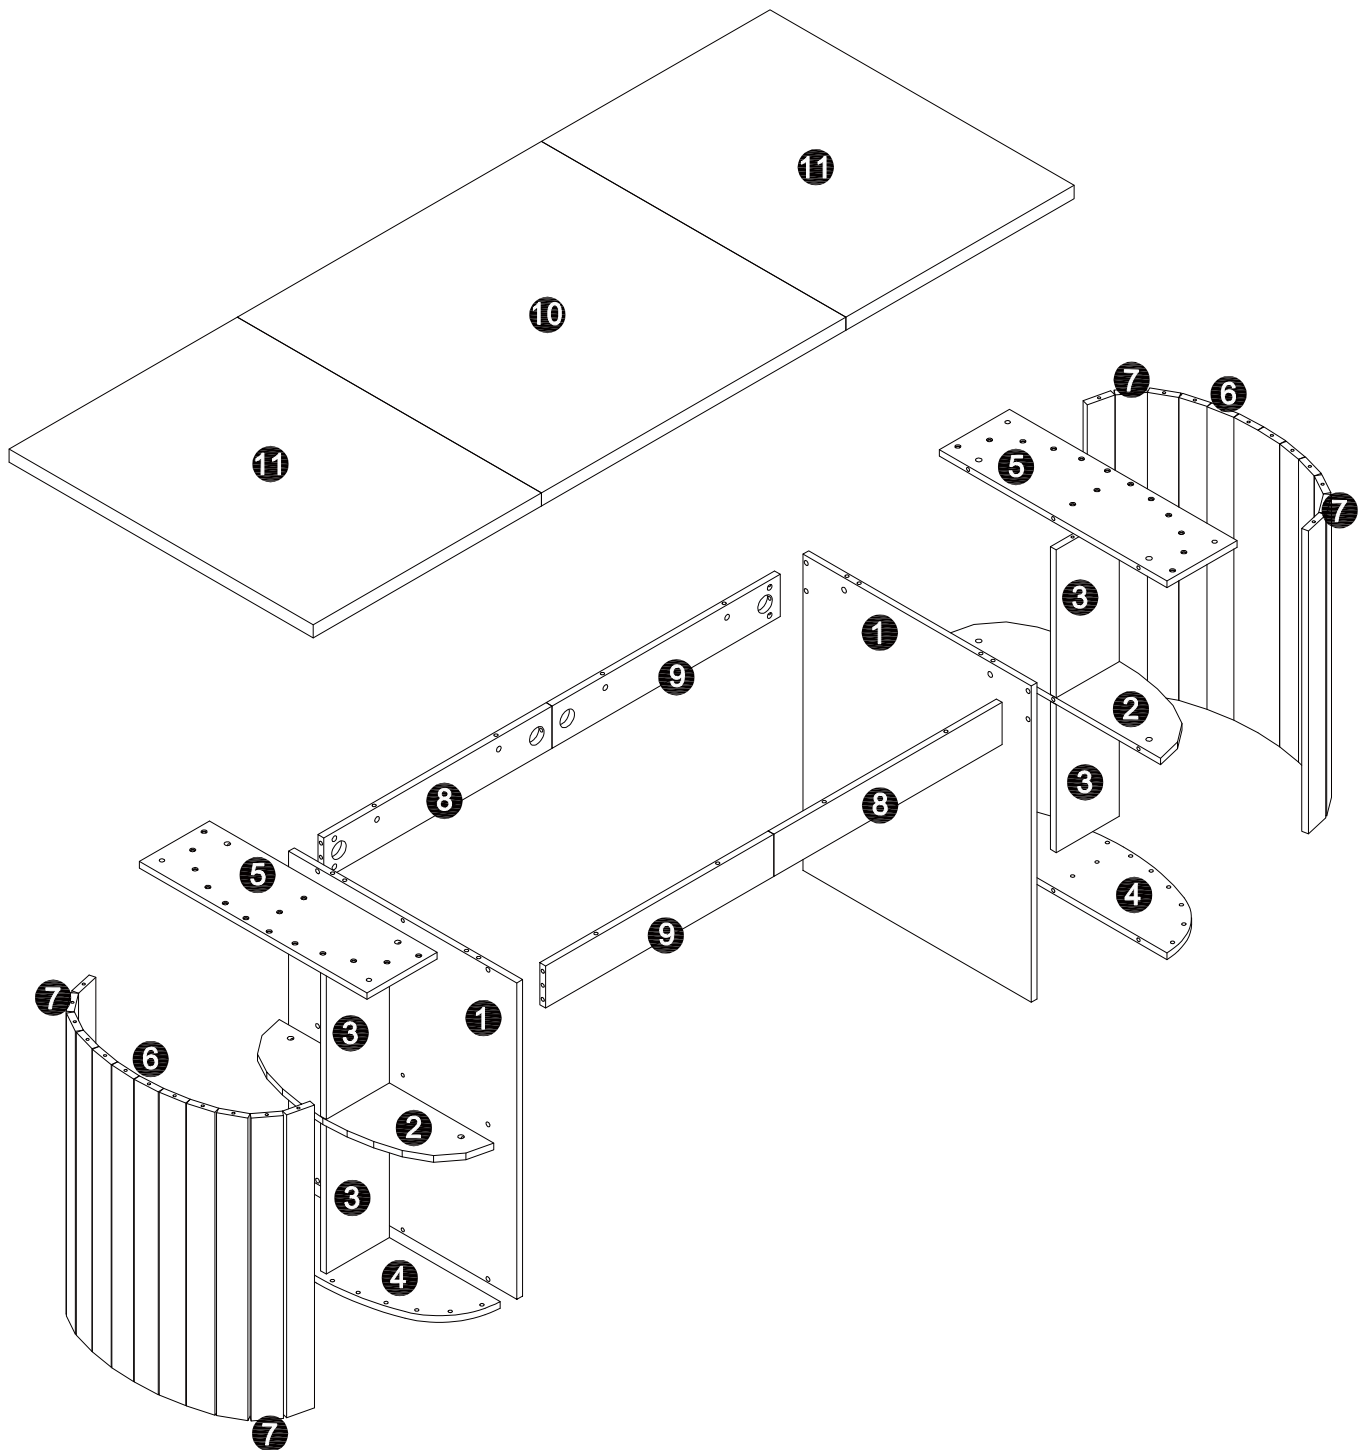
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

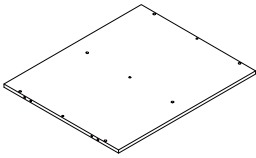
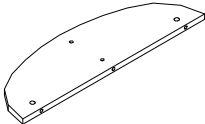

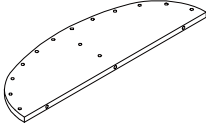
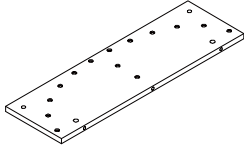
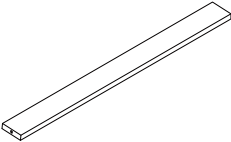
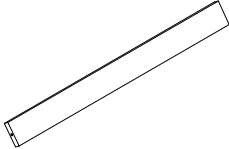
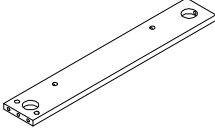
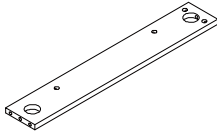
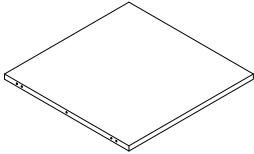
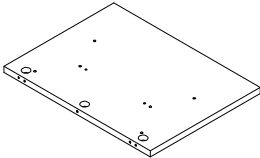




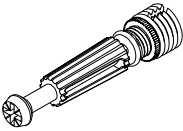



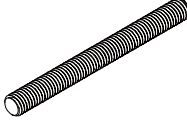

⚠ Caution


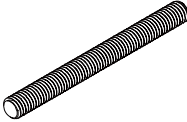


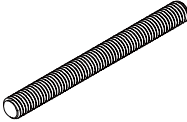
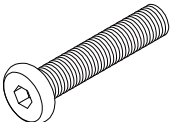
Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.






Parts List

<div>1</div> <div></div> <div>2 pcs</div>	<div>2</div> <div></div> <div>2 pcs</div>	<div>3</div> <div></div> <div>4 pcs</div>	<div>4</div> <div></div> <div>2 pcs</div>	<div>5</div> <div></div> <div>2 pcs</div>
<div>6</div> <div></div> <div>20 pcs</div>	<div>7</div> <div></div> <div>4 pcs</div>	<div>8</div> <div></div> <div>2 pcs</div>	<div>9</div> <div></div> <div>2 pcs</div>	<div>10</div> <div></div> <div>1 pc</div>
<div>11</div> <div></div> <div>2 pcs</div>				

Hardware List

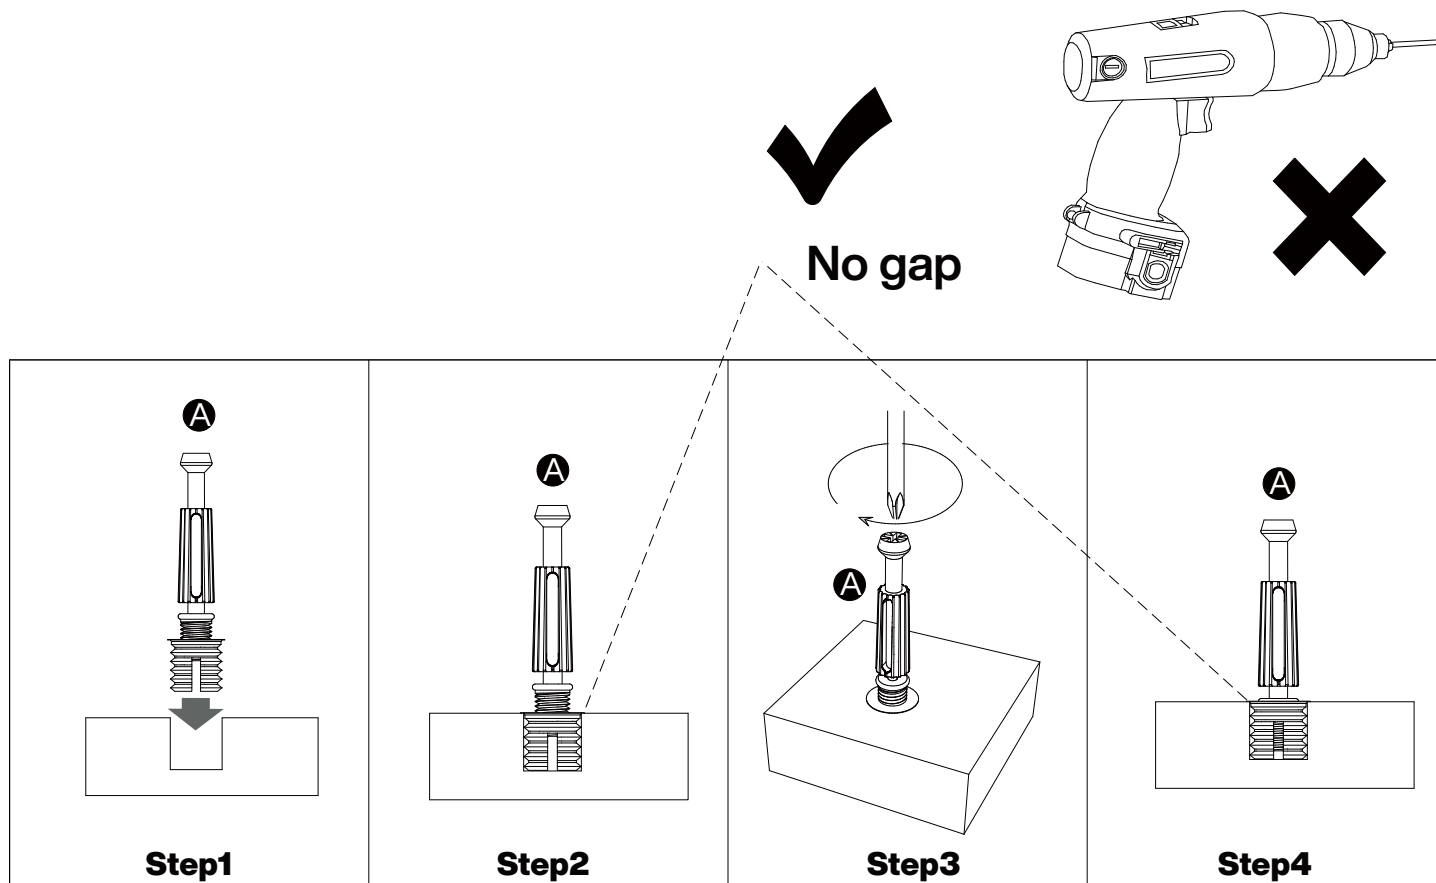
A	B	C	D	E	F
					
M6x35mm	Ø12x10mm	Ø8x30mm	Ø7X38MM	Ø8X80MM	M8
32+1 pcs	32+1 pcs	26+1 pcs	56+1 pcs	6 pcs	12+1 pcs

G	H	I	J	K	L
					
M8	Ø6X80MM	M6	M6	Ø6X60MM	Ø8X30MM
12+1 pcs	2 pcs	8+1 pcs	8+1 pcs	4 pcs	4 pcs

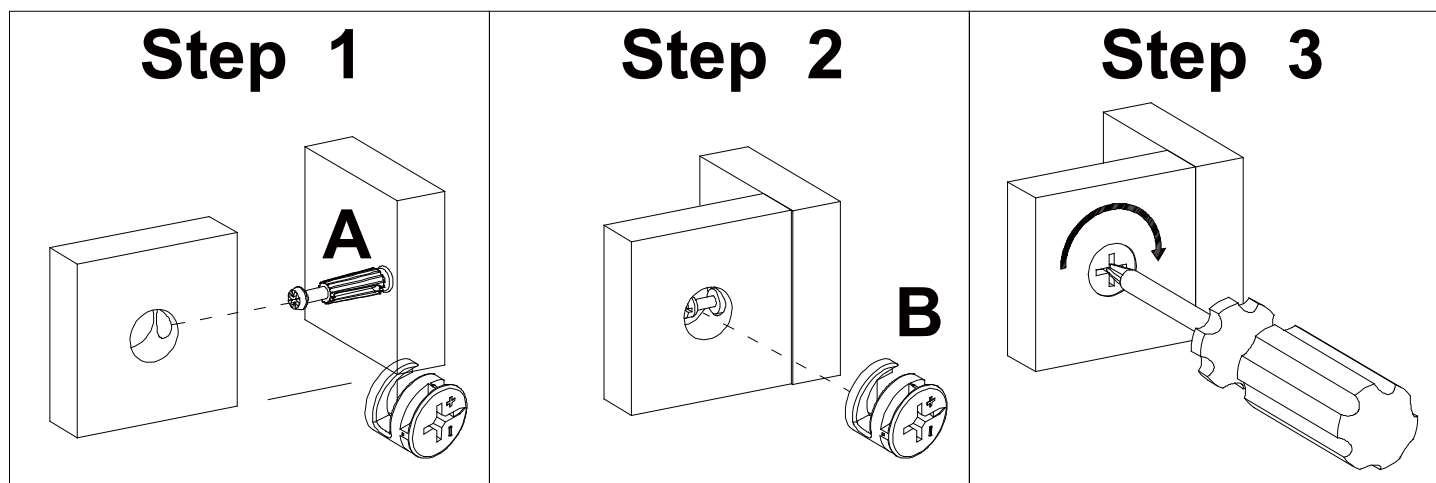
M	N	O	P	Q	
					
Ø14x16mm	Wrench M8	Wrench M6	M5	Screwdriver	
8 pcs	2 pcs	2 pcs	1 pc	1 pc	

Installation of Cams and Pins

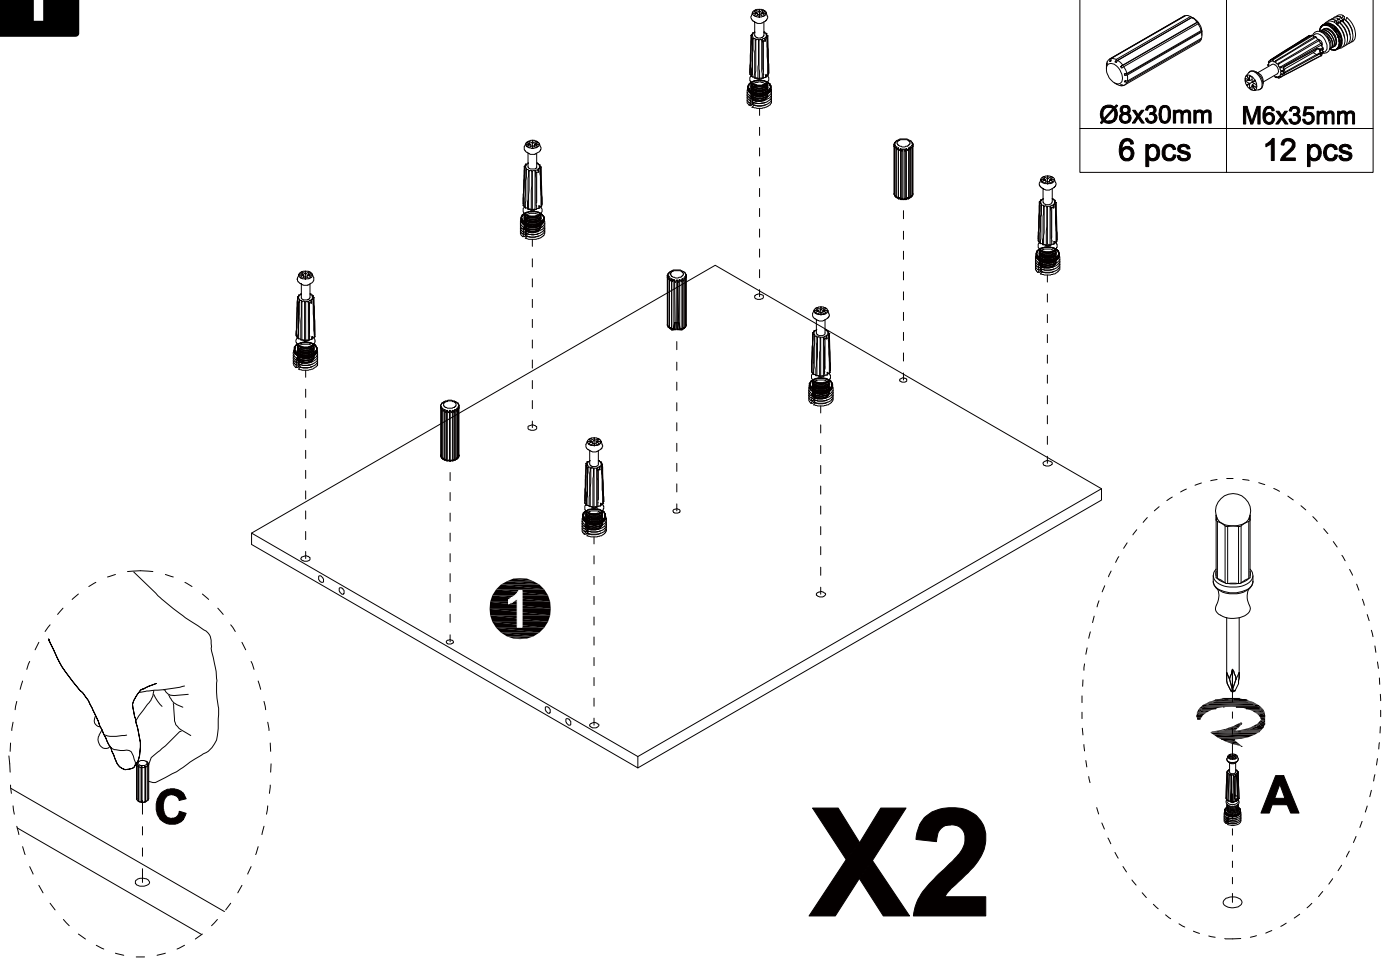
Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.



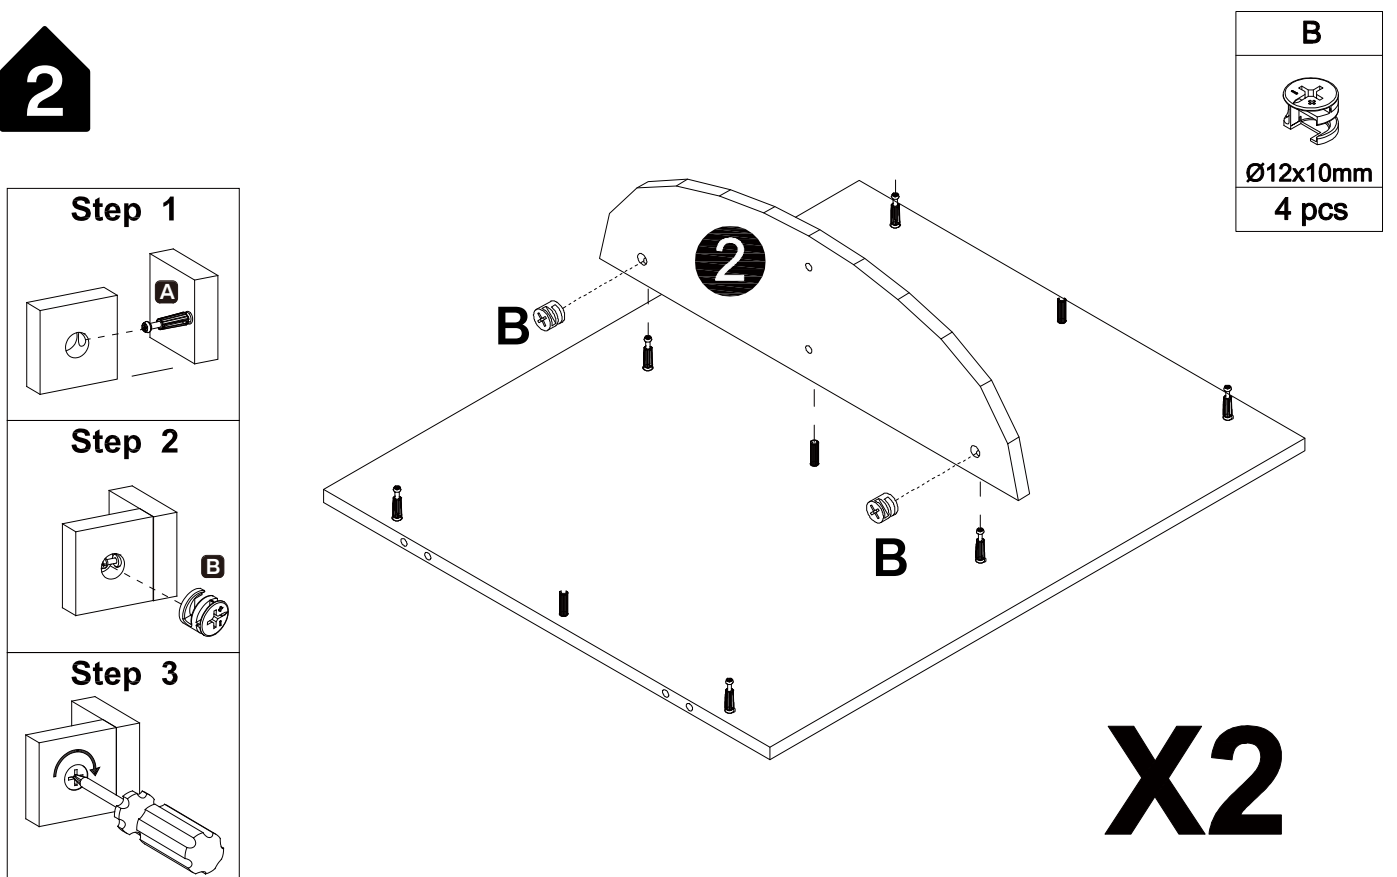
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.




1

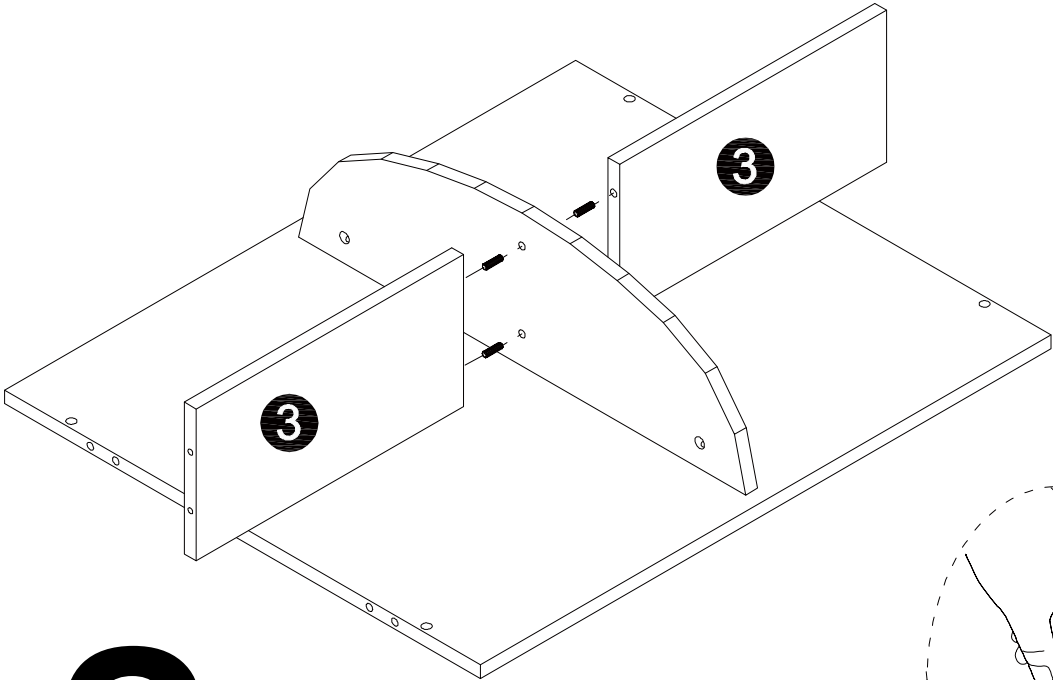


2

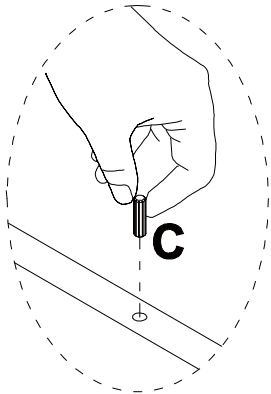


3


C

Ø8x30mm
8 pcs



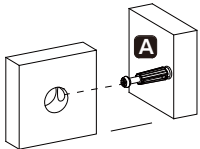
x2



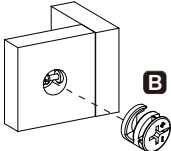
4

B

Ø12x10mm
8 pcs

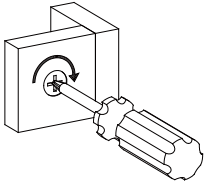
Step 1

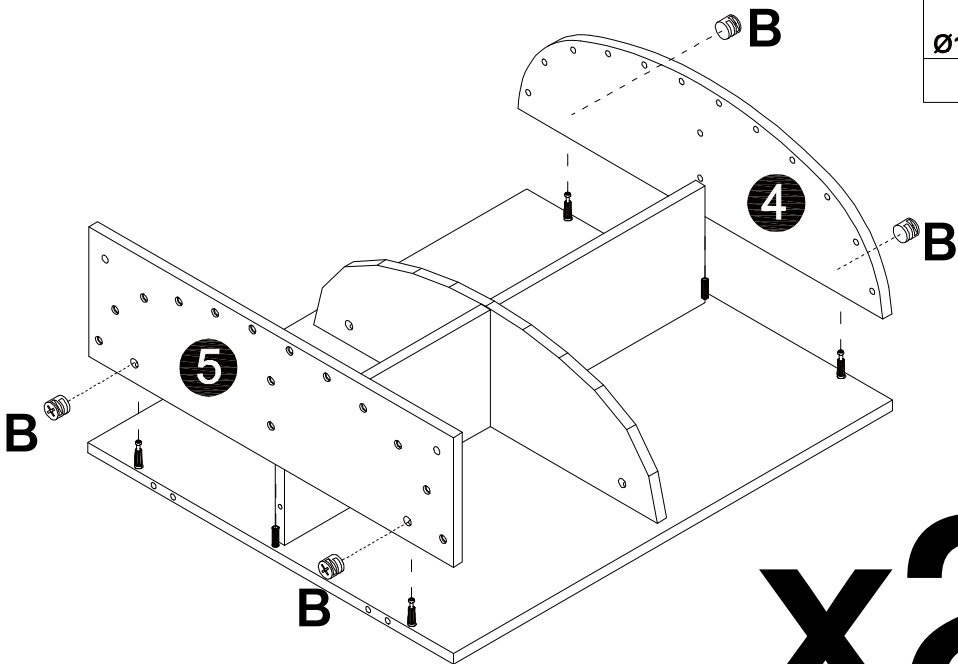


Step 2



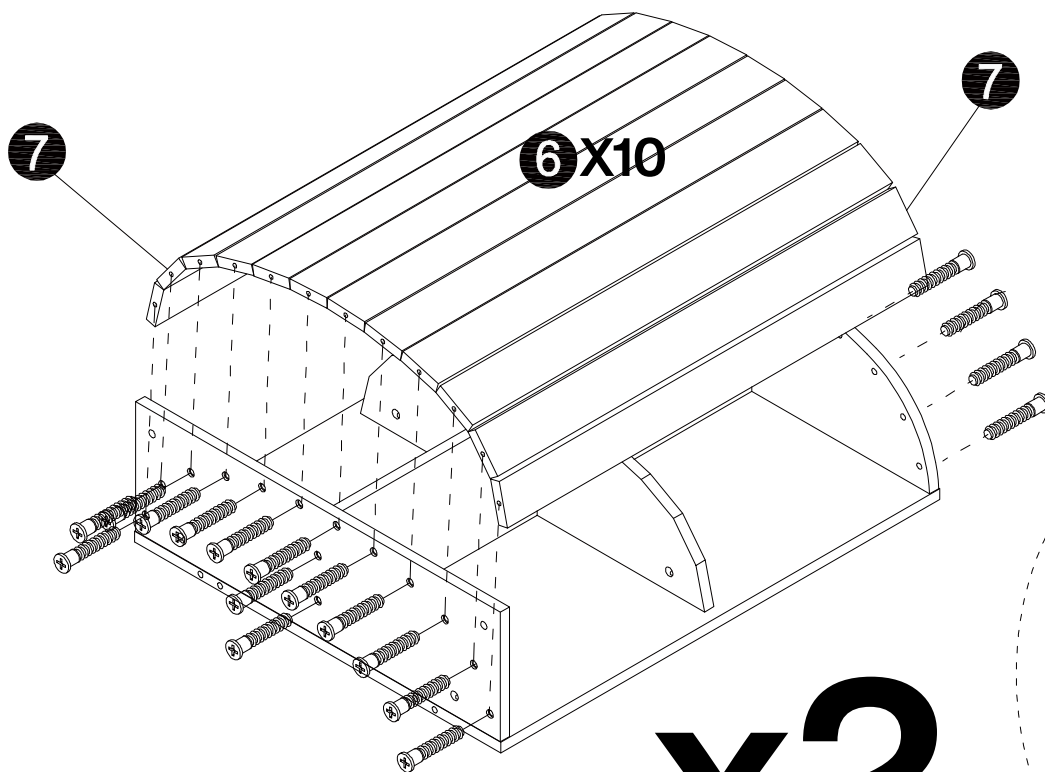
Step 3




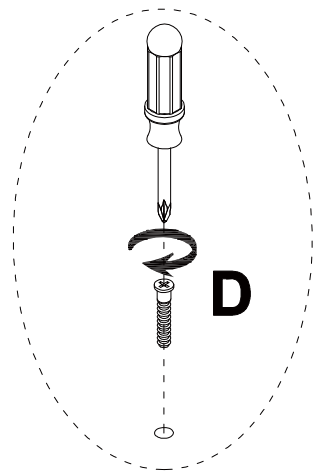


x2

5







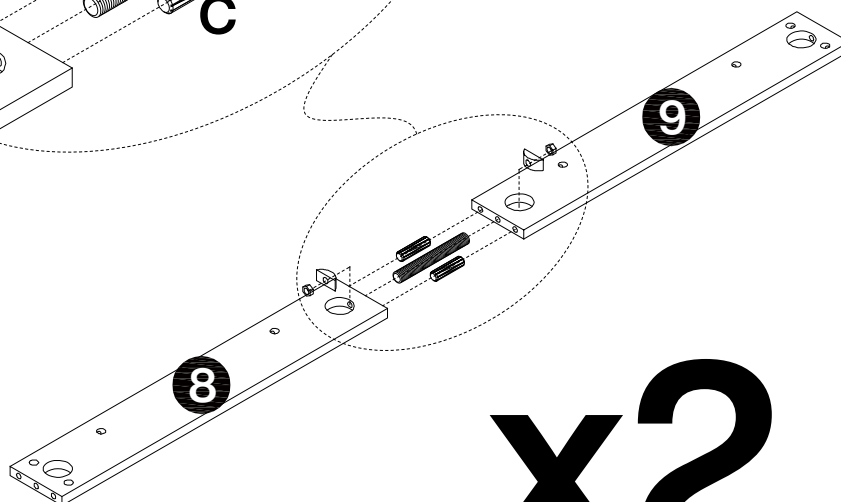
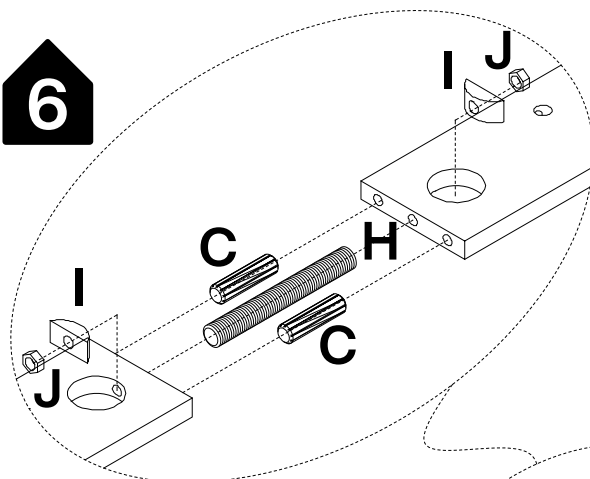
D

M7x38mm
56 pcs



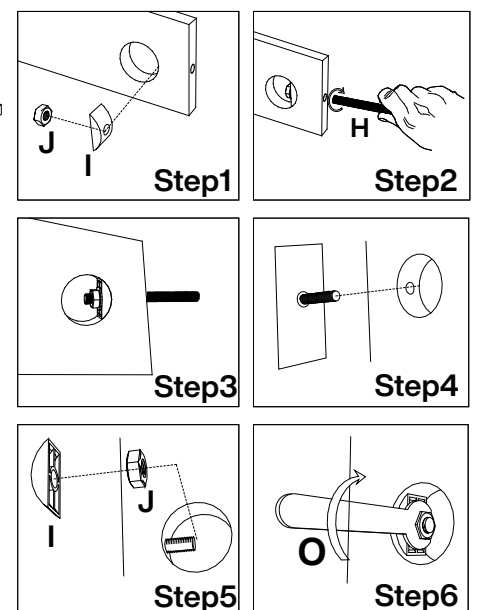
x2

6

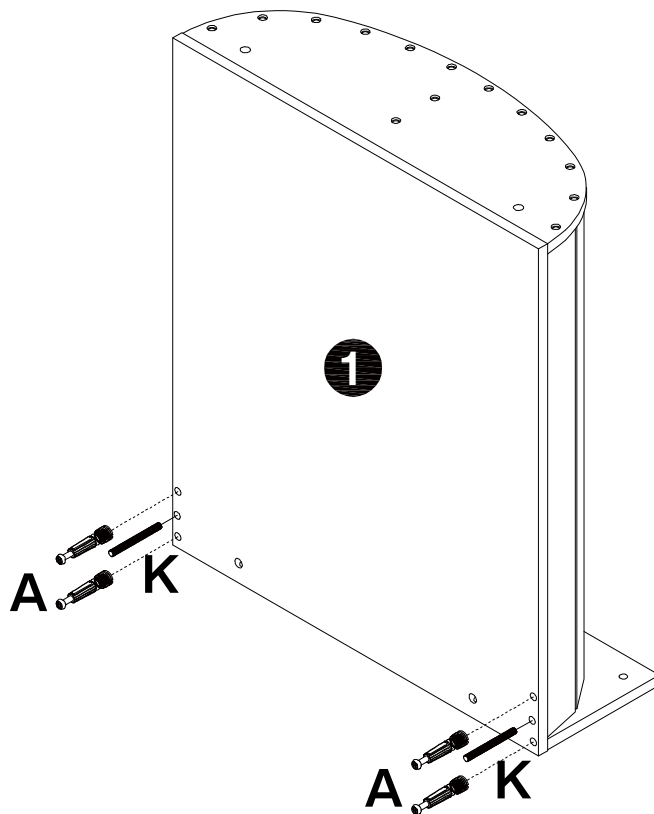
C	H	I	J
			
Ø8x30mm	Ø6x80mm	M6	M6
4 pcs	2 pcs	4 pcs	4 pcs





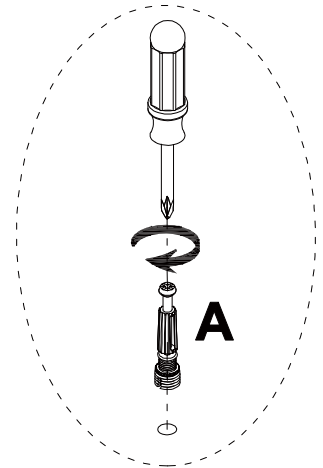
x2



7

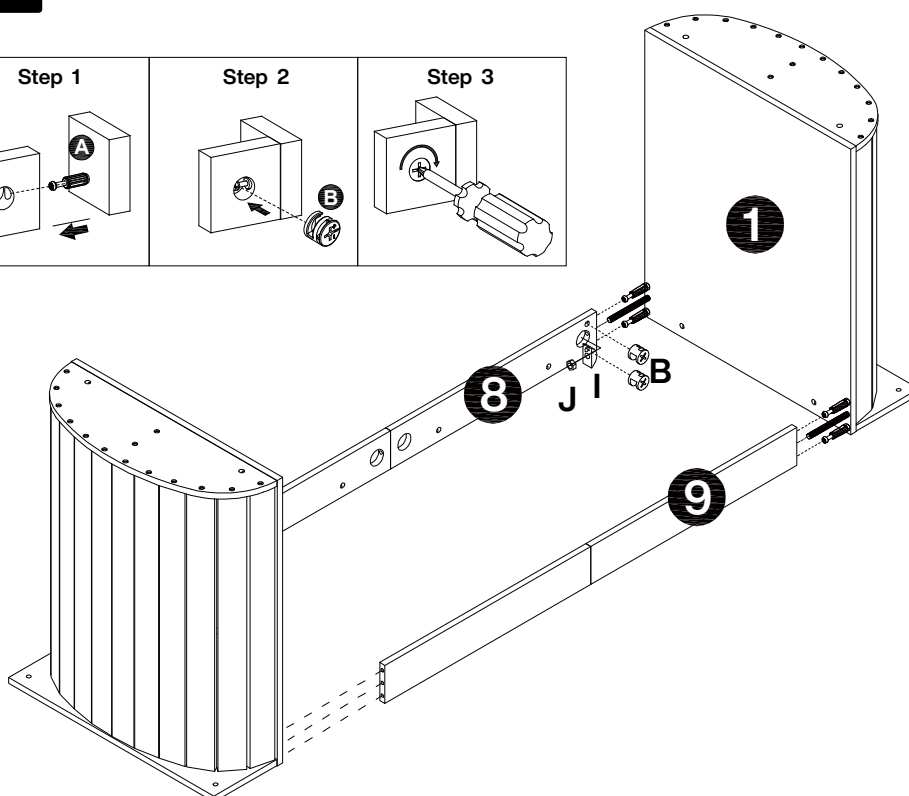
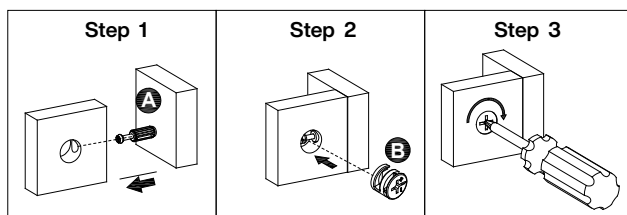





K	A
	
Ø6x60mm	M6x35mm
4 pcs	8 pcs

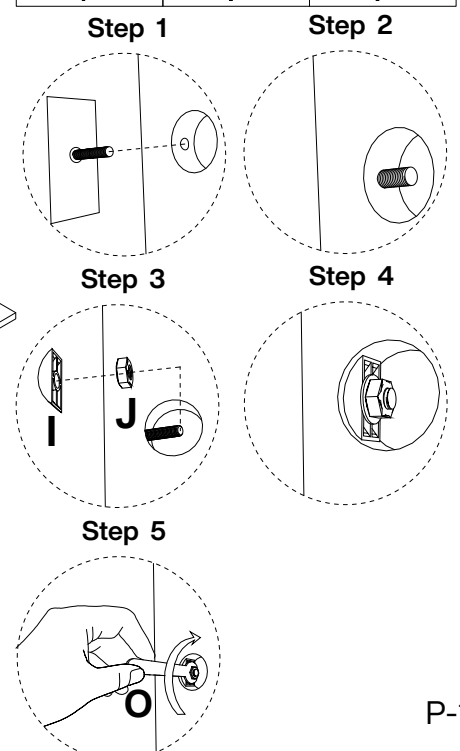


x2





8

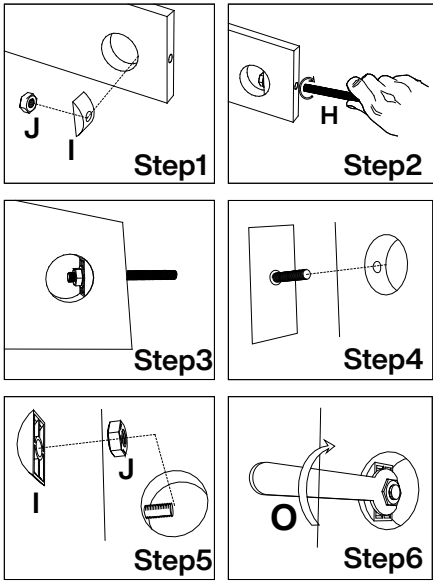
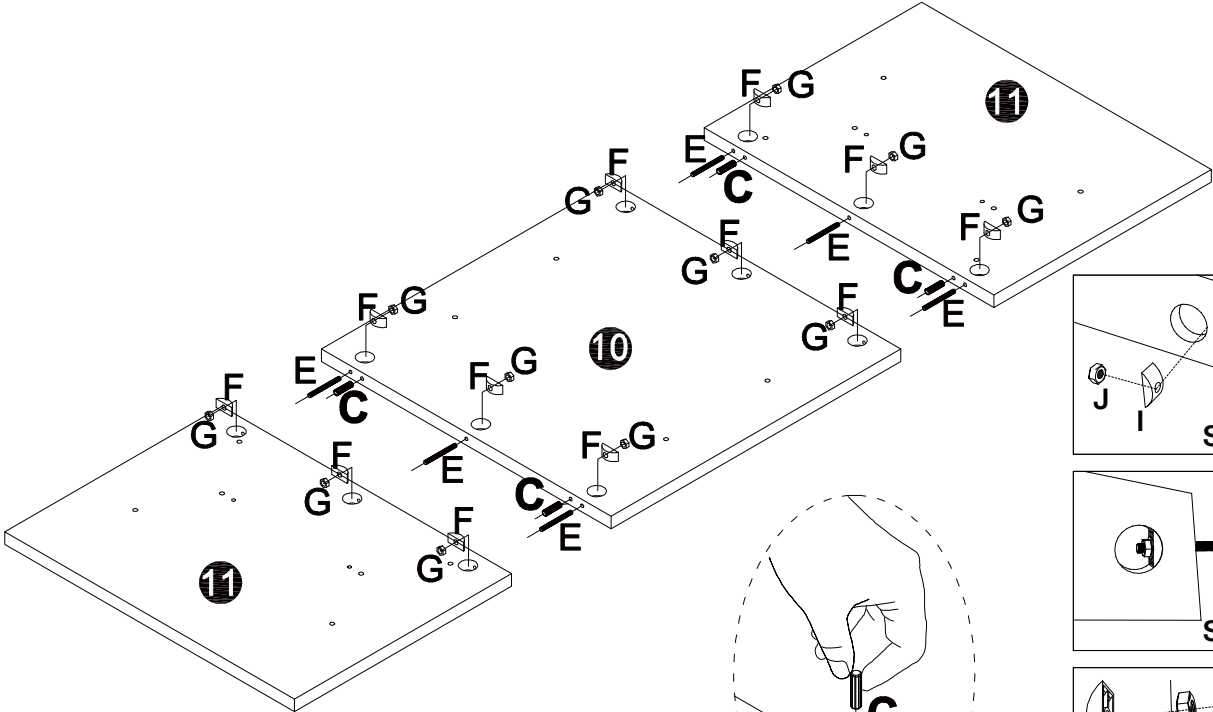


B	I	J
		
Ø12x10mm	M6	M6
8 pcs	4 pcs	4 pcs





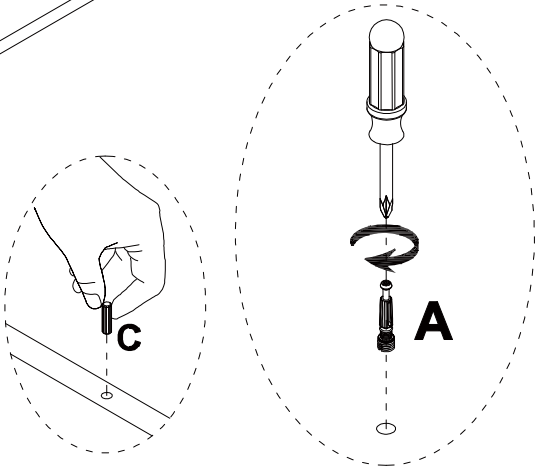
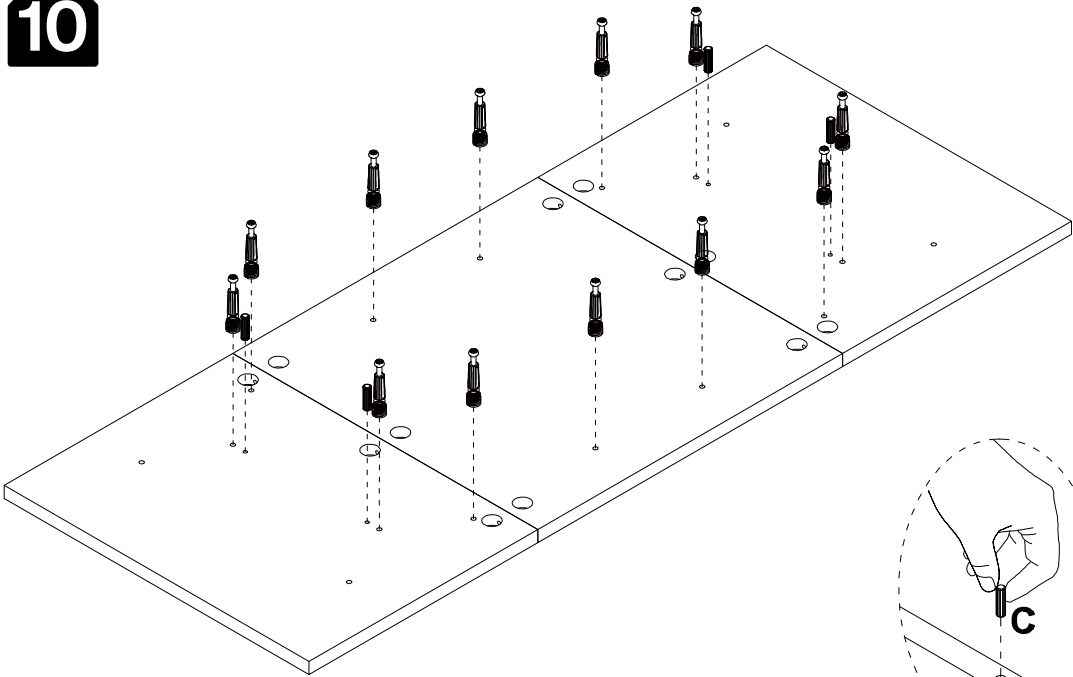
9

F	G	E	C
			
M8	M8	Ø8x80mm	Ø8x30mm
12 pcs	12 pcs	6 pcs	4 pcs





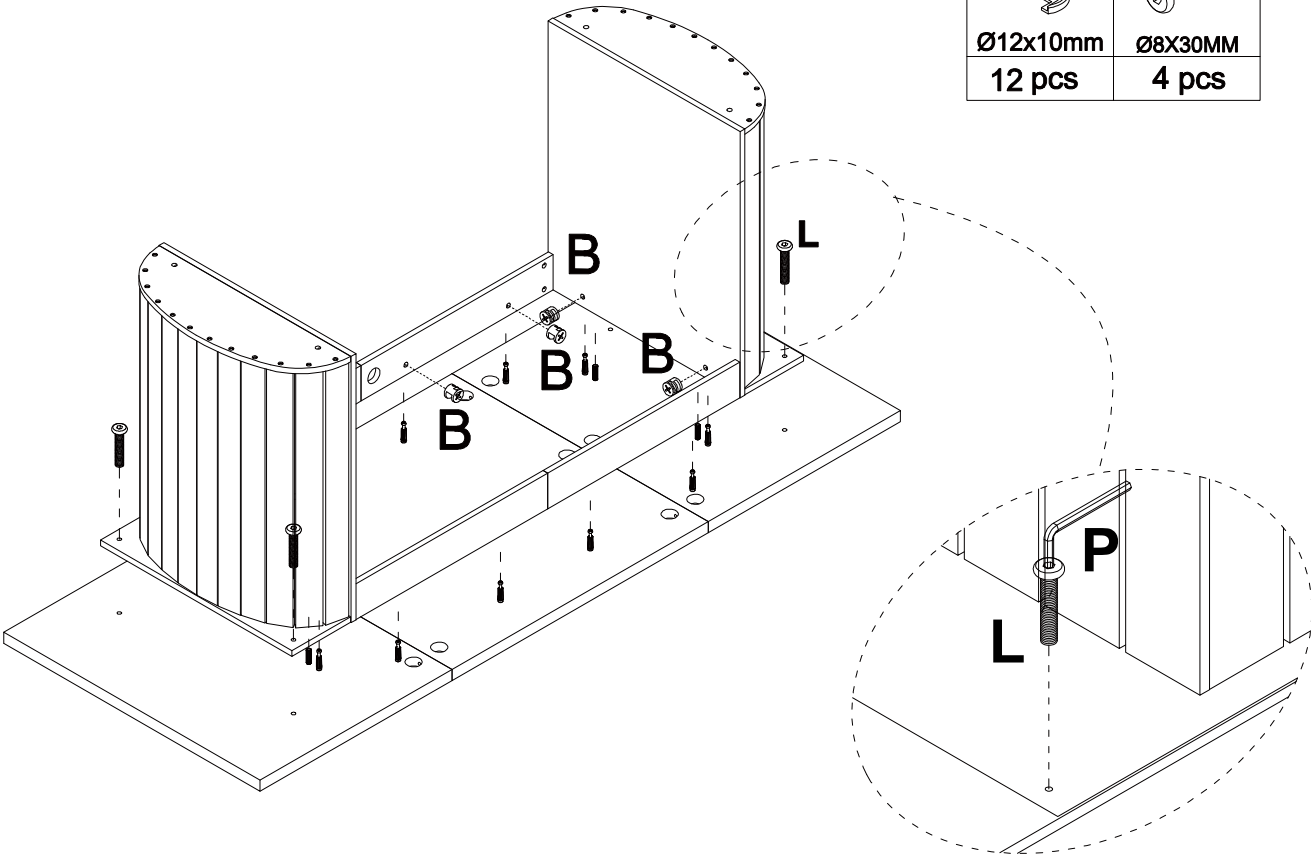
10

C	A
	
Ø8x30mm	M6x35mm
4 pcs	12 pcs




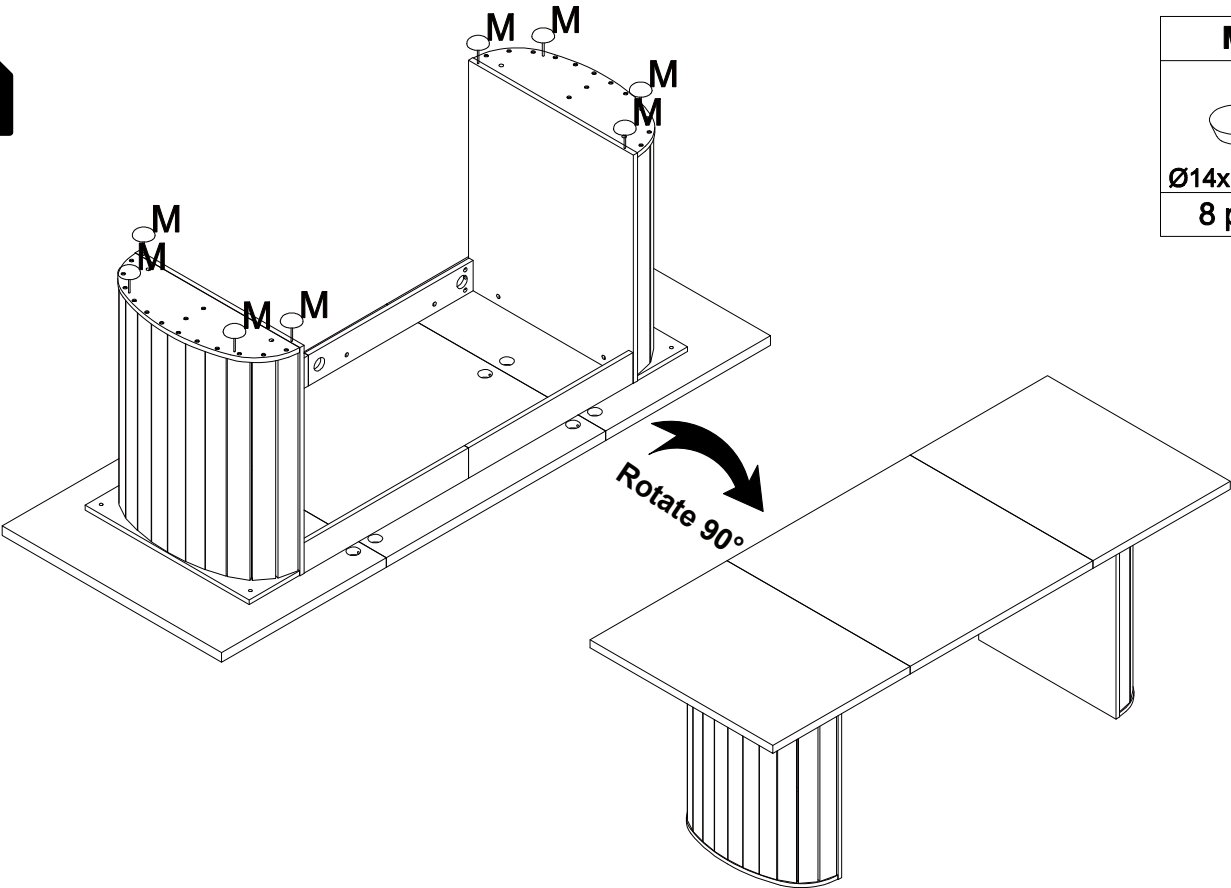
11

B	L
	
Ø12x10mm	Ø8x30MM
12 pcs	4 pcs



12

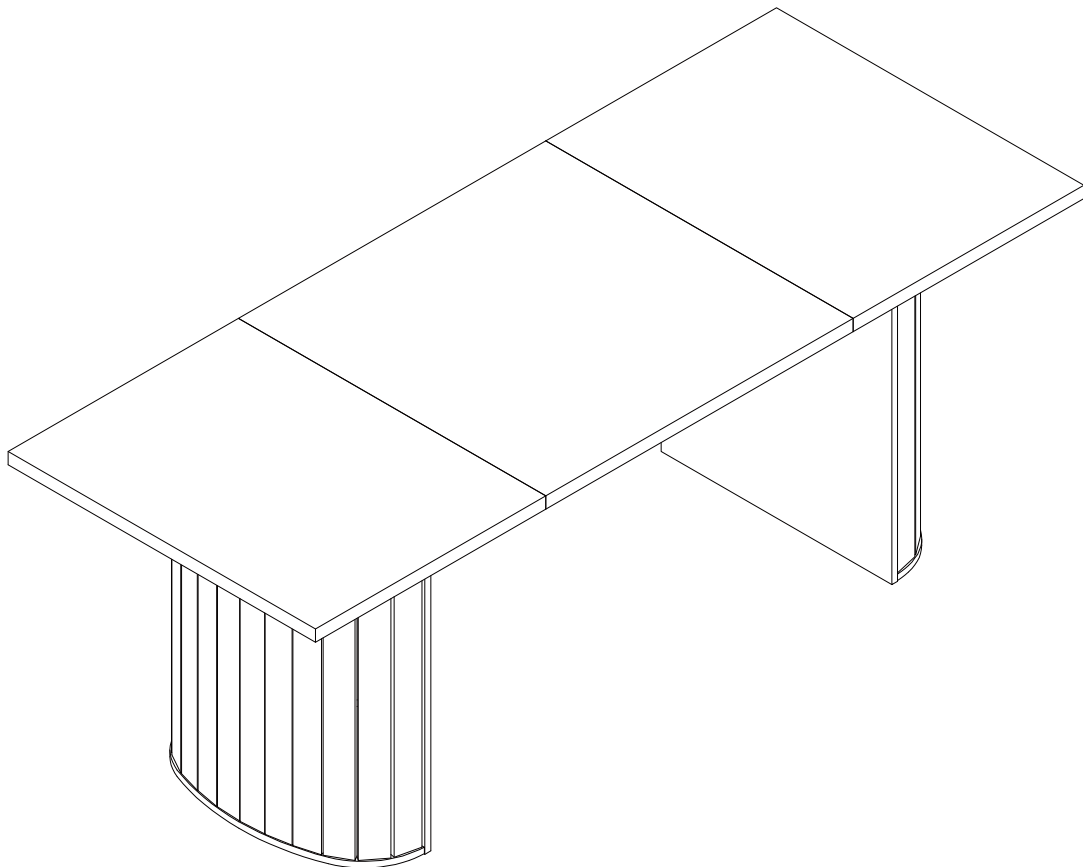
M

Ø14x16mm
8 pcs





DESIGNED FOR LIFE

Thank you for your support!



Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

Contact us anytime except
12:00 AM to 8:00 AM EST.

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp