
NEVADA 4 DOOR 2 DRAWER WARDROBE ASSEMBLY INSTRUCTIONS

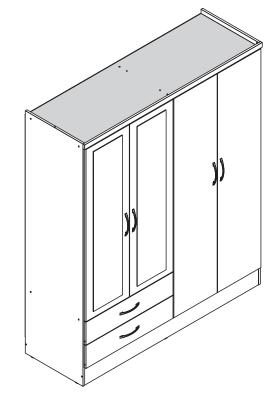






IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.


- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

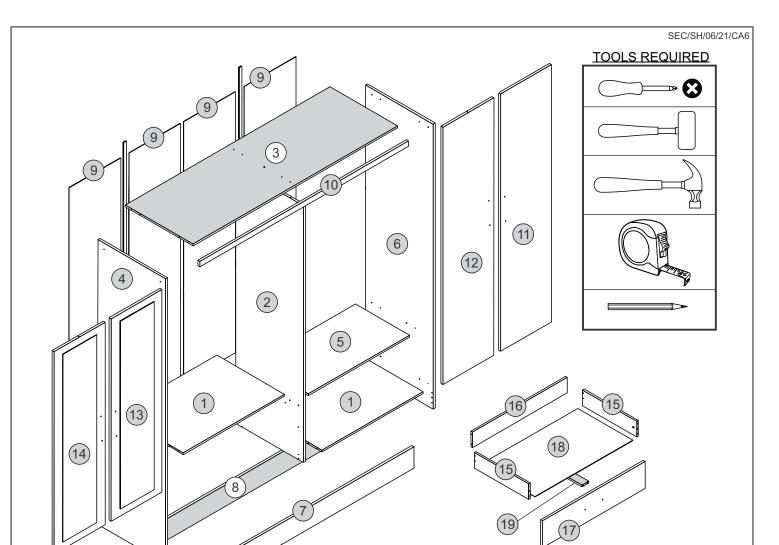


Please Note:


The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Description	Quantity	Carton
01	Base Panel	2	1/3
02	Division Panel	1	2/3
03	Top Panel	1	2/3
04	Left Side Panel	1	1/3
05	Shelf	1	1/3
06	Right Side Panel	1	1/3
07	Front Baseboard	1	2/3
08	Back Baseboard	1	2/3
09	Back Panel	4	2/3
10	Frame	1	2/3
11	Right Large Door	1	3/3
12	Left Large Door	1	3/3
13	Right Small Door	1	3/3
14	Left Small Door	1	3/3
15	Drawer Side	4	1/3
16	Drawer Back Panel	2	1/3
17	Drawer Front	2	2/3
18	Drawer Bottom	2	2/3
19	Drawer Bottom Support Bar	2	2/3

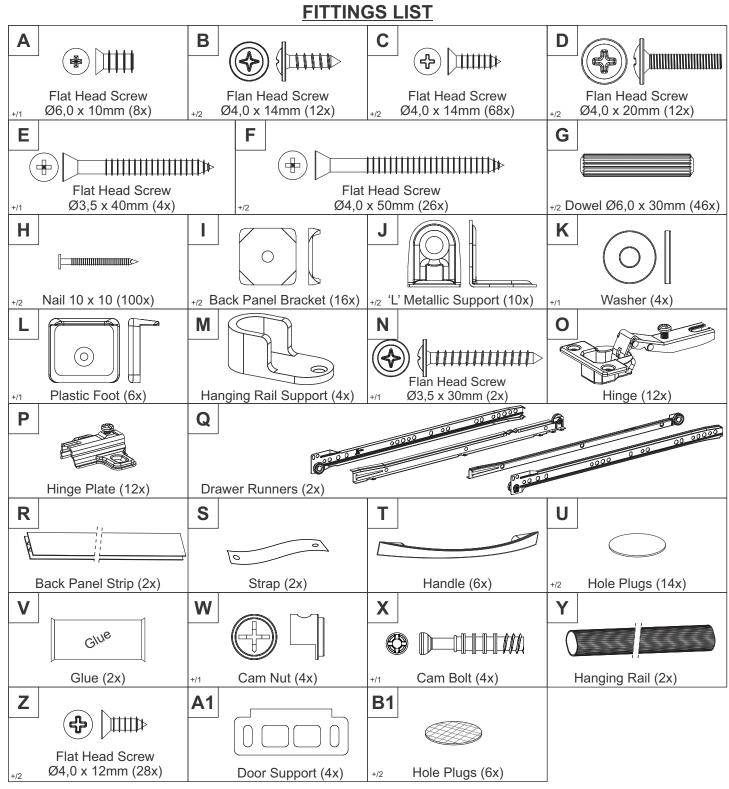

TIPS FOR FITTINGS CAM-LOCKS







CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)















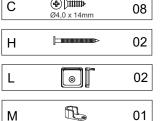




Μ

TOOLS REQUIRED



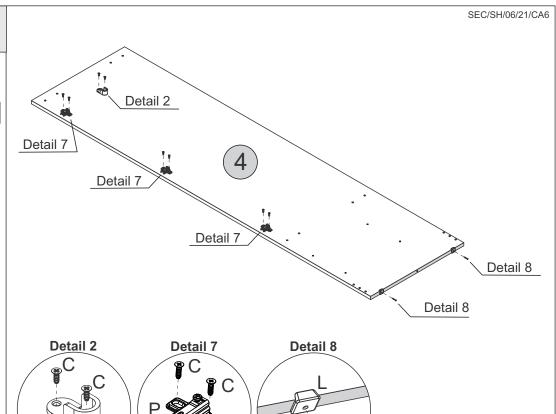

Please note:

Pre-marked

Holes

Please note:

Pre-marked

Holes


STEP 2


PARTS REQUIRED

4 - LEFT SIDE PANEL x1


HARDWARE REQUIRED





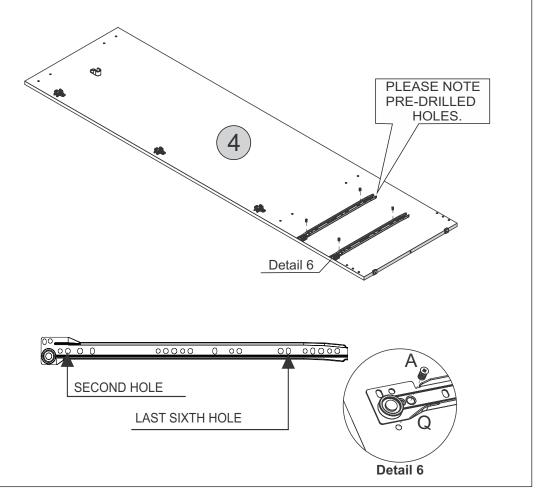



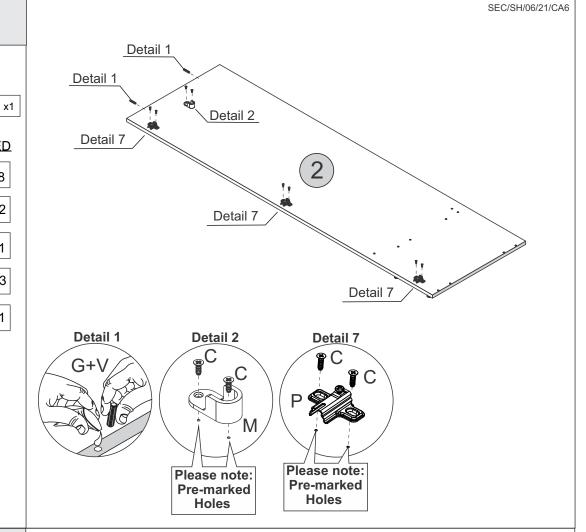



PARTS REQUIRED


2 - DIVISION PANEL x1


HARDWARE REQUIRED





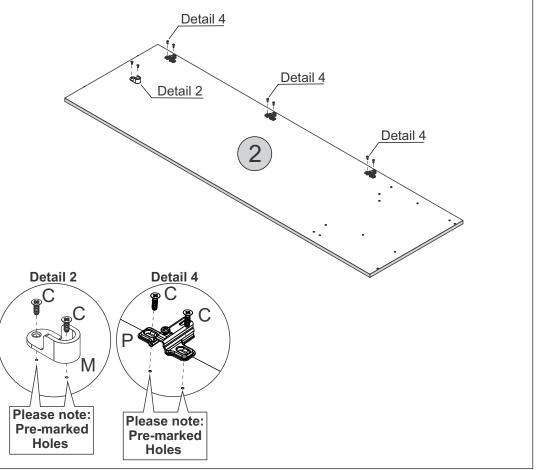

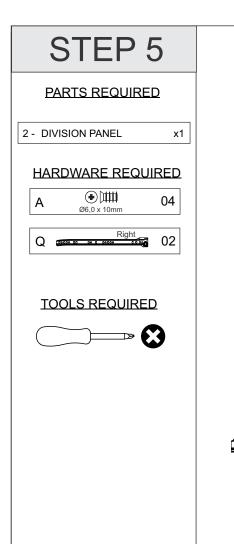


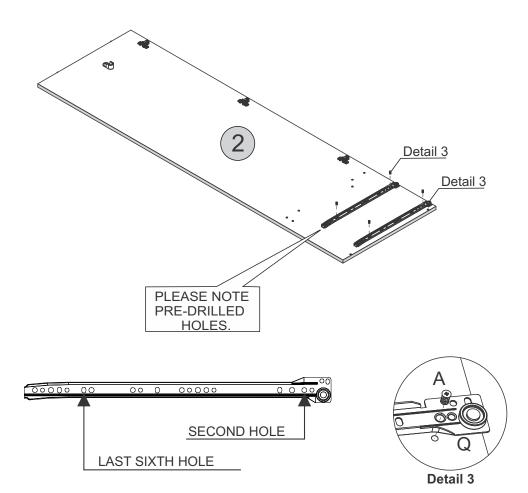

PARTS REQUIRED


6 - RIGHT SIDE PANEL x1


HARDWARE REQUIRED

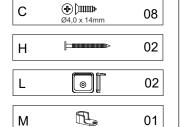




TOOLS REQUIRED



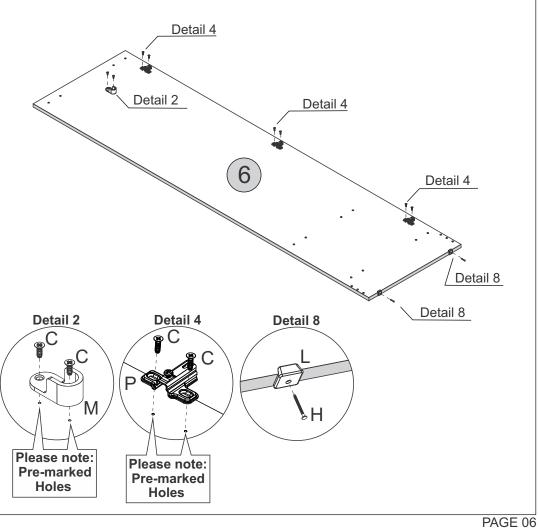


SEC/SH/06/21/CA6

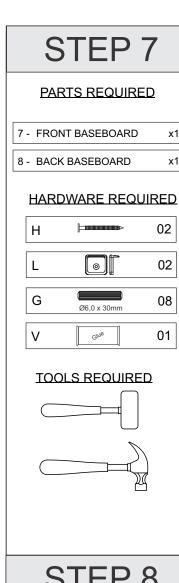

x1

x1

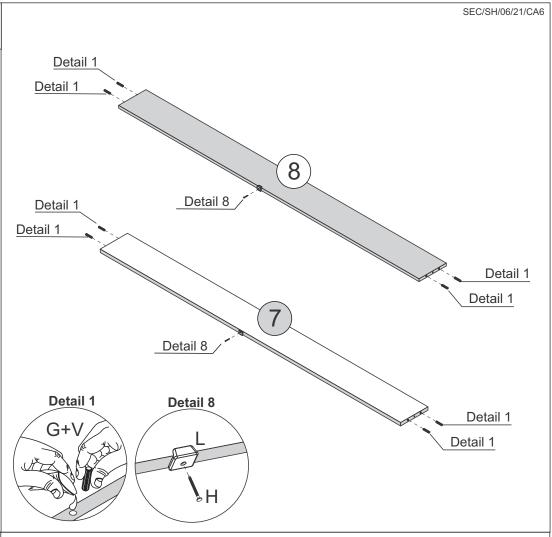



STEP 8


PARTS REQUIRED


1 - BASE PANEL x2 5 - SHELF x1

HARDWARE REQUIRED

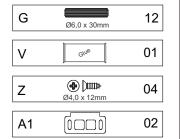




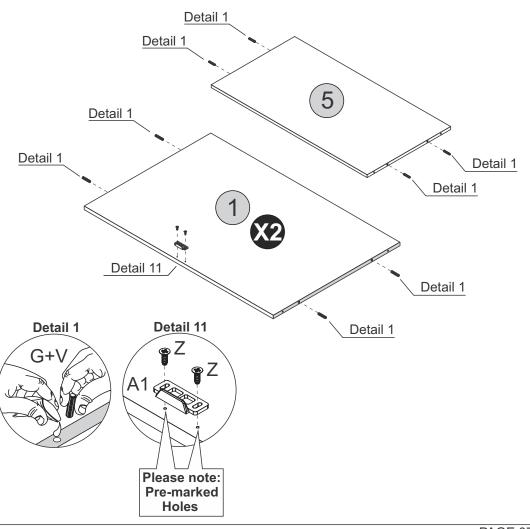

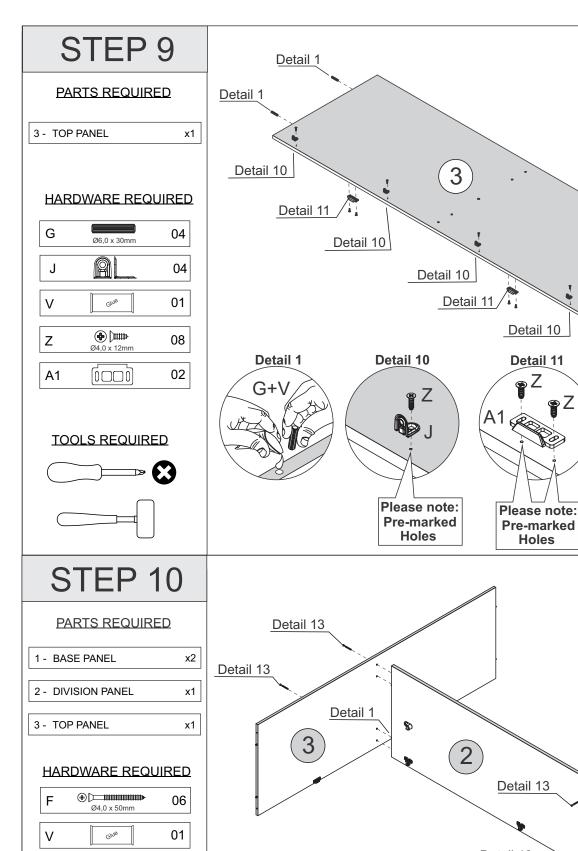

TOOLS REQUIRED

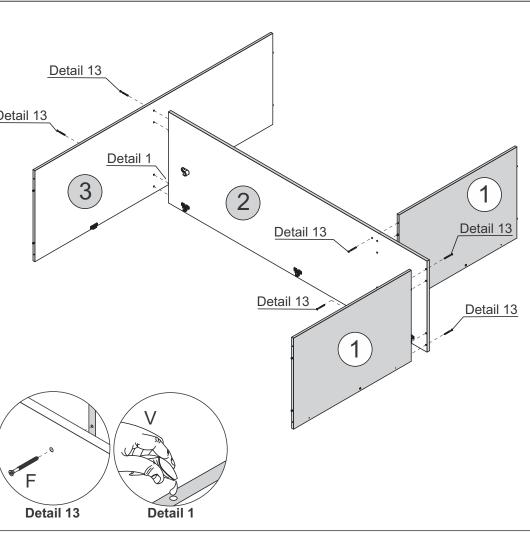


SEC/SH/06/21/CA6


Detail 1

Detail 1


PARTS REQUIRED

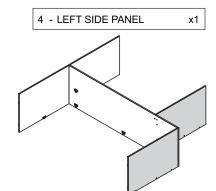


HARDWARE REQUIRED



TOOLS REQUIRED



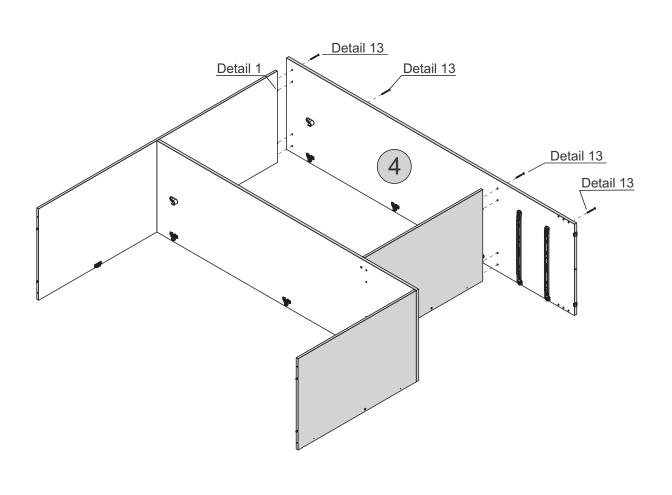

Detail 1

Detail 13


PARTS REQUIRED


5 - SHELF	x1
6 - RIGHT SIDE PANEL	x1
7 - FRONT BASEBOARD	x1
8 - BACK BASEBOARD	x1


HARDWARE REQUIRED


F	⊕	12
V	Gine	Ω1






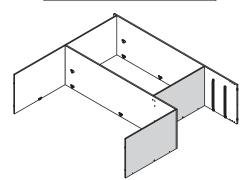

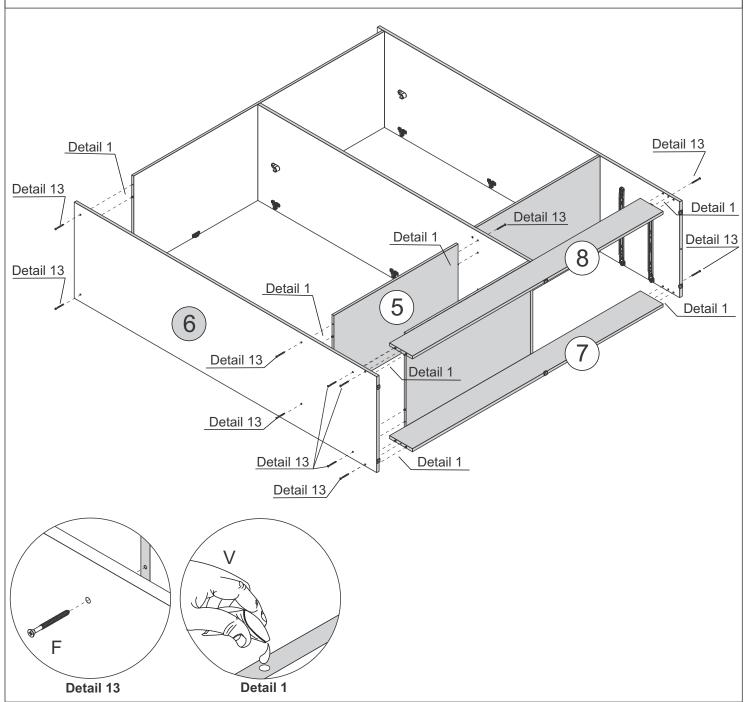

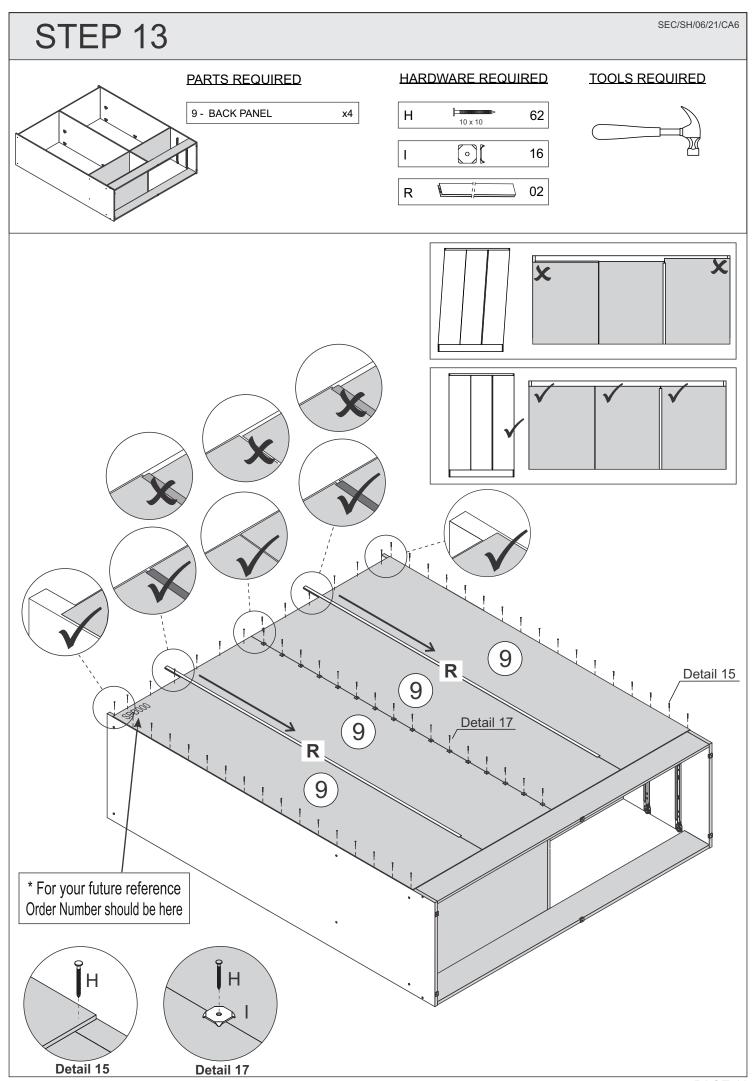


PARTS REQUIRED

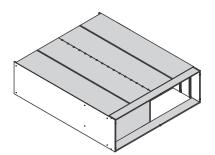



HARDWARE REQUIRED


В	⊕↓····· Ø4,0 x 14mm	12
Н	10 x 10	12








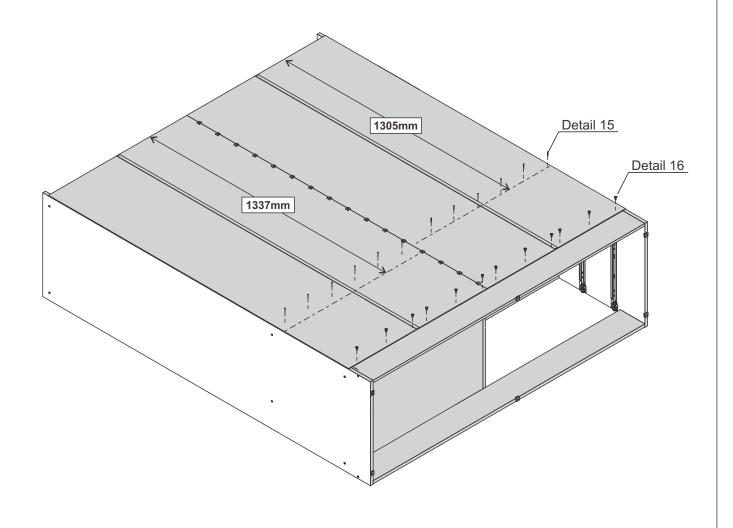

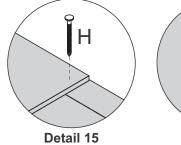


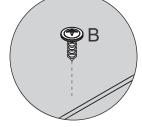


Detail 16




PARTS REQUIRED

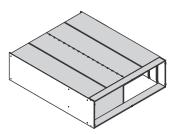


HARDWARE REQUIRED



TOOLS REQUIRED




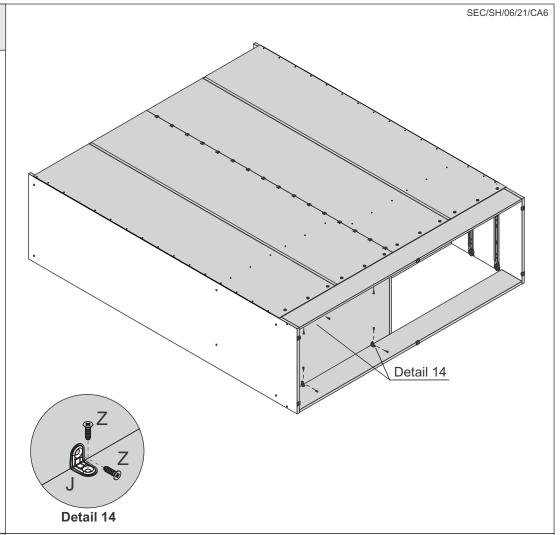


STEP 16

PARTS REQUIRED


10 - FRAME x1

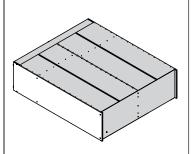



HARDWARE REQUIRED




Ζ




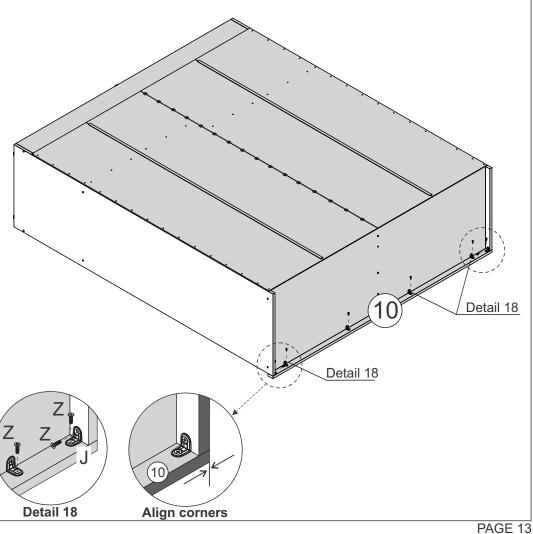

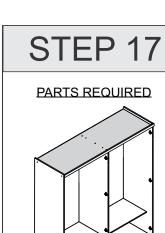

HARDWARE REQUIRED



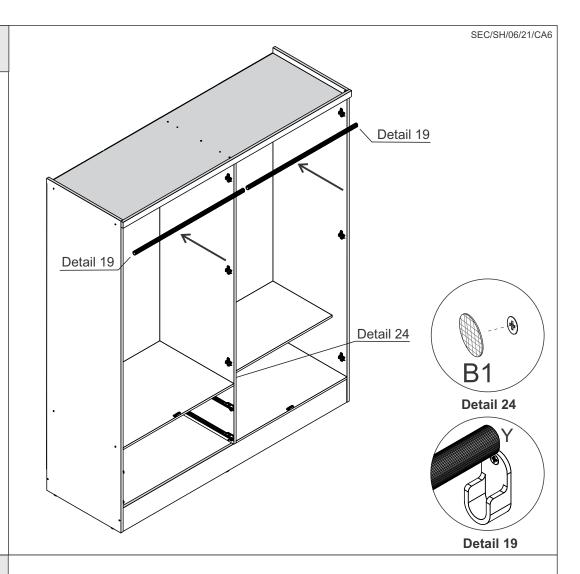

STEP 18


PARTS REQUIRED


15 - DRAWER SIDE x4


16 - DRAWER BACK PANEL x2


19 - DRAWER BOTTOM SUPPORT BAR x 2


HARDWARE REQUIRED




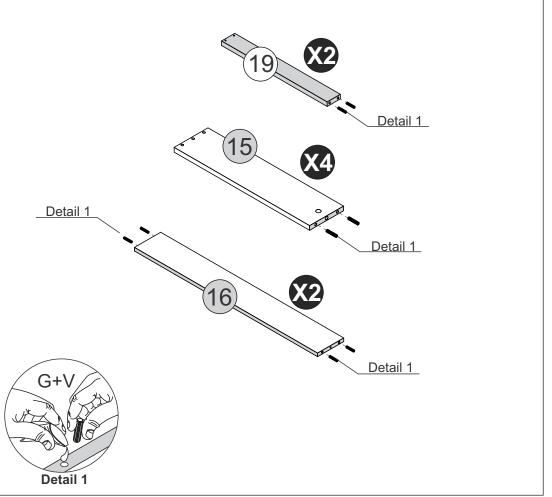

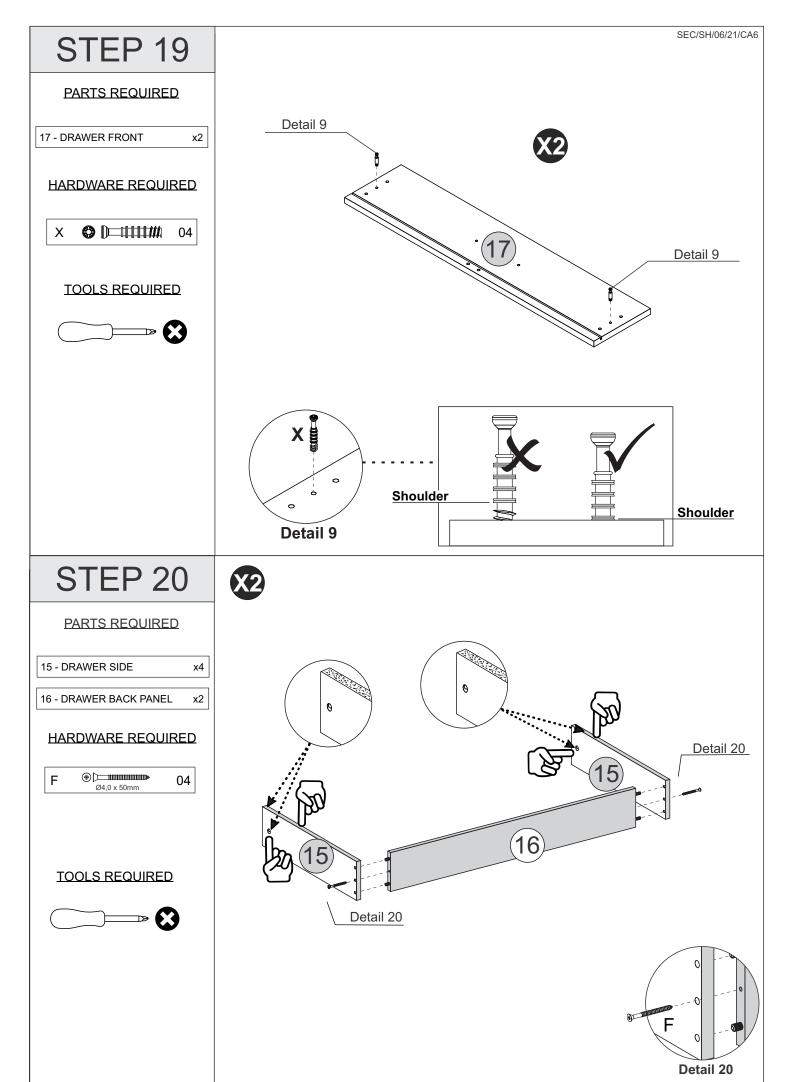

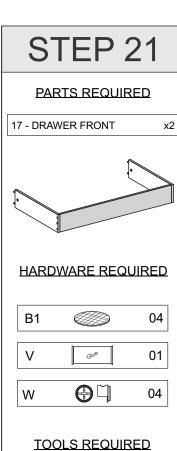


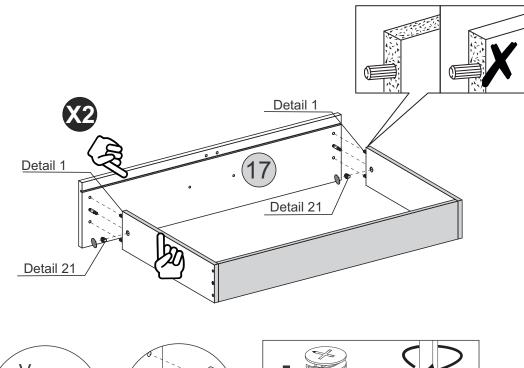

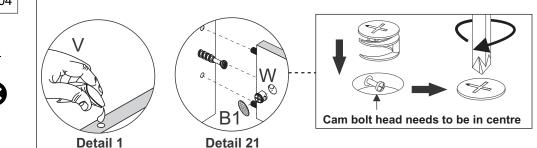








HARDWARE REQUIRED





TOOLS REQUIRED



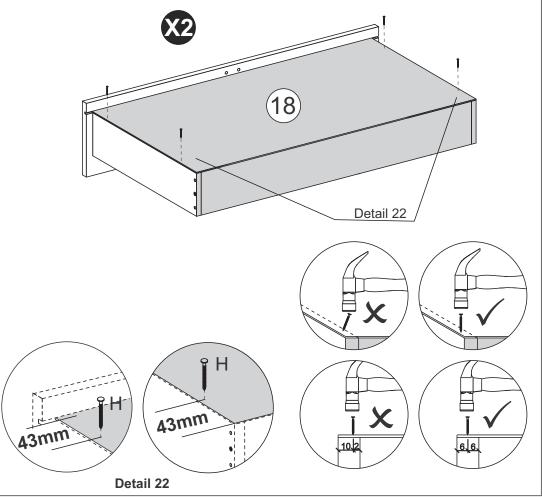


SEC/SH/06/21/CA6

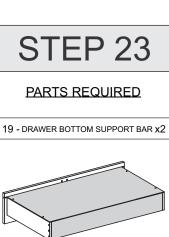




HARDWARE REQUIRED




TOOLS REQUIRED




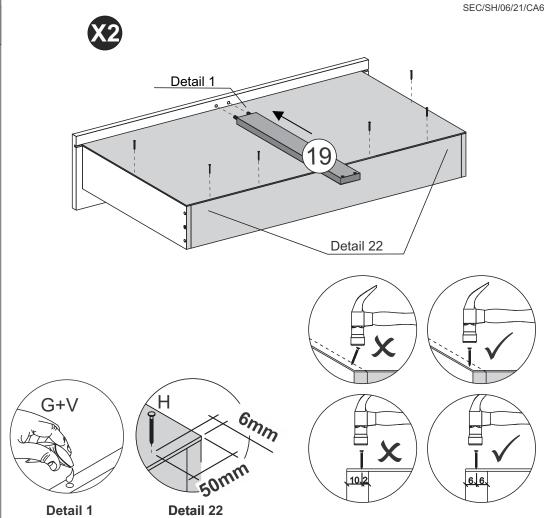



PARTS REQUIRED





HARDWARE REQUIRED

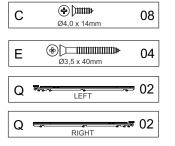



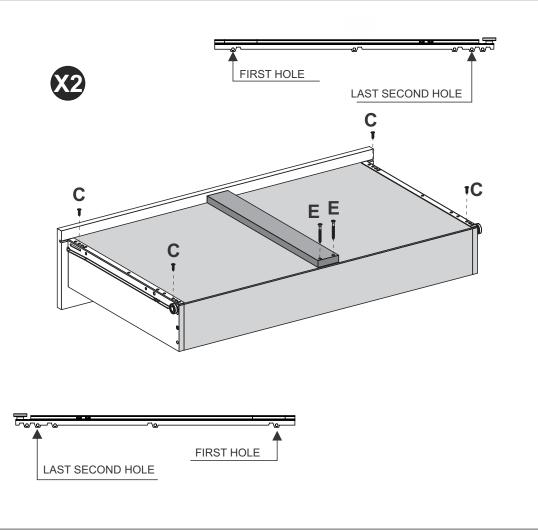

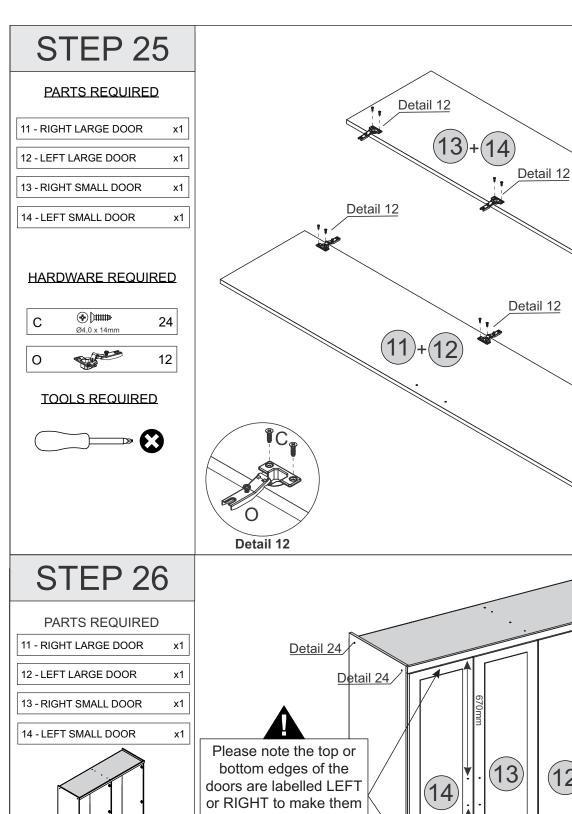

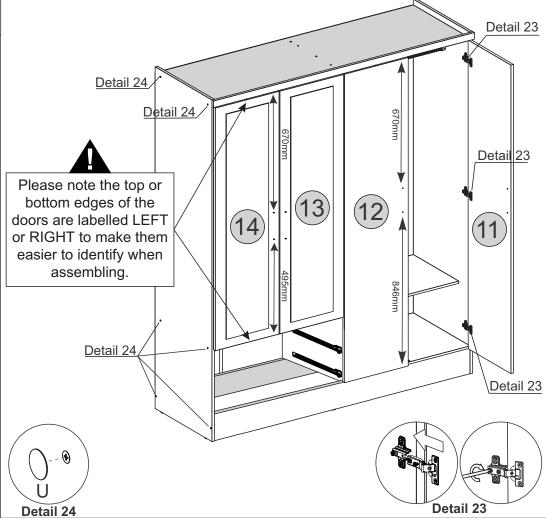

HARDWARE REQUIRED


14

U

SEC/SH/06/21/CA6

Detail 12

Detail 12

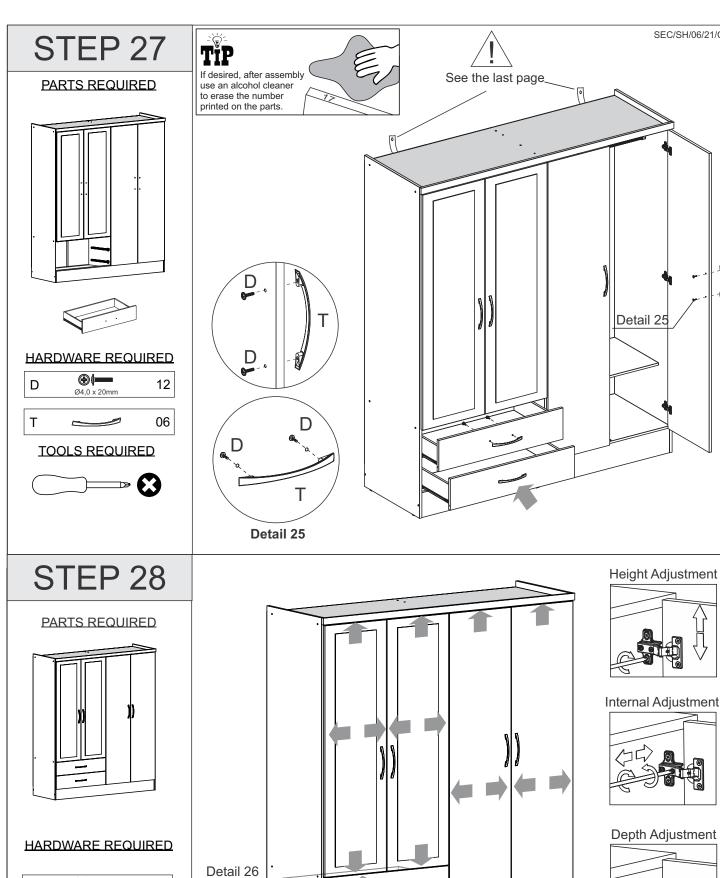

(4)

Ø4,0 x 14mm

TOOLS REQUIRED

04


Detail 26

Drawer Adjustment

Detail 26

Drawer Lock

С

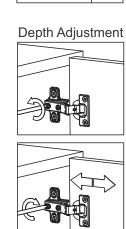

SEC/SH/06/21/CA6

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

