







LITTLE TREE

Assembly Instructions




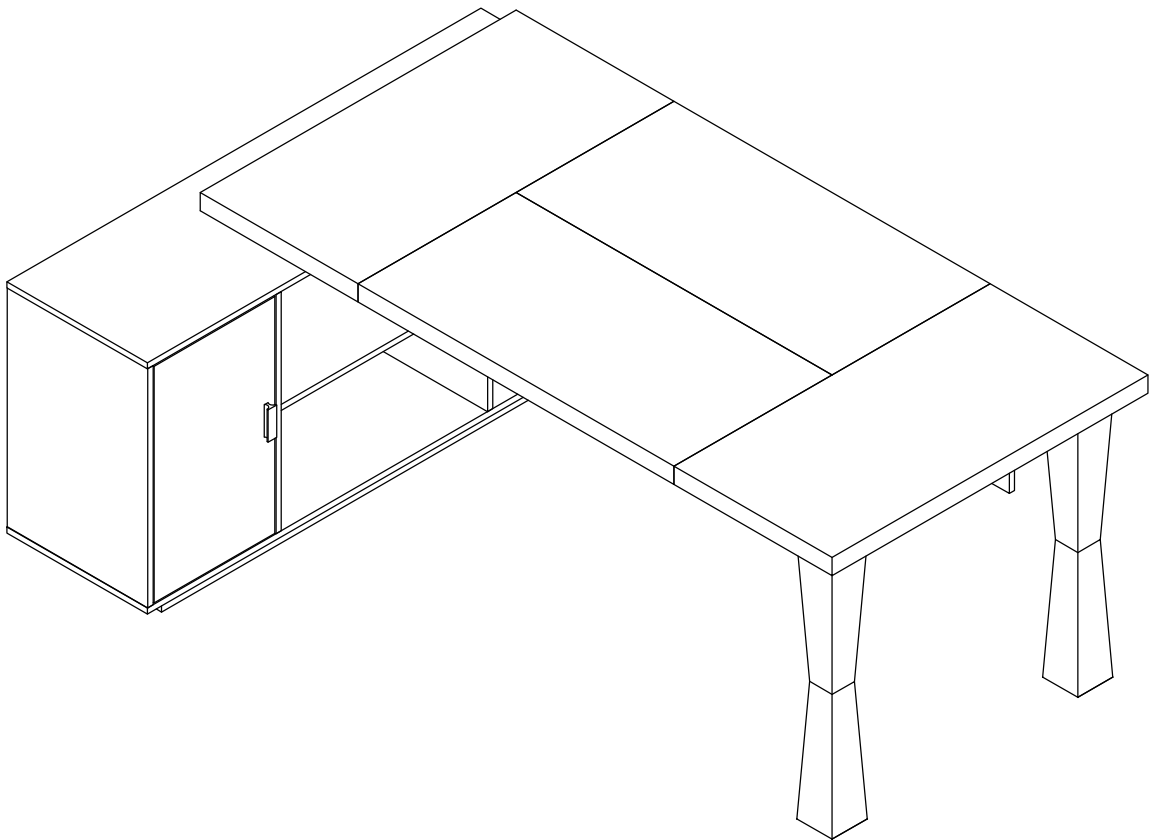



Model No. YS0123

Corner boss table

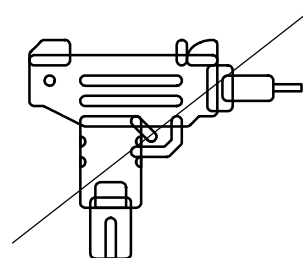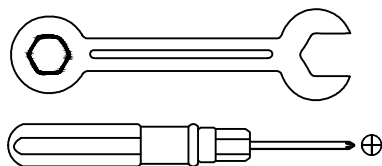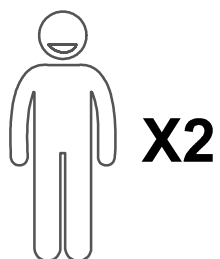

When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

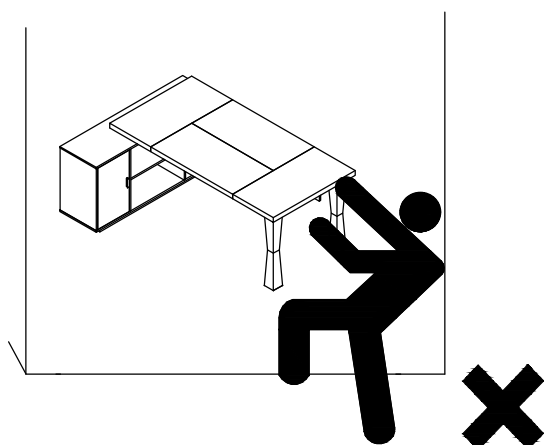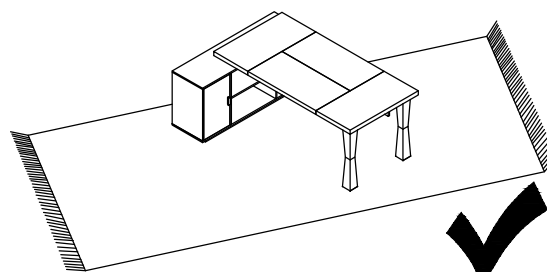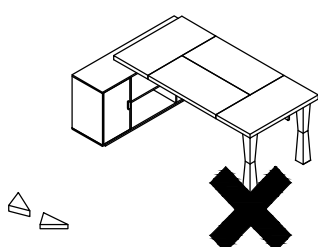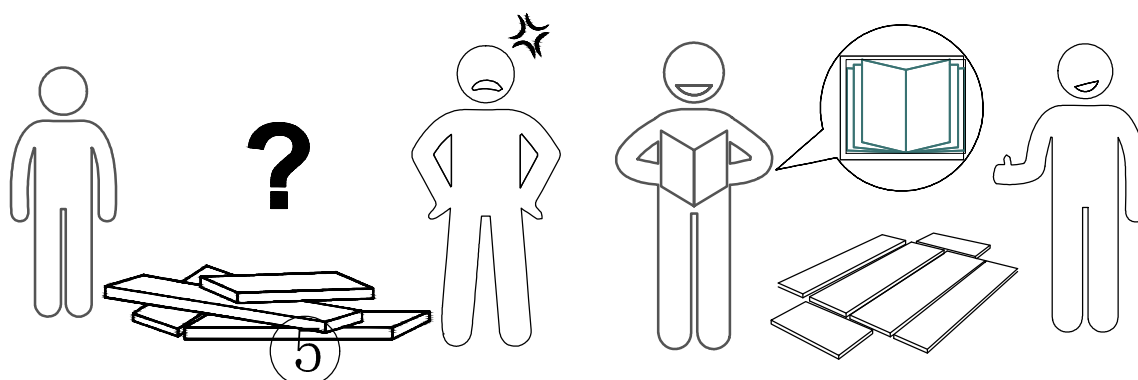


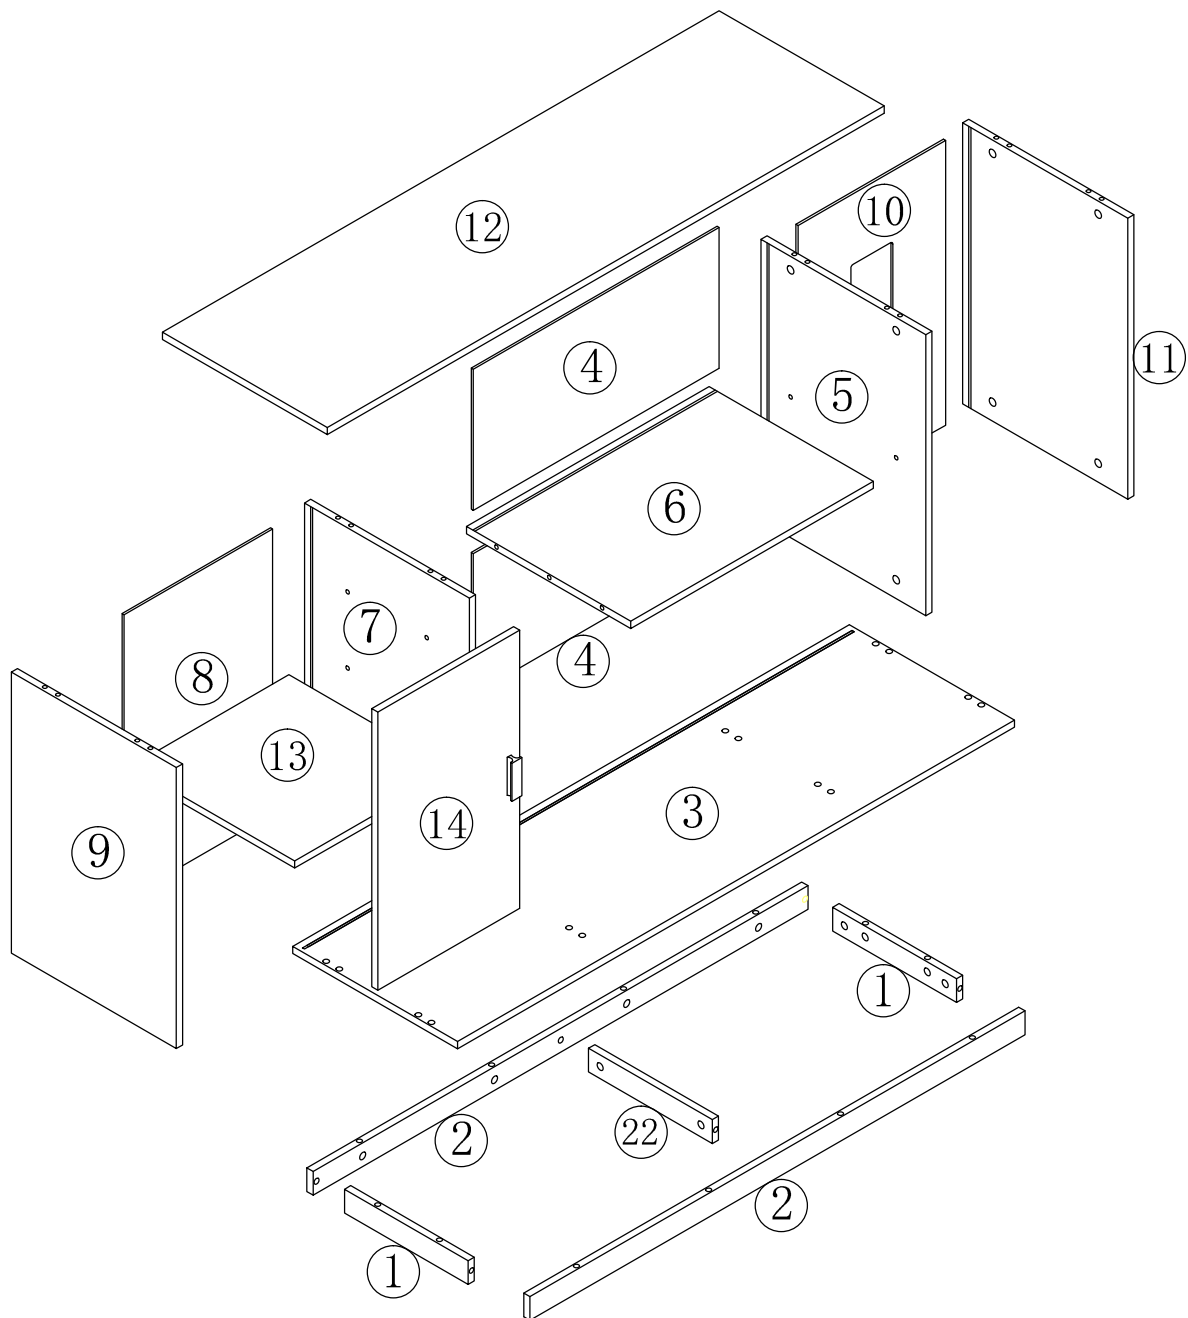

⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

Contact us for free replacement if having damaged or missing parts.

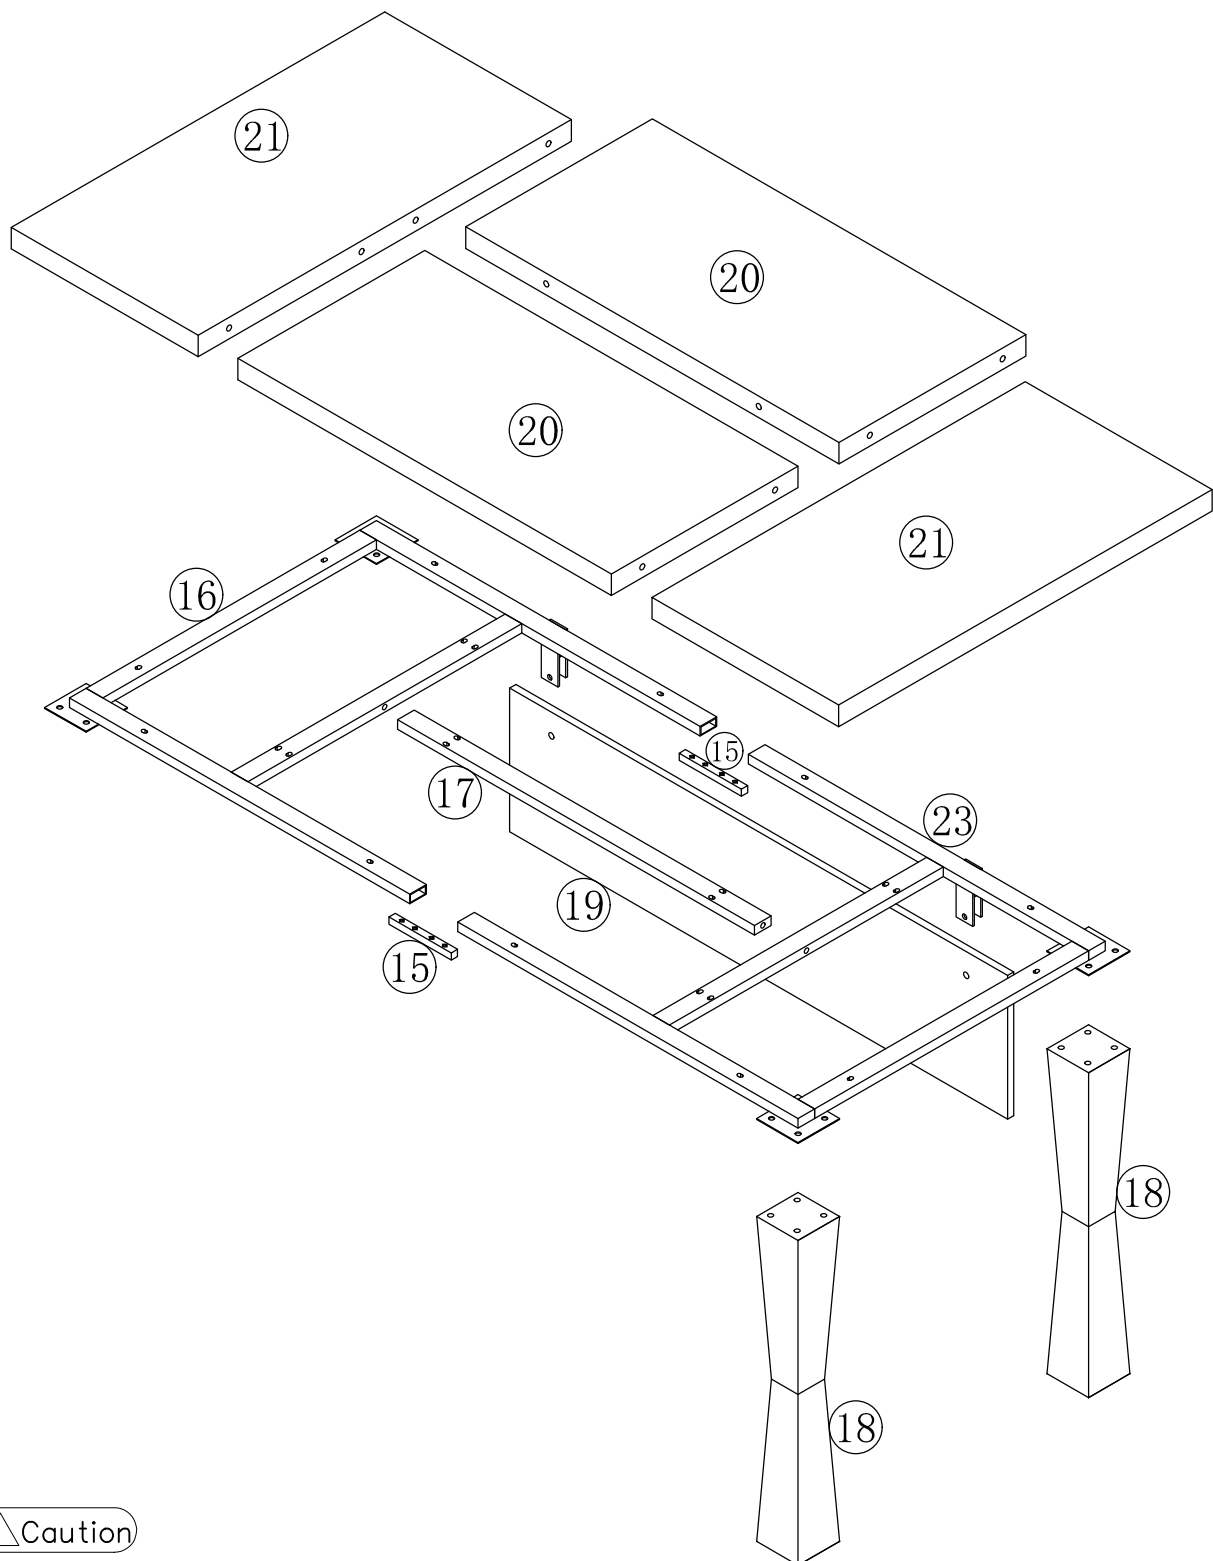


⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

Contact us for free replacement if having damaged or missing parts.


Parts & Hardware List




① 2pc

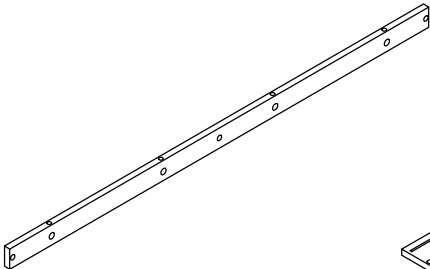


② 2pc

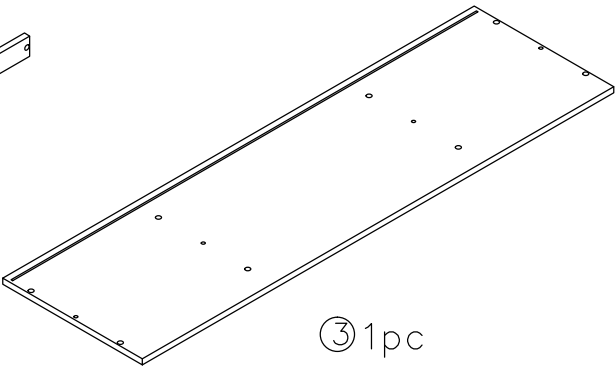


③ 1pc

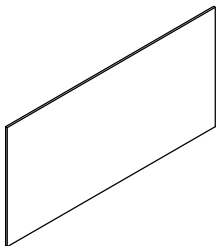


④ 2pc

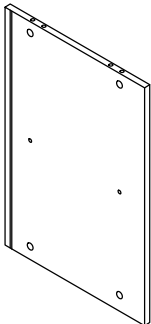


⑤ 1pc

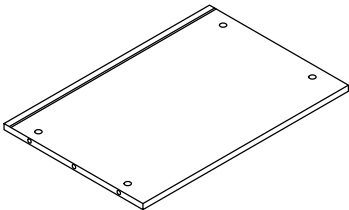


⑥ 1pc

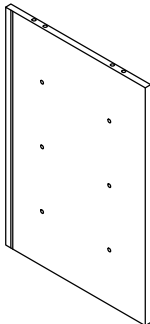


⑦ 1pc

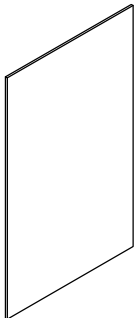


⑧ 1pc

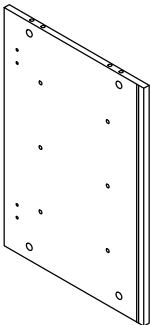

⑨ 1pc

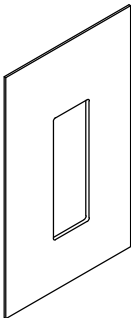


⑩ 1pc

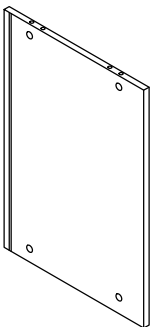


⑪ 1pc


Parts & Hardware List

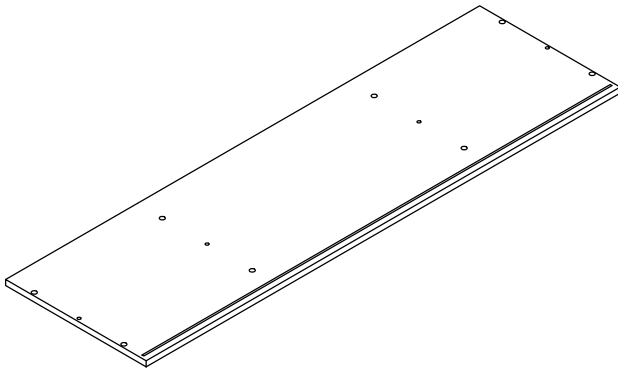


⑫ 1pc

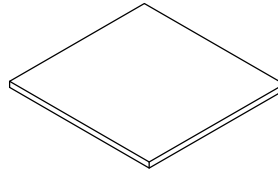


⑬ 1pc

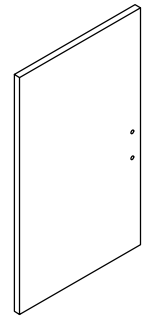


⑭ 1pc




⑮ 2pc

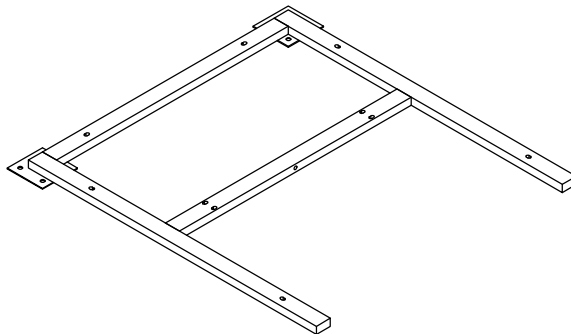


⑯ 1pc

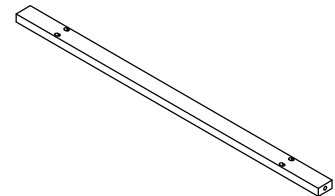


⑰ 1pc




⑱ 2pc

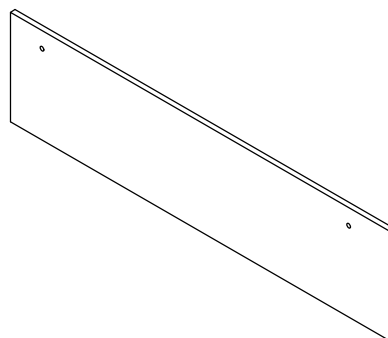


⑲ 1pc

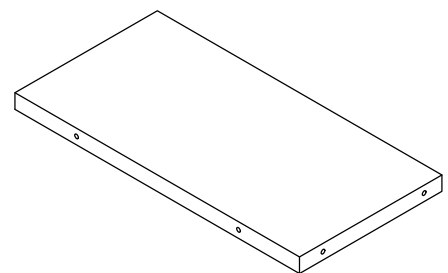


⑳ 2pc

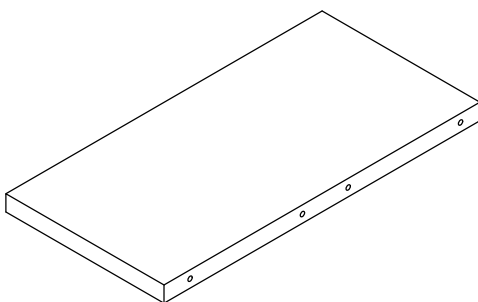

㉑ 2pc





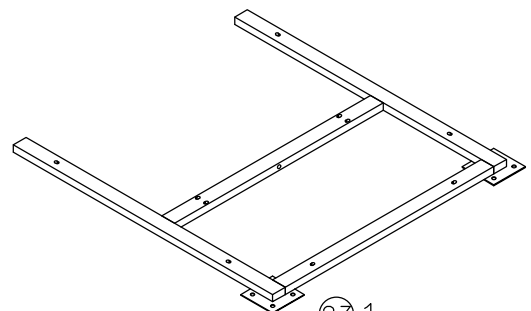

















㉒ 1pc







㉓ 1pc

Parts & Hardware List





Hardware List

  M6X35MM A 38pcs	 ø8X30MM B 16pcs	 C 4pcs	 E X6 D 2pcs	 ø3.5X14MM E 16pcs	 ø4X18MM F 2pcs	 G 1pcs
 ø6X12MM H 12pcs	 I 2pcs	 M4 J 1pcs	 14X12X10MM K 16pcs	 ø6X30MM L 24pcs	 ø6X55MM M 2pcs	
 N 2pcs	 ø8X18MM O 2pcs	 P 1pcs	 ø6X20MM Q 8pcs	 ø10X40MM R 10pcs	 Screwdriver	



1

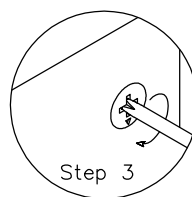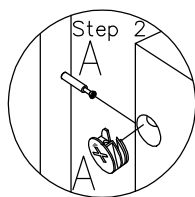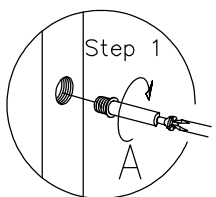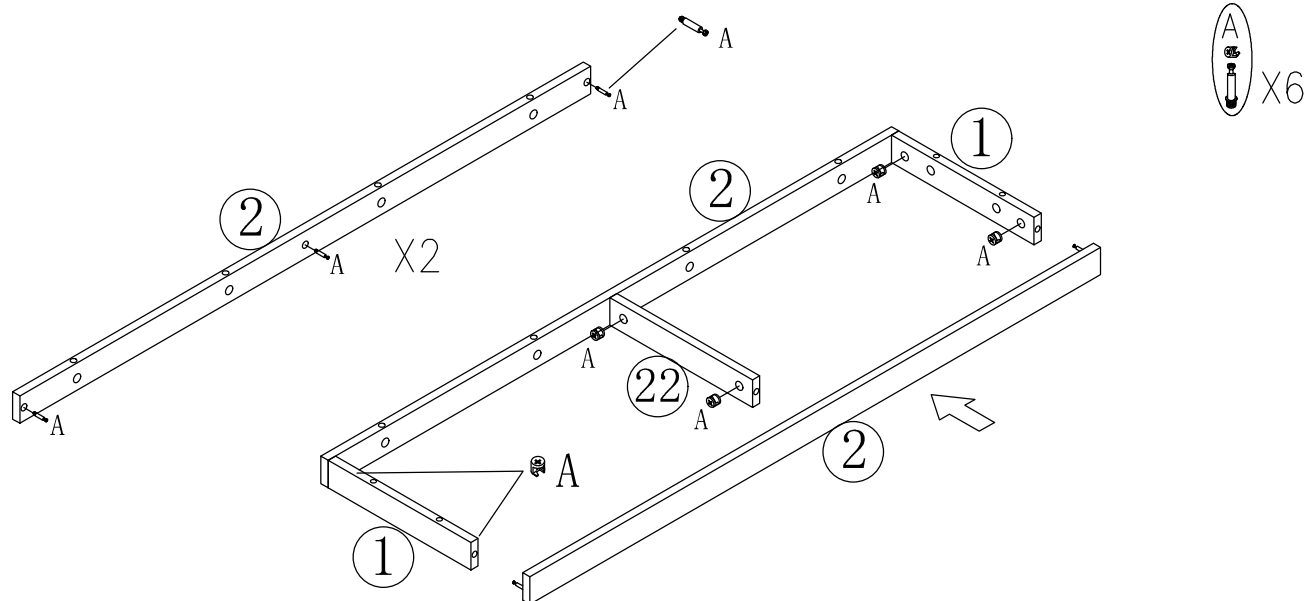




2

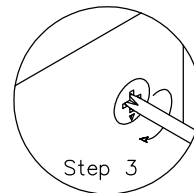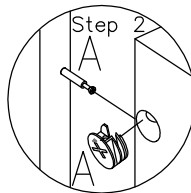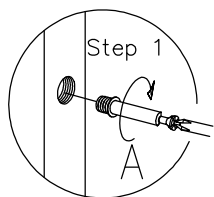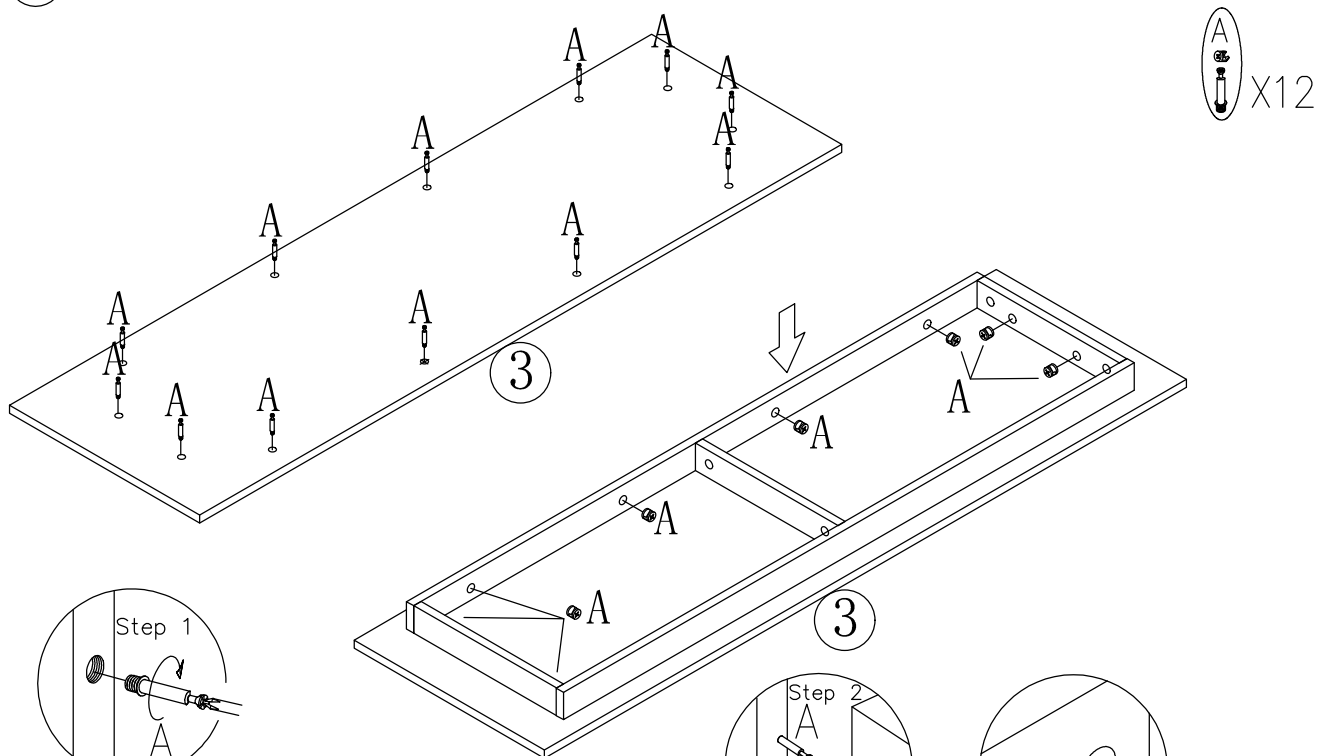


3

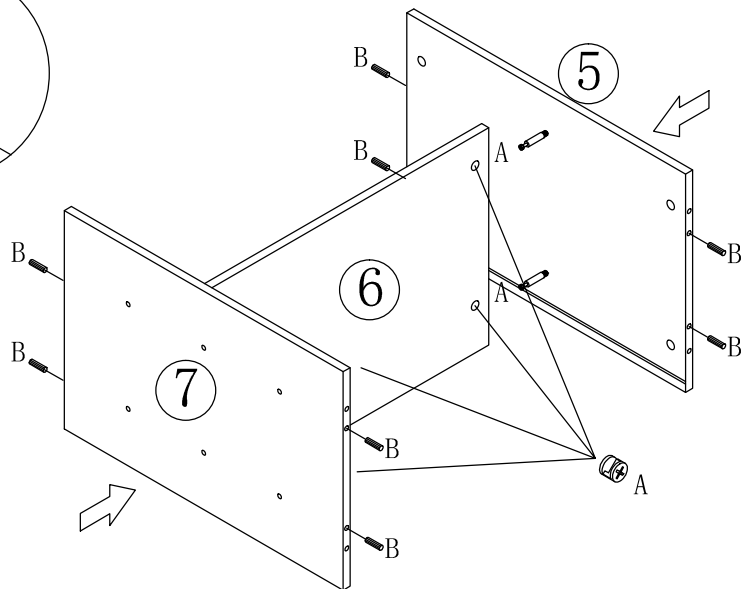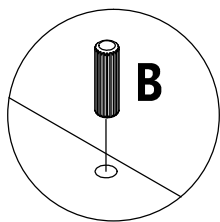

- A** X4
- B** X8

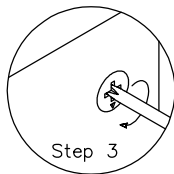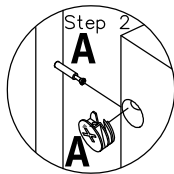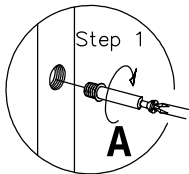


4

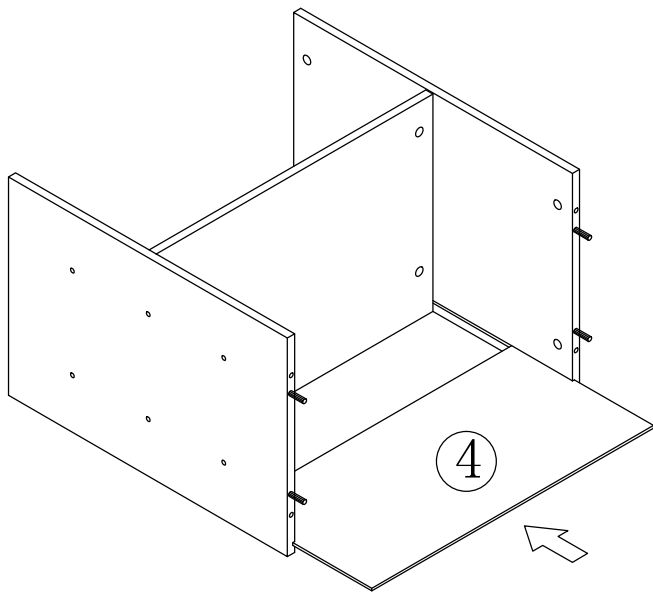


5

A X8

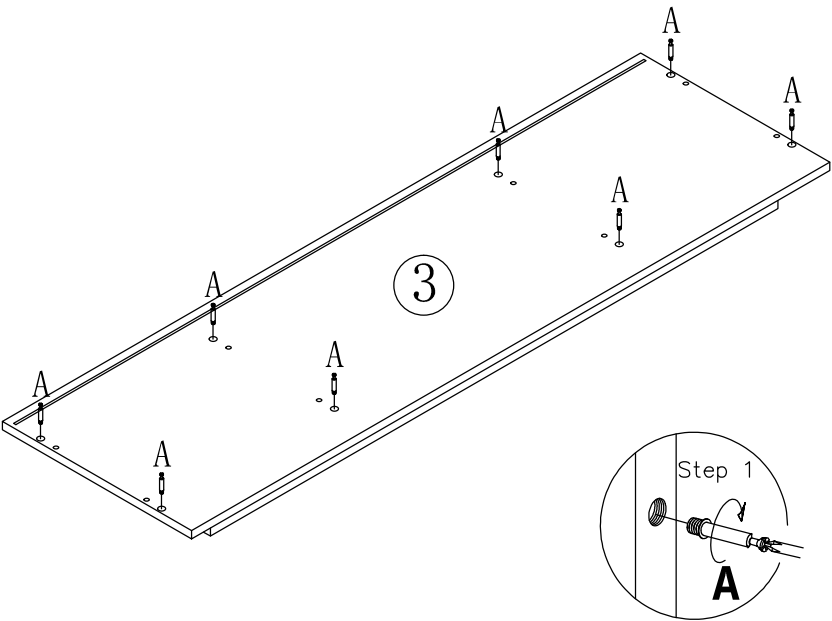


6


A X4

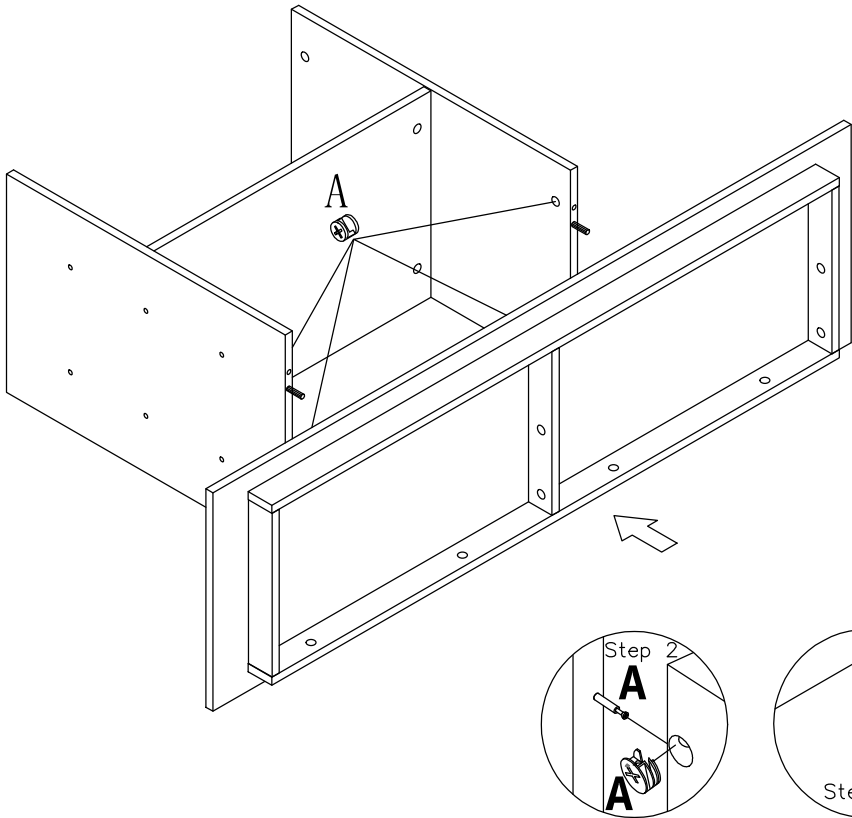


7

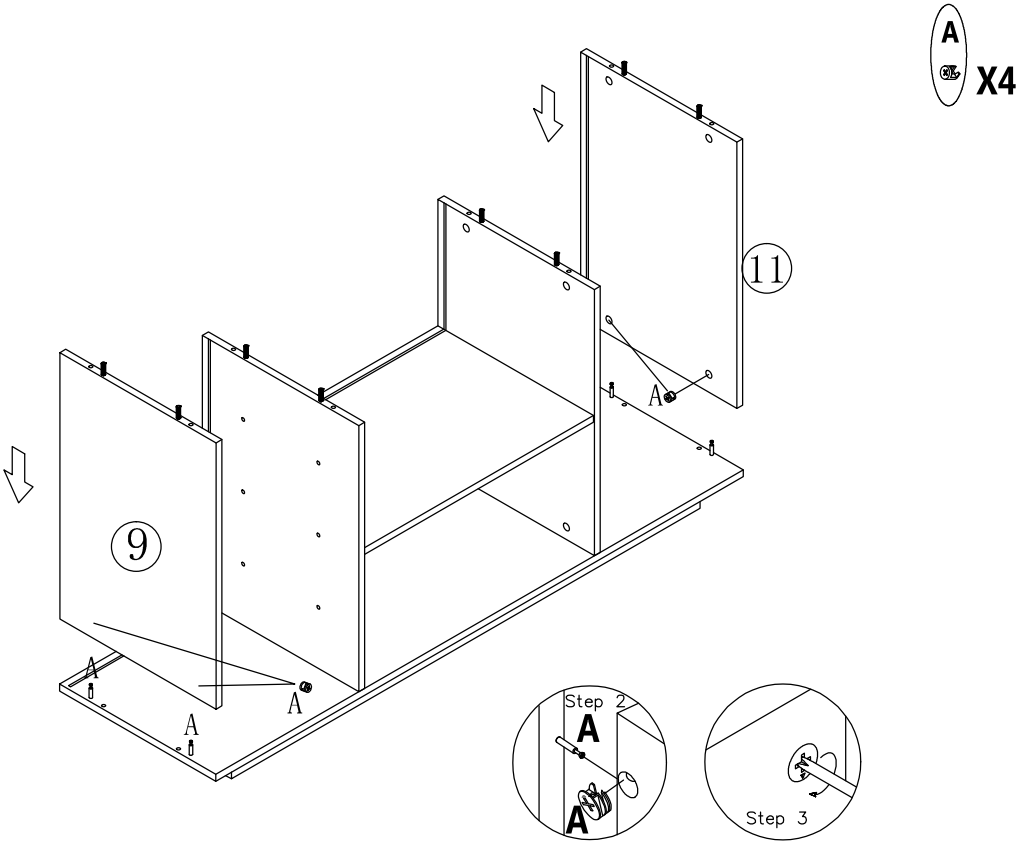

8

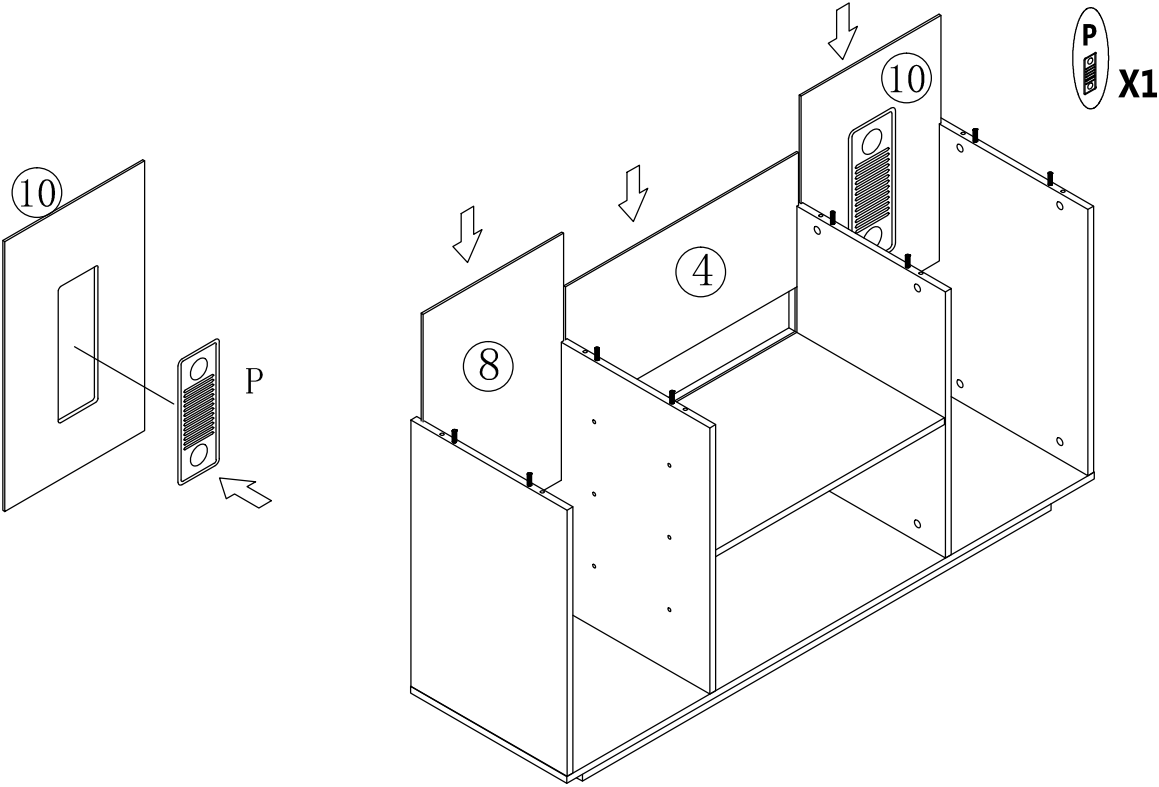


9

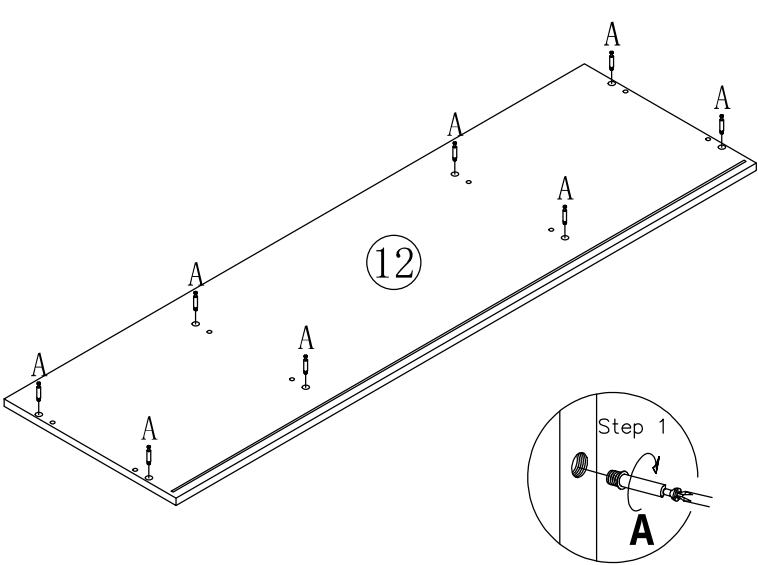


A X8

10

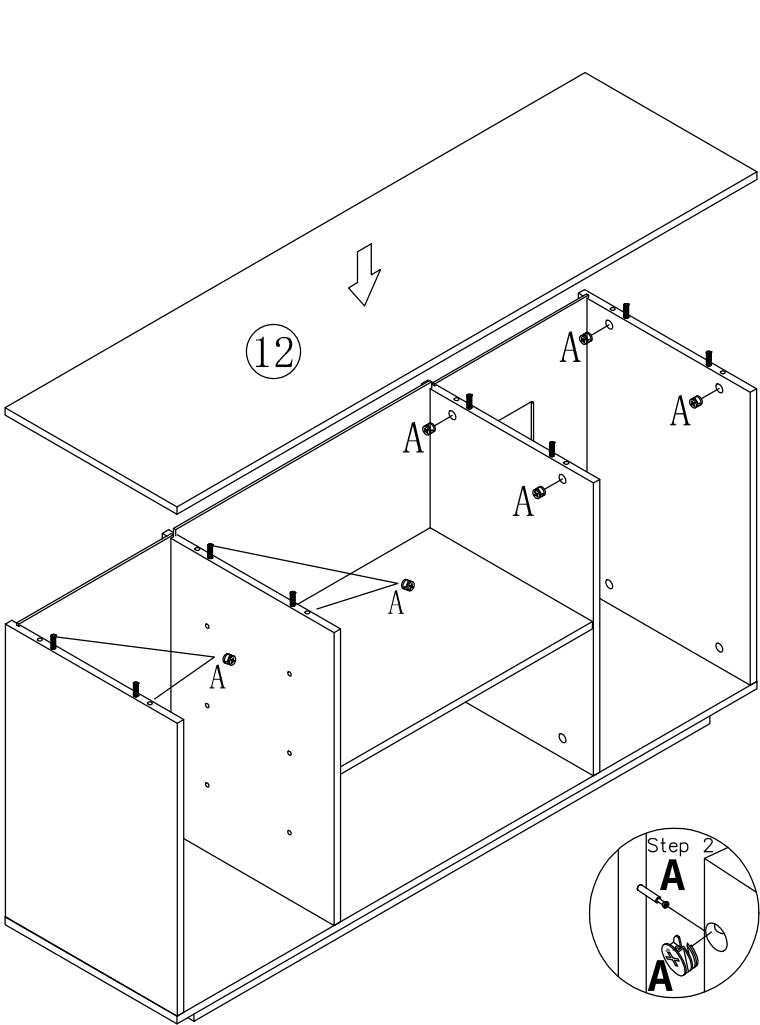


A X8





11

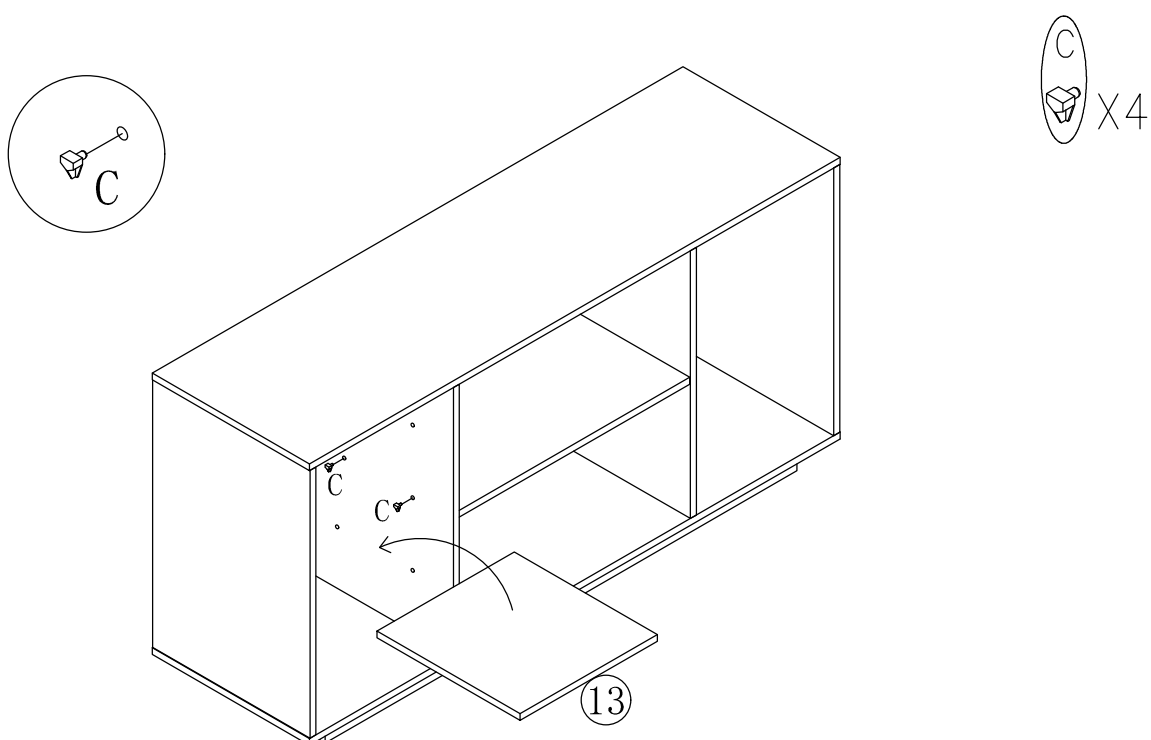



12

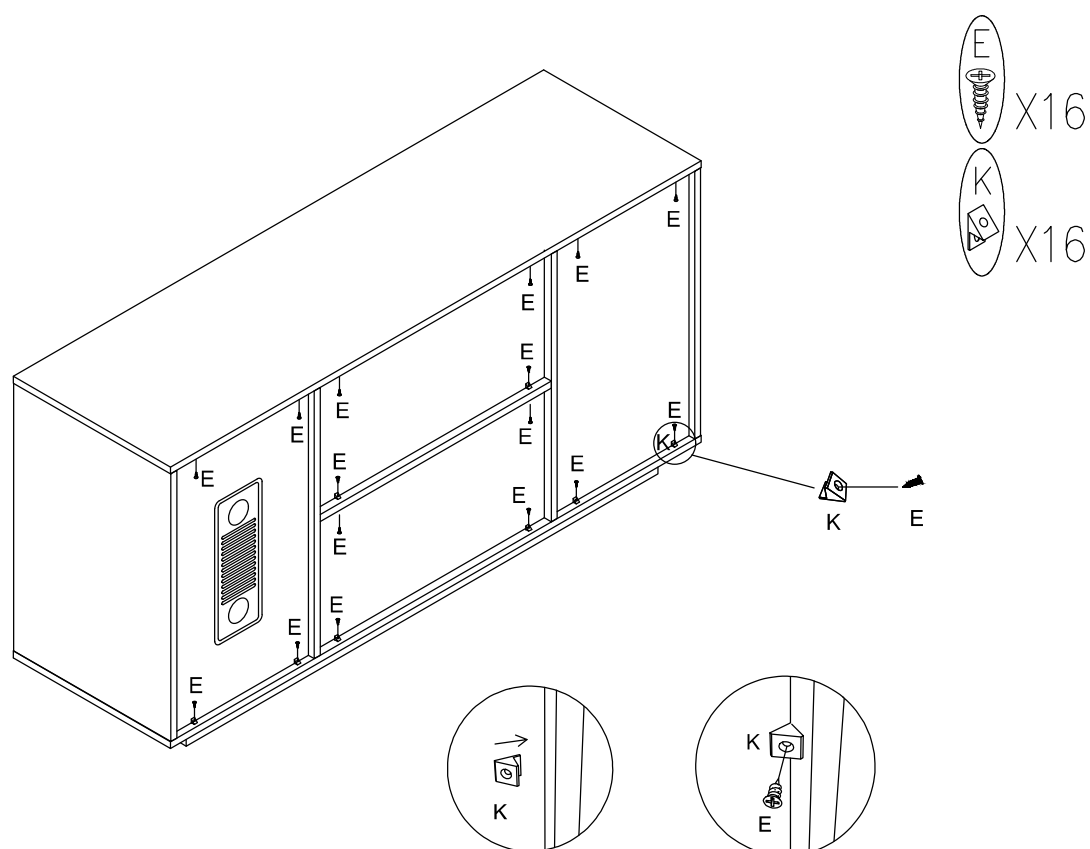

13

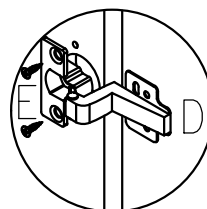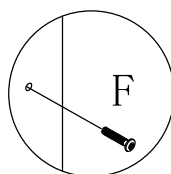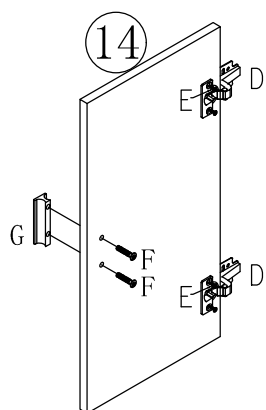


14

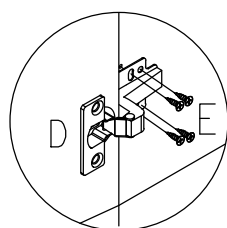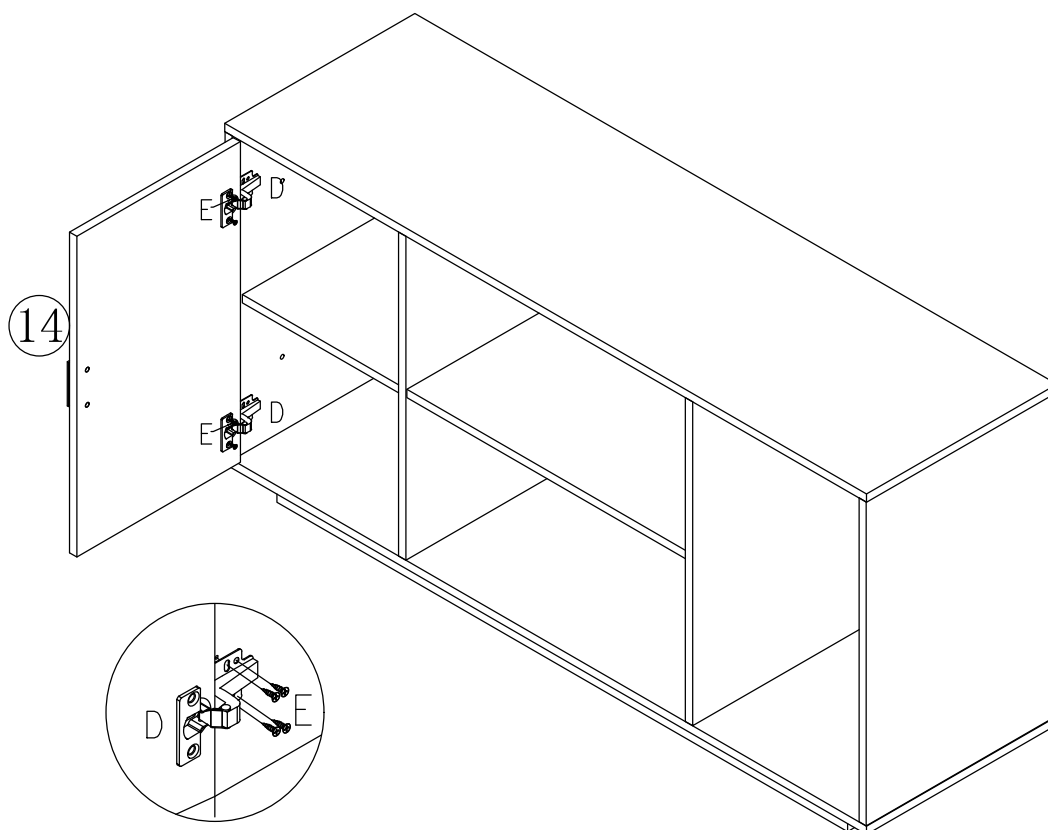


in the rear


To prevent the door hinge from falling off,
please install 4 screws


15

 **X2**

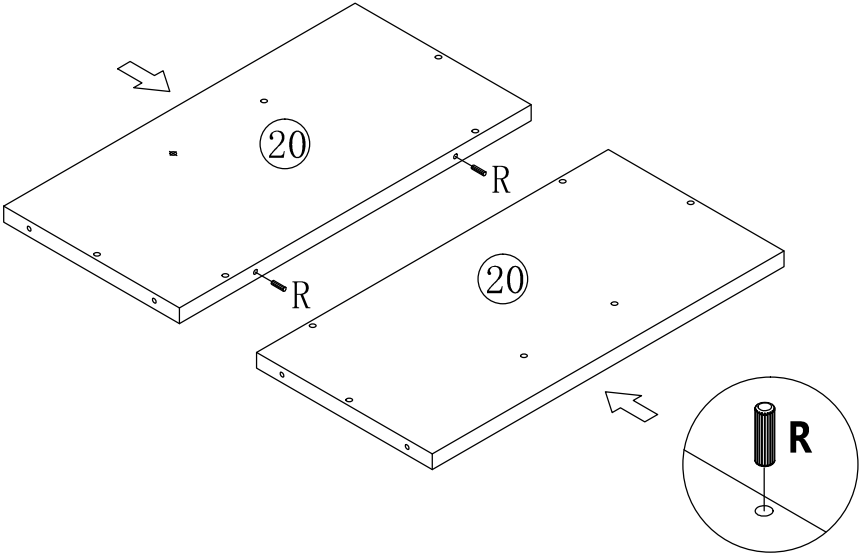


16

 **X8**

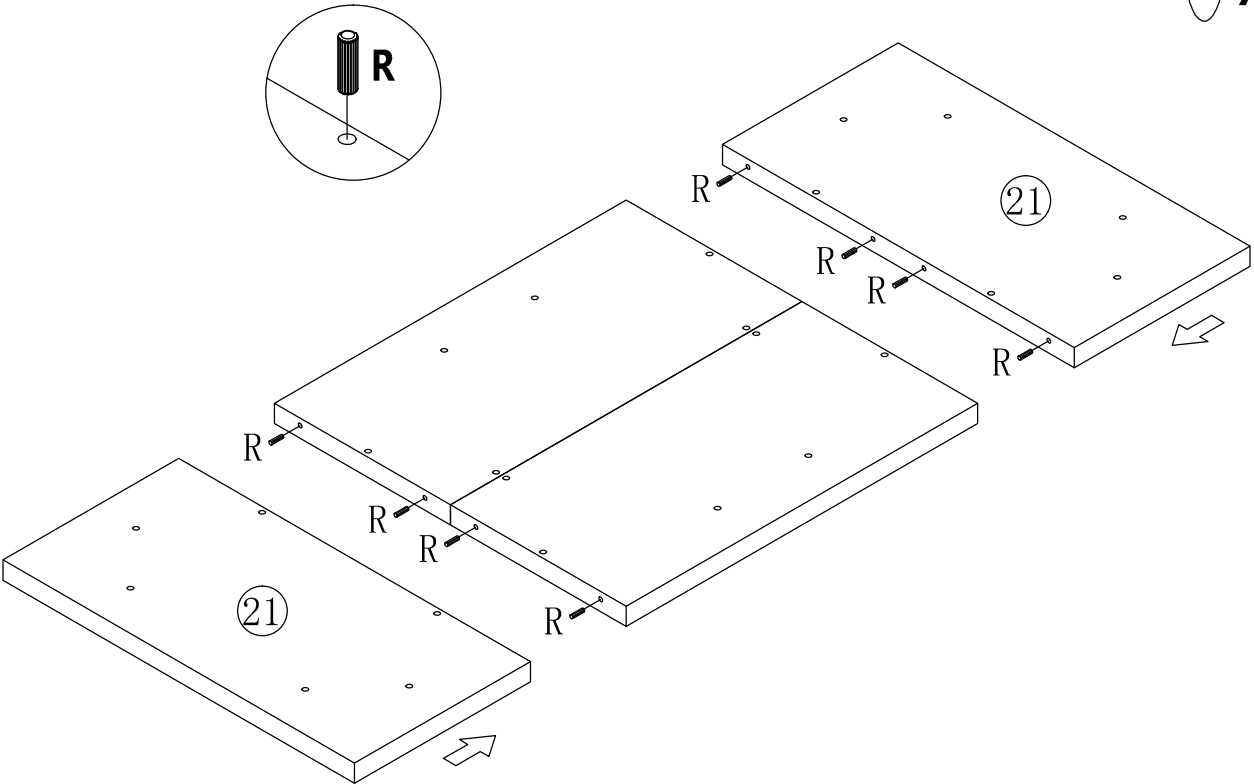


17

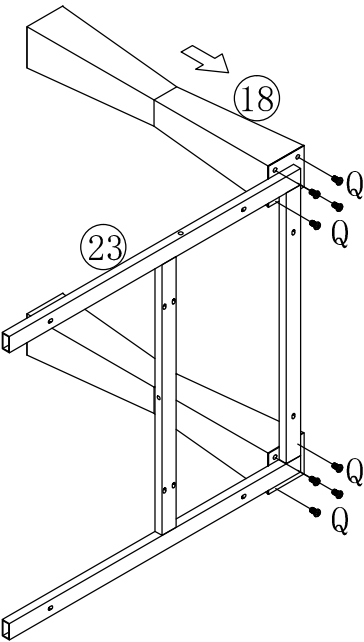


Q
X8

18

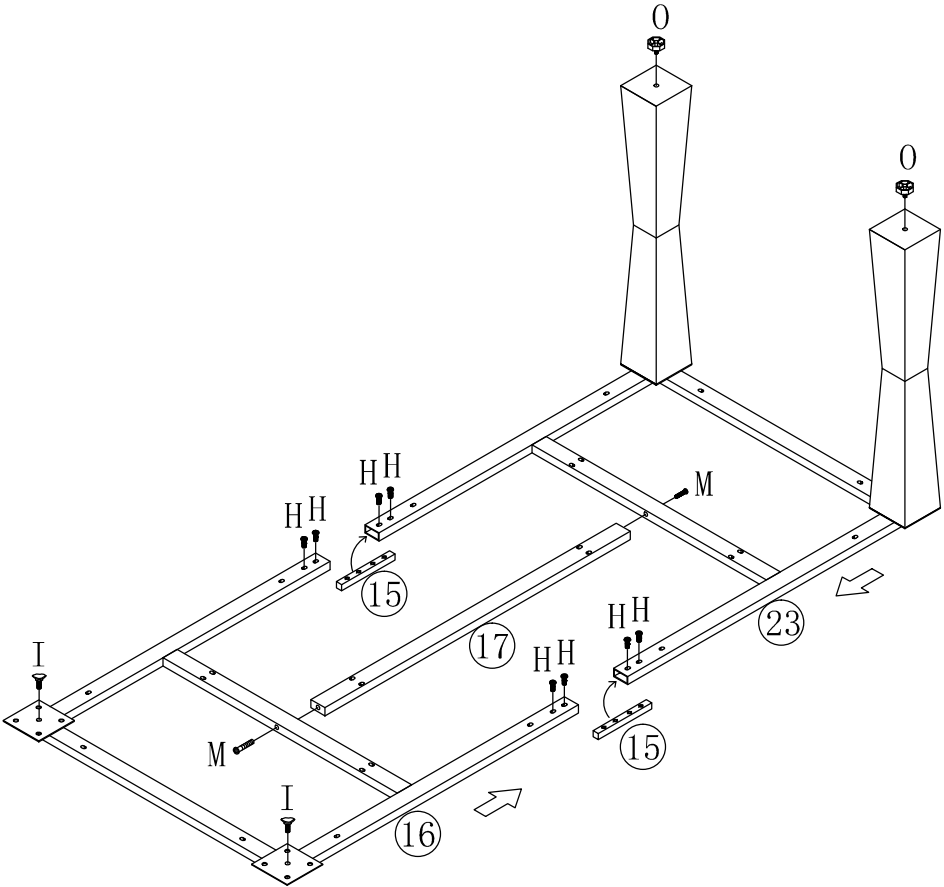


O X2
M X2
I X2
H X8


19

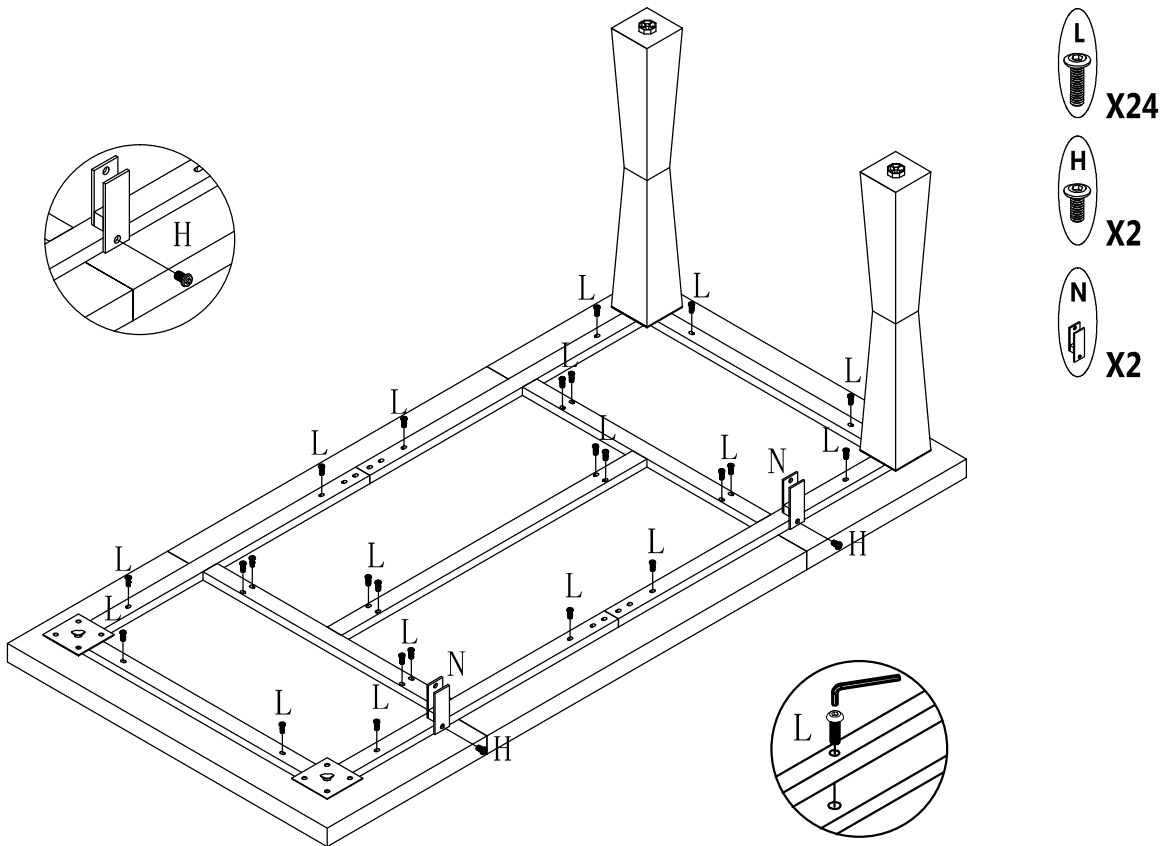

20

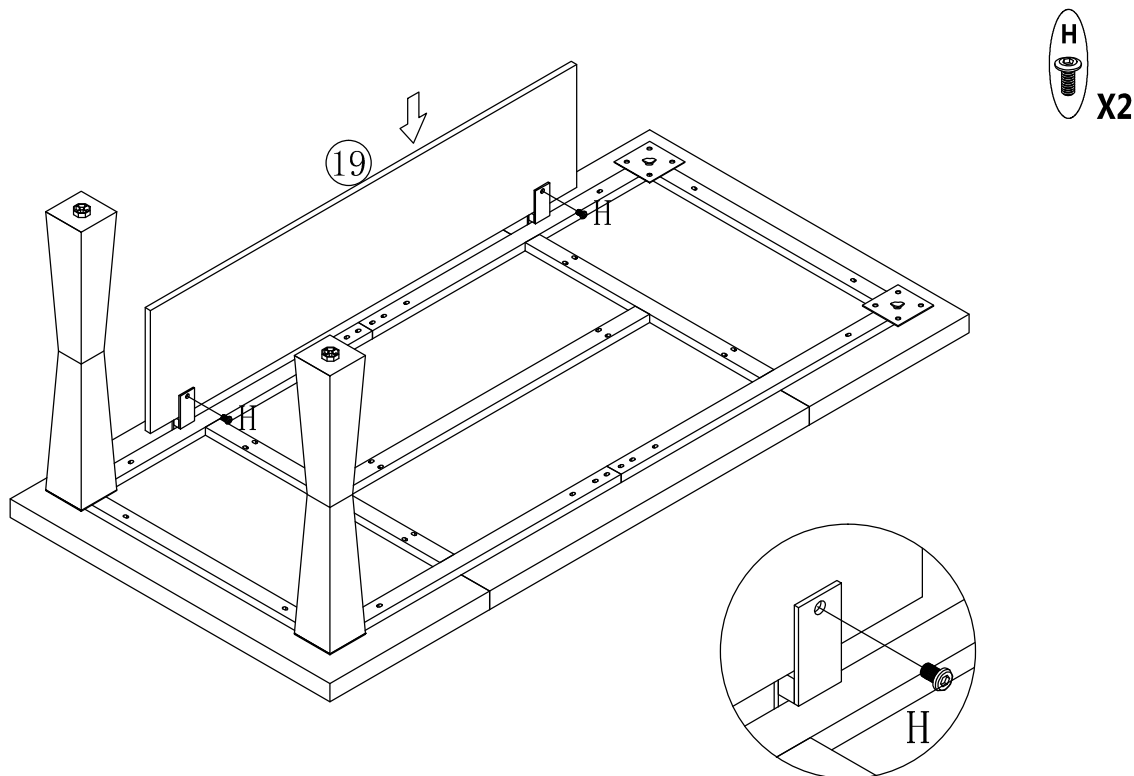

21

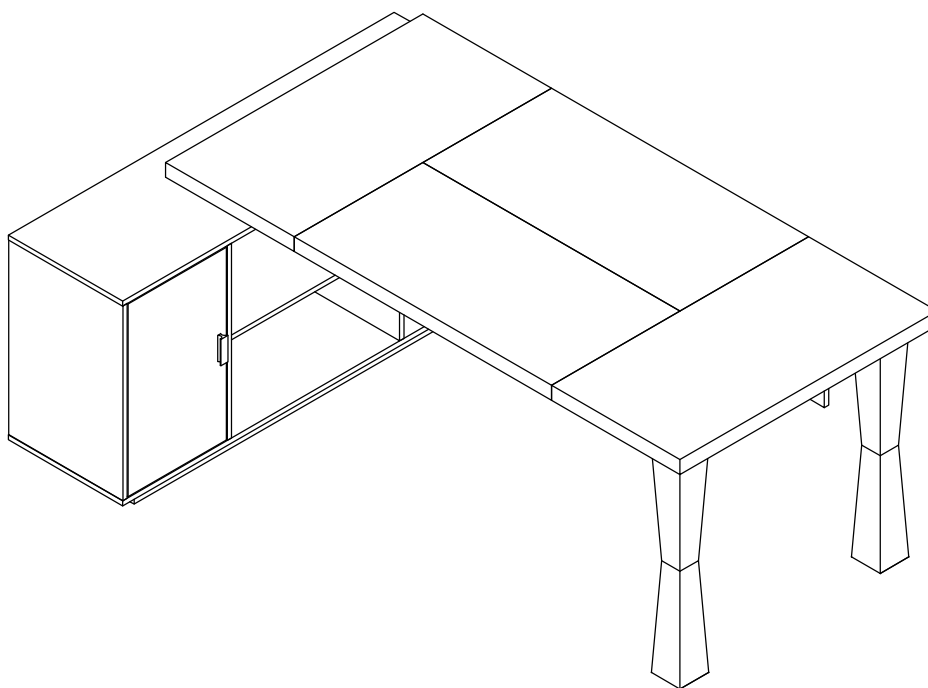

22

Horizontal flip
installation is the
same.

