





















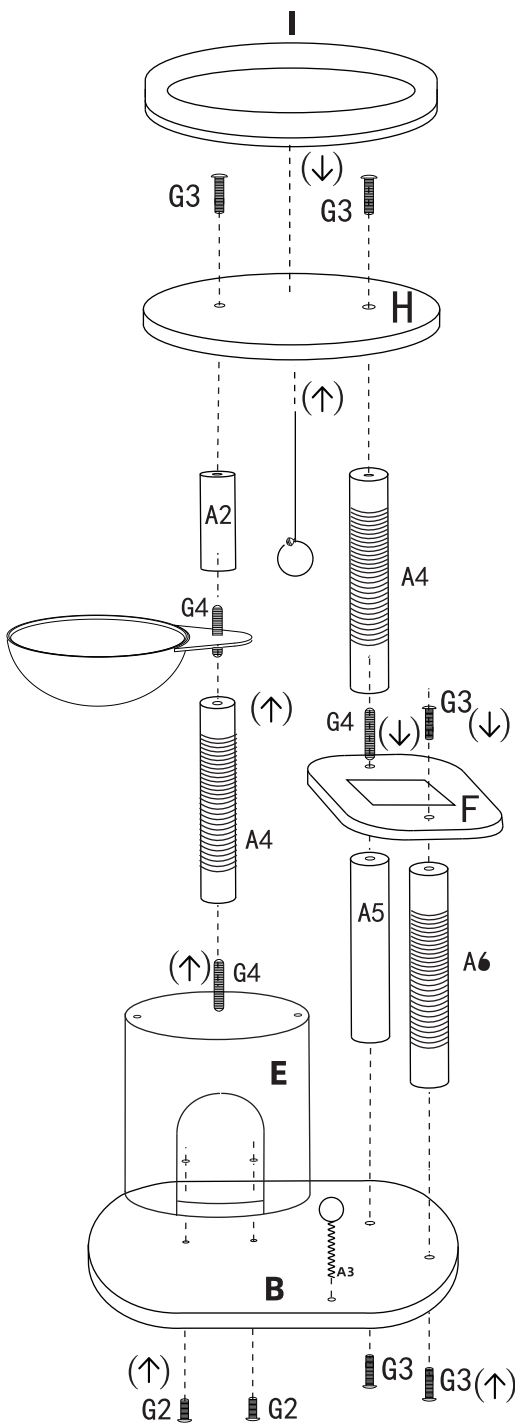




WARNING!
Before assembling, please check the instruction manual to confirm that all accessories are complete. If there is any missing, please contact us in time.


PACKING LIST

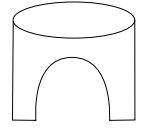G1  0.63 inch x4	G2  1.18 inch x2	G3  1.38 inch x10	G4  x3
G5  x2	G6  x1	 x1	
A1  x3	A2  x1	A3  x1	
A4  13.78in x2	A5  16.53in x1	A6  16.53in x1	
B  x1	C  (No Fabric Cover) x1	D  (With Fabric Cover) x1	E  (Fabric, Not a Box) x1
F  x1			
G  x1	H  x1	I  x1	J  x2




INSTALLATION

1

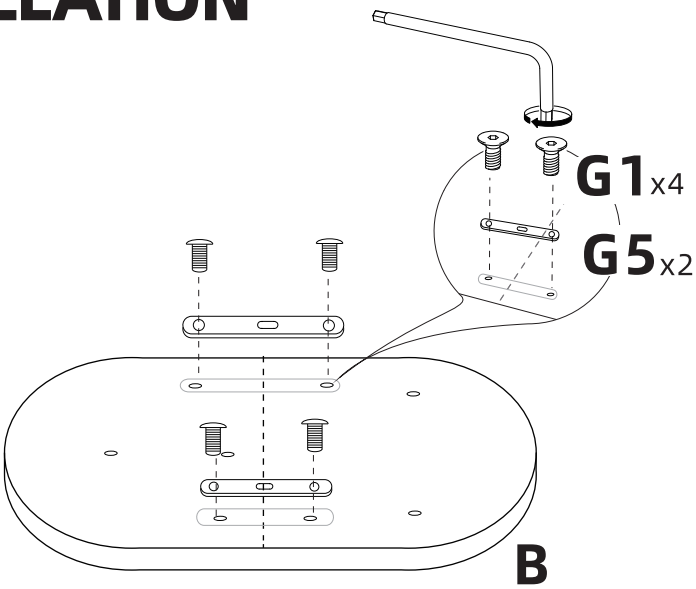


The bottom connecting iron piece G5 has a distinction between obverse and reverse sides, with the smooth side facing the ground and the flat side facing the wooden board.


2

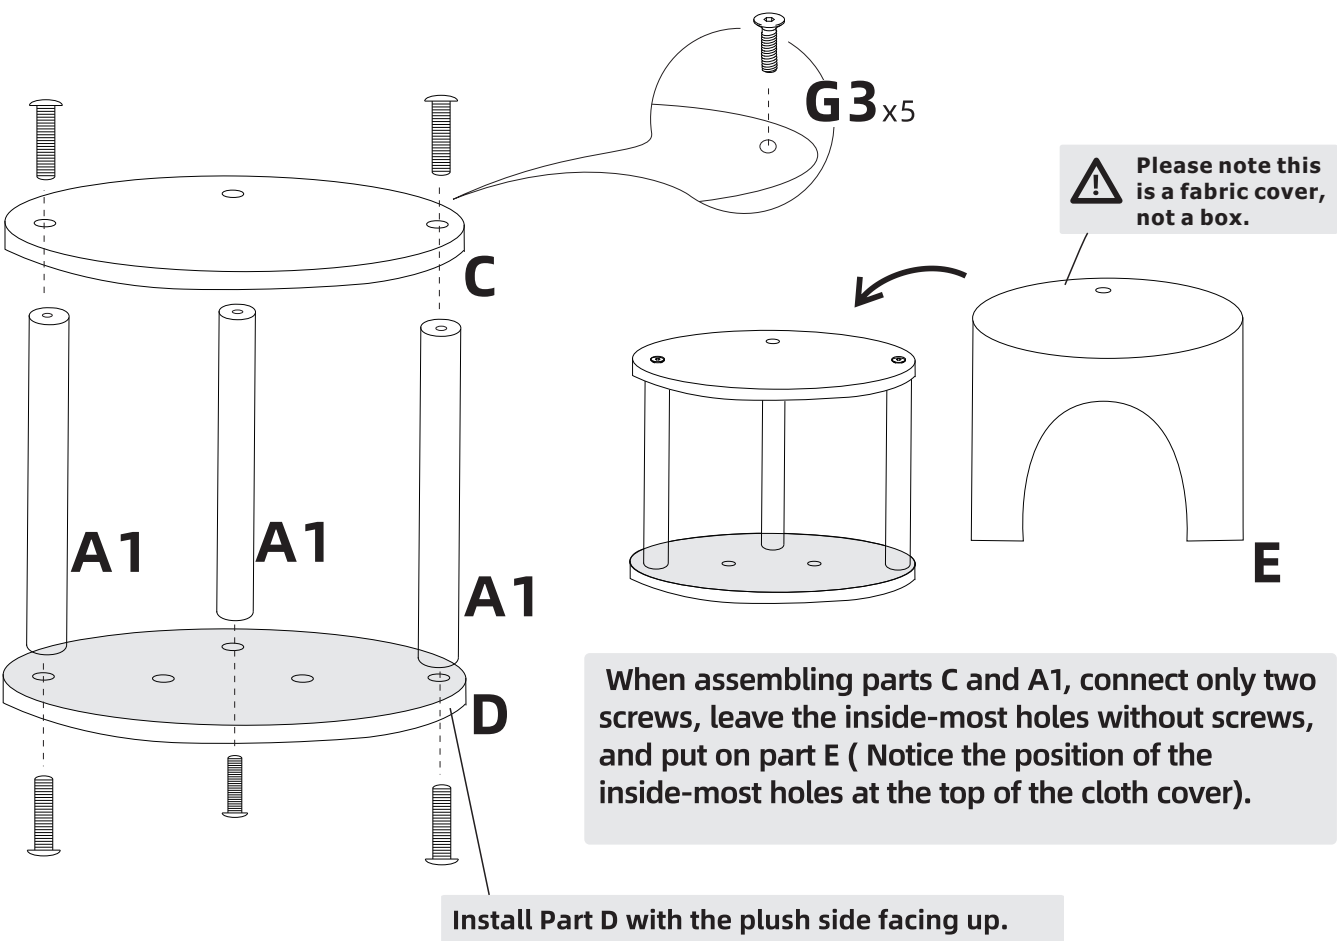

3


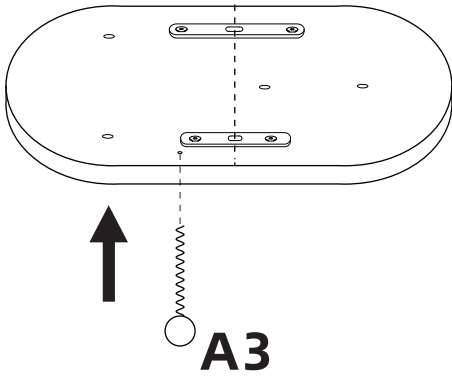


4

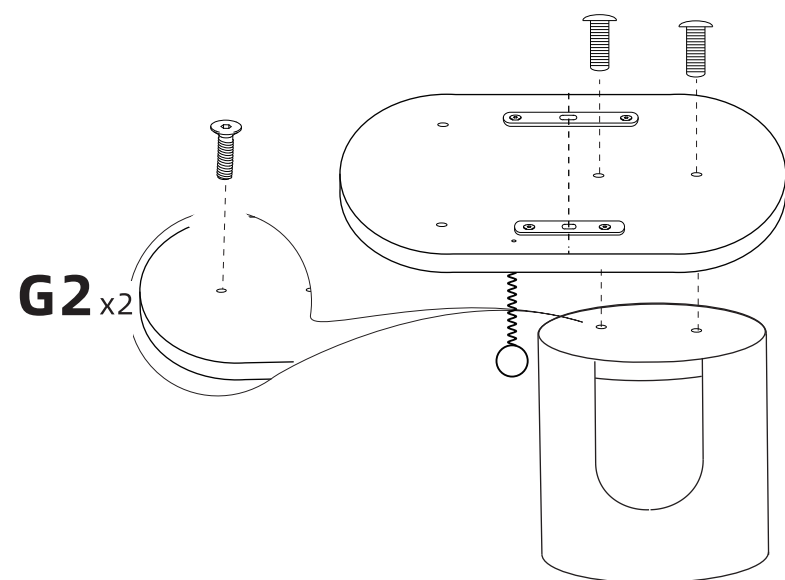


Please notice that after seeing the holes of part B aligned with the holes of the cat condo base plate in a bright place, install the screws by pressing on part B with your hand.


7

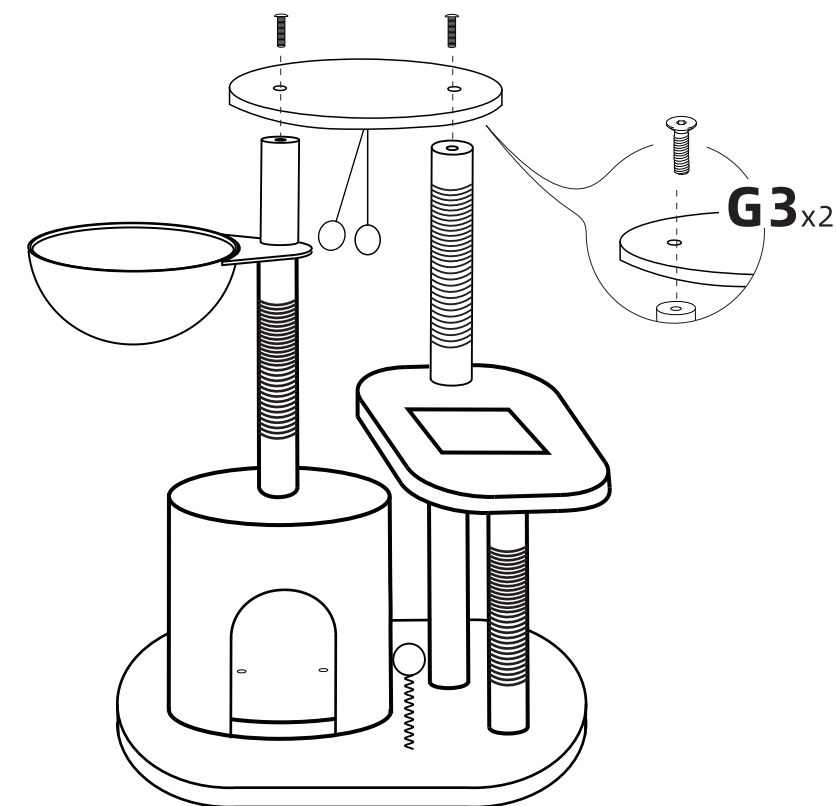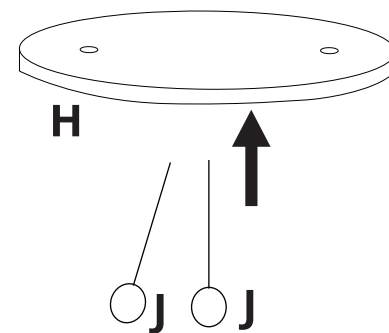


5

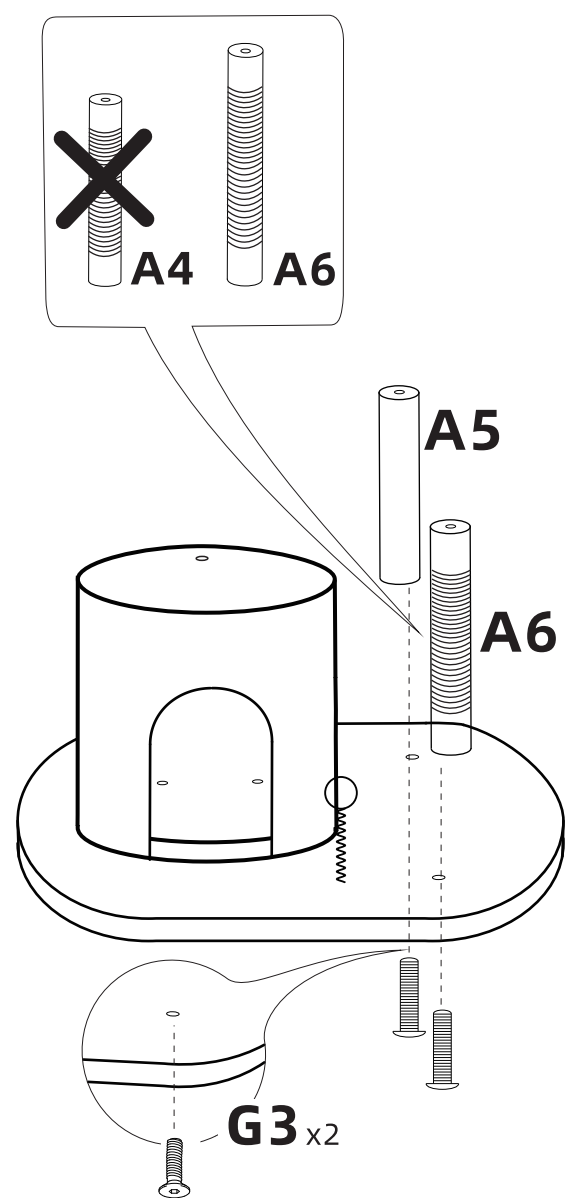


6

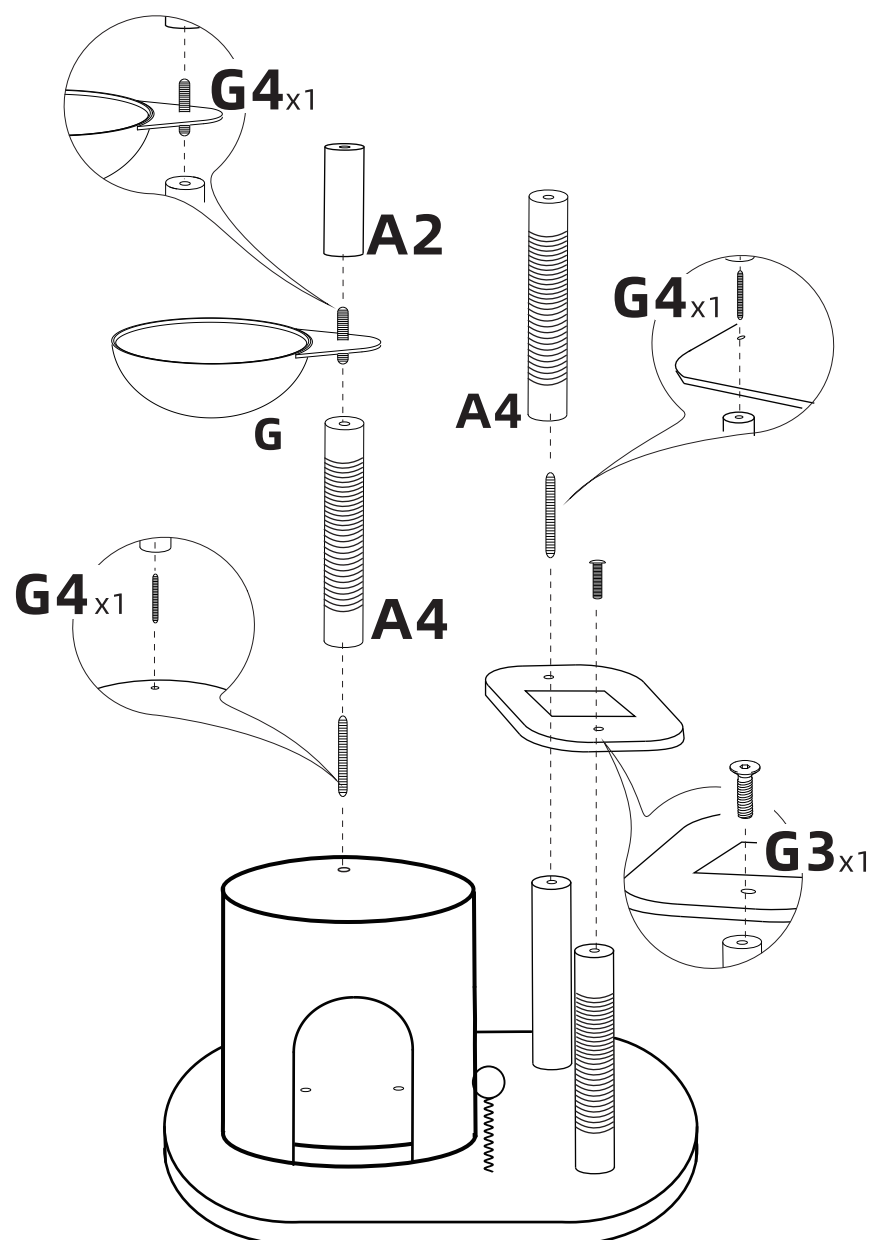

8

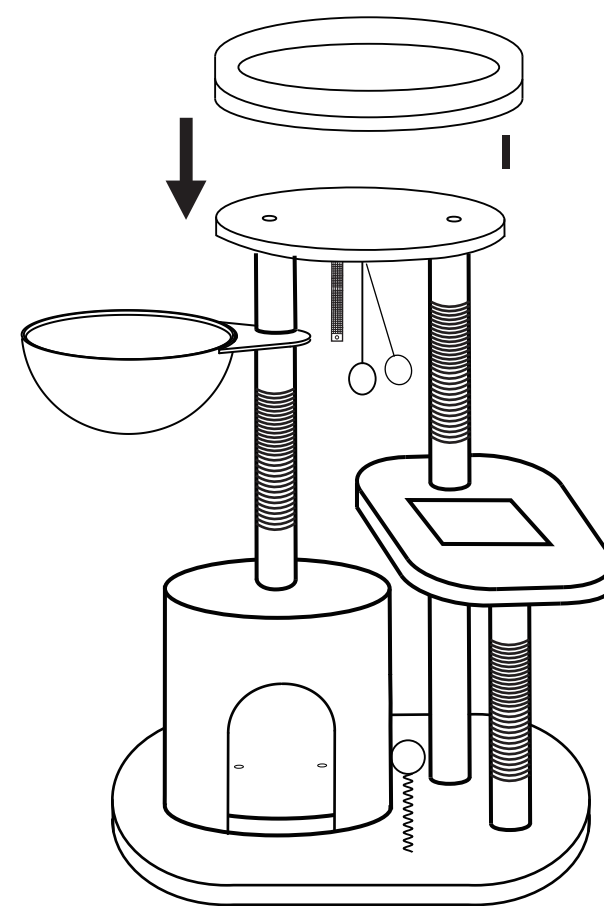

9

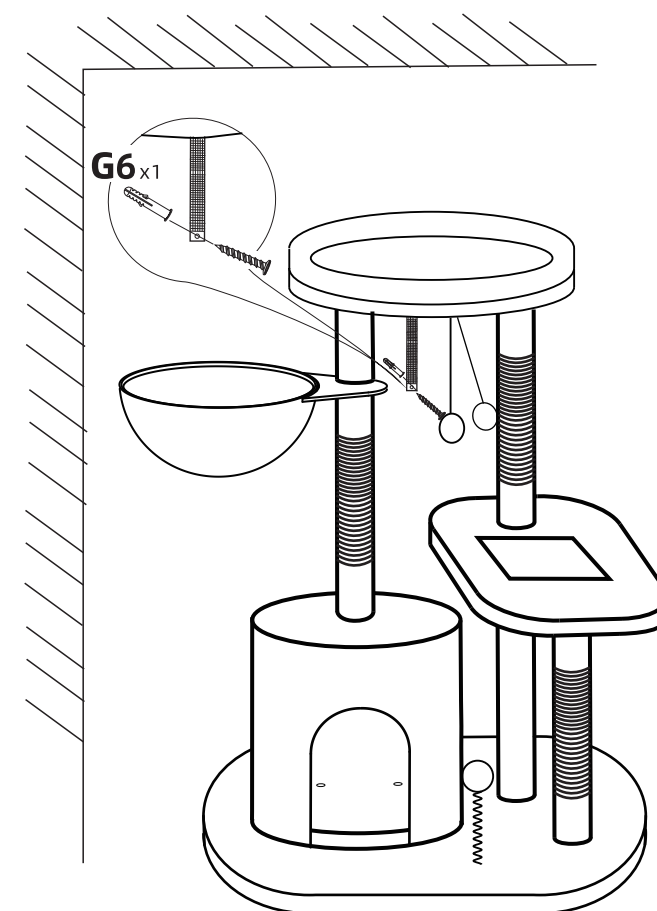

If you have problems, please contact us through the following ways, we will solve the problem for you as soon as possible.

Contact us: service@aechnow.com