

SYLVANIA

Luminaires

ValueLED CCT Selectable Small Wallpack

The ValueLED Small Wall Pack luminaires are environmentally preferable LED alternatives to traditional HID luminaires, offering up to 68% in energy savings. Ideal in place of traditional luminaires, or as new installations, the Small Wall Pack series is offered in several wattages/lumen packages for illuminating building exteriors, outdoor corridors, walkways, and stairwells.



For warranty coverage, please register at www.ledvanceUS.com

⚠ WARNING

Please Read All Instructions Before Attempting Installation

- **PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION**
- TO PREVENT PERSONAL INJURY OR PRODUCT DAMAGE ONLY LICENSED ELECTRICIANS SHOULD PROVIDE ALL INSTALLATION SERVICES.
- TO AVOID ELECTRIC SHOCK OR COMPONENT DAMAGE DISCONNECT POWER BEFORE ATTEMPTING INSTALLATION OR SERVICING.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE (NEC) AND ALL APPLICABLE FEDERAL, STATE AND LOCAL ELECTRIC CODES AND SAFETY STANDARDS.
- USE CAUTION WHEN HANDLING THIS PRODUCT DURING OR AFTER OPERATION AS IT MAY BECOME HOT AND CAUSE BURNS. DISCONNECT PRODUCT AND ALLOW COOLING PRIOR TO SERVICING.
- ANY ALTERATION OR MODIFICATION OF THIS PRODUCT IS EXPRESSLY FORBIDDEN AS IT MAY CAUSE SERIOUS PERSONAL INJURY, DEATH, PROPERTY DAMAGE AND/OR PRODUCT MALFUNCTION.
- TO PREVENT PRODUCT MALFUNCTION AND / OR ELECTRICAL SHOCK THIS PRODUCT MUST BE PROPERLY GROUNDED.
- THIS LUMINAIRE IS TO BE WALL MOUNTED ONLY.
- THIS LUMINAIRE IS DESIGNED TO OPERATE IN AMBIENT TEMPERATURES RANGING FROM -40°F TO +104°F (-40°C TO +40°C).

Safety Precautions:


Important:

Read carefully before installing the fixture. Retain for future reference.

General:

Upon receipt of the fixture, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier. Sensor is located under the lens (all models ship preset at 4000K).


Front View

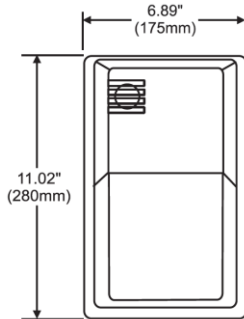

Side View



CCT Switch

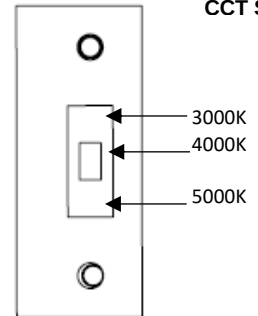


Installation:

Standard Installation

Wall mount

1. Before starting, ensure that the power is disconnected.
2. Remove the 2 Torx screws (1 on each side) that hold the front plastic housing to the back and remove the front housing. (See figure 1)
3. Loosening the 2 screws (C) that hold the reflector (A) in place, ensuring that the quick connectors are disconnected (B). (See figure 2)
4. Remove the conduit plug cover in either the bottom or the back of the housing.
5. To mount the rear housing knock out appropriate holes around the outlet hole in the rear housing.
6. If 3000 or 5000K are desired, please adjust the CCT switch
7. Wire the fixture according to wiring diagram below.
8. Install rear housing to junction box using screws supplied with junction box.
9. Replace reflector and front housing using screws removed in steps 2 and 3.
10. To ensure a watertight seal caulk between rear housing and mounting surface.

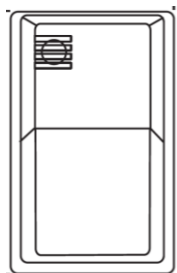

Torx Screw

Figure 1


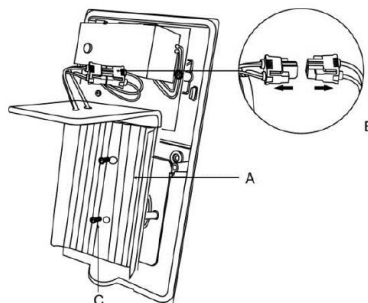


Figure 2



Wiring Diagram

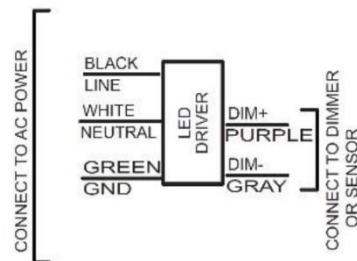

LEDVANCE

Luminaires

Wall Pack Sélectionnable CCT de classe de performance

Les luminaires ValueLED Small Wall Pack sont des alternatives LED respectueuses de l'environnement aux luminaires HID traditionnels, offrant jusqu'à 68% d'économies d'énergie. Idéale à la place des luminaires traditionnels ou en tant que nouvelles installations, la série Small Wall Pack est proposée en plusieurs combinaisons de puissances / lumens pour éclairer les extérieurs des bâtiments, les couloirs extérieurs, les allées et les cages d'escalier.



Pour la couverture de la garantie, veuillez vous inscrire sur www.ledvanceus.com

⚠ AVERTISSEMENT

Veuillez lire ces conseils de securite

1. VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE TENTER L'INSTALLATION
2. POUR PRÉVENIR LES BLESSURES CORPORELLES OU LES DOMMAGES AUX PRODUITS, SEULS LES ÉLECTRICIENS AGRÉÉS DOIVENT FOURNIR TOUS LES SERVICES D'INSTALLATION.
3. POUR ÉVITER LES CHOCS ÉLECTRIQUES OU LES DOMMAGES AUX COMPOSANTS, DÉBRANCHEZ L'ALIMENTATION AVANT DE TENTER L'INSTALLATION OU L'ENTRETIEN.
4. CE PRODUIT DOIT ÊTRE INSTALLÉ CONFORMÉMENT AU CODE NATIONAL DE L'ÉLECTRICITÉ (NEC) ET À TOUS LES CODES ET NORMES DE SÉCURITÉ ÉLECTRIQUE FÉDÉRAUX, ÉTATIQUES ET LOCAUX APPLICABLES.
5. SOYEZ PRUDENT LORSQUE VOUS MANIPULEZ CE PRODUIT PENDANT OU APRÈS LE FONCTIONNEMENT, CAR IL PEUT DEVENIR CHAUD ET CAUSER DES BRÛLURES. DÉBRANCHEZ LE PRODUIT ET AUTORISEZ LE REFROIDISSEMENT AVANT L'ENTRETIEN.
6. TOUTE ALTÉRATION OU MODIFICATION DE CE PRODUIT EST EXPRESSÉMENT INTERDITE CAR ELLE PEUT CAUSER DES BLESSURES CORPORELLES GRAVES, LA MORT, DES DOMMAGES MATÉRIELS ET / OU UN DYSFONCTIONNEMENT DU PRODUIT.
7. POUR ÉVITER LE DYSFONCTIONNEMENT DU PRODUIT ET / OU LES CHOCS ÉLECTRIQUES, CE PRODUIT DOIT ÊTRE CORRECTEMENT MIS À LA TERRE.
8. CE LUMINAIRE DOIT ÊTRE FIXÉ AU MUR UNIQUEMENT.
9. CE LUMINAIRE EST CONÇU POUR FONCTIONNER À DES TEMPÉRATURES AMBIANTES ALLANT DE -40 °F À +104 °F (-40 °C À +40 °C).


Précautions de sécurité :

Important:

Lisez attentivement avant d'installer le luminaire. Conserver pour référence future.

Généralités:

À la réception de l'appareil, inspectez soigneusement tout dommage de fret qui devrait être porté à l'attention du transporteur de livraison. Tous les modèles seront livrés à 4000K

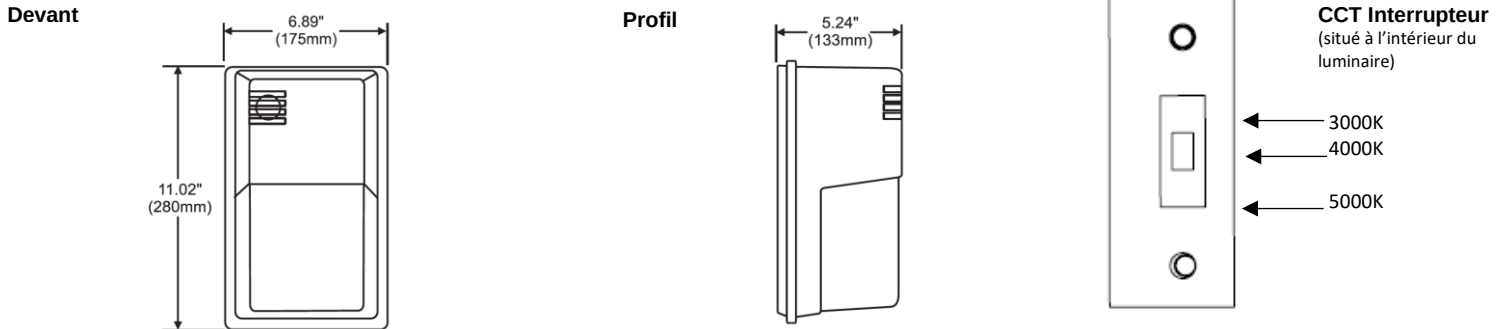

Installation:

Standard Installation

Support mural

1. Avant de commencer, assurez-vous que l'alimentation est déconnectée.
2. Retirez les 2 vis Torx (1 de chaque côté) qui maintiennent le boîtier en plastique avant à l'arrière et retirez le boîtier avant. (Voir figure 1)
3. Desserrer les 2 vis (C) qui maintiennent le réflecteur (A) en place, en veillant à ce que les connecteurs rapides soient déconnectés (B). (Voir la figure 2)
4. Retirez le couvercle du bouchon du conduit dans le bas ou à l'arrière du boîtier.
5. Pour monter le boîtier arrière, éliminez les trous appropriés autour du trou de sortie dans le boîtier arrière.
6. Si vous avez besoin de 3000K ou 5000K, veuillez changer l'interrupteur sous la lentille.
7. Câblez le luminaire selon le schéma de câblage ci-dessous.
8. Installez le boîtier arrière sur la boîte de jonction à l'aide de vis fournies avec la boîte de jonction.
9. Remplacez le réflecteur et le boîtier avant à l'aide de vis retirées aux étapes 2 et 3.
10. Assurer un calfeutrage étanche entre le boîtier arrière et la surface de montage.

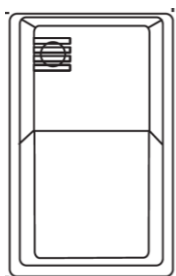


Figure 1


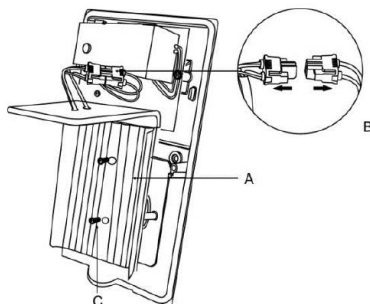


Figure 2

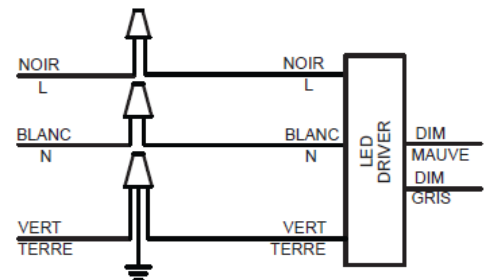

Schema de câblage