


DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS




DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS

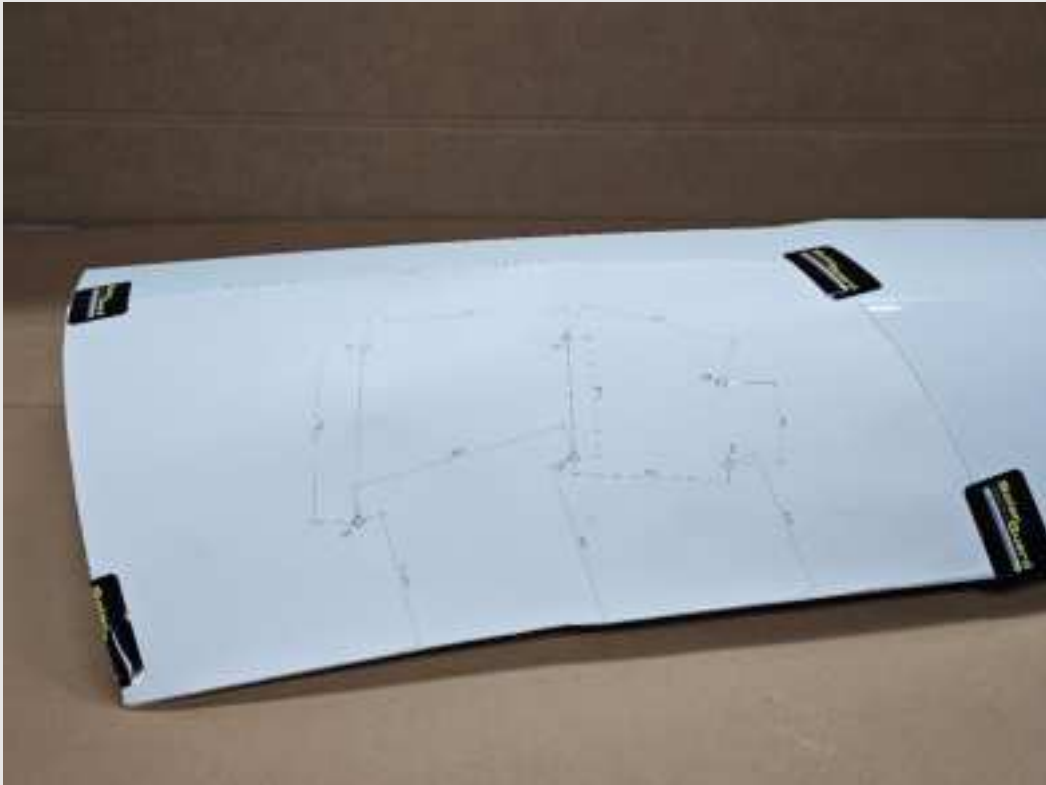


ATTACH THE TEMPLATE TO THE REMOVED CORNER PANEL

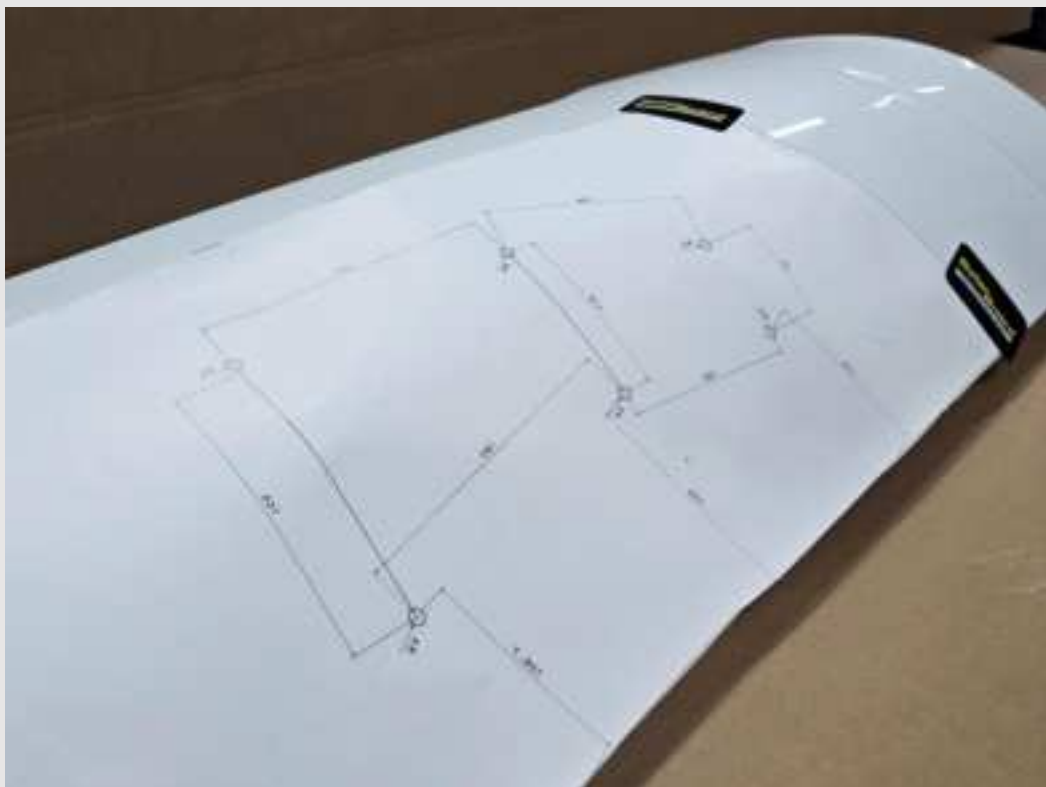


FOLLOW THE LINES OF THE TEMPLATE. TEMPLATE HAS A LEFT AND A RIGHT.

DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS

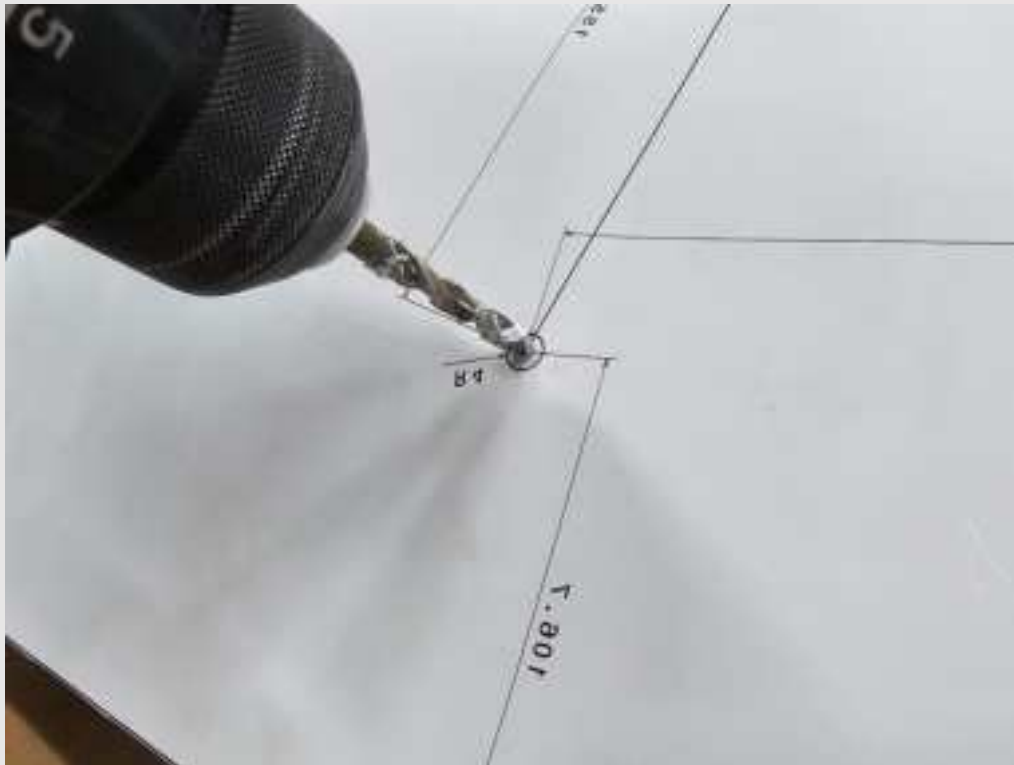

DRILL THE HOLES AS MARKED ON THE TEMPLATE START WITH A 6 MM DRILL

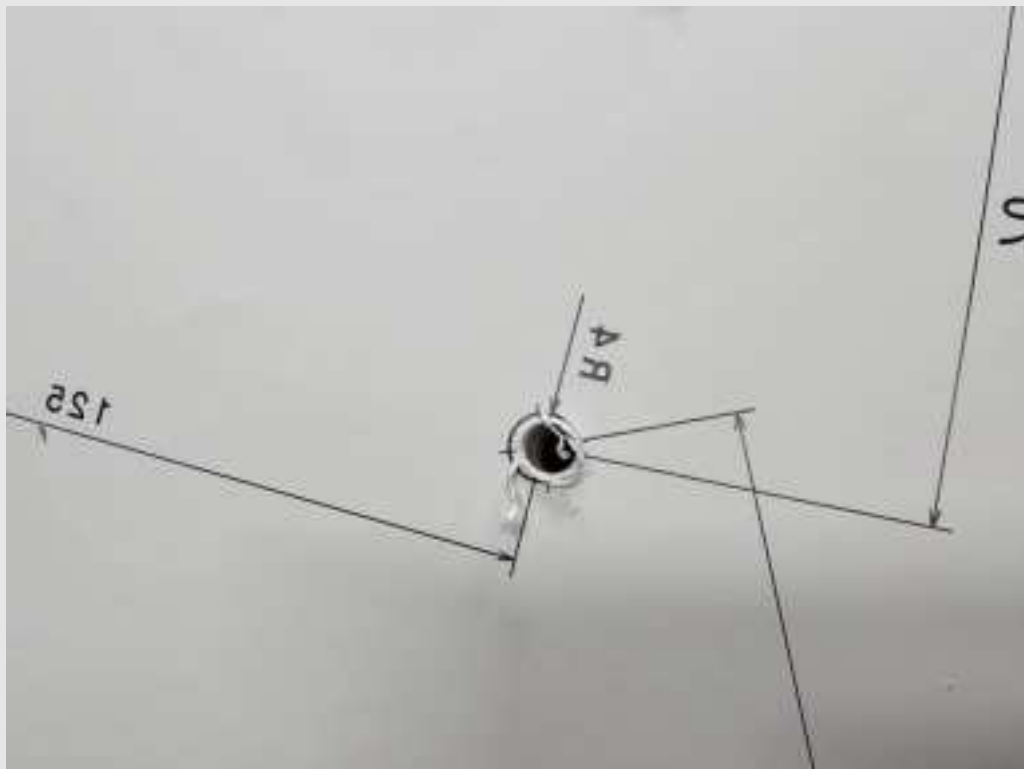

DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS

THEN ENLARGE THE HOLES WITH A 8 MM DRILL



REMOVE THE TEMPLATE 6 HOLES ARE VISIBLE IN THIS ARRANGEMENT



DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS

ENLARGE THE HOLES ON THE INSIDE OF THE CORNER PANEL, ONLY THE HOLES WHERE THERE IS A DOUBLE SKIN THICKNESS TO ACCESS WITH A NUT AND WASHER



NGD WITH REMOVED CORNER PANEL



DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS

THE WIND DEFLECTOR IS FIXED WITH 6 NUTS AND 6 WASHERS PER SIDE



SET CONTAINS 12 X M6 BOLTS (TORX 30) AND 12 WASHERS 15MM



DAF NGD CORNER PANELS / WIND DEFLECTORS XG / XG+

FITTING INSTRUCTIONS

THE CORNER PANEL FOLLOWS THE CABIN LINE NICELY



FIRST TEST FIT, BEFORE PAINTING. PART NEEDS PRIMER AND PAINT.