

sunlite®

INSTALLATION INSTRUCTIONS

LED T8 TUBULAR LAMP RETROFIT



WARNING: Read and understand these instructions before installing fixture.



This fixture is intended for installation in accordance with National Electrical Code or Canadian Electrical Code (as applicable) and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off all electricity before proceeding. Retain these instructions for maintenance reference.

Warning: This lamp should not be used with shunted sockets. Only one side of the fixture needs to be powered.


- 1 Make sure power is disconnected.
- 2 Make sure the ground wire is properly connected to the fixture.
- 3 Remove fluorescent ballast.
- 4 Connect power source directly to the non-shunted socket to the powered side.
(See images below)

LED RETROFIT CONNECTION

'Dead' end

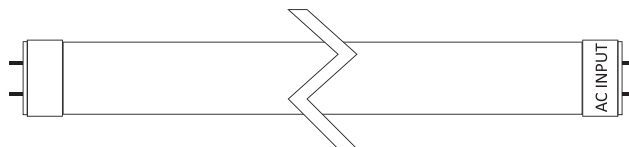
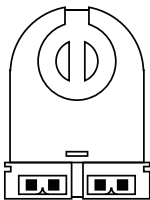


'Live' end

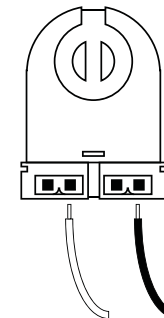

MULTIPLE LAMPS

'Dead' end

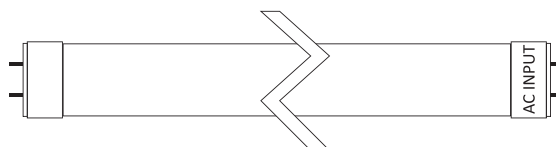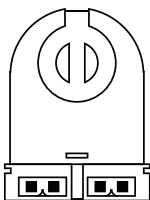

'Live' end

