


ASS

LHHY-V1

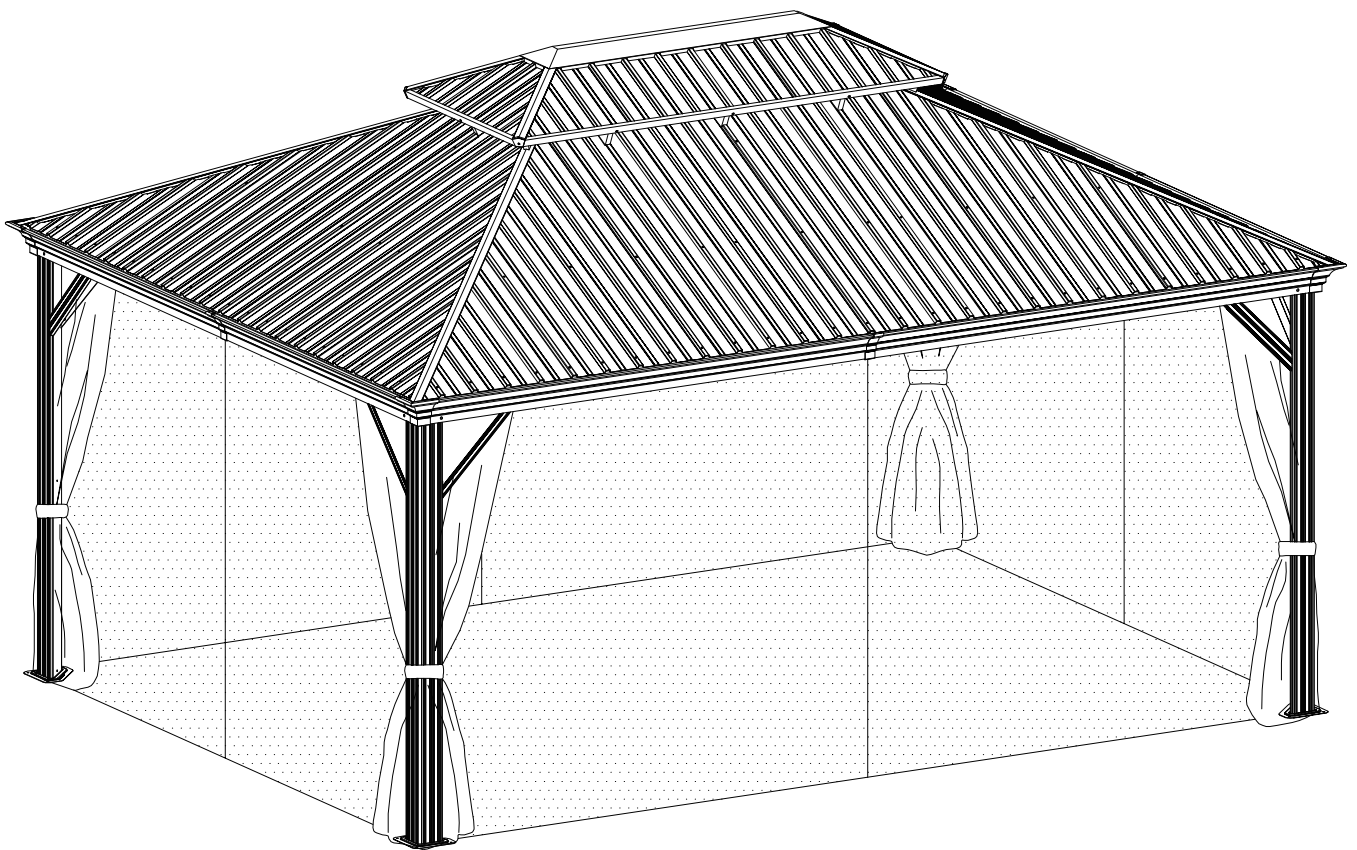


HARDTOP GAZEBO



WARNING

"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

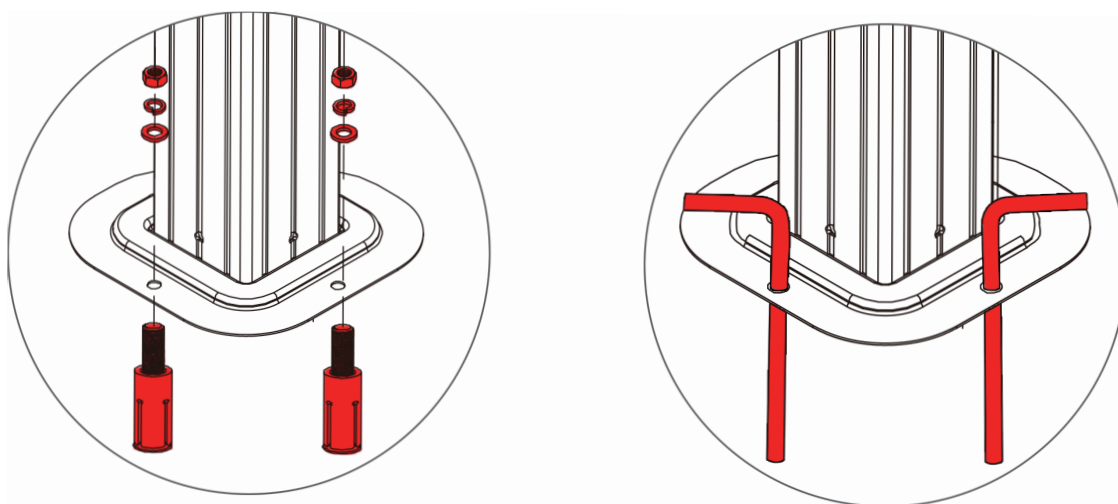














1. Must use ground nails, ropes, and expansions screws for whichever ground you install on for stability to avoid devastating injuries for people inside or nearby and property damage caused by a collapsing gazebo.
2. Do not use this gazebo in high winds, heavy snow, or inclement weather. It is not designed to withstand strong gusts of wind, heavy snow accumulation, or other inclement weather. Must take precautions when the wind speed exceeds 25Mph, and clear snow when it accumulates more than 2 inches.
3. Before use, thoroughly inspect the gazebo to make sure all bolts, nuts, and buckles have been completely tightened and securely fastened.
4. Warranty does not cover damages, losses, or injuries resulting from improper installation, misuse, not using stability accessories mentioned above, non snow cleaning, failure to take precautionary measures, etc.

















ASSEMBLY INSTRUCTIONS








1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.

















| Item no. | Reference Image | Qty. |
|-----------|--|------|
| A |  | X4 |
| B |  | X2 |
| B1 |  | X2 |
| B2 |  | X2 |
| B3 |  | X2 |
| C |  | X2 |
| C1 |  | X2 |
| C2 |  | X2 |
| C3 |  | X2 |
| D |  | X2 |
| D1 |  | X2 |
| D2 |  | X2 |
| D3 |  | X2 |

ASSEMBLY INSTRUCTIONS























| Item no. | Reference Image | Qty. |
|----------|--|------|
| D4 |  | X2 |
| D5 |  | X2 |
| E |  | X4 |
| E1 |  | X4 |
| E2 |  | X4 |
| F |  | X2 |
| F1 |  | X4 |
| F2 |  | X4 |
| G1 |  | X2 |
| G2 |  | X2 |
| G3 |  | X2 |
| G4 |  | X2 |
| H |  | X4 |
| H1 |  | X4 |
| J |  | X4 |
| K |  | X4 |

ASSEMBLY INSTRUCTIONS















| Item no. | Reference Image | Qty. |
|-----------|--|------|
| K1 |  | X4 |
| L |  | X1 |
| M |  | X1 |
| N |  | X8 |
| P |  | X4 |

| Item no. | Reference Image | Qty. | Item no. | Reference Image | Qty. |
|-----------|---|------|------------|---|------|
| Q1 |  | X2 | R1 |  | X2 |
| Q8 |  | X2 | R10 |  | X2 |
| Q2 |  | X2 | R2 |  | X2 |
| Q7 |  | X2 | R9 |  | X2 |
| Q3 |  | X2 | R3 |  | X2 |
| Q6 |  | X2 | R8 |  | X2 |
| Q4 |  | X2 | R4 |  | X2 |
| Q5 |  | X2 | R7 |  | X2 |

ASSEMBLY INSTRUCTIONS

| Item no. | Reference Image | Qty. | Item no. | Reference Image | Qty. |
|-----------|---|------|-----------|---|------|
| R5 |  | X2 | T1 |  | X4 |
| R6 |  | X2 | U |  | X128 |
| S |  | X2 | V |  | X4 |
| Sa |  | X2 | W |  | X4 |
| S1 |  | X2 | W1 |  | X6 |
| S6 |  | X2 | Y |  | X140 |
| S2 |  | X2 | Z |  | X72 |
| S5 |  | X2 | Z1 |  | X16 |
| S3 |  | X2 | V1 |  | X2 |
| S4 |  | X2 | V2 |  | X2 |
| T |  | X4 | V3 |  | X2 |

ASSEMBLY INSTRUCTIONS

| Item no. | Reference Image | Qty. | Item no. | Reference Image | Qty. |
|----------|---|------|----------|--|------|
| ① |  M6X15mm | X274 | ⑧ |  | X16 |
| ② |  M6X23mm | X88 | ⑨ |  | X12 |
| ③ |  M6X25mm | X5 | ⑩ |  | X1 |
| ④ |  ST4.8X12mm | X24 | ⑪ |  M6X10mm | X12 |
| ⑤ |  | X2 | ⑫ |  | X1 |
| ⑥ |  M6X42mm | X8 | ⑬ |  | X1 |
| ⑦ |  M6X47mm | X40 | ⑭ |  | X1 |


ASSEMBLY INSTRUCTIONS

1

X4





Ⓐ 4pcs



Ⓙ 4pcs





① 12pcs

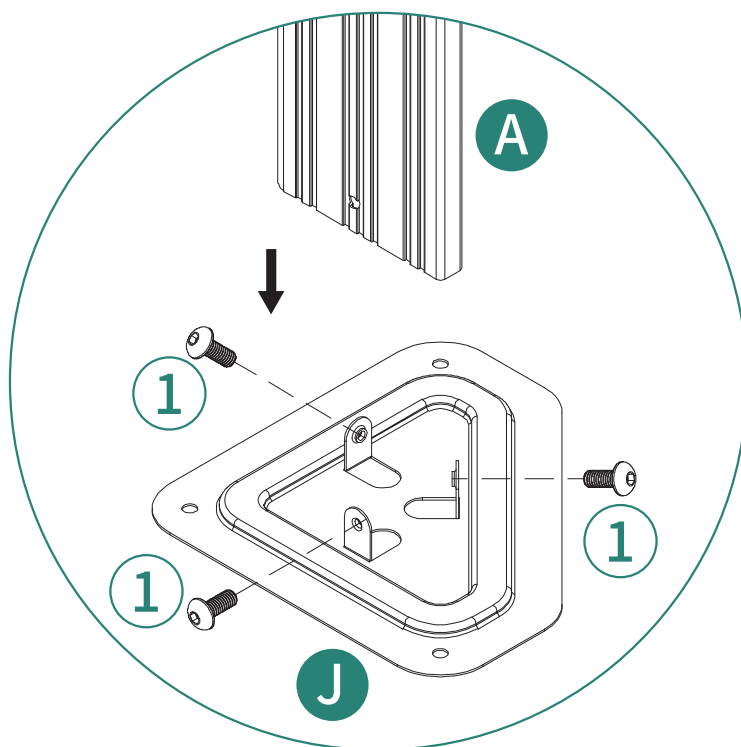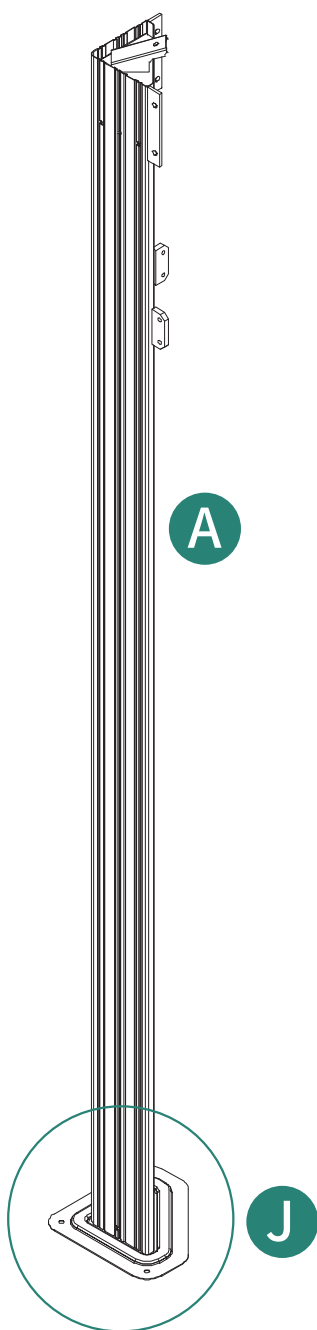

ASSEMBLY INSTRUCTIONS

2



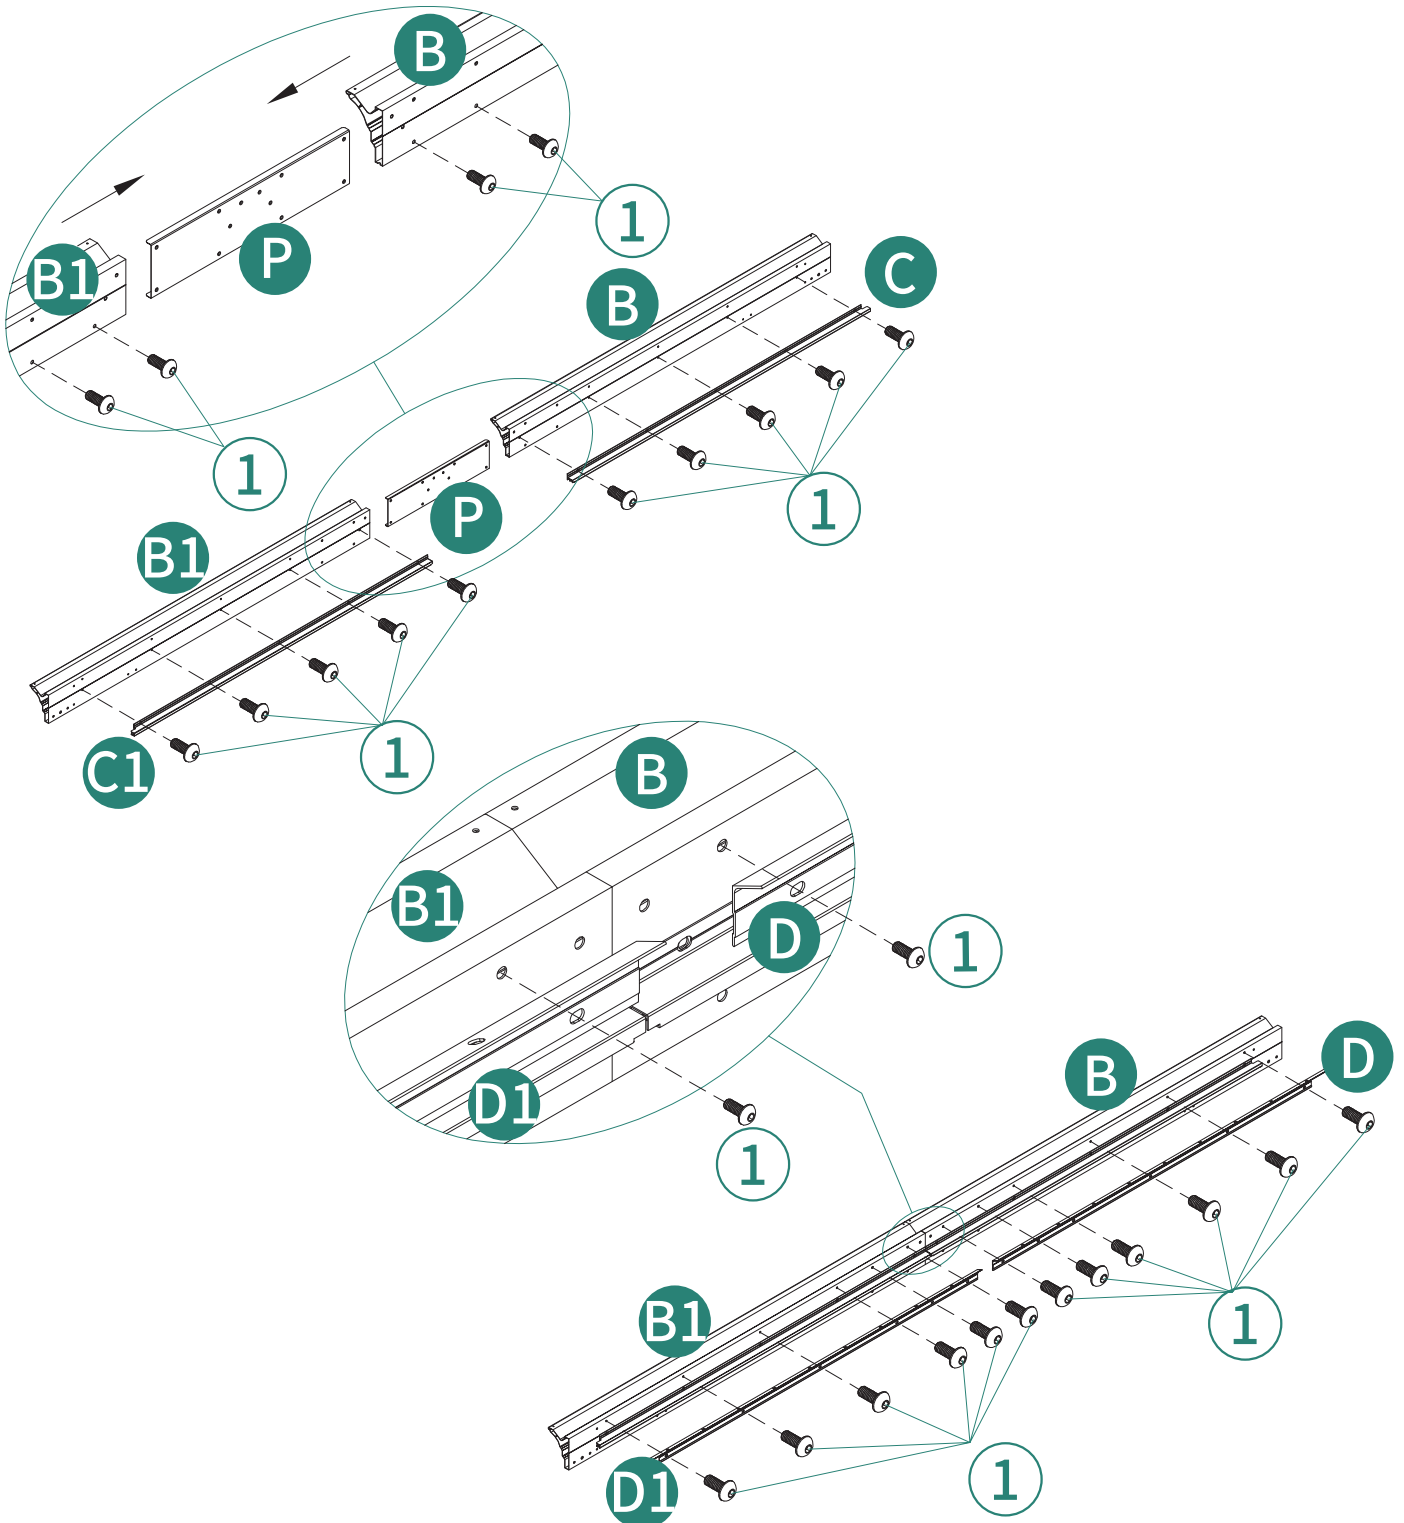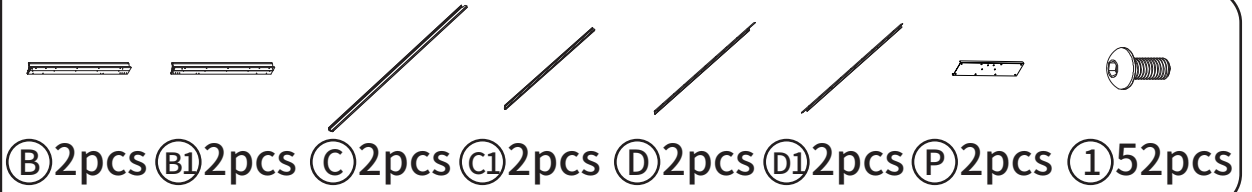





X2




ASSEMBLY INSTRUCTIONS

3


X2

       
 (B2) 2pcs (B3) 2pcs (C2) 2pcs (C3) 2pcs (D2) 2pcs (D3) 2pcs (D4) 2pcs (D5) 2pcs

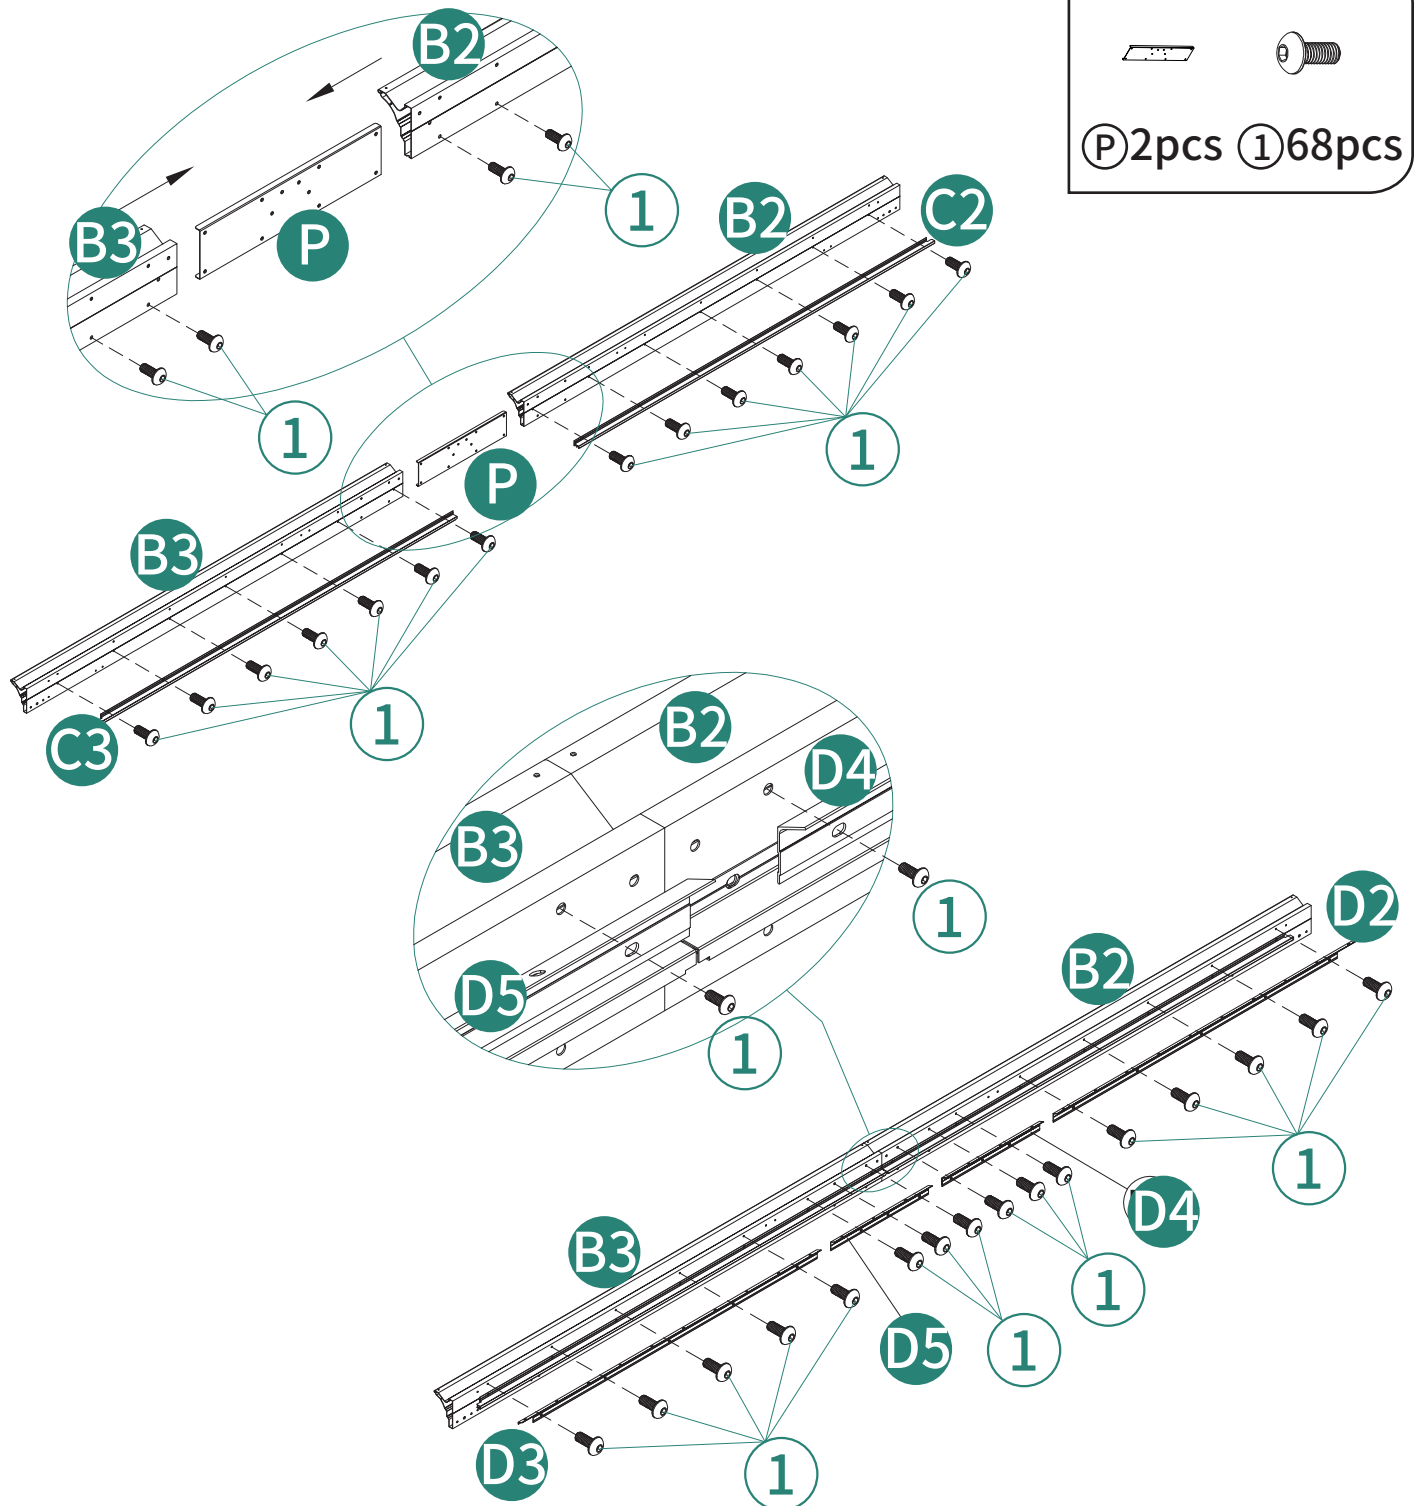

ASSEMBLY INSTRUCTIONS




4



①16pcs



⑧16pcs

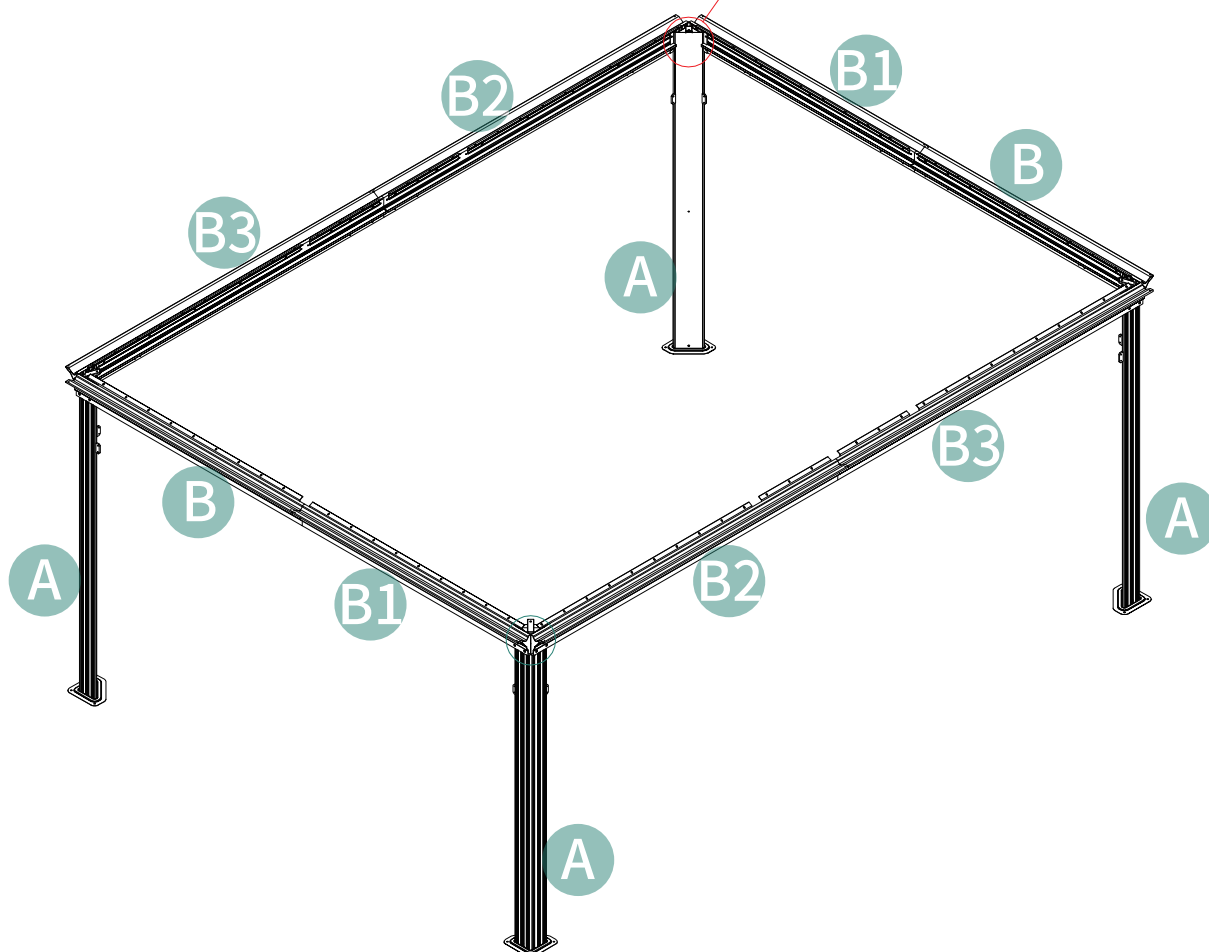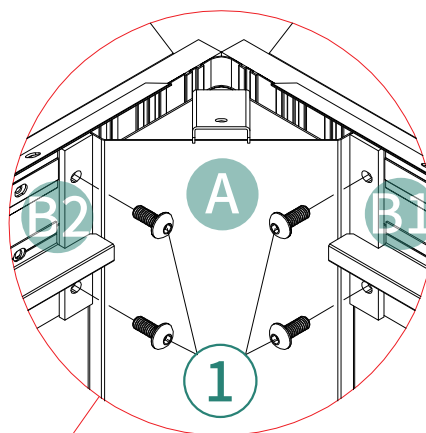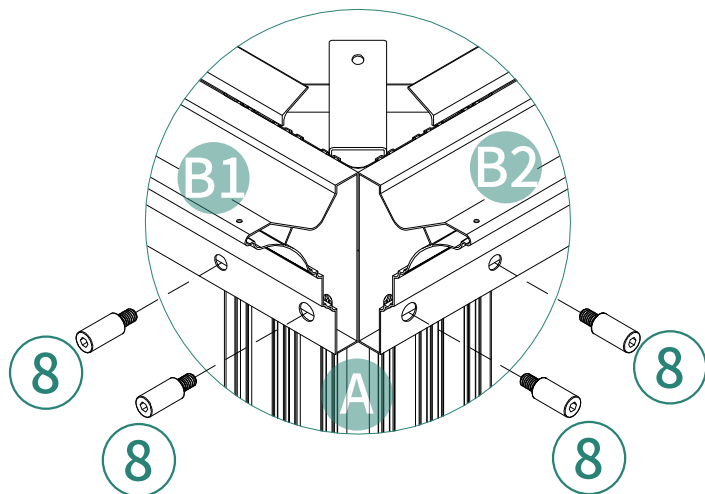

ASSEMBLY INSTRUCTIONS


5




Ⓜ4pcs



Ⓜ4pcs



①32pcs

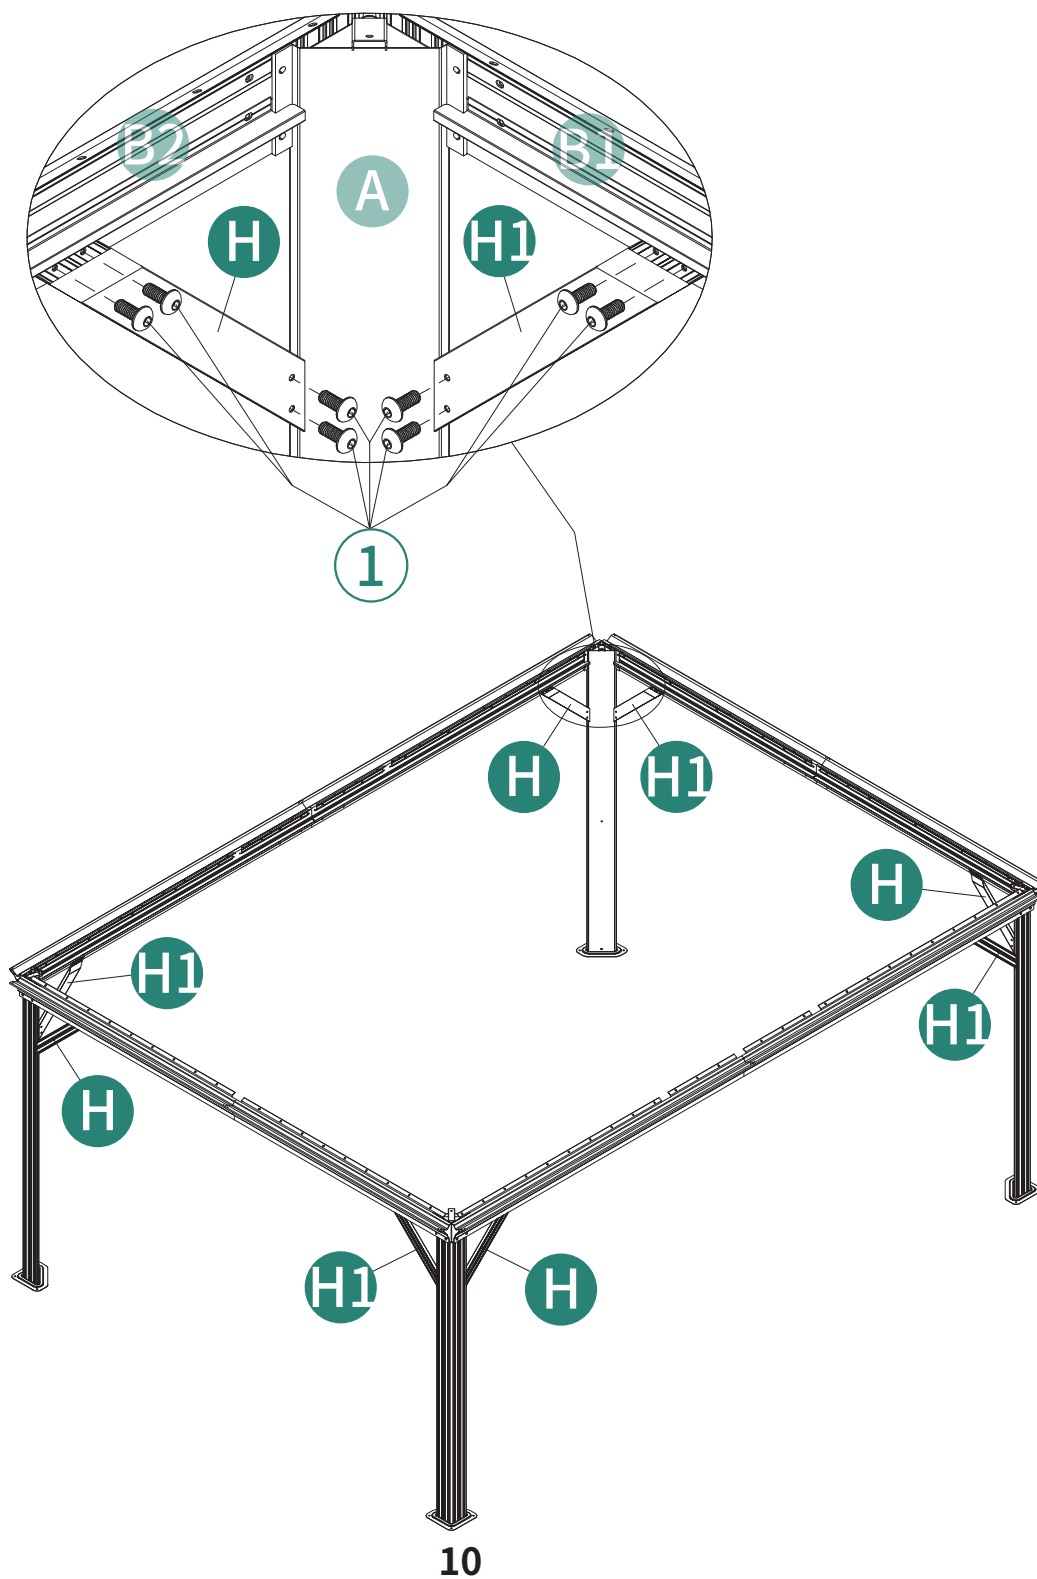

ASSEMBLY INSTRUCTIONS

6



Ⓚ4pcs



Ⓚ14pcs



Ⓤ128pcs




Ⓥ4pcs



①4pcs



④24pcs

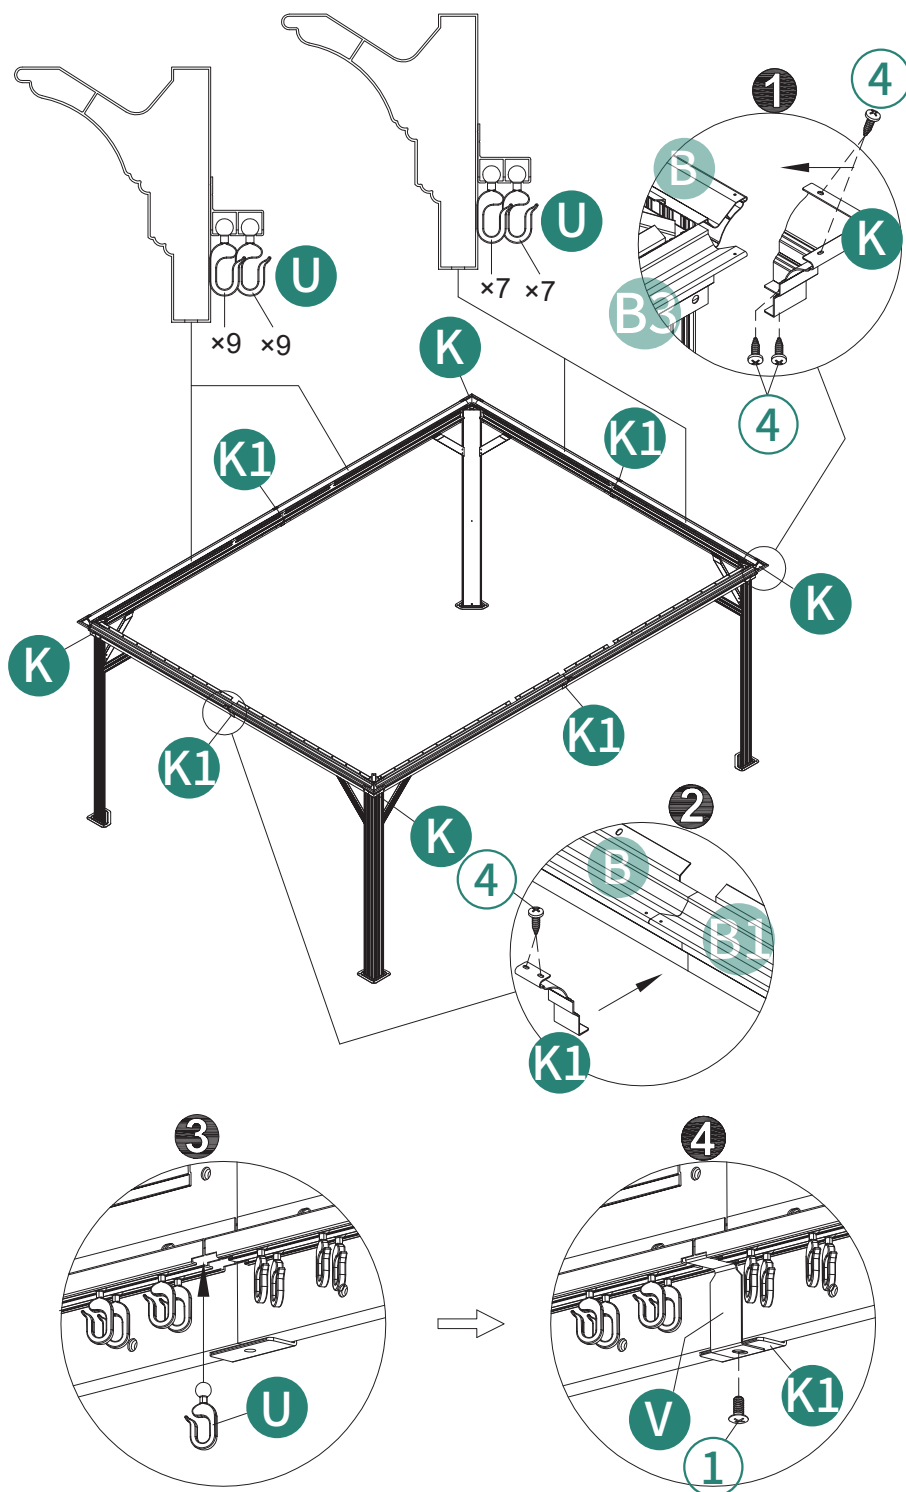


ASSEMBLY INSTRUCTIONS

7



④4pcs






①1pcs



①8pcs




⑩1pcs

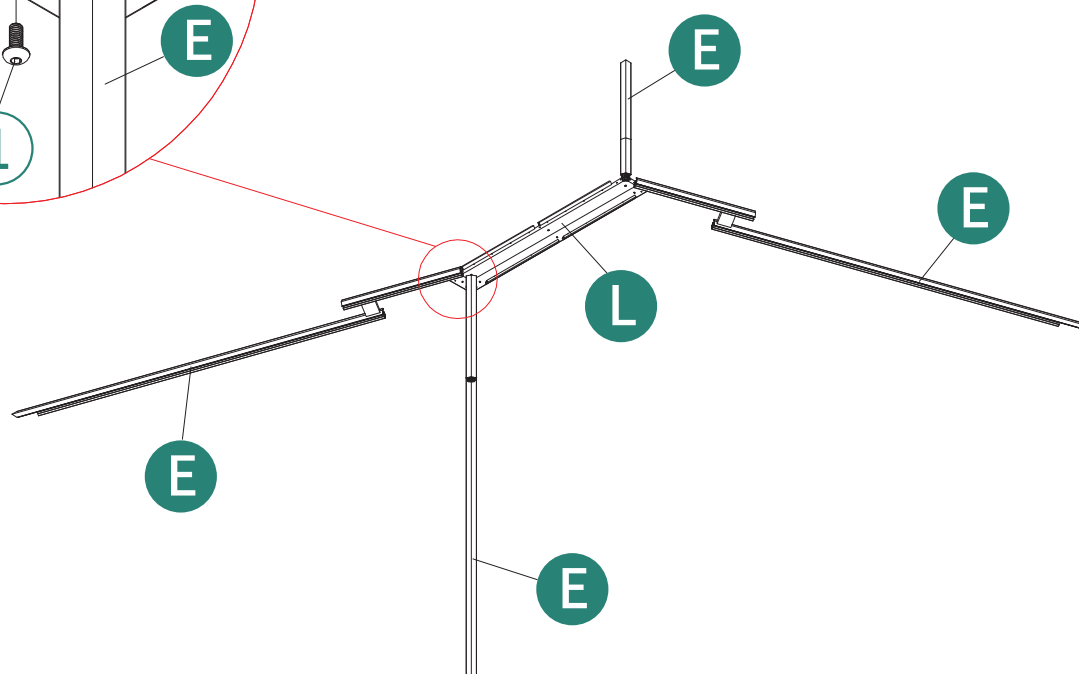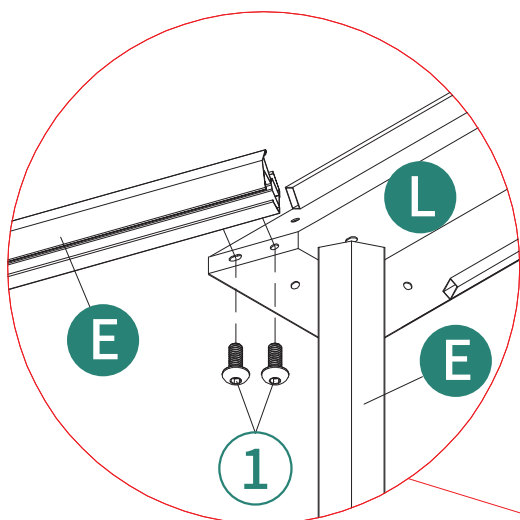
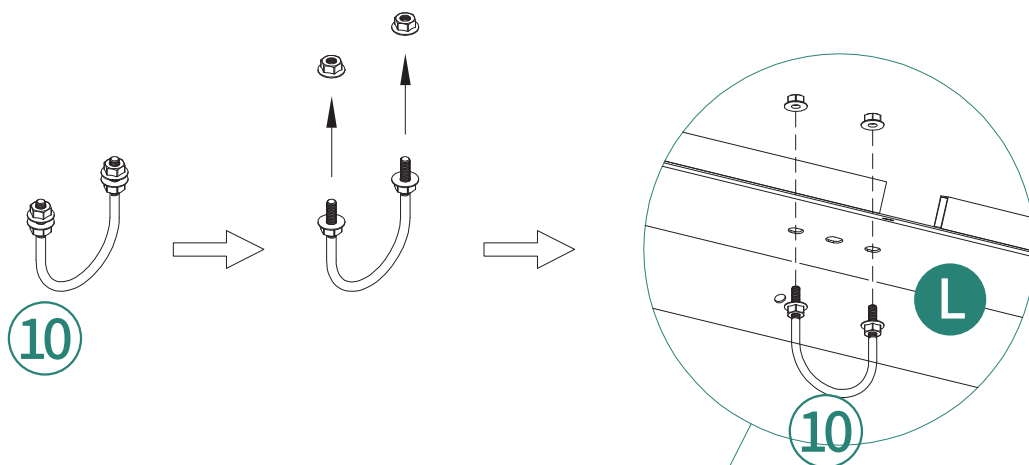


ASSEMBLY INSTRUCTIONS

8



①4pcs

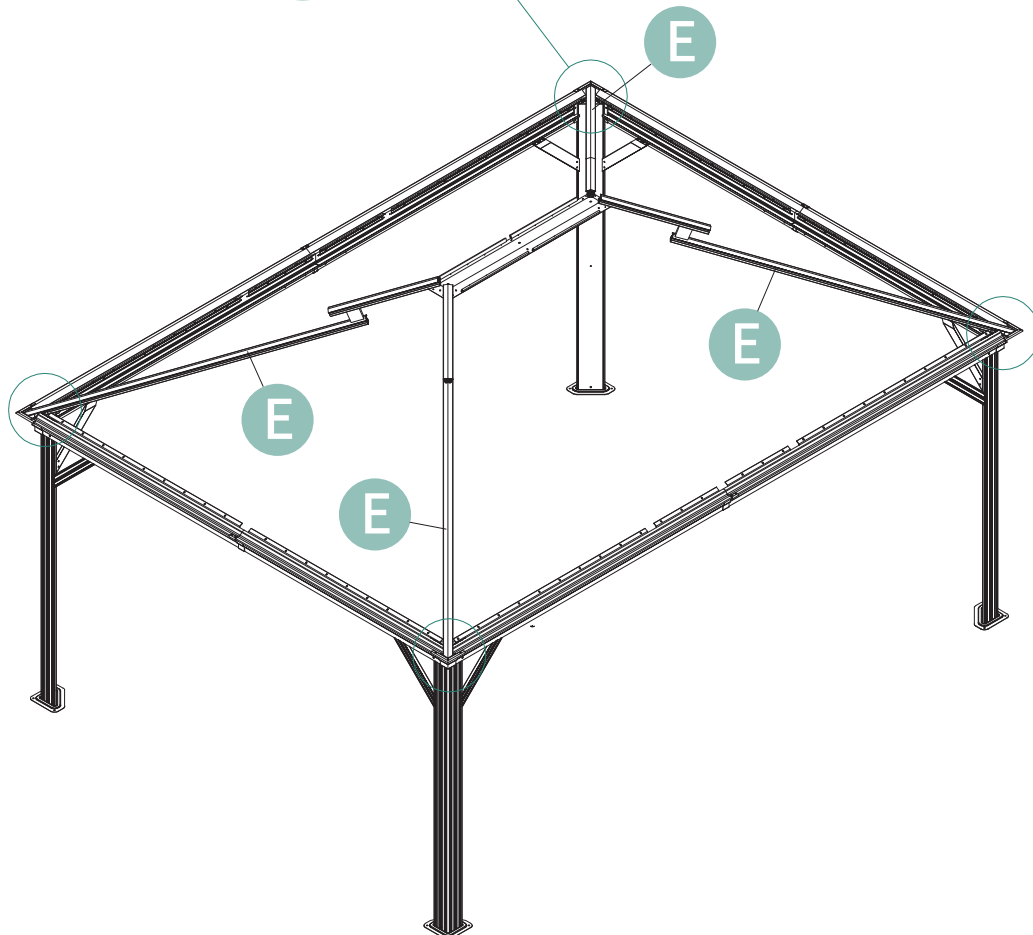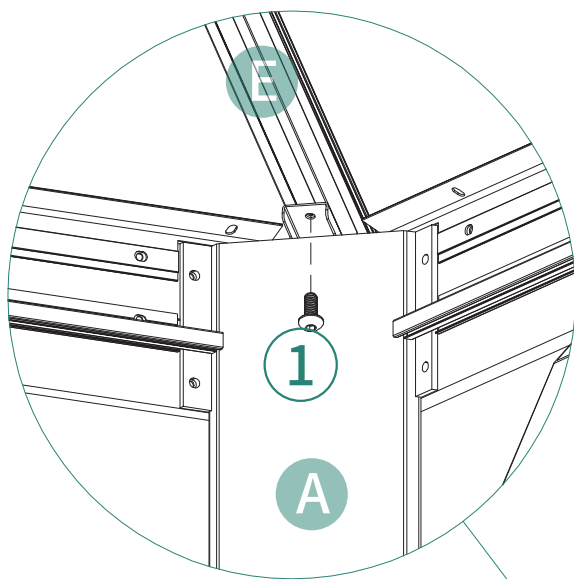

ASSEMBLY INSTRUCTIONS

9






Ⓔ1 4 pcs



Ⓔ2 4 pcs




① 24 pcs

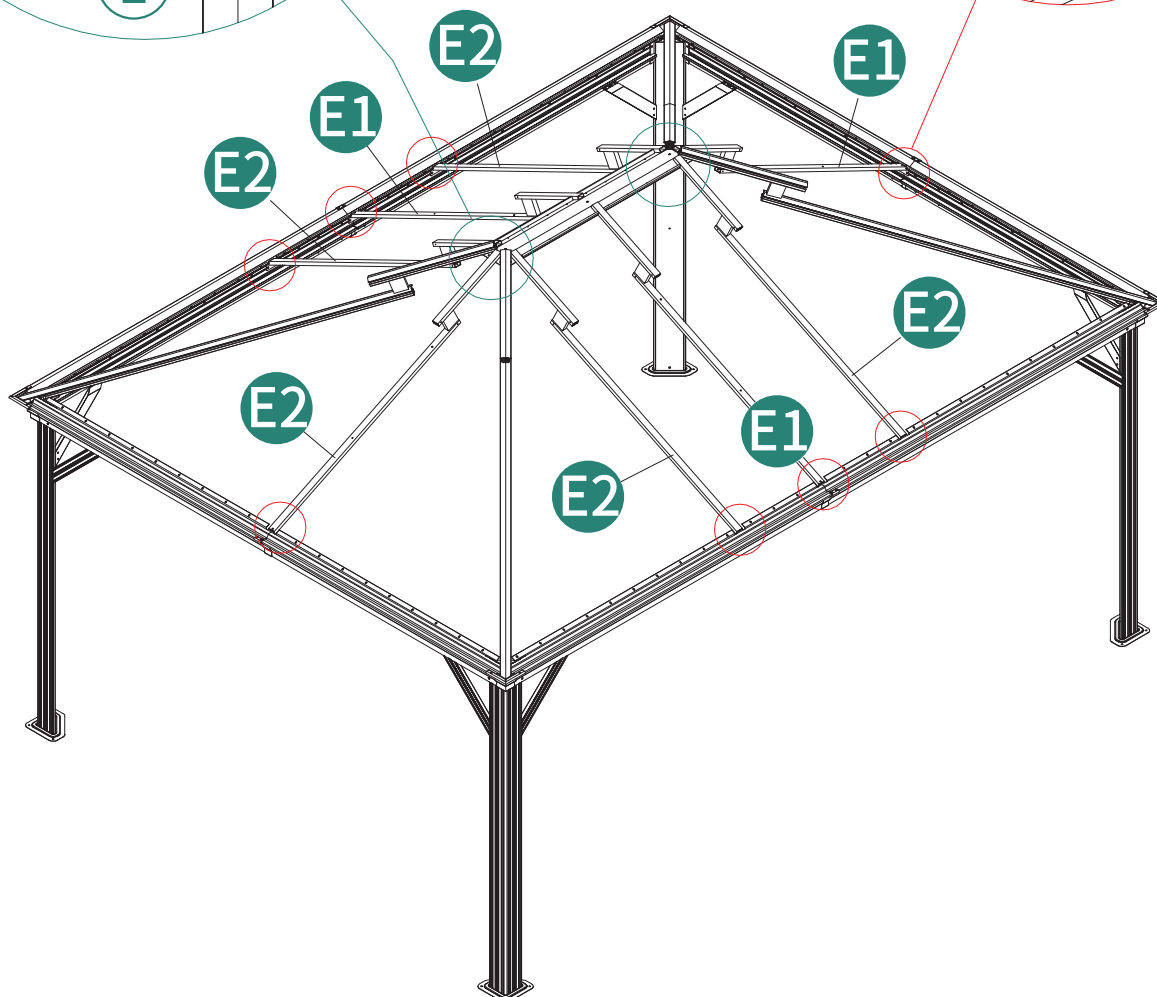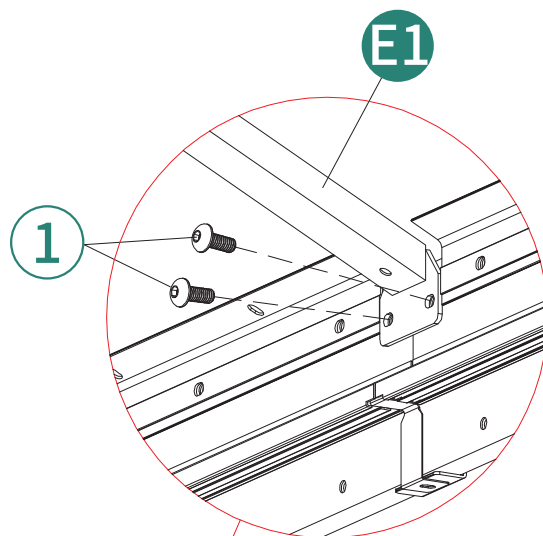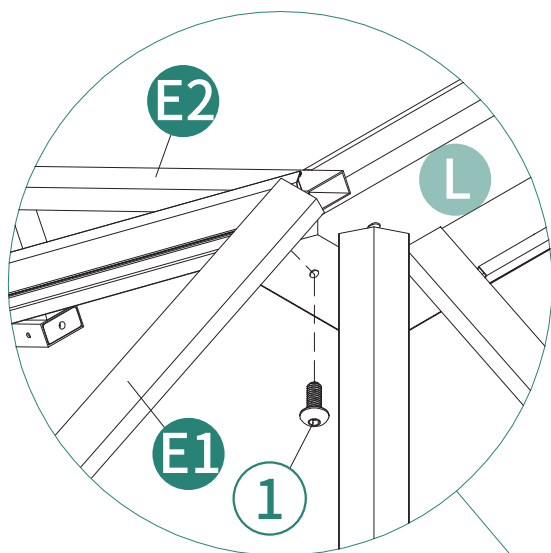

ASSEMBLY INSTRUCTIONS

10




Ⓜ1pcs



③1pcs







⑤2pcs

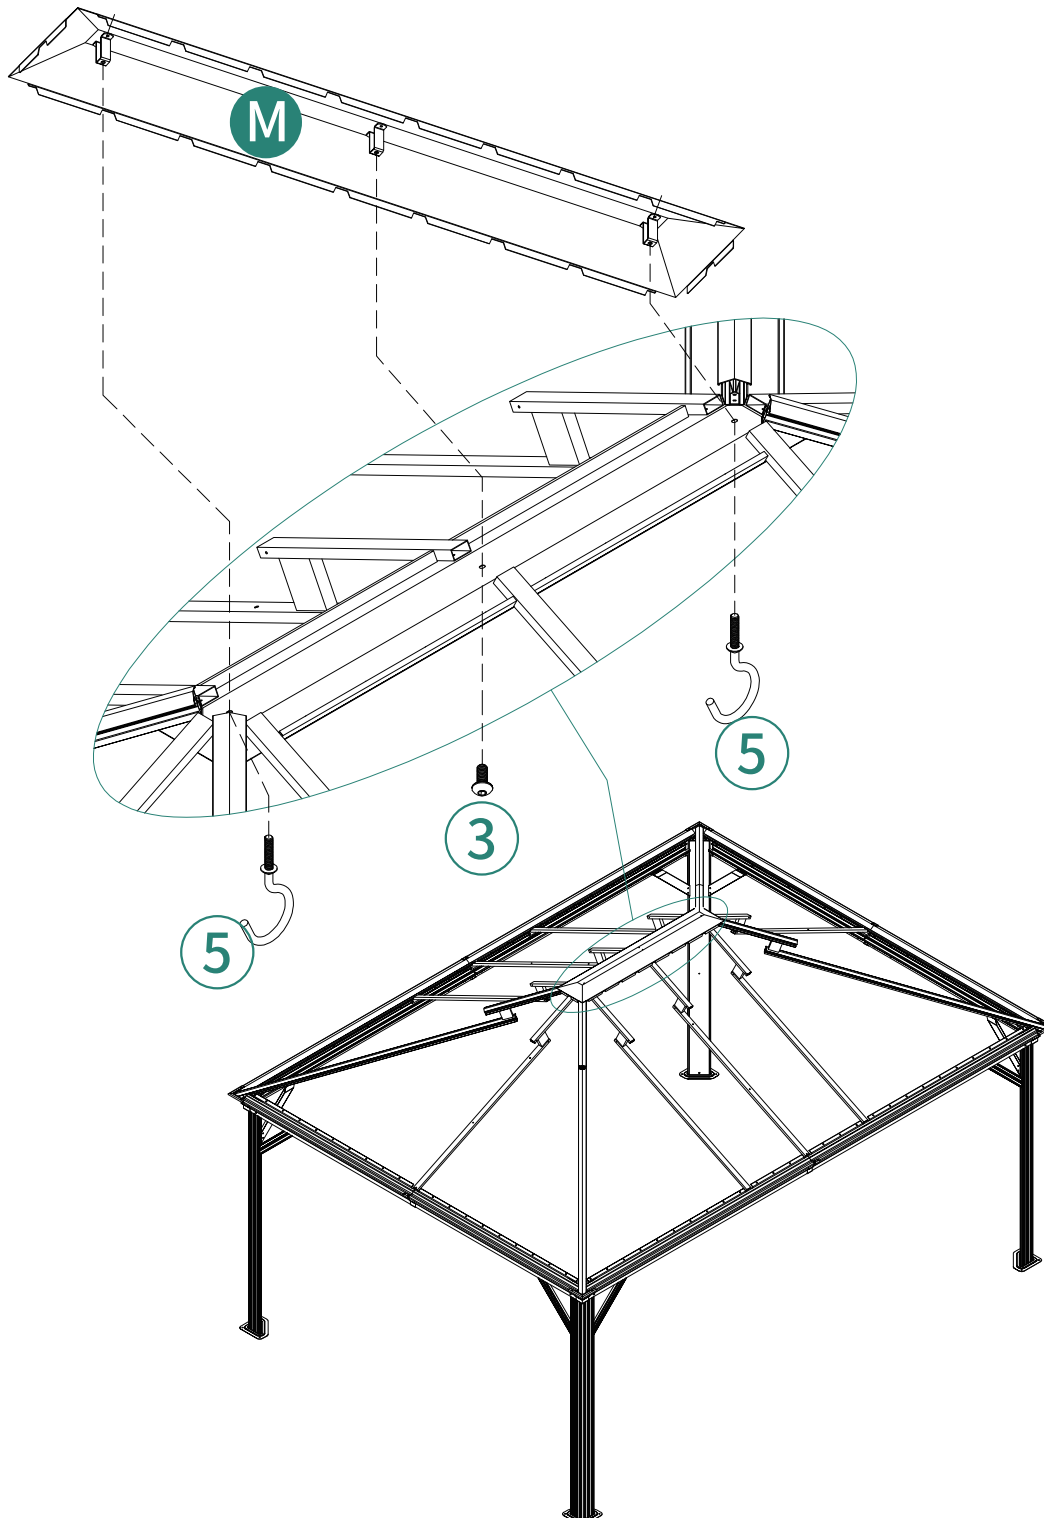

ASSEMBLY INSTRUCTIONS



11

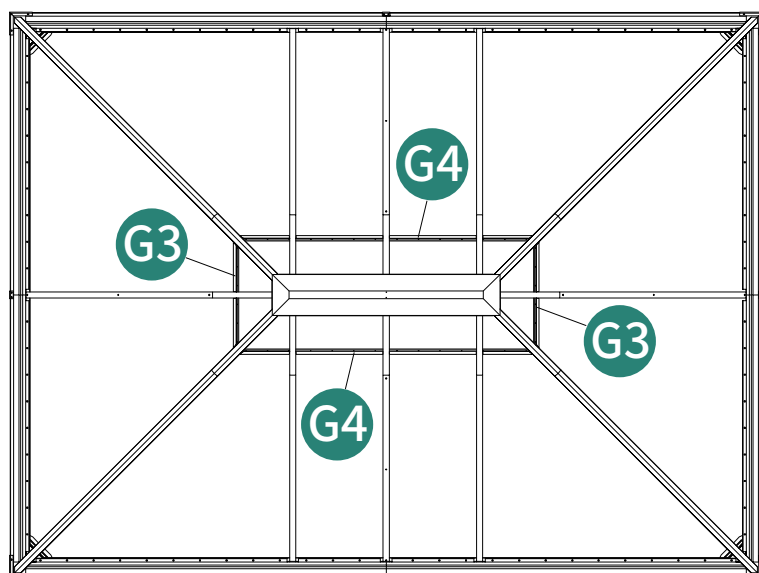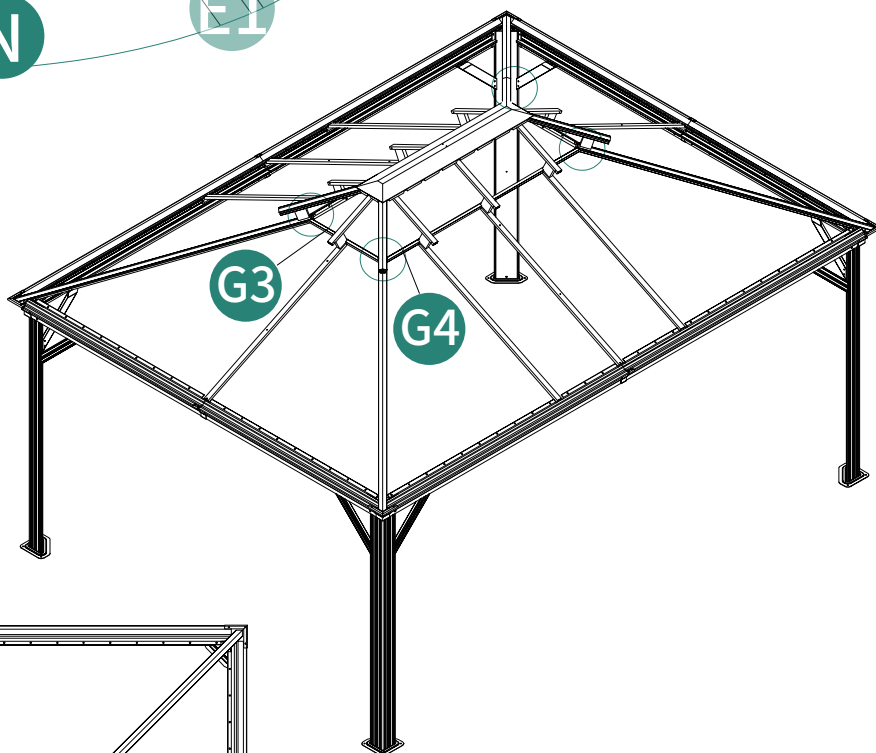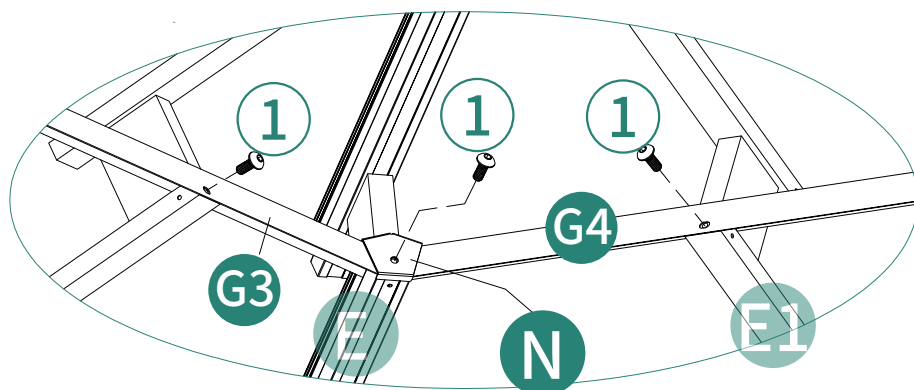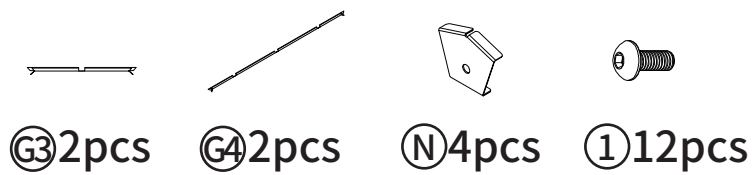




ASSEMBLY INSTRUCTIONS

12

X2

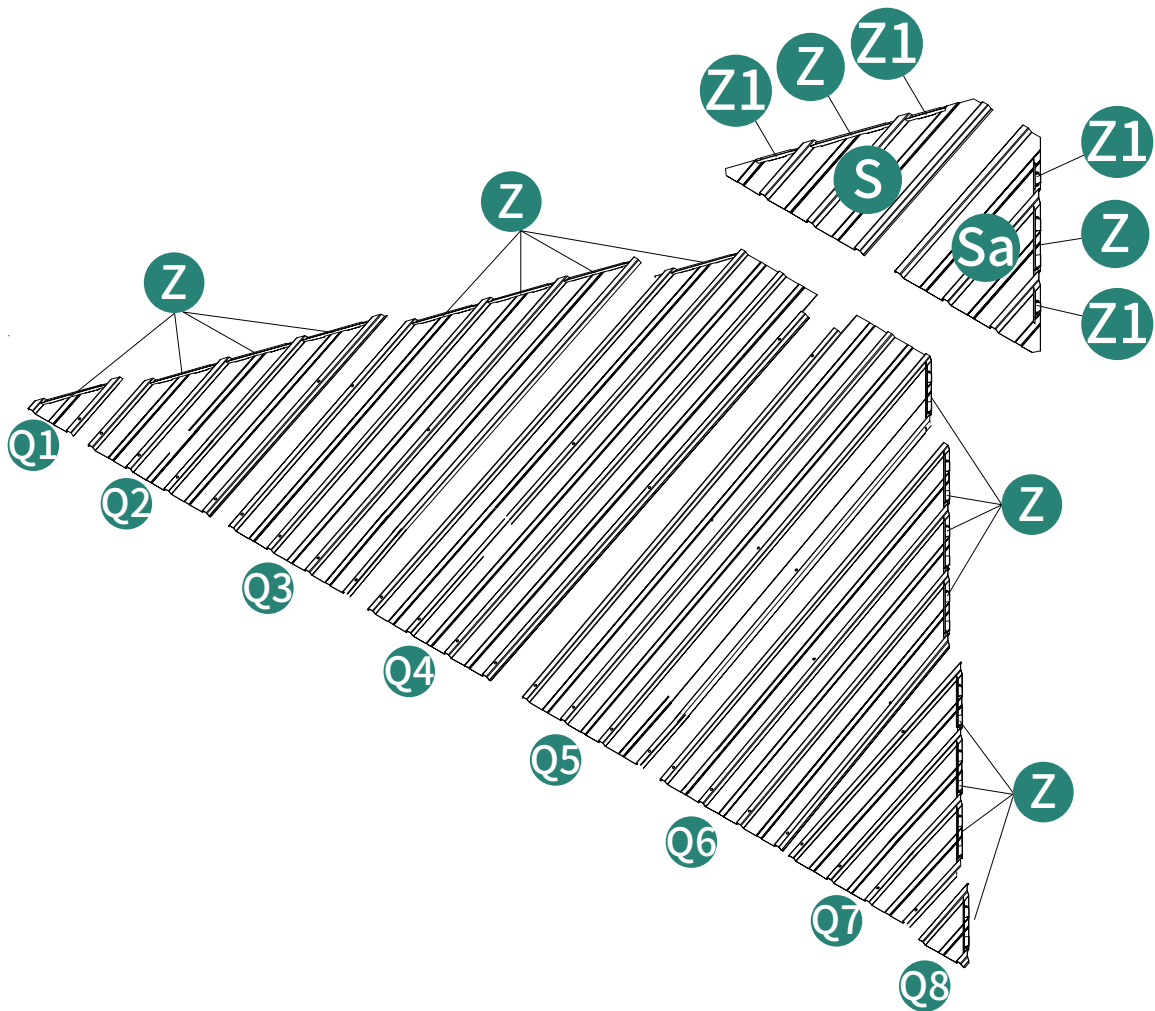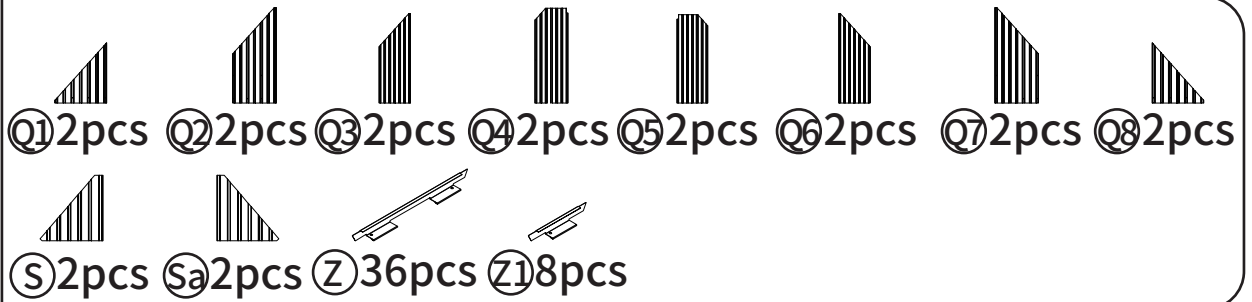



Attach Z and Z1 by lightly tapping with a screwdriver.

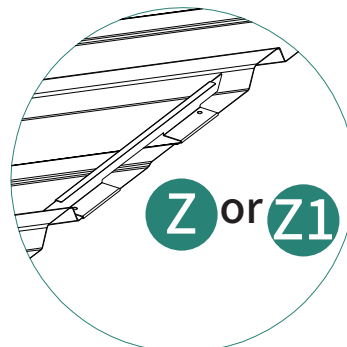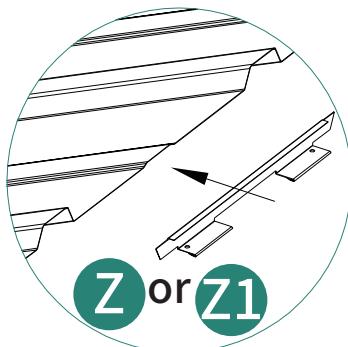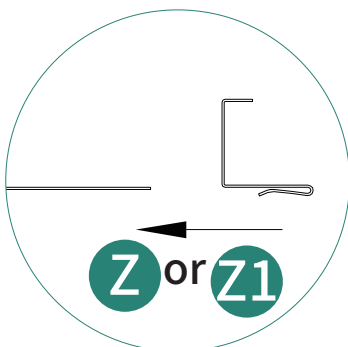


ASSEMBLY INSTRUCTIONS

13



X2

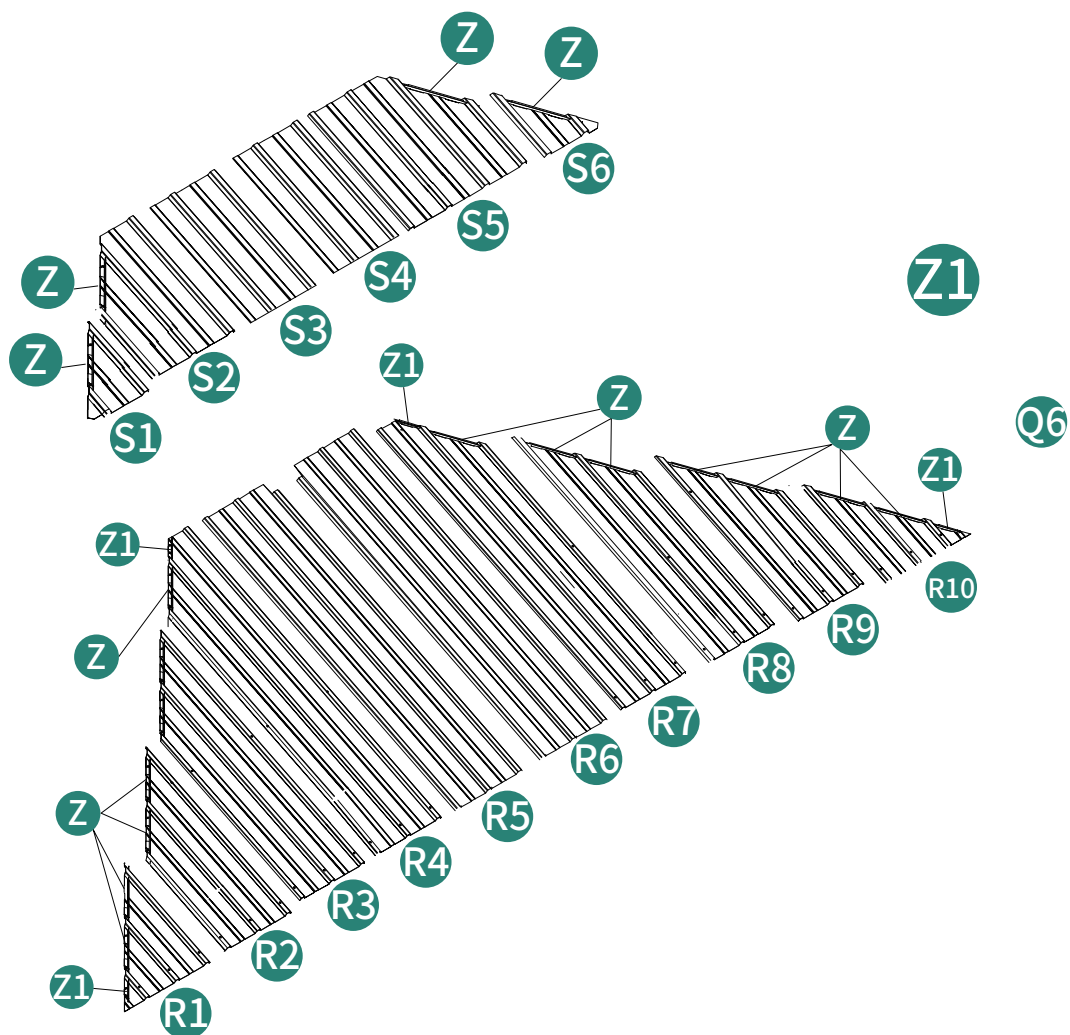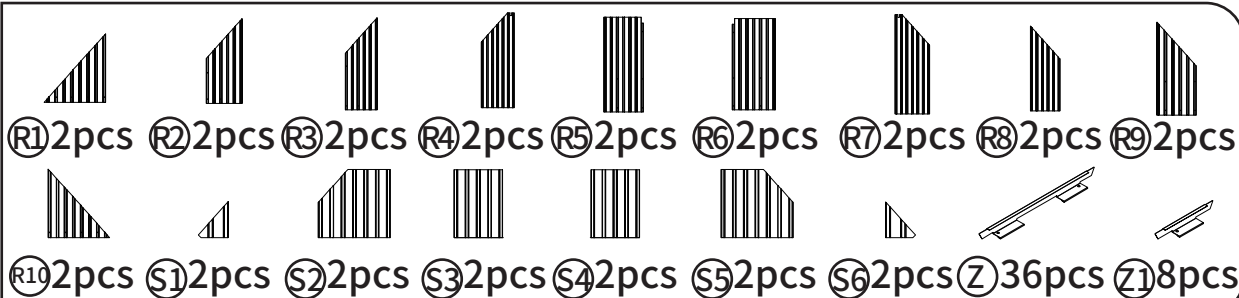

Attach Z and Z1 by lightly tapping with a screwdriver.





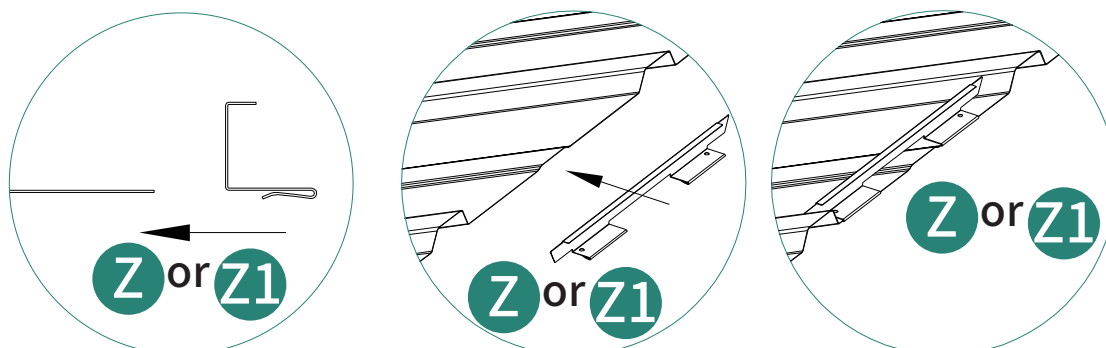


14

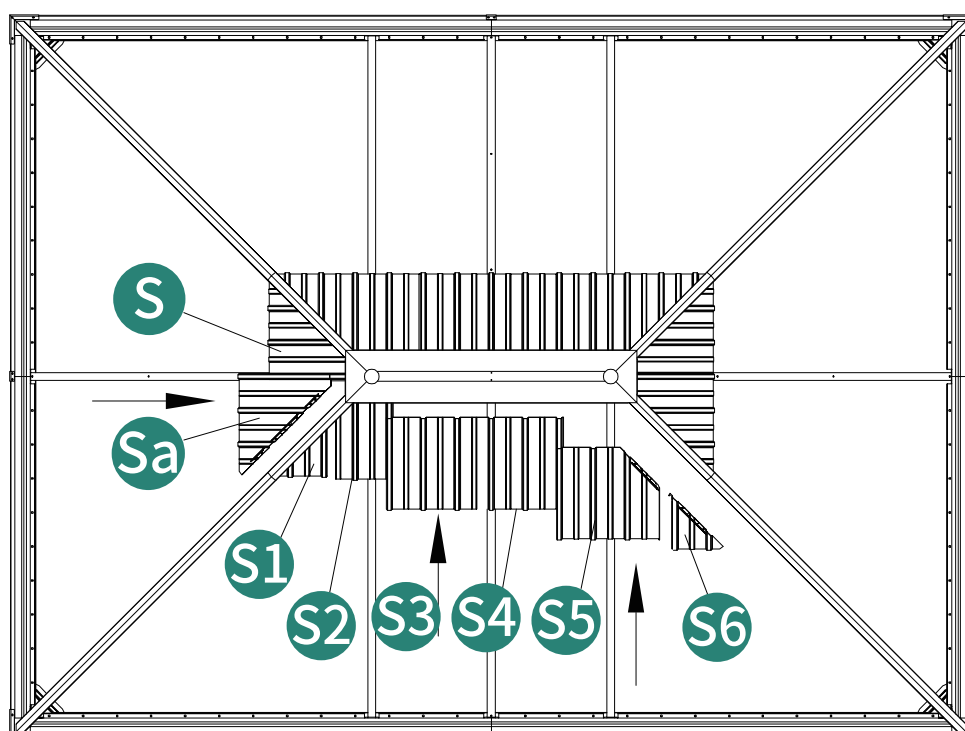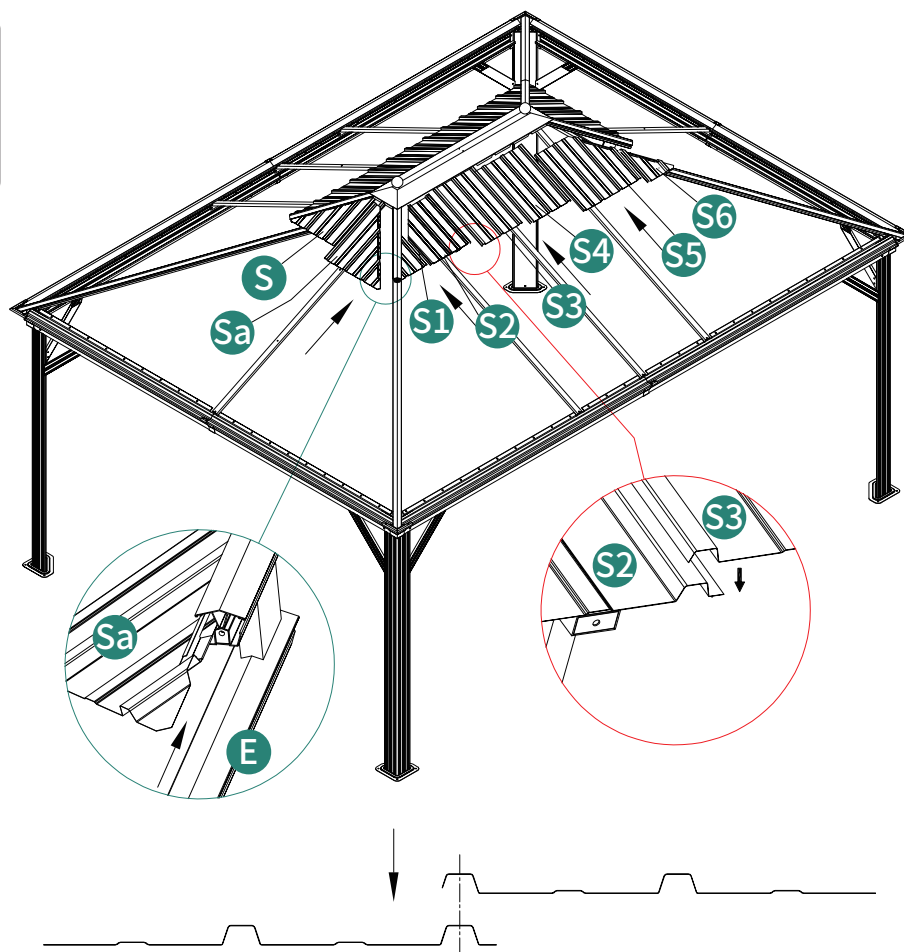



ASSEMBLY INSTRUCTIONS

15

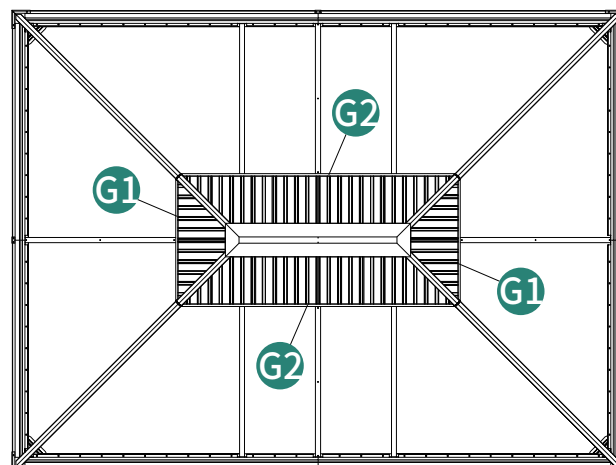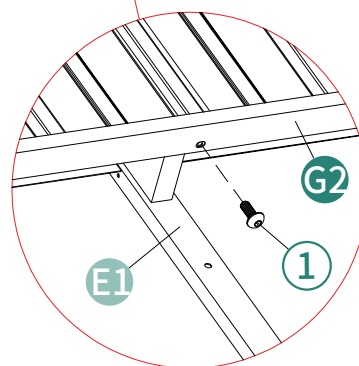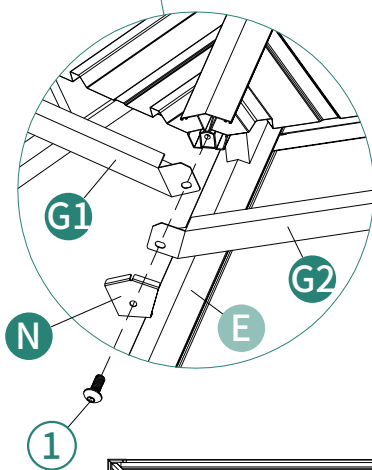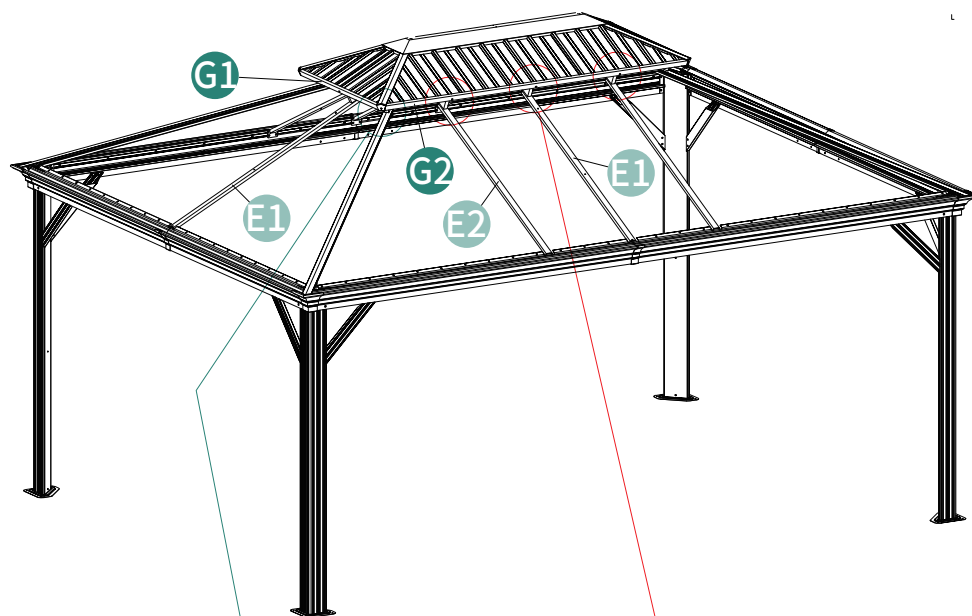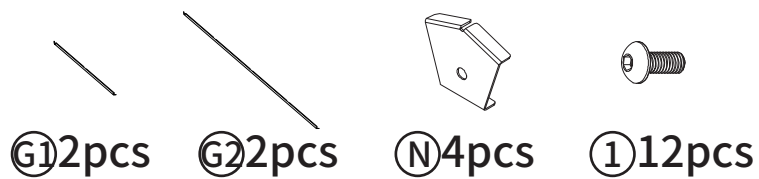


ASSEMBLY INSTRUCTIONS


16

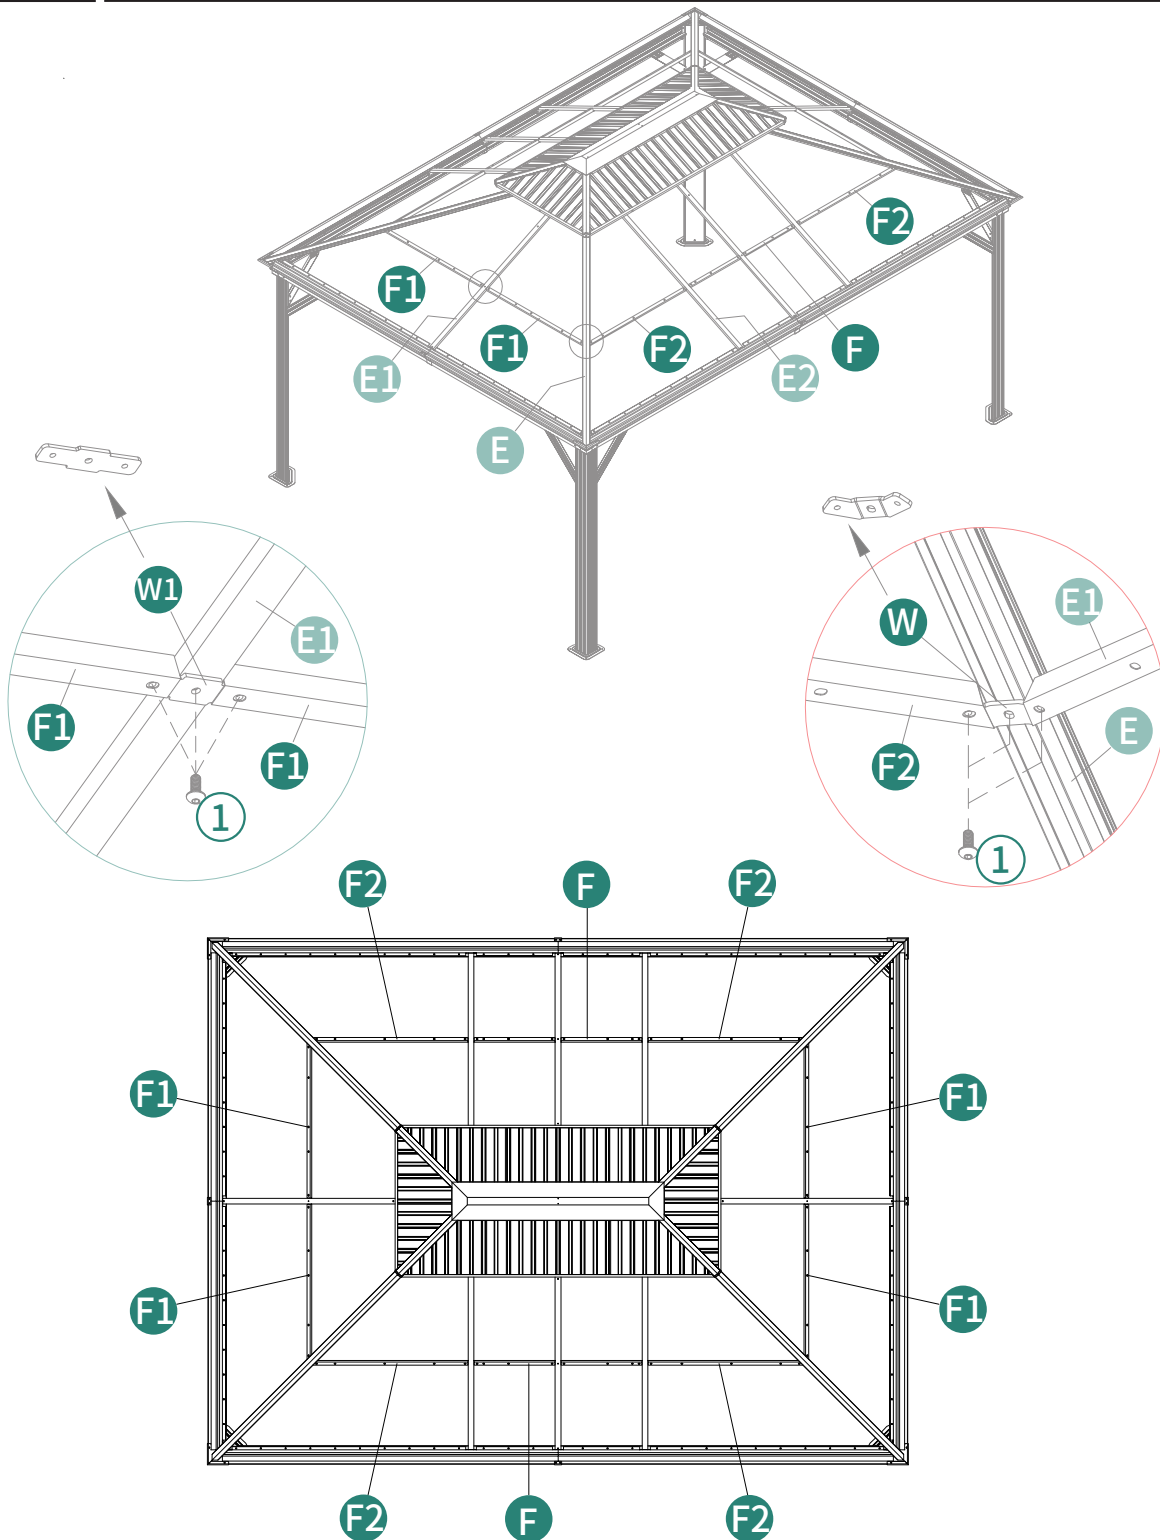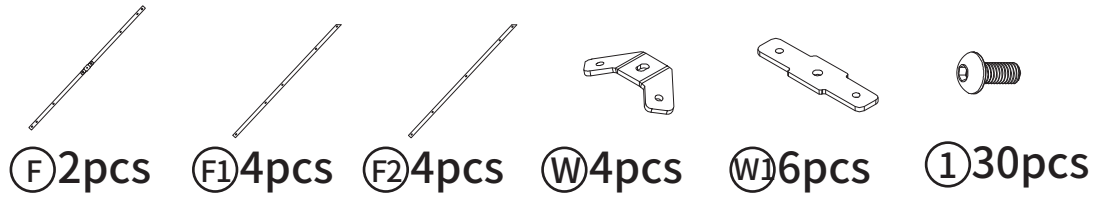




17

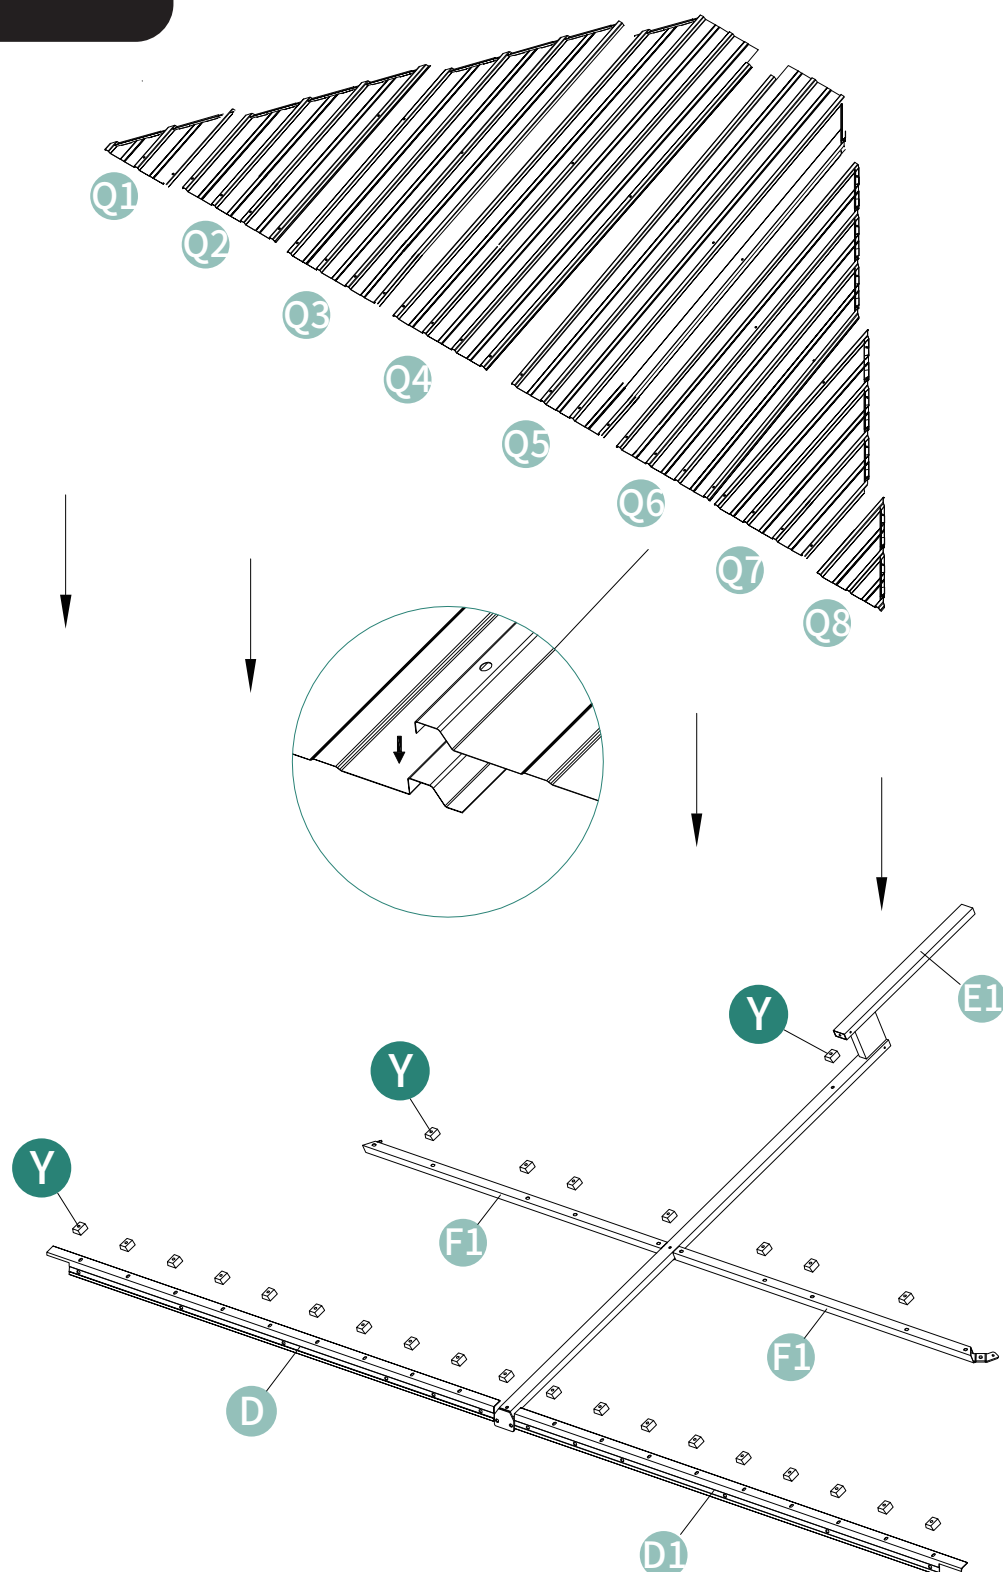

18

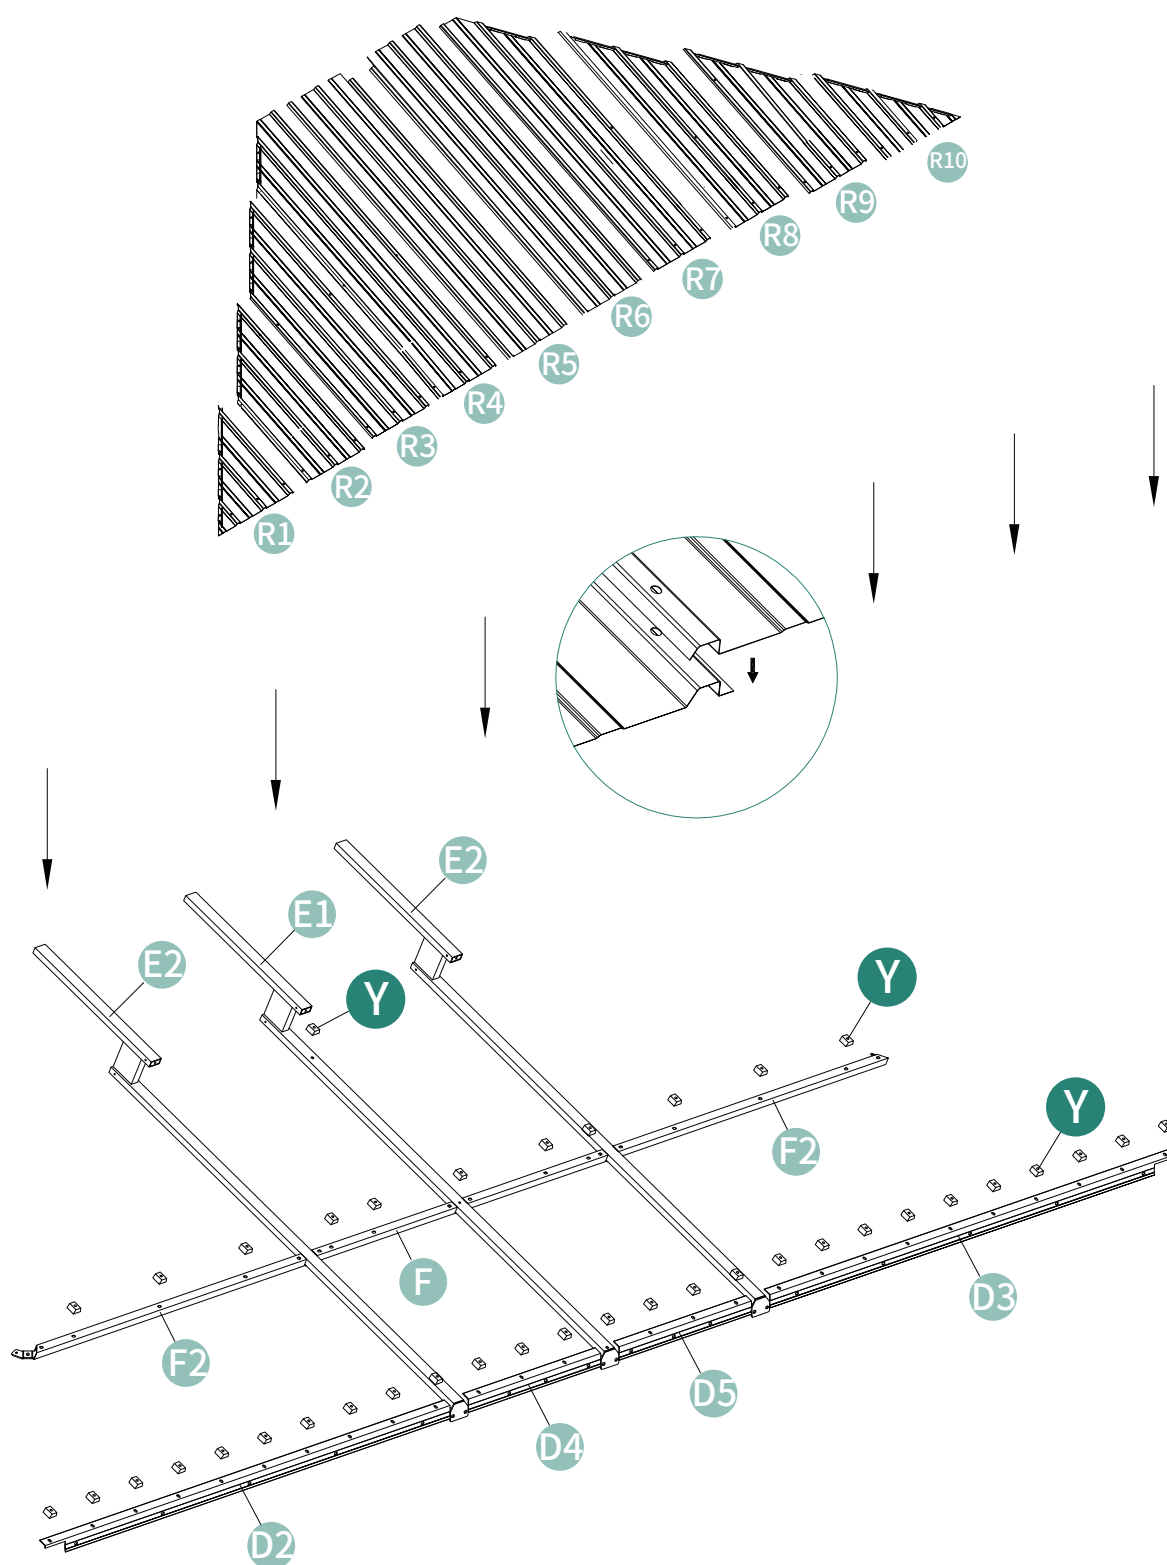

19

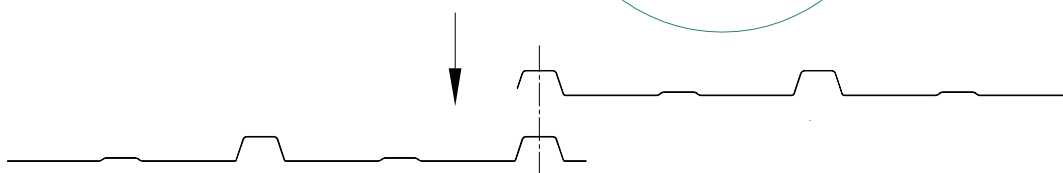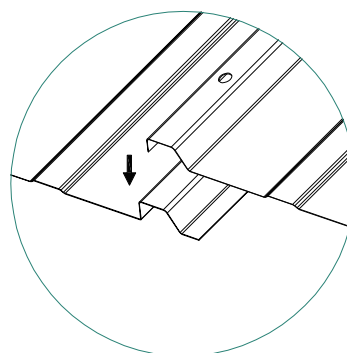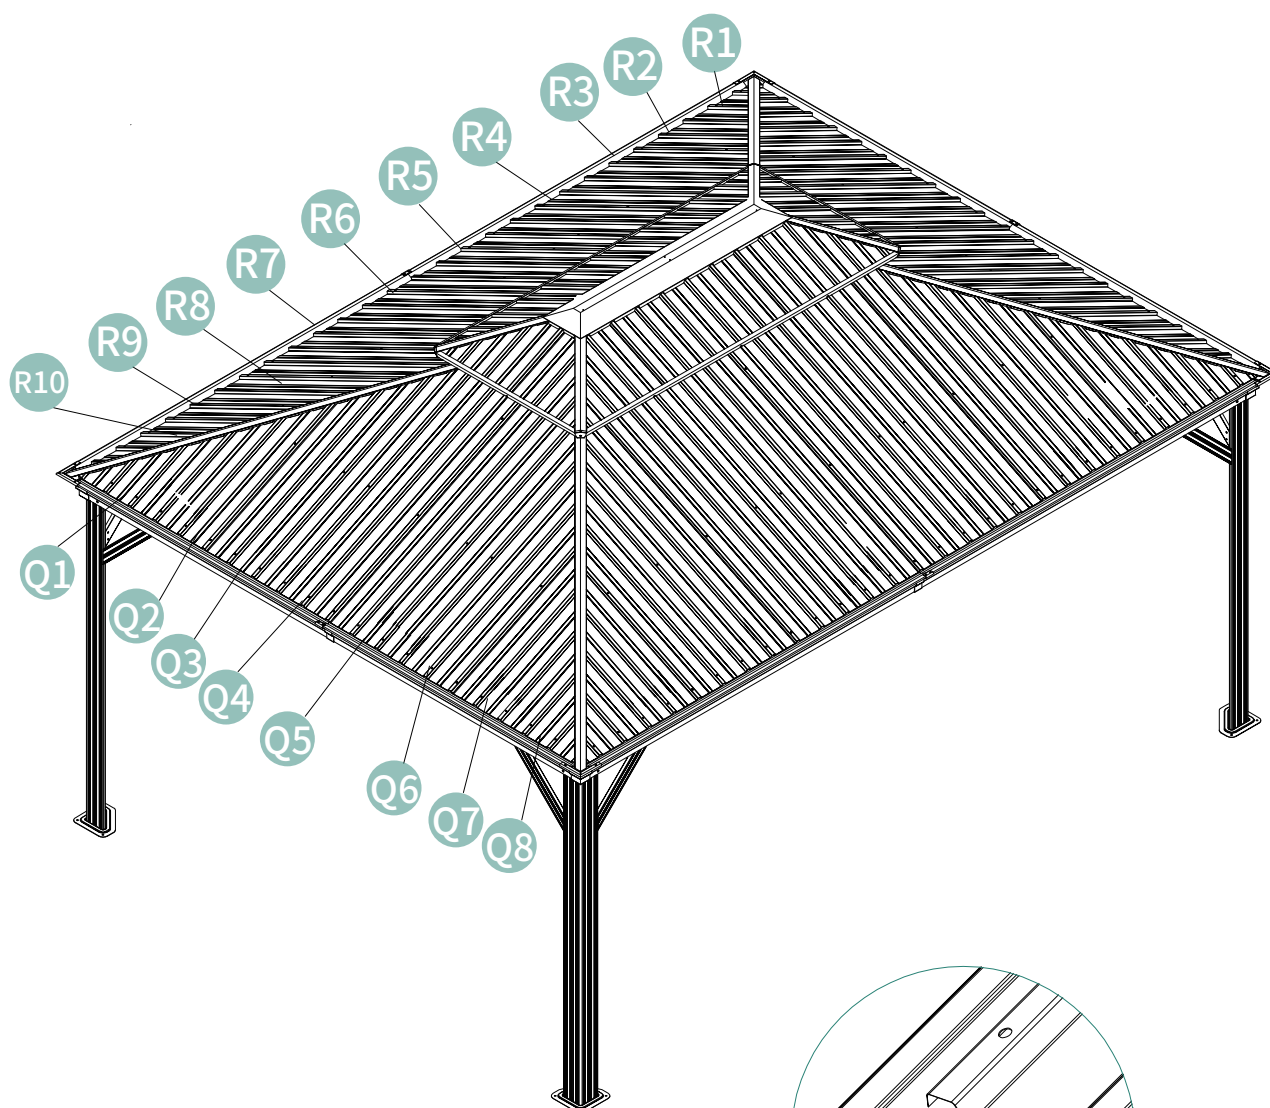

ASSEMBLY INSTRUCTIONS

20



④ 140pcs



② 88pcs








③ 4pcs



⑥ 8pcs



⑦ 40pcs

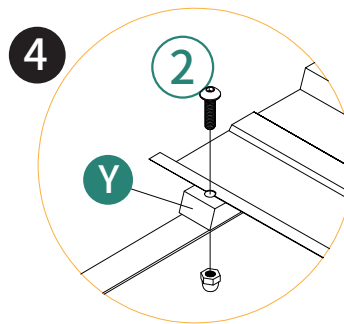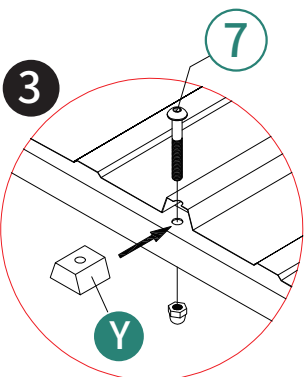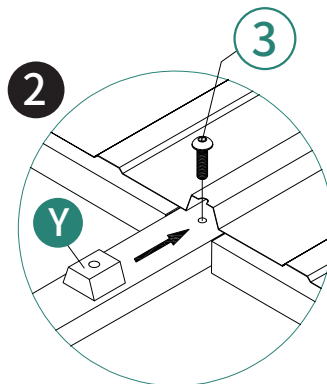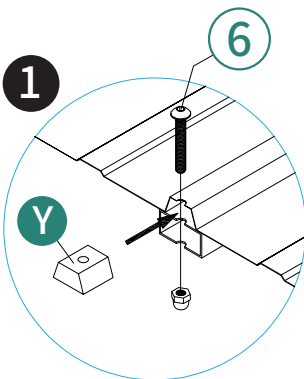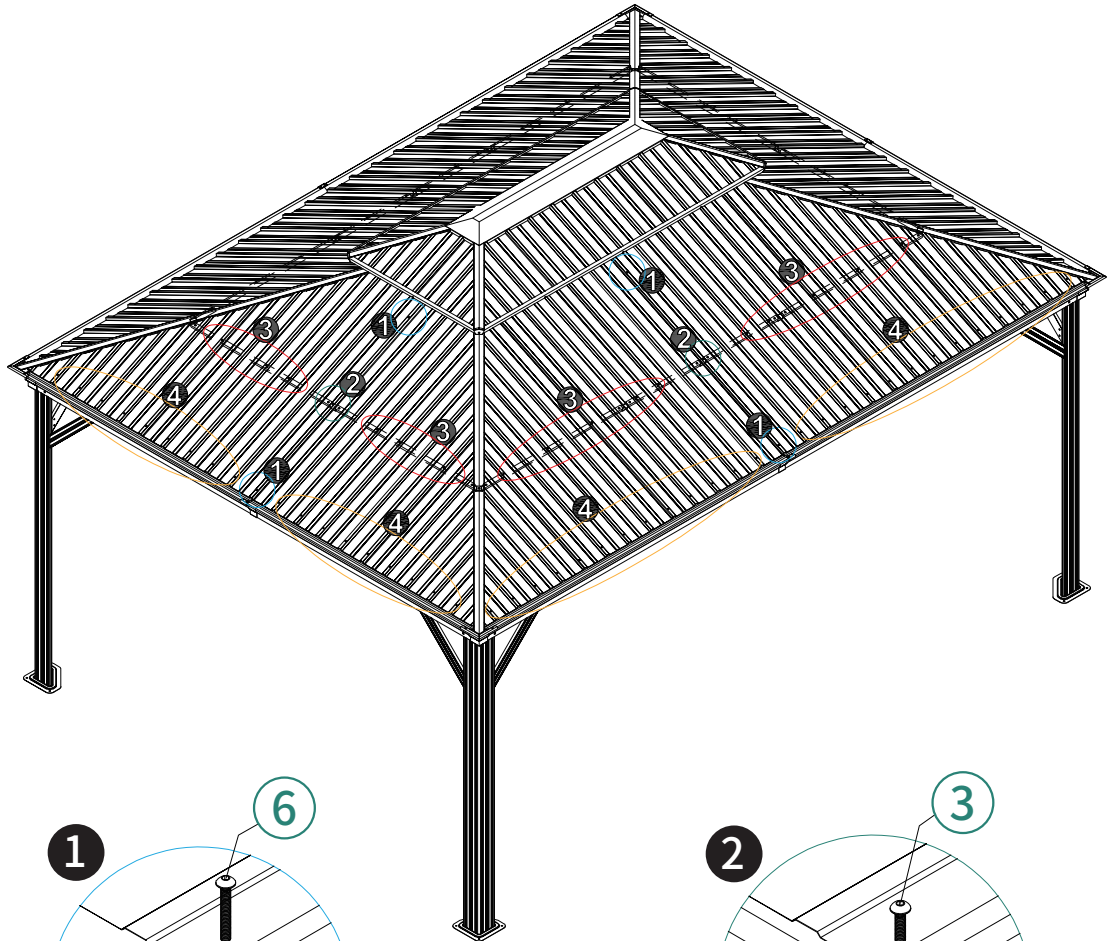


ASSEMBLY INSTRUCTIONS



21



Ⓣ4pcs

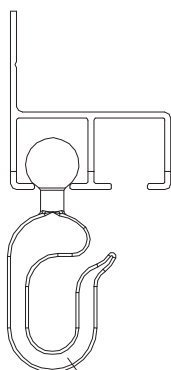


U


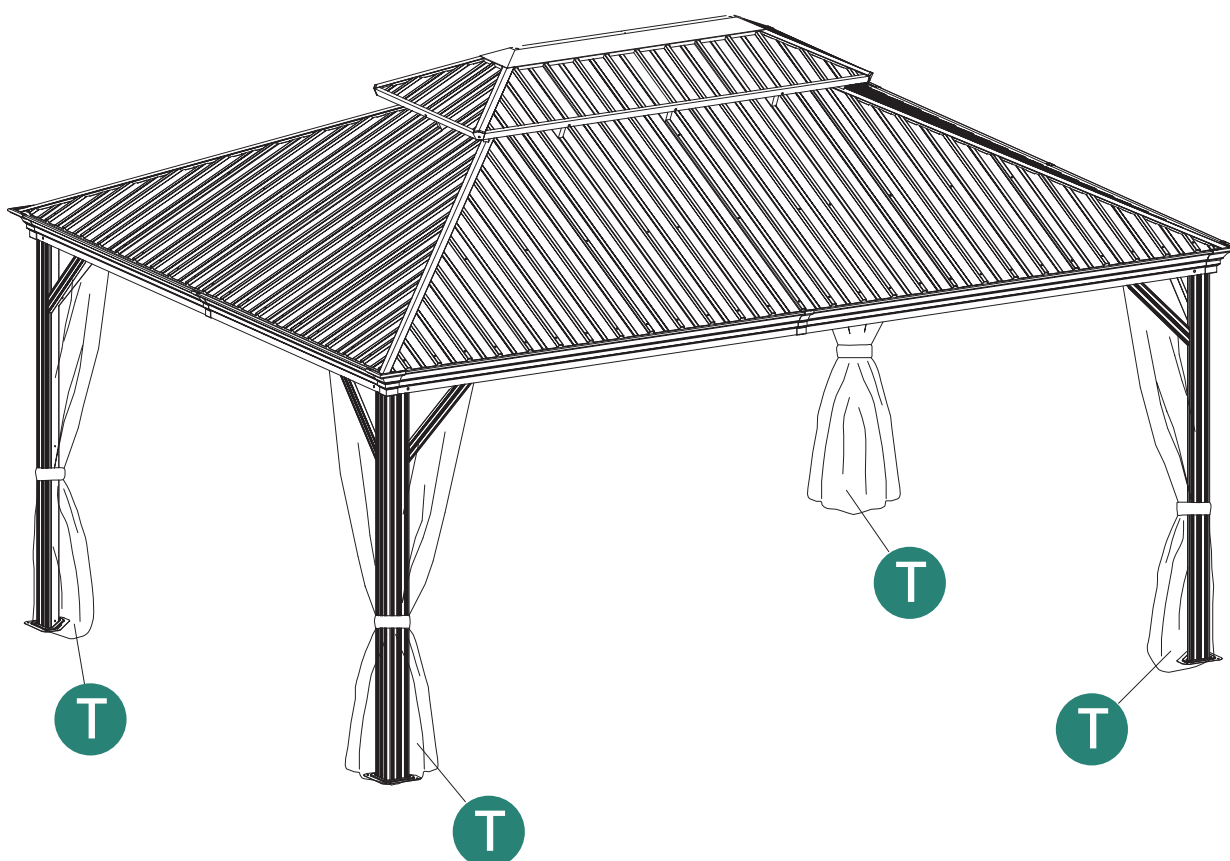
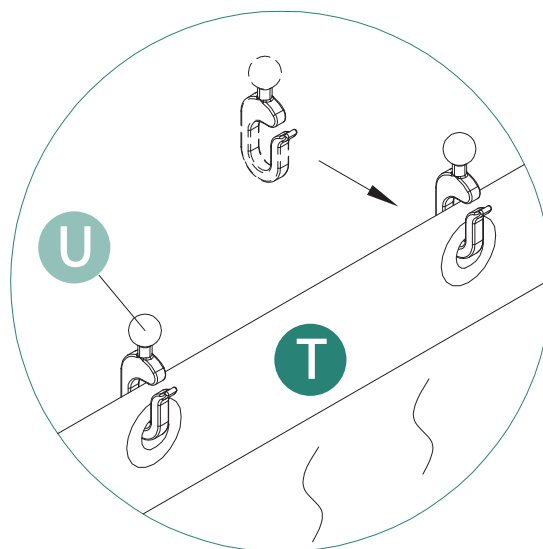


ASSEMBLY INSTRUCTIONS

22



T1 4pcs

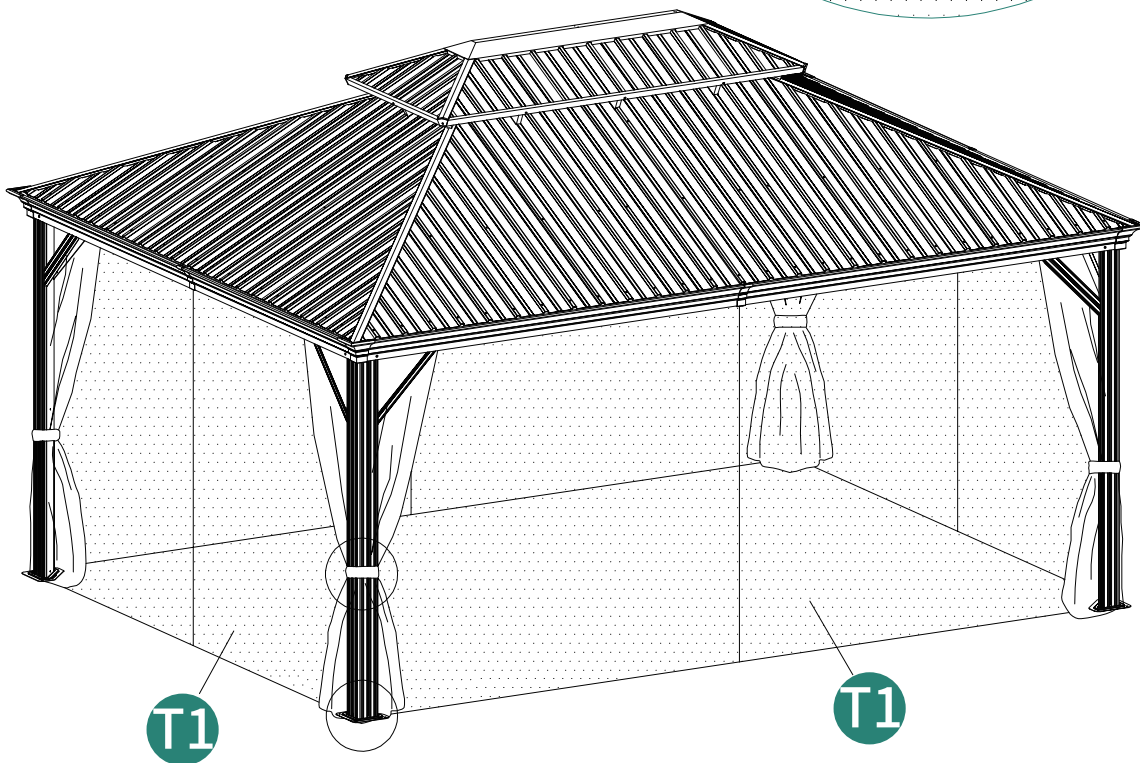
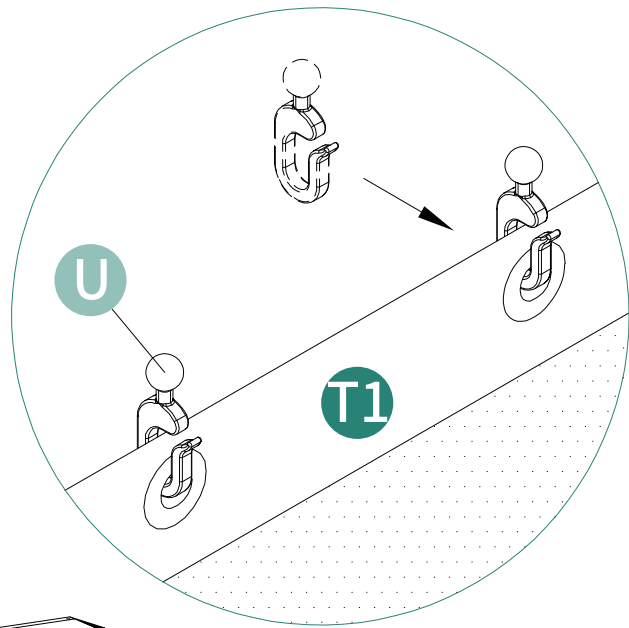
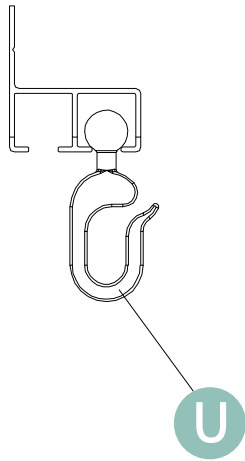


ASSEMBLY INSTRUCTIONS

23




⑨12pcs

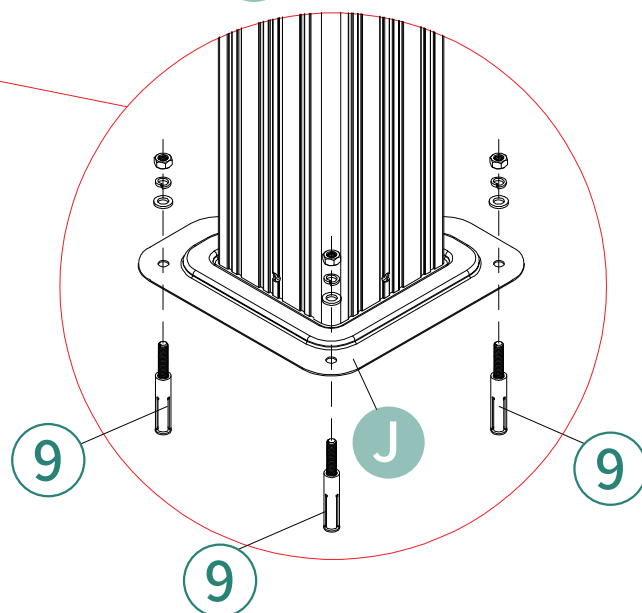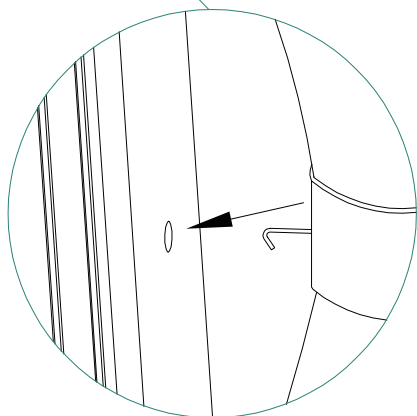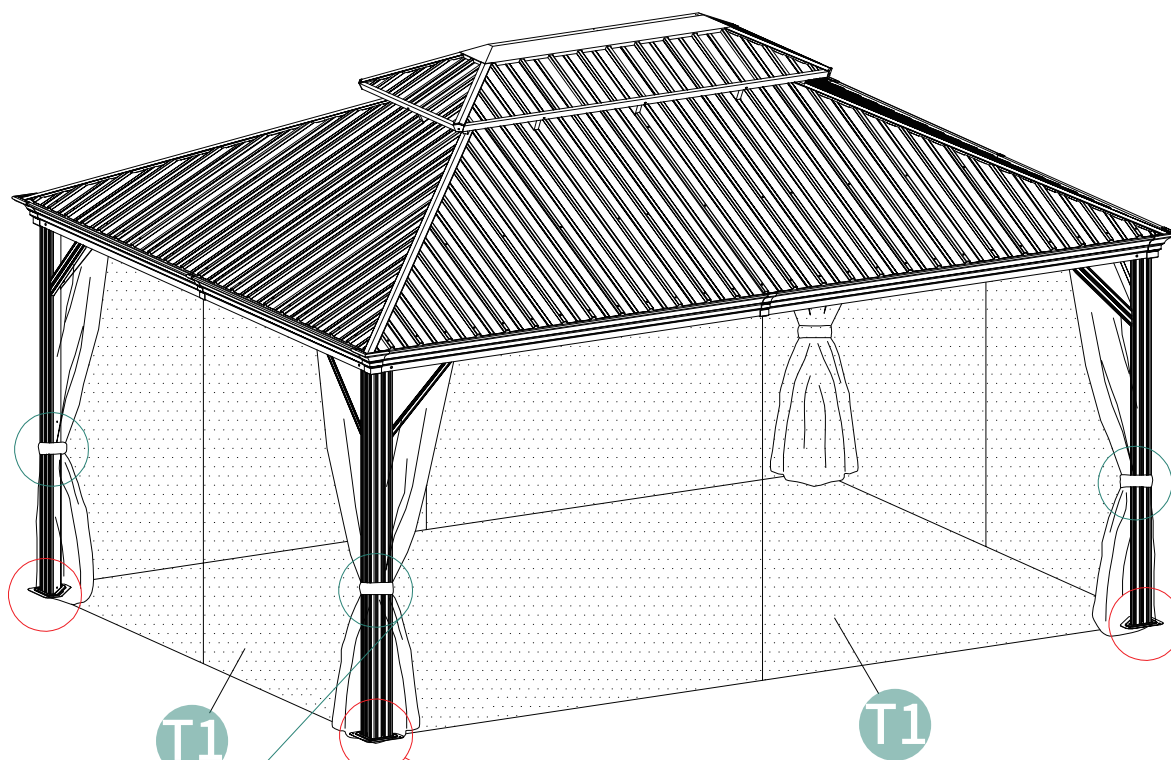


ASSEMBLY INSTRUCTIONS


24



Ⓥ1 2pcs





Ⓥ2 2pcs




Ⓥ3 2pcs



⑪ 12pcs

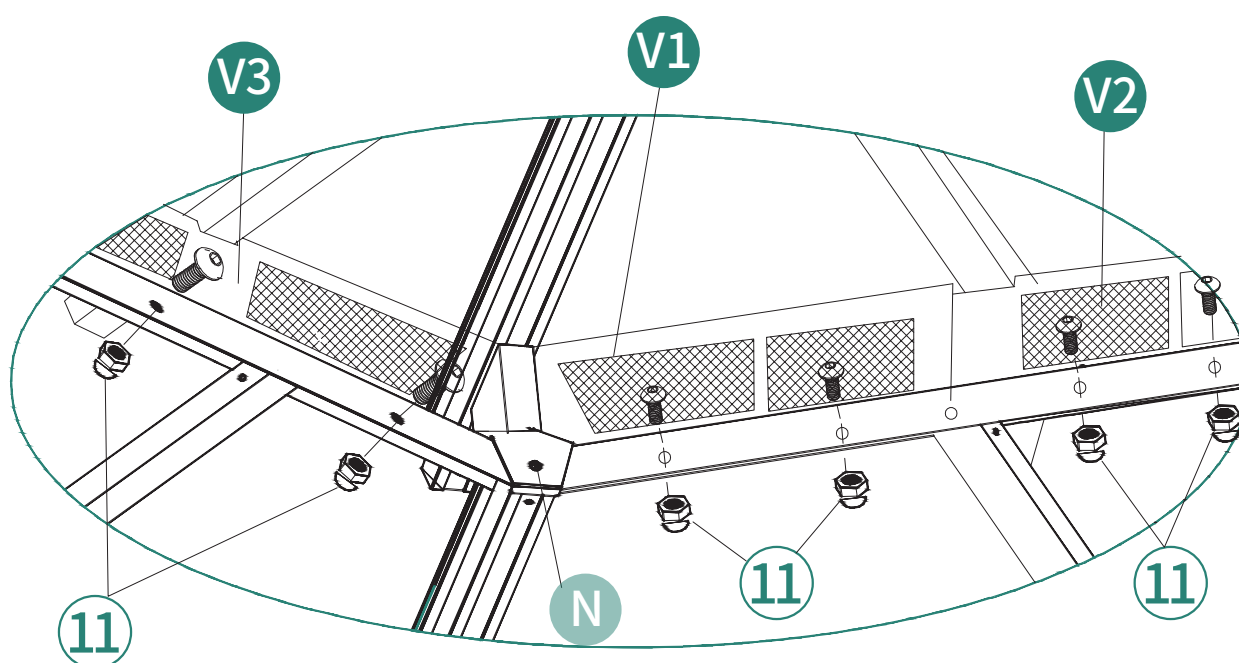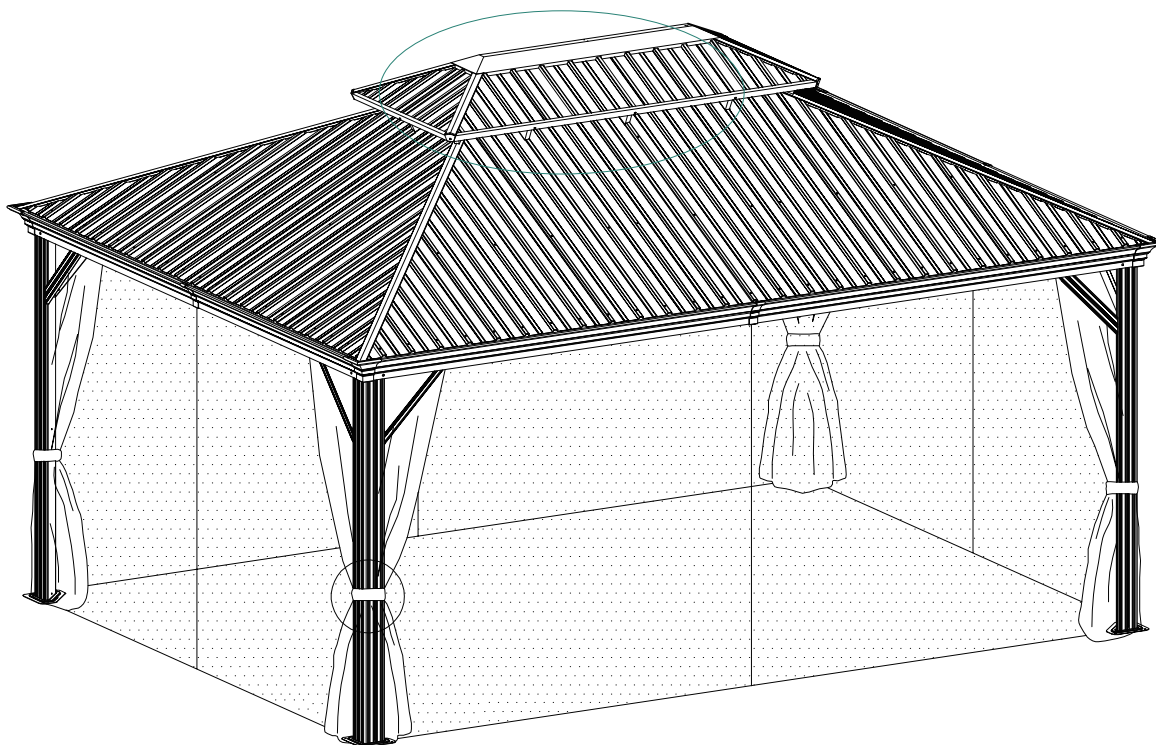

25

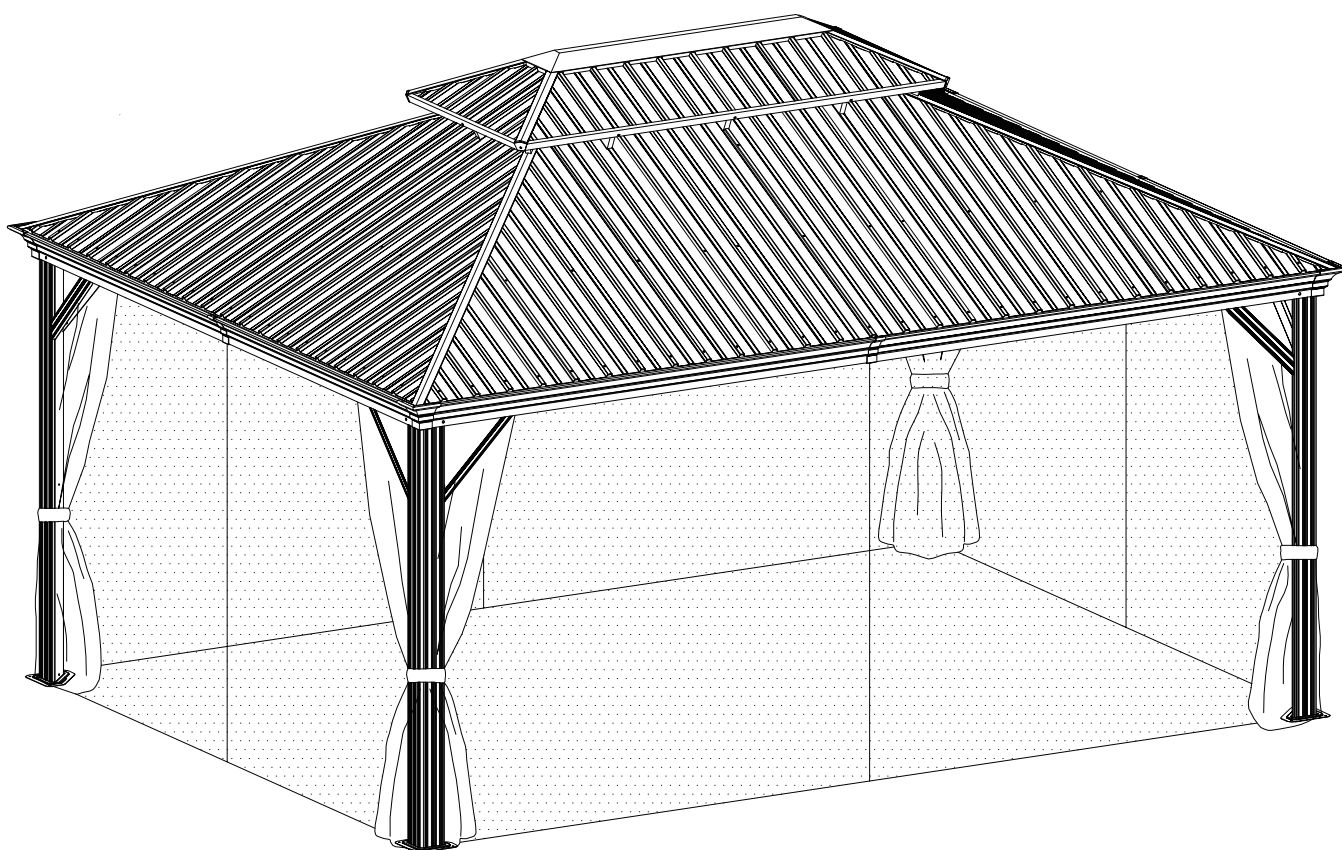

Installation Completed