



BACKUPCAM-3

INSTALLATION INSTRUCTIONS

GM Vehicles 2014-up

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications

INTRODUCTION

The BACKUPCAM-3 is designed to retain the factory backup camera to be viewed through the display screen on the aftermarket radio, or a stand-alone monitor.

COMPONENTS

- 12-pin harness with a yellow RCA jack

APPLICATIONS

CHEVROLET

Colorado (*)	2015-up
Cruze (*)	2016-2018
Cruze Hatchback (*)	2016-2018
Equinox (*)	2018
Impala	2014-up
Malibu (*)	2016-2018
Silverado 1500-LD (*)	2019
Silverado 1500 (*)	2014-2018
Silverado 2500/3500 (*)	2015-up
Suburban	2015-up
Tahoe	2015-up

GMC

Canyon (*)	2015-2017
Sierra 1500-Limited (*)	2019
Sierra 1500 (*)	2014-2018
Sierra 2500/3500 (*)	2015-up
Yukon	2015-up
Yukon XL	2015-up

(*) With RPO code I05 or I06 radio

Note: The vehicle must be running for the factory camera to power on.

AXXESS Integrate • AxxessInterfaces.com

© COPYRIGHT 2018 METRA ELECTRONICS CORPORATION REV. 11/21/18



BACKUPCAM-3

INSTALLATION INSTRUCTIONS

Connections to be made

From the 12-pin harness with a Yellow RCA jack

To the aftermarket radio:

- Connect the **Yellow** RCA jack to the BACKUP CAMERA input.

To the vehicle:


- Connect the *female* 12-pin harness with a **Yellow** RCA jack, to the *male* **Gray** harness removed from the Human Machine Interface module. (Figura A)

For the Chevy Colorado and GMC Canyon:


- This module is located in the radio cavity, down low.

For all other models:

- This module is located behind the glove box. There are (2) modules behind the glove box. This module is behind the metal dashboard support. (Figura B)
- Drop the glove box down by first removing the retaining cable on the right side. Then squeeze the glove box sides and gently pull down.
- Remove (6) T-15 Torx screws securing the plastic panel now exposed.

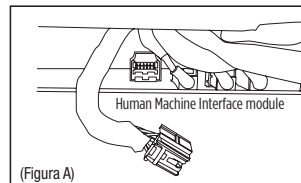

(Figura A)

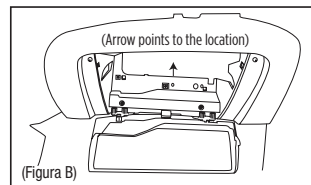

(Figura B)



KNOWLEDGE IS POWER
Enhance your installation and fabrication skills by attending the most recognized and respected mobile electronics school in our industry.
Log onto www.installationtraining.com or call 800-545-4789 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians

If you are having difficulties with the installation of this product, contact our Tech Support line either by phone at **1-800-253-TECH**, or email at techsupport@metra-autosound.com. Before doing so, look over the instruction booklet a second time and ensure that the installation was performed exactly as the instruction booklet is stated. Have the vehicle apart and ready to perform troubleshooting steps before contacting Metra/Axxess Tech Support.

AXXESS Integrate • AxxessInterfaces.com

© COPYRIGHT 2018 METRA ELECTRONICS CORPORATION REV. 11/21/18



BACKUPCAM-3

INSTRUCCIONES DE INSTALACIÓN

GM Vehículos 2014 y mas

Visite AxxessInterfaces.com para obtener información más detallada sobre el producto y aplicaciones actualizadas específicas para vehículos.

INTRODUCCIÓN

El BACKUPCAM-3 está diseñado para retener la cámara de reversa de fábrica para que se vea a través de la pantalla en la radio del mercado de accesorios o un monitor independiente.

COMPONENTES

- Arnés de 12 pins con conector RCA amarillo

APLICACIONES

CHEVROLET

Colorado (*)	2015 y mas
Cruze (*)	2016-2018
Cruze Hatchback (*)	2016-2018
Equinox (*)	2018
Impala	2014 y mas
Malibu (*)	2016-2018
Silverado 1500-LD (*)	2019
Silverado 1500 (*)	2014-2018
Silverado 2500/3500 (*)	2015 y mas
Suburban	2015 y mas
Tahoe	2015 y mas

GMC

Canyon (*)	2015-2017
Sierra 1500-Limited (*)	2019
Sierra 1500 (*)	2014-2018
Sierra 2500/3500 (*)	2015 y mas
Yukon	2015 y mas
Yukon XL	2015 y mas

(*) Con el código RPO I05 o I06 radio.

Nota: El vehículo debe estar en marcha para que la cámara de fábrica se encienda.

AXXESS Integrate • AxxessInterfaces.com

© COPYRIGHT 2018 METRA ELECTRONICS CORPORATION REV. 11/21/18



BACKUPCAM-3

INSTRUCCIONES DE INSTALACIÓN

Conexiones que se deben hacer

Desde el arnés de 12 pins con conector RCA amarillo

Al radio de mercado secundario:

- Conecte el conector RCA **amarillo** a la entrada de la CÁMARA DE REVERSA.

Al vehículo:


- Conecte el arnés *hembra* de 12 pins con un conector RCA **amarillo**, al arnés *macho gris* que quitó del módulo de interfaz humano-máquina. (Figura A)

Para Chevy Colorado y GMC Canyon:


- Este módulo se localiza en la cavidad del radio, abajo.

Para todos los demás módulos:

- Este módulo está localizado detrás de la guantera Hay (2) módulos detrás de la guantera. Este módulo está detrás del soporte del tablero metálico. (Figura B)
- Deje caer la guantera quitando primero el cable de retención del lado derecho. Luego apriete los lados de la guantera y jálela suavemente hacia abajo.
- Quite los (6) tornillos Torx T-15 que sujetan el panel de plástico y que quedan expuestos.

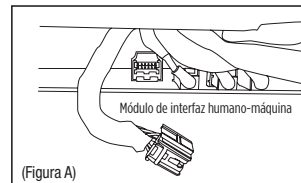

(Figura A)

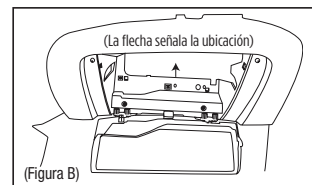

(Figura B)



EL CONOCIMIENTO ES PODER
Mejore sus habilidades de instalación y fabricación inscribiéndose en la escuela de dispositivos electrónicos móviles recomendada y respaldada de nuestra industria. Regístrese en www.installerinstitute.com o llame al 800-354-6762 para obtener más información y avance hacia un futuro mejor.



Metra recomienda técnicas con certificación del Programa de Certificación en Electrónica Móvil (Mobile Electronics Certification Program, MECP).

Si tiene dificultades con la instalación de este producto, comuníquese con nuestra línea de soporte técnico, ya sea por teléfono al **1-800-253-TECH**, o envíe un correo electrónico a techsupport@metra-autosound.com. Antes de hacerlo, revise el folleto de instrucciones por segunda vez y asegúrese de que la instalación se realizó exactamente como se indica en el manual de instrucciones. Tenga el vehículo separado y listo para realizar los pasos de solución de problemas antes de ponerse en contacto con el soporte técnico de Metra / Axxess.

AXXESS Integrate • AxxessInterfaces.com

© COPYRIGHT 2018 METRA ELECTRONICS CORPORATION REV. 11/21/18



Product information sheet

BACKUPCAM-3

GM Vehicles 2014-up

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications

INTRODUCTION

The BACKUPCAM-3 is designed to retain the factory backup camera to be viewed through the display screen on the aftermarket radio, or a stand-alone monitor.

INTERFACE COMPONENTS

- 12-pin harness with a yellow RCA jack

APPLICATIONS

Chevrolet

Colorado (†)	2015-up
Cruze (†)	2016-2018
Cruze Hatchback (†)	2016-2018
Equinox (†)	2018
Impala	2014-up
Malibu (†)	2016-2018
Silverado 1500-LD (†)	2019
Silverado 1500 (†)	2014-2018
Silverado 2500/3500 (†)	2015-up
Suburban	2015-up
Tahoe	2015-up

GMC

Canyon (†)	2015-2017
Sierra 1500-Limited (†)	2019
Sierra 1500 (†)	2014-2018
Sierra 2500/3500 (†)	2015-up
Yukon	2015-up
Yukon XL	2015-up

(†) With RPO code I05 or I06 radio

Note: The vehicle must be running for the factory camera to power on.