



HARMONIZE AND INSTALL BULBS


1. Adjust the Balance

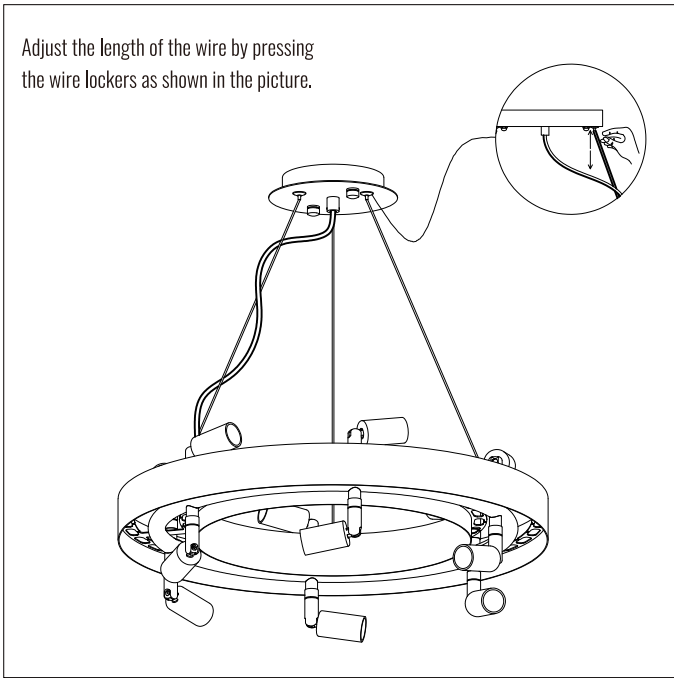

2. Install the Bulbs

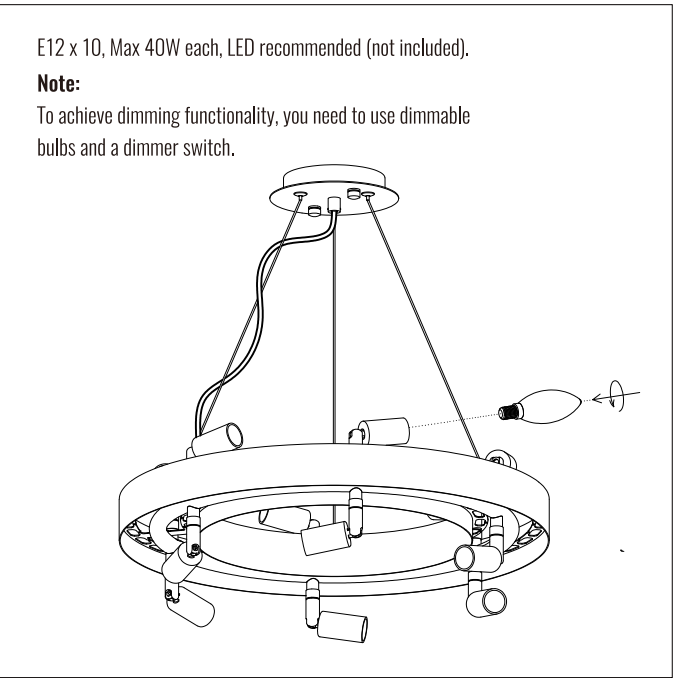


INSTALL THE CRYSTALS

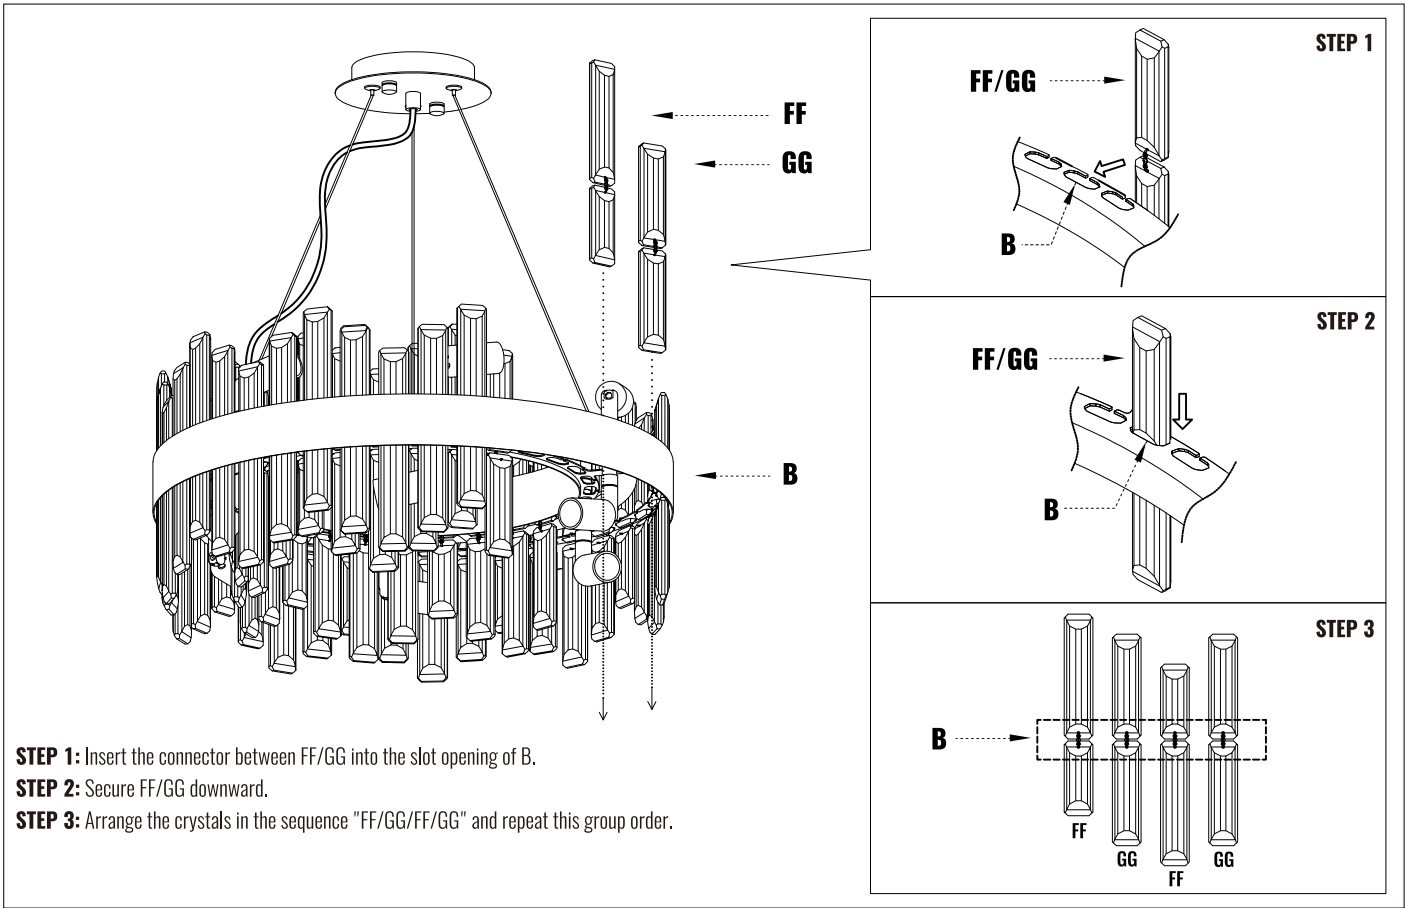

INSTALLATION
MANUAL

CHANDELIER
Model No.: HLP12505BQG

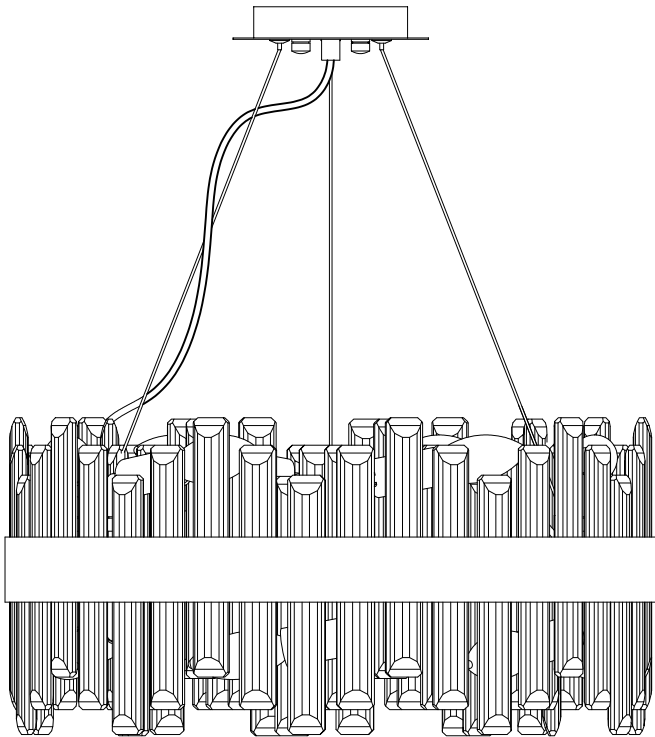

Scan for Installation Video


TOOLS REQUIRED




Ladder



Pliers




Wire Strippers









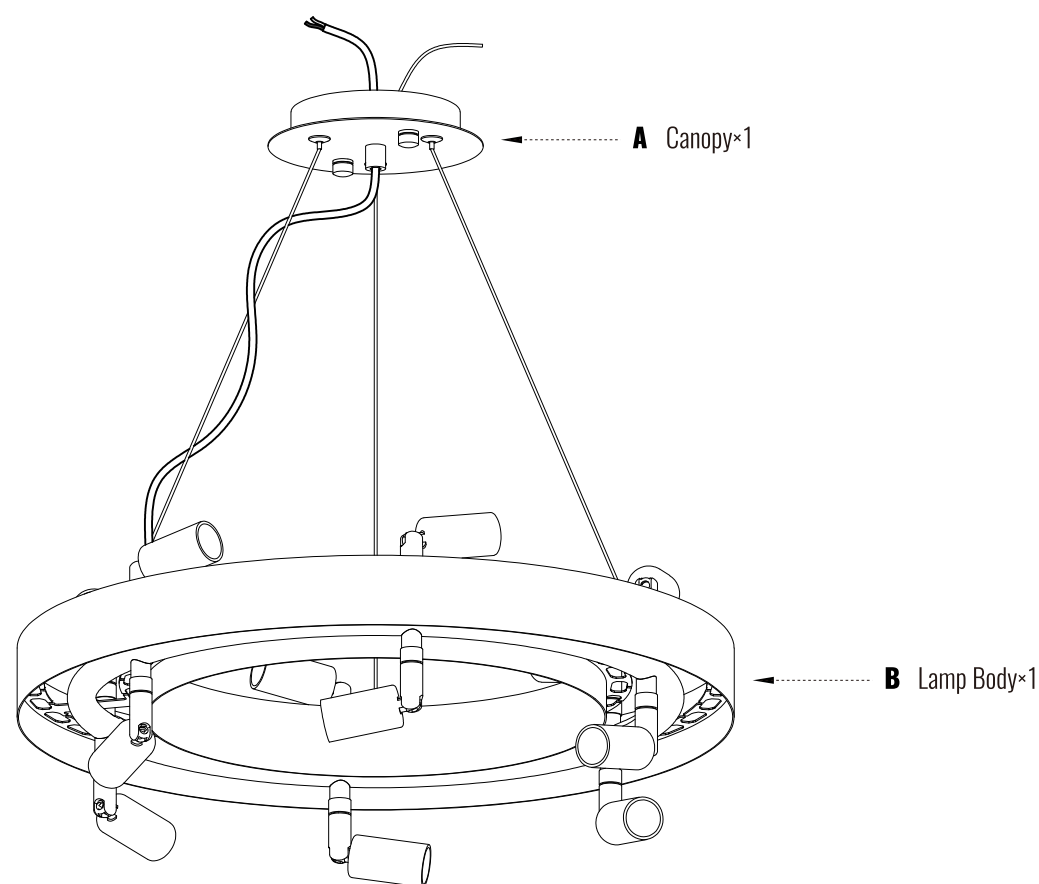

Screwdrivers

PACKING LIST




INSTALLATION KIT

AA 1×  Mounting Bracket	BB 2×  Mounting Screw	CC 1×  Ground Screw	DD 3×  Wire Nut	EE 2×  Kneuled Nut
FF 35×  Crystal A	GG 35×  Crystal B	HH 1×  Gloves		


NOTE:
1. CC is pre-installed on AA, AA/EE is pre-installed on A.
2. FF/GG has one spare part for backup.

MOUNTING AND WIRE

1. Install the Mounting Bracket

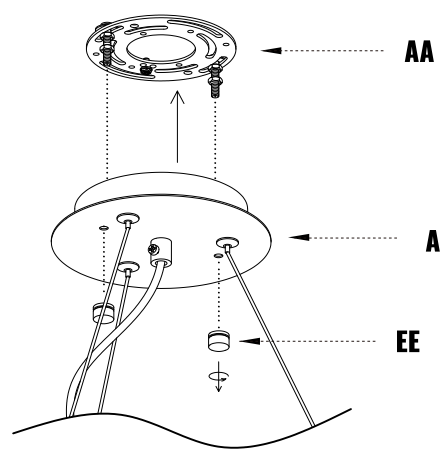


STEP 1: Loosen the kneuled nut (EE) from canopy (A), take out the mounting bracket (AA).

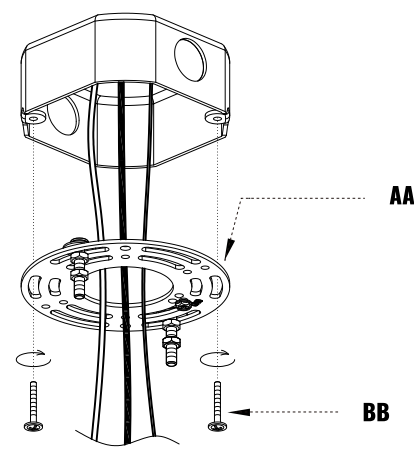

STEP 2: Take off the screws from outlet box, secure the mounting bracket (AA) onto the box with screws taken off or screws provided (BB).


2. Connect the Wires

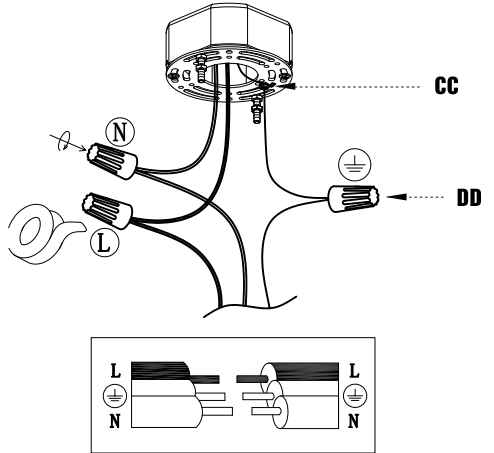

STEP 1: Connect the wires from the fixture to the house supply wires with wire nuts (DD), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

STEP 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

3. Fix the Canopy

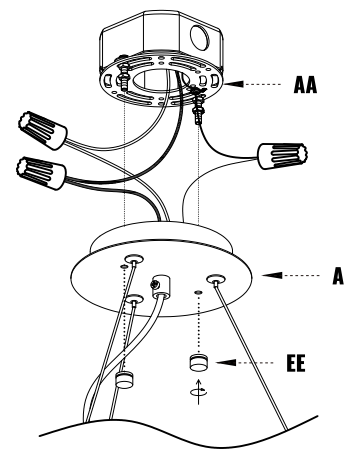

Fix the canopy (A) onto the mounting bracket (AA) with kneuled nuts (EE) taken off.