



INSTALLATION INSTRUCTIONS

610111 Stop Lite is used in Plug-in Starting Cable Safety Clamps.


604579 Stop/Rot Lite is used on chargers. MUST BE INSTALLED IN NEGATIVE CLAMP.

604592 Stop Lite is used in Booster Cable Safety Clamps.

INSTALLING STOP LITE IN CLAMP WITHOUT A TERMINAL TAB OR STAINLESS STEEL GUIDE.

1. Drill out rivet in stainless steel guide in negative clamp.
2. Reinstall stainless steel guide using terminal tab, nylon insulating bushing, screw, and nut supplied with Stop Lite, in the sequence illustrated below.



NOTE: If stainless steel guide or copper jaw is damaged, both should be replaced with a 6204 Clamp Jaw Repair Kit.

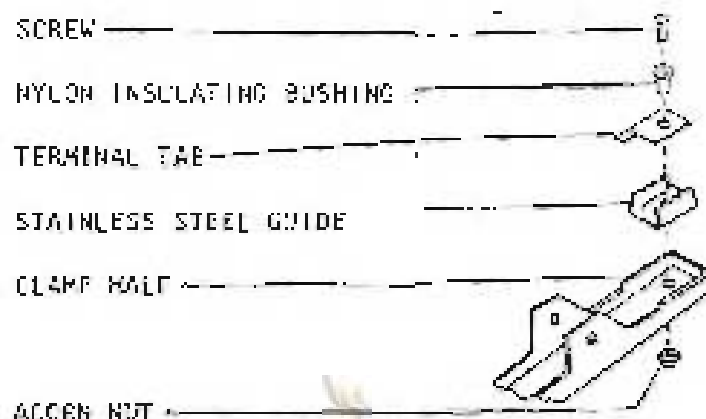

3. Attach female fasten on Stop Lite to terminal tab in clamp jaw.
4. Install Stop Lite into clamp handle and crimp tabs around Stop Lite.

INSTALLING STOP LITE IN CLAMP WITH TERMINAL TAB OR STAINLESS STEEL GUIDE.

1. Attach the female fasten on Stop Lite to the terminal tab on the stainless steel guide in the negative clamp.
2. Install Stop Lite into clamp handle and crimp tabs around Stop Lite.

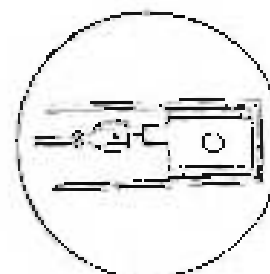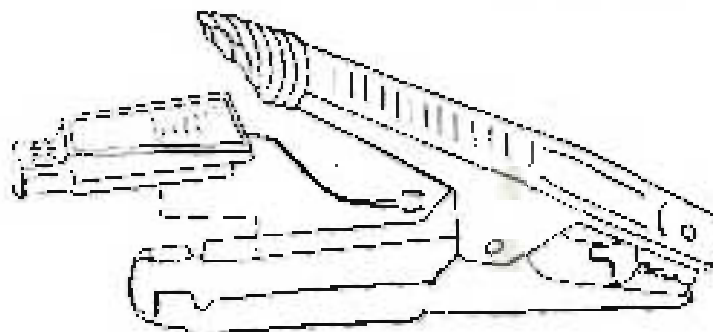

ASSOCIATED EQUIPMENT CORPORATION

1955 SALZMAN AVENUE, ST. LOUIS MO. 63133

FCN 1314
P/N 27-484