

QuickGuide

English

WIRELESS USB ADAPTER

Compatibility Note

Please ensure that your phone is compatible with wired CarPlay or Android Auto:

- The wireless CarPlay feature requires an iPhone 6 or a newer model with iOS 10 or higher.
- The wireless Android Auto feature requires an Android phone with version 11 or higher that supports the latest Android Auto features.

To verify if your vehicle supports wired CarPlay or wired Android Auto:

- Connect your iPhone or Android smartphone to the vehicle using a USB data cable. The connection interface logo will then appear on the car's display screen.
- Refer to the compatibility list or contact your car manufacturer directly for confirmation.



<https://www.apple.com/ios-carplay/available-models/>



<https://www.android.com/auto/>

Apple CarPlay

Bluetooth



OTHER DEVICES

SmartBox-xxxx

Use CarPlay with
"SmartBox-xxxx"

Not Now

Use CarPlay

1. Turn on the vehicle and wait for the system to fully load.

2. Insert the adapter into the vehicle's USB-A or USB-C port.

3. Once the adapter is successfully connected to the vehicle, the screen will display the adapter's Bluetooth name as **"SmartBox-xxxx"**.

4. Open the Settings on your iPhone and enable "Bluetooth" and "WLAN".

5. Go to the "Bluetooth" settings and select the adapter with the prefix "SmartBox-xxxx" from the "OTHER DEVICES" list.

6. Wait for about 20-30 seconds, and a "Bluetooth Pairing Request" notification will appear on your phone screen. Click "Pair" to proceed.

7. A dialog box will appear on the phone screen asking "Use CarPlay with 'SmartBox-xxxx'?" Click "Use CarPlay" to establish a connection between your phone and the adapter.

8. After Bluetooth pairing is complete and the CarPlay connection is established, the car screen will automatically switch to CarPlay mode.





059B5409-EN

Switching Different Phones

- 1.Simultaneously turn off the Bluetooth and WLAN on the currently connected phone.
- 2.Unplug and reinsert the adapter.
(Important)
- 3.Turn on the Bluetooth on the other phone, search for and pair with the adapter's Bluetooth named **"Smart-Box-xxxx"**.
- 4.If the system prompts that the Bluetooth is in use, try pairing multiple times to complete the switch.

Android Auto

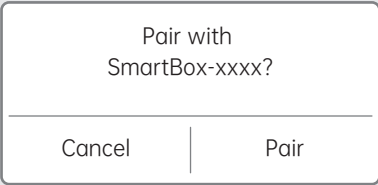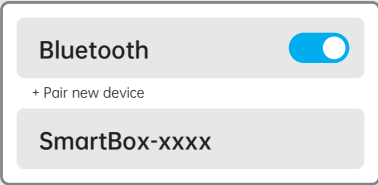

- 1.Turn on the vehicle and wait for the system to fully load.
- 2.Insert the adapter into the vehicle's USB-A or USB-C port.
- 3.Once the adapter is successfully connected to the vehicle, the screen will display the adapter's Bluetooth name as **"SmartBox-xxxx"**.
- 4.Open the Settings on your phone and enable "Bluetooth" and "WLAN".
- 5.Go to the "Bluetooth" settings, Click "Pair New Device", and select the adapter with the prefix "SmartBox-xxxx" from the "Available devices" list.

- 6.Wait for about 20-30 seconds, and a dialog box will appear on your phone screen asking "Pair with SmartBox-xxxx?" Click "Pair" to establish a connection between your phone and the adapter.
- 7.After Bluetooth pairing is complete and the Android Auto connection is established, the car screen will automatically switch to Android Auto mode.

LED Light Status

- Red Green light or Red Blue light flashing alternately:**
Adapter is powered on
- Green light flashing:**
Carplay is connecting
- Blue light flashing:**
Android Auto is connecting
- Rainbow light flashing:**
Carplay/Android Auto has been connected